

OPERATING PAIR WIRELESS ALARM UNITS

FUNCTION

By **PAIRING** a transmitter with a receiver, you determine which receiver is the primary recipient for that specific transmitter.

- ↳ The paired transmitter will always try to reach the paired receiver first.
- ↳ If the transmitter does not connect to the paired receiver, it will transmit to the nearest receiver.

INSTRUCTIONS

1

Press the receiver until the light goes on.

Continue to press the concealed button.

2

At the same time, press the transmitter until it flashes, alternating between red and green.

3

The transmitter and receiver are now paired.

The transmitter can be paired with a different receiver by repeating steps 1 & 2.

