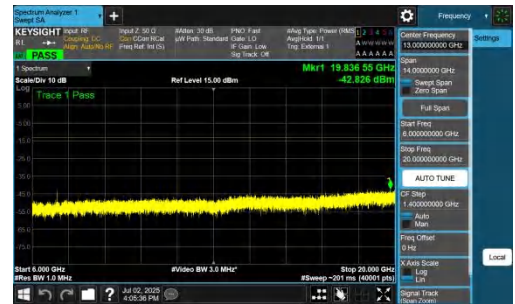 
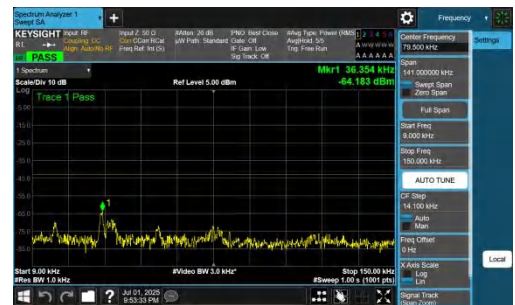 
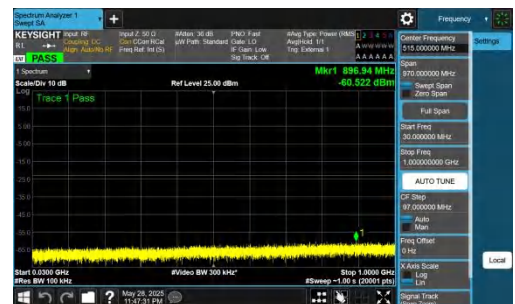 


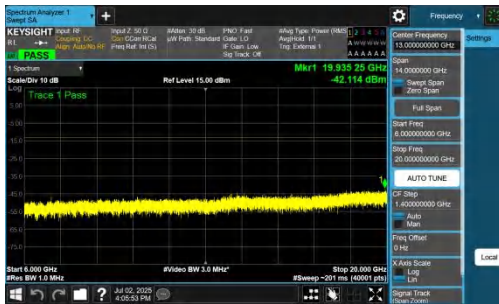 

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-600
0-20000-PASS

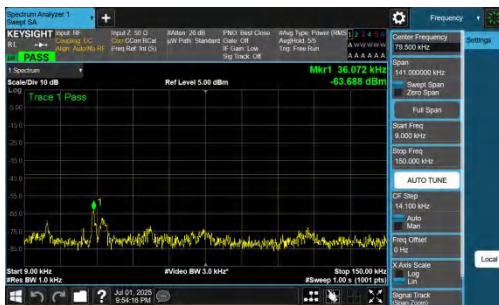 
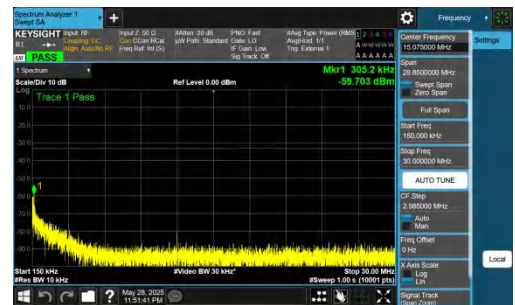 
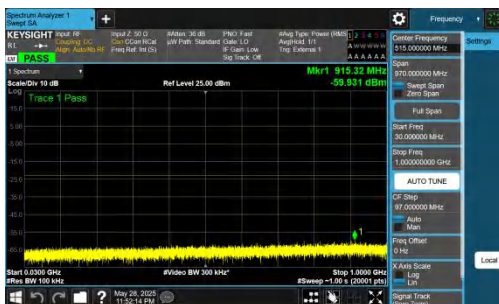 
NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS


NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-6
000-20000-PASS

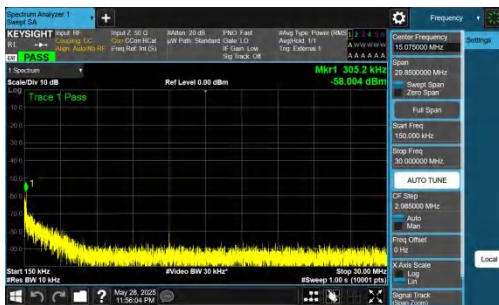 
NTNV-n78(3450-3550)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-20
000-40000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-100
0-3000-PASS

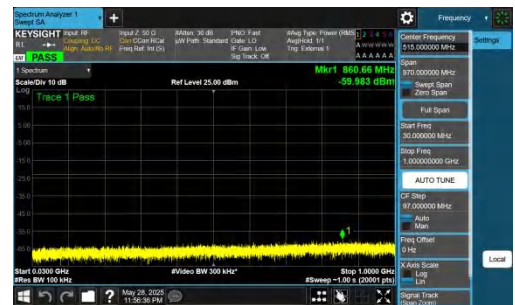 
NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-30
00-6000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-600
0-20000-PASS


NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-20
000-40000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS


NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS

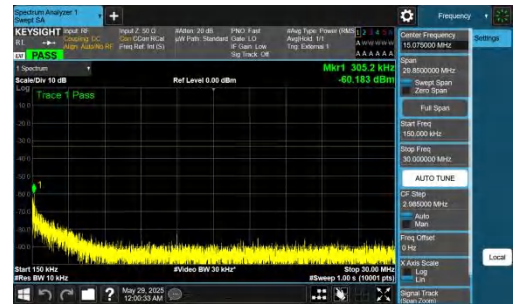 

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-30
-1000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

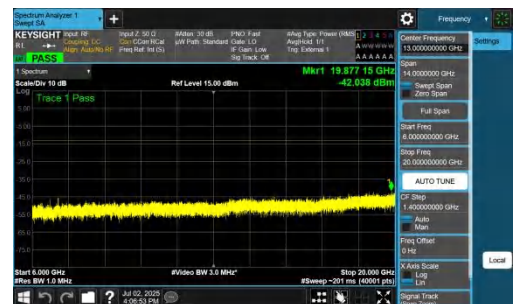 
NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-6
000-20000-PASS

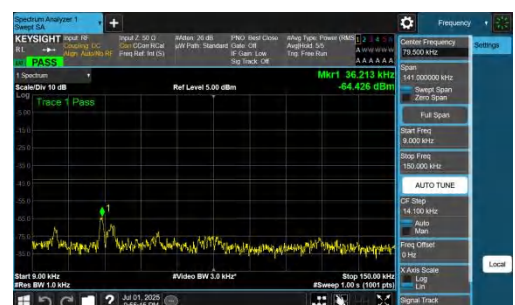 
NTNV-n78(3450-3550)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-20
000-40000-PASS

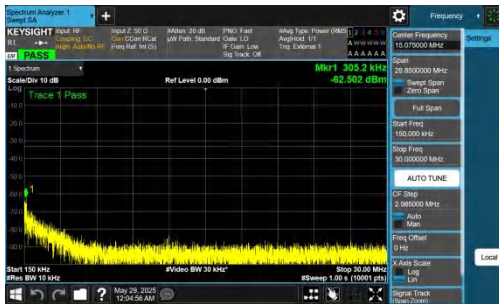 

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

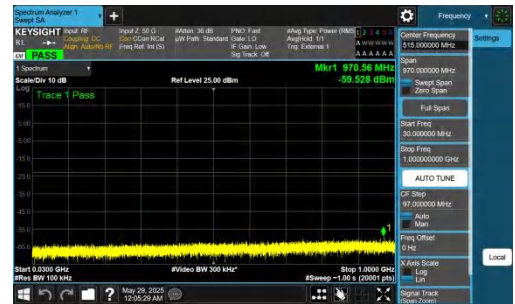 
NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-6000
-20000-PASS

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



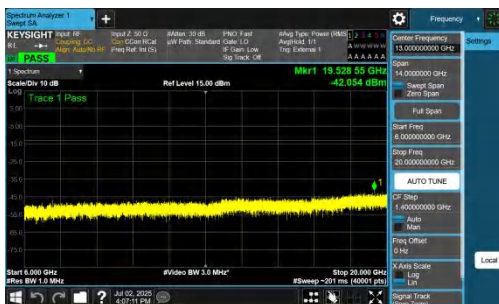 
NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-10-00-3000-PASS



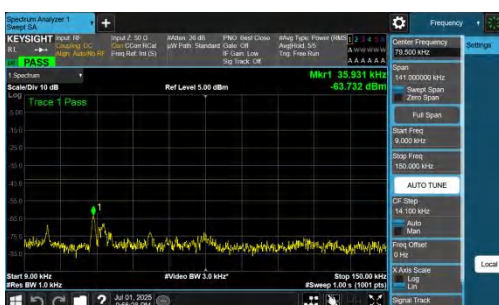 
NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-30-00-6000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-60-00-20000-PASS



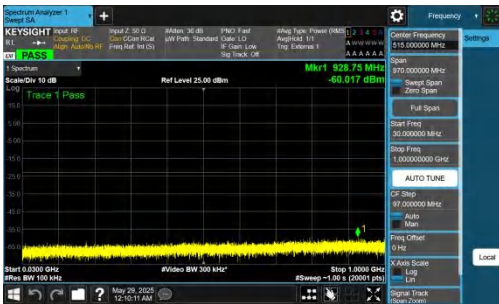 
NTNV-n78(3450-3550)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-20-000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



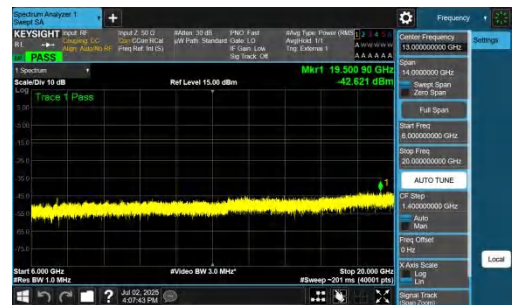 
NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-6000-20000-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-20000-40000-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTVN-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-6
000-20000-PASS



NTNV-n78(3450-3550)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-20
000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS



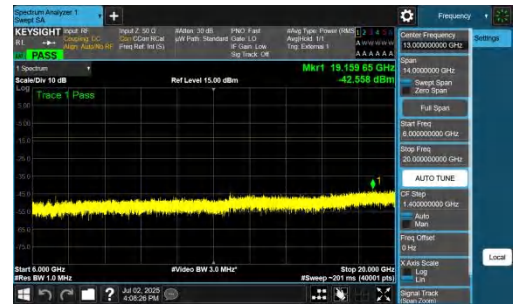 
NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

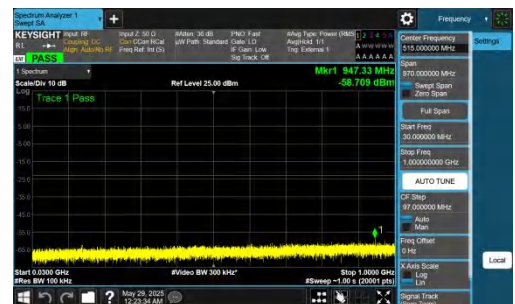 


NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-6000
-20000-PASS

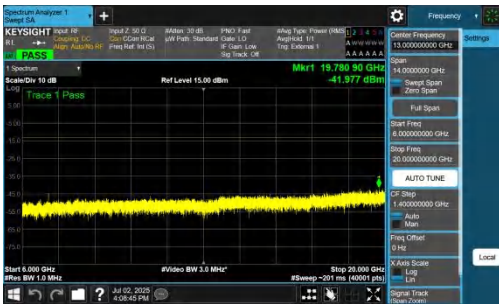 
NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-300
0-6000-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-6000-20000-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-20000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS

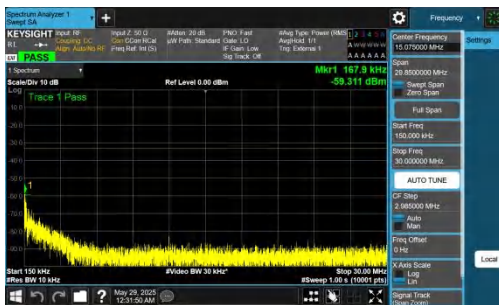 
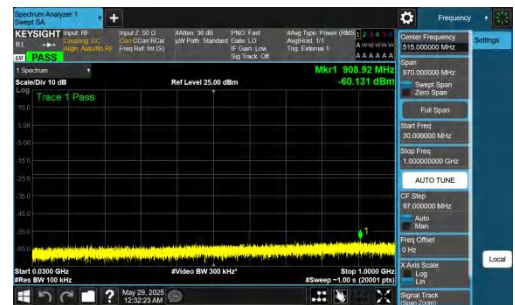 


NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-6000-20000-PASS


NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-200
00-40000-PASS

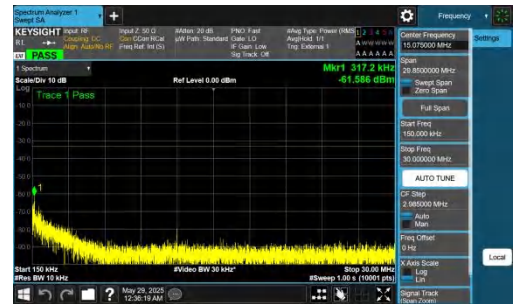 
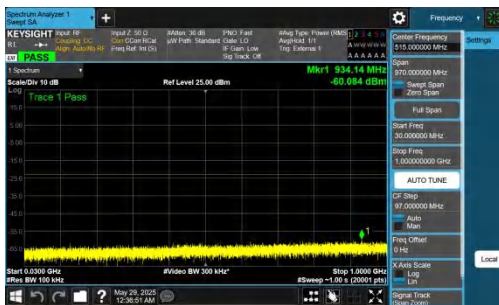 
NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-10
00-3000-PASS

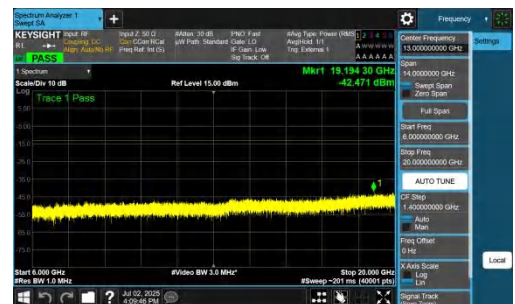 
NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-60
00-20000-PASS

NTNV-n78(3450-3550)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-200
00-40000-PASS

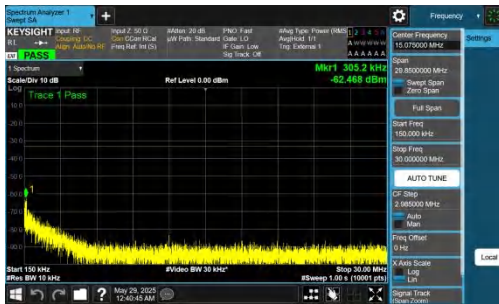 

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-600
0-20000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



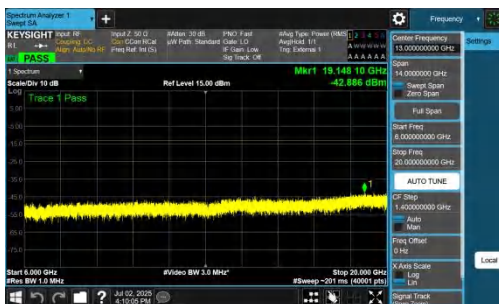 
NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-6000-20000-PASS



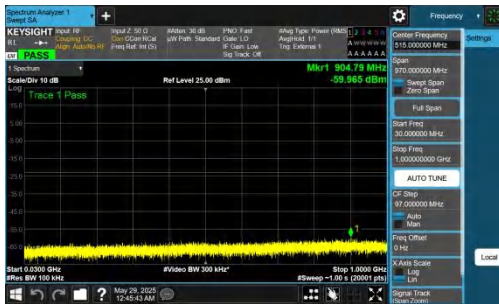 
NTNV-n78(3450-3550)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-20000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



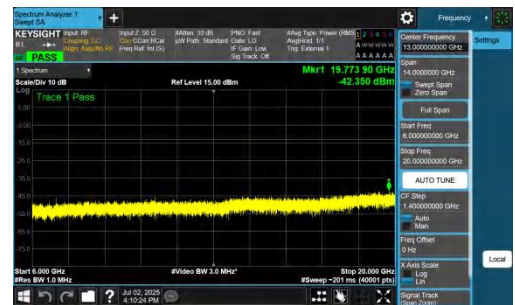 
NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-6000-20000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-20000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS

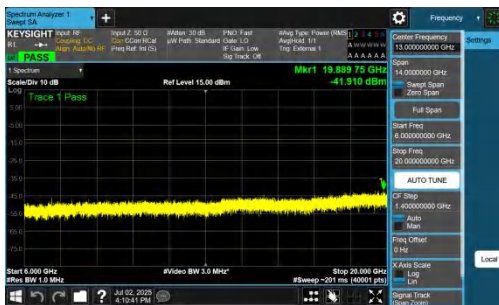 


NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-6
000-20000-PASS

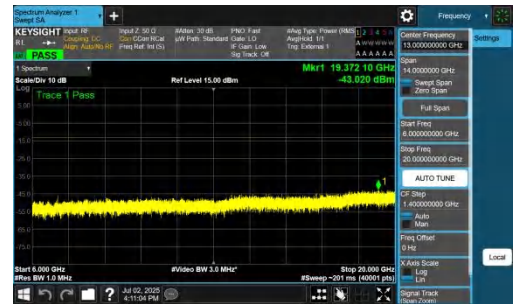 
NTNV-n78(3450-3550)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-20
000-40000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

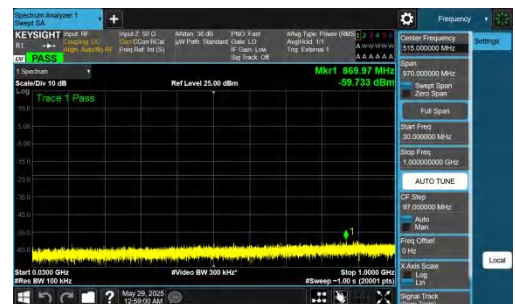 
NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-6000
-20000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS



NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-6000-20000-PASS



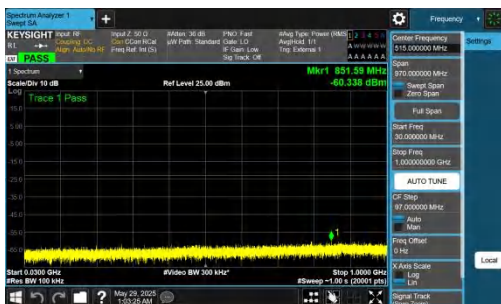 
NTNV-n78(3450-3550)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-20000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



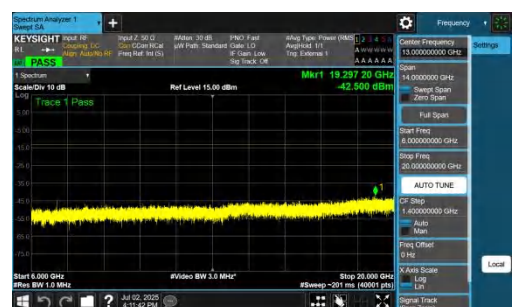 
NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-6000-20000-PASS


NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

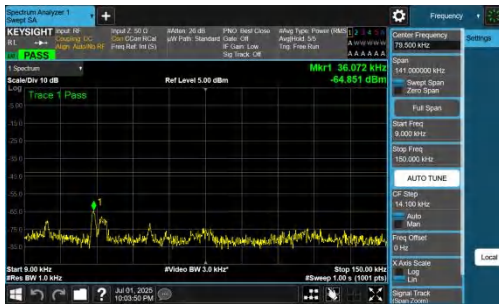 
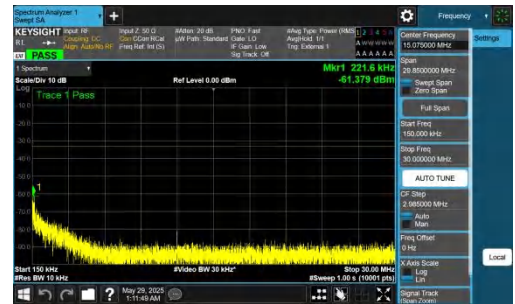 
NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

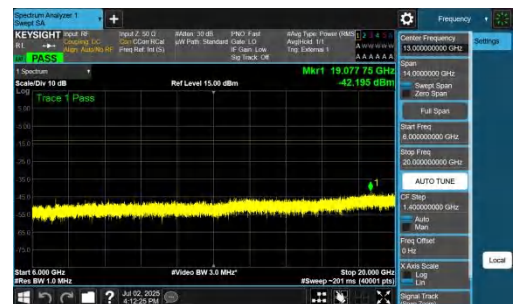 
NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-6
000-20000-PASS

NTNV-n78(3450-3550)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-20
000-40000-PASS


NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

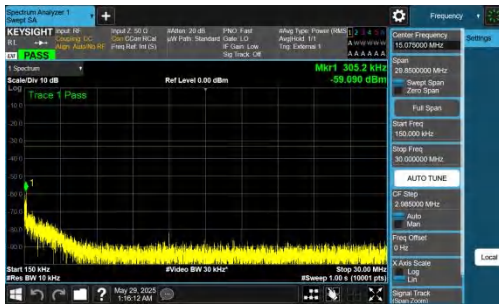 
NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

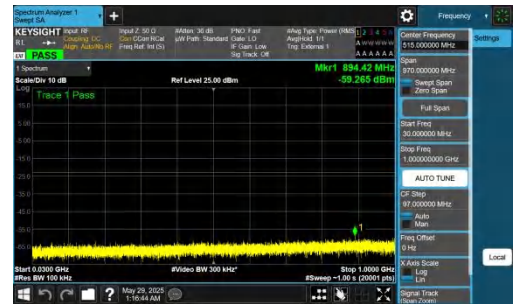 
NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-6000
-20000-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



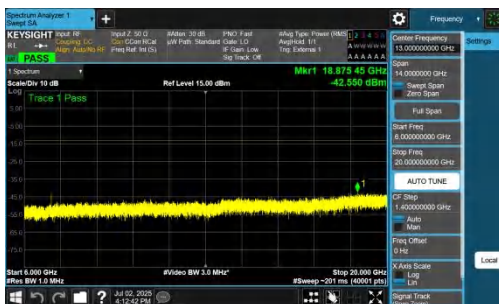 
NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-6000-20000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-20000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



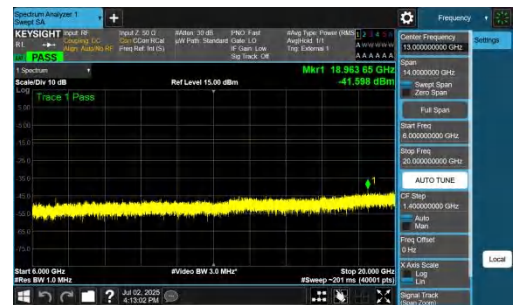 
NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-300-0-6000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-6000-20000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-200-00-40000-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-0.0-09-0.15-PASS

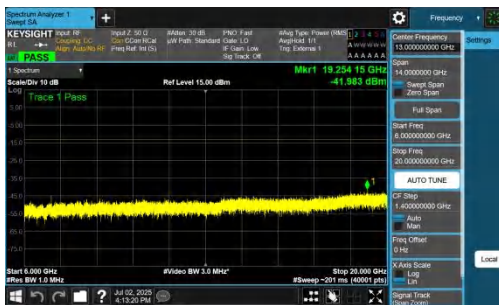 


NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-60
00-20000-PASS

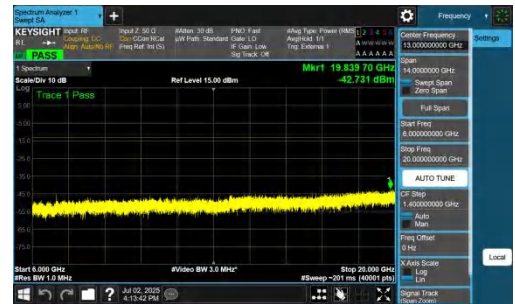 
NTNV-n78(3450-3550)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-200
00-40000-PASS

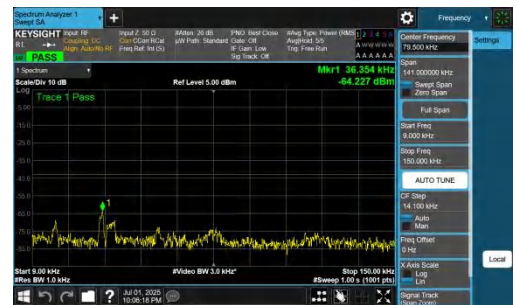 
NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

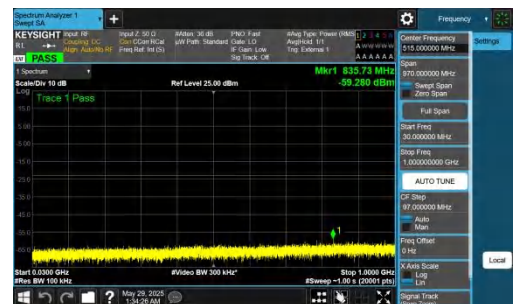 
NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS

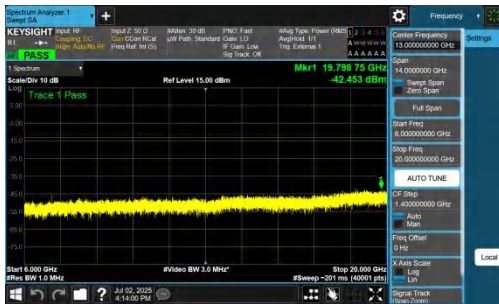 

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-600
0-20000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-1
000-3000-PASS

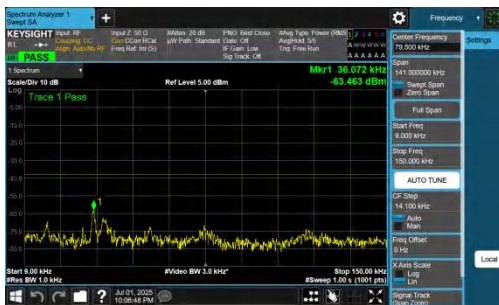 
NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-6000-20000-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-2000-40000-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS

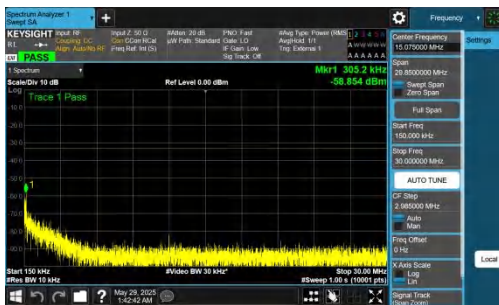 
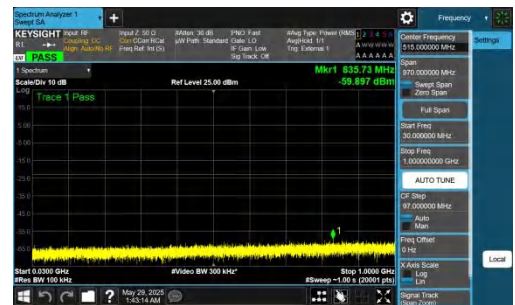 


NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-6000-20000-PASS


NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-20
000-40000-PASS

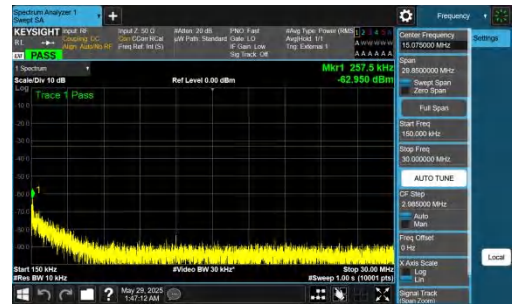 
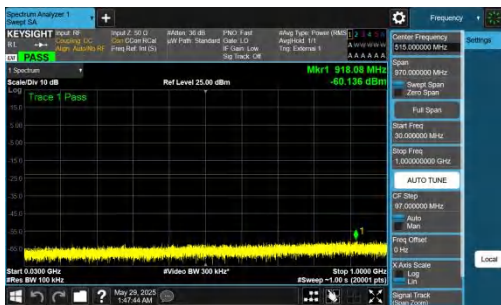 
NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-30
-1000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

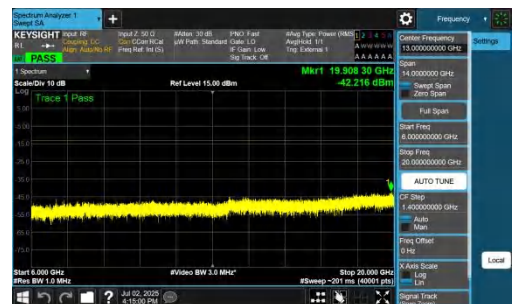 
NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-6
000-20000-PASS

NTNV-n78(3450-3550)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-20
000-40000-PASS

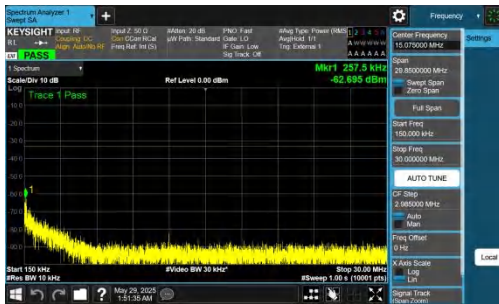 
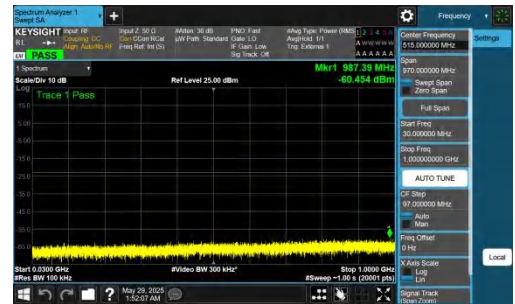 

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

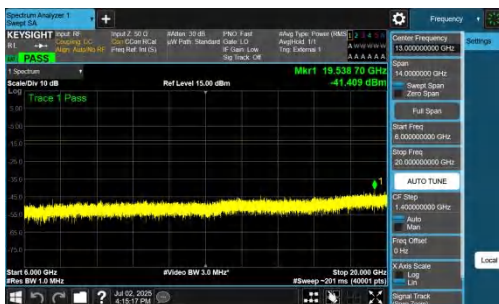 
NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-6000
-20000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS


NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

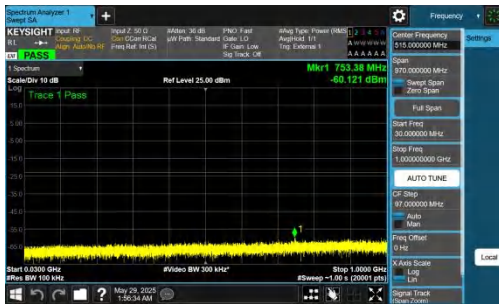 
NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-60
00-20000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-BPSK-Inner_1RB_Right-20
000-40000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-0.15
-30-PASS



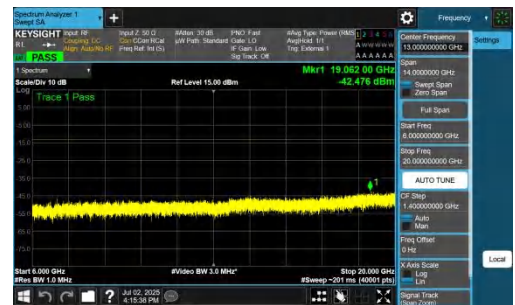 
NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-3000-0-6000-PASS



NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-6000-0-20000-PASS



NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Left-20000-0-40000-PASS



NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-0.009-0.15-PASS

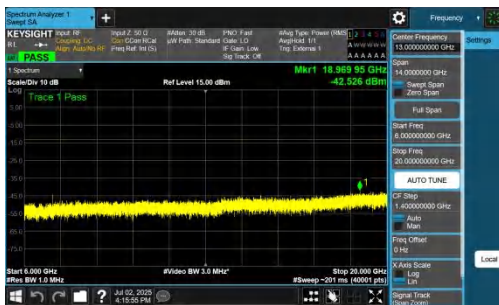 


NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS

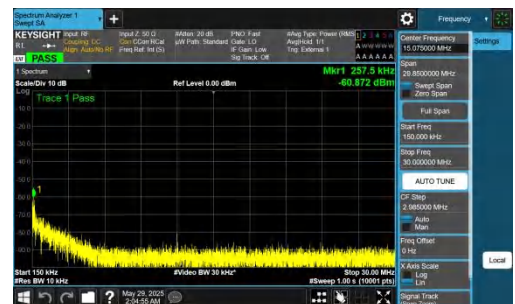 


NTVN-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

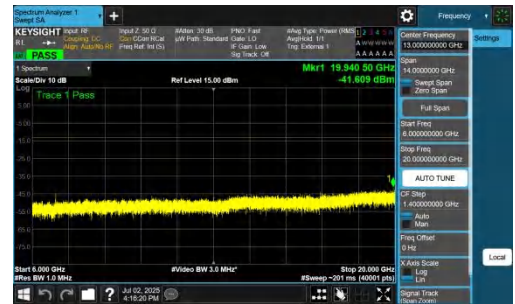 
NTNV-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-6
000-20000-PASS

NTNV-n78(3450-3550)-PC2-30-70-H-DFT-QPSK-Inner_1RB_Right-20
000-40000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

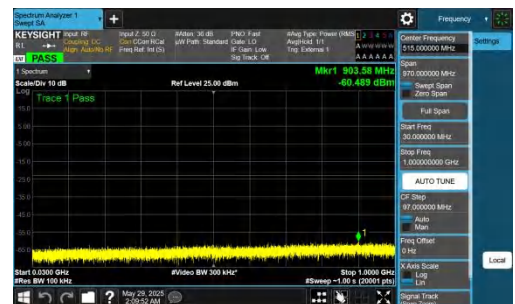 
NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-6000
-20000-PASS

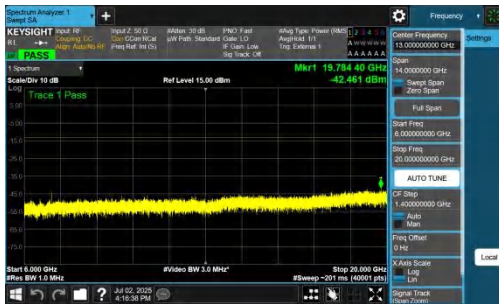 
NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

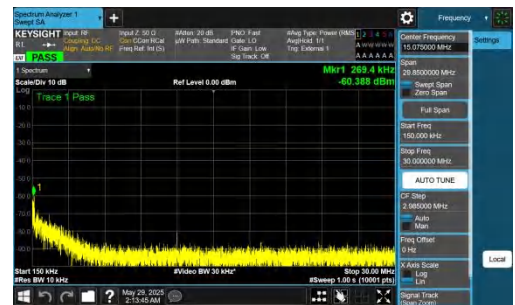 
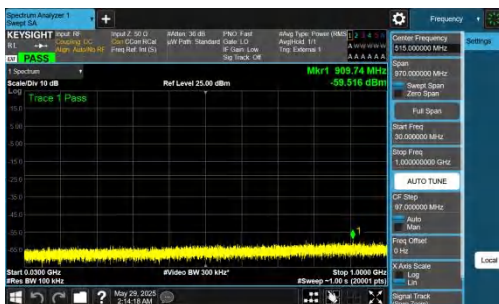 
NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-300
0-6000-PASS


NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-60
00-20000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-BPSK-Inner_1RB_Right-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-6000
-20000-PASS


NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Left-200
00-40000-PASS

NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS


NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



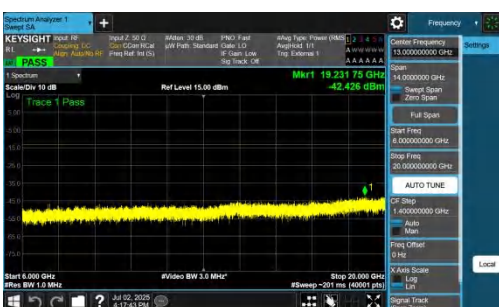 
NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-10-00-3000-PASS



NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-300-0-6000-PASS



NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-60-00-20000-PASS



NTNV-n78(3450-3550)-PC2-30-80-L-DFT-QPSK-Inner_1RB_Right-200-00-40000-PASS