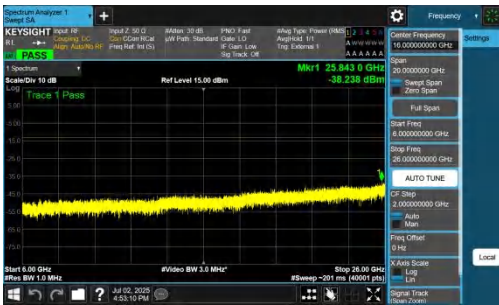 
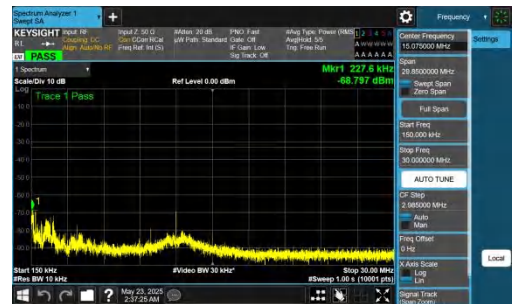 



NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-10
00-3000-PASS

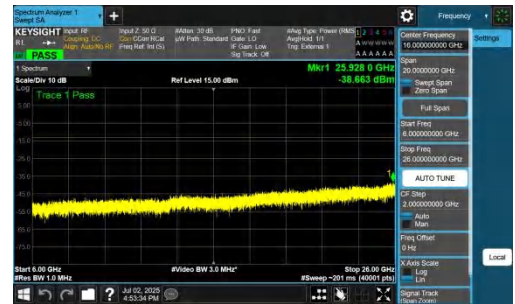 
NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-60
00-26000-PASS

NTNV-n78(3700-3800)-PC2-30-50-L-DFT-QPSK-Inner_1RB_Right-260
00-40000-PASS

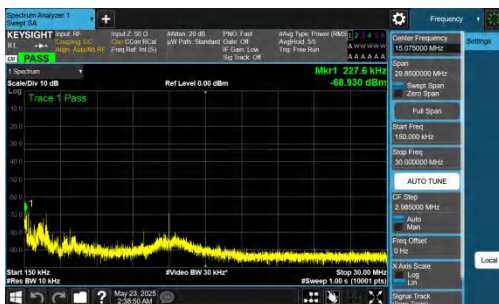 
NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS


NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-600
0-26000-PASS

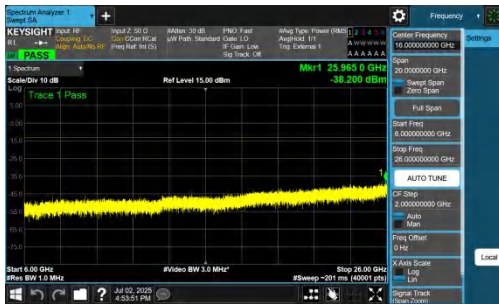 
NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-1
000-3000-PASS

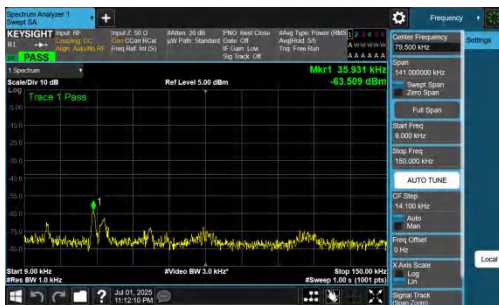 
NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



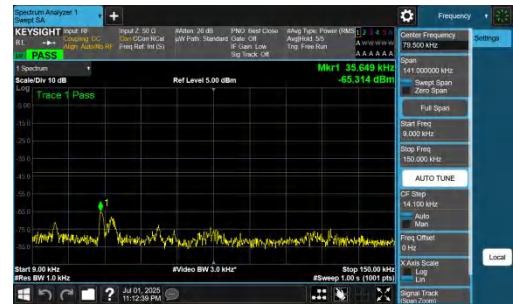 
NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



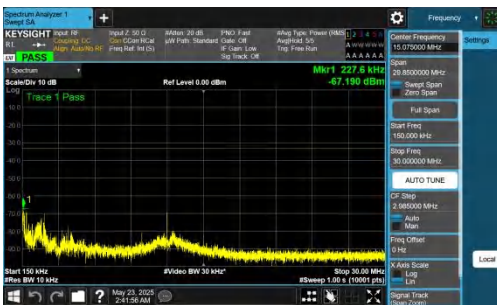 
NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Left-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-1000-3000-PASS



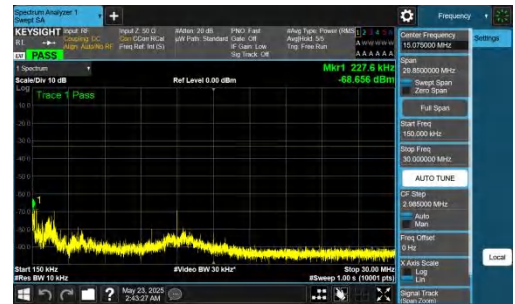 
NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-6000-26000-PASS

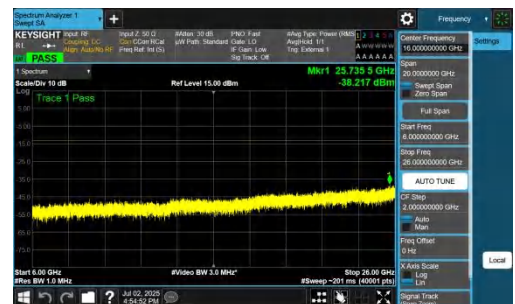 


NTNV-n78(3700-3800)-PC2-30-50-M-DFT-QPSK-Inner_1RB_Right-26000-40000-PASS


NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

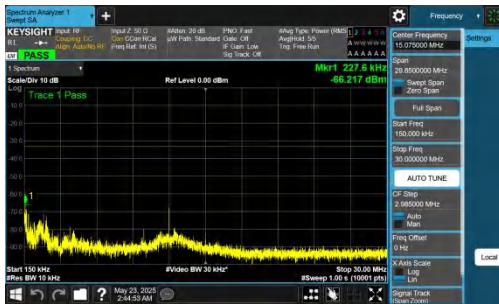 
NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



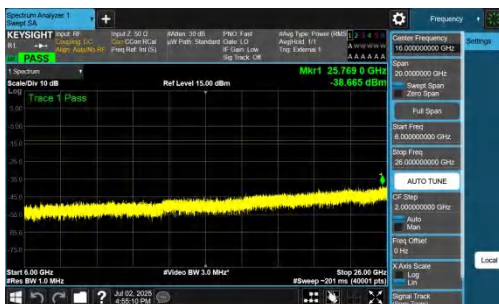 
NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-10 00-3000-PASS



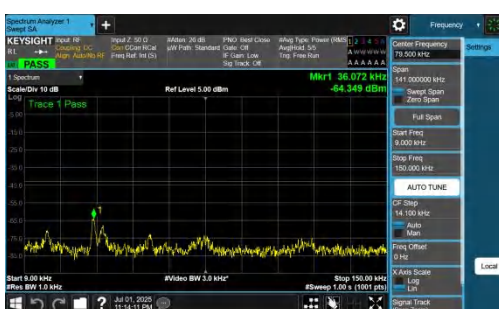 
NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-30 00-6000-PASS



NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-60 00-26000-PASS



NTNV-n78(3700-3800)-PC2-30-50-H-DFT-BPSK-Inner_1RB_Right-26 000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-0.0 09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-0.15 -30-PASS



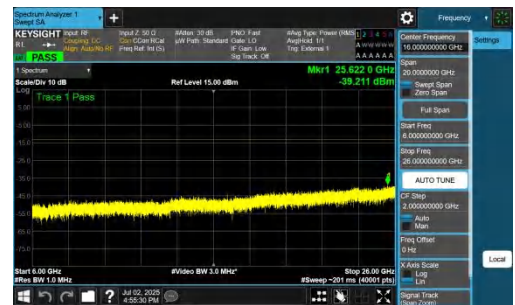 
NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-3000-0-6000-PASS



NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-6000-0-26000-PASS



NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Left-26000-00-40000-PASS



NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS



NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



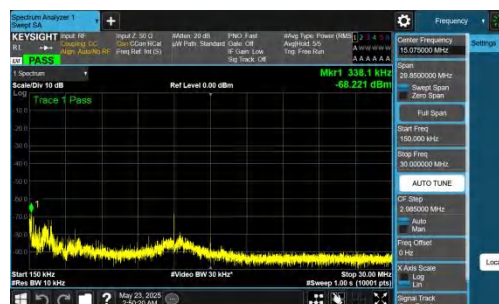 
NTVN-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

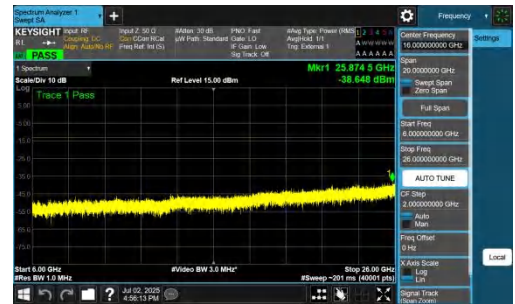 
NTNV-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS

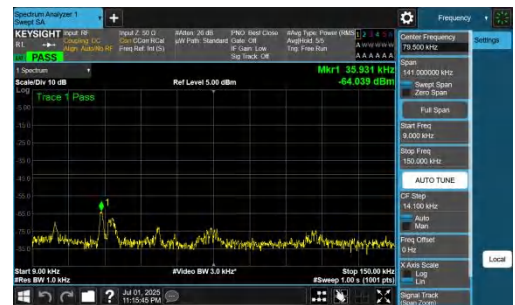 
NTNV-n78(3700-3800)-PC2-30-50-H-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

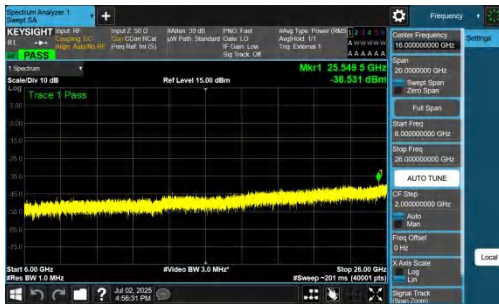 
NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-300
0-6000-PASS



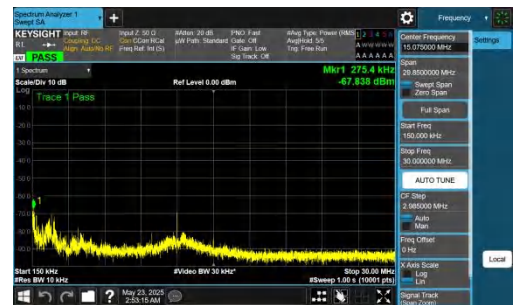 
NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-60-L-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS

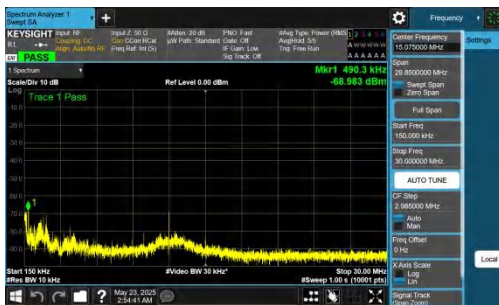 


NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS


NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-0.15
30-30-PASS

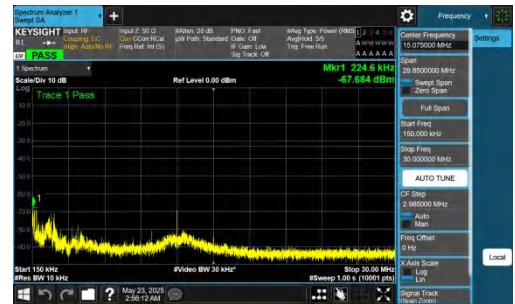 
NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-30.30
1000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-10.10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-300.0
0-6000-PASS

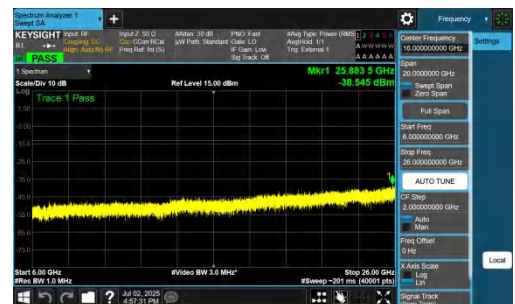 
NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-60.60
00-26000-PASS

NTNV-n78(3700-3800)-PC2-30-60-L-DFT-QPSK-Inner_1RB_Right-260.260
00-40000-PASS


NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

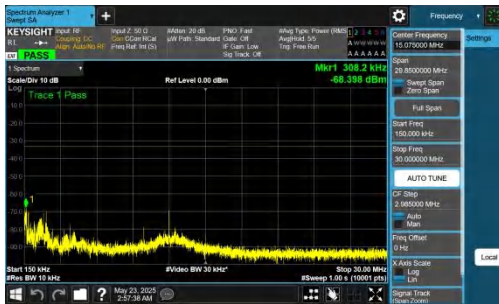 
NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-600
0-26000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



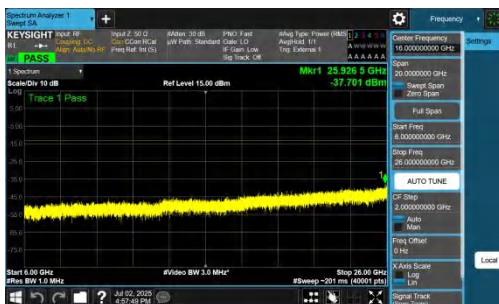 
NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



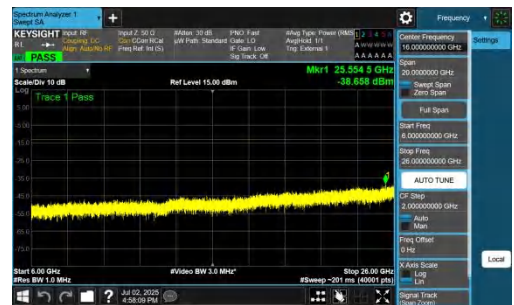 
NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



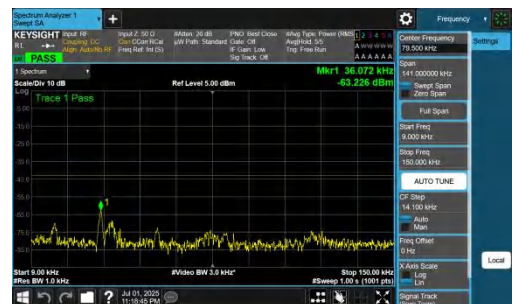 
NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-300-6000-PASS



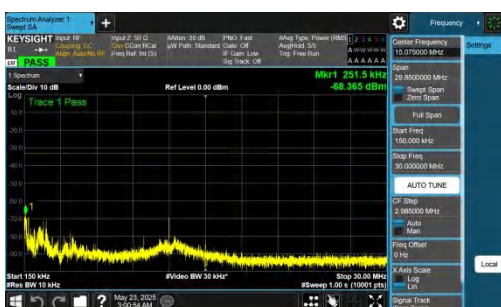 
NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Left-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-0.09-0.15-PASS

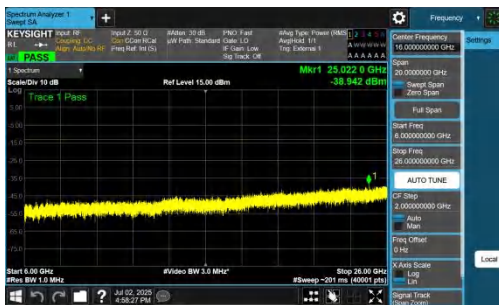 


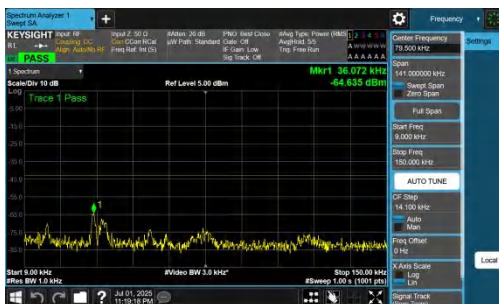 
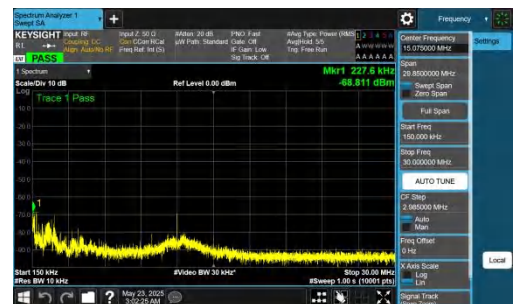 
NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-30-1000-PASS

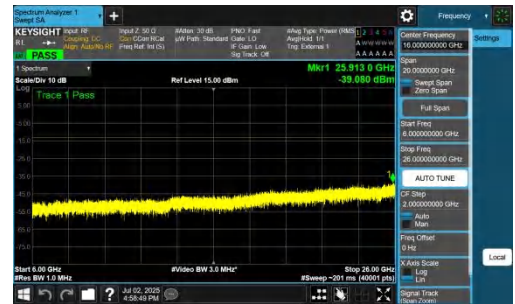 

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS

NTNV-n78(3700-3800)-PC2-30-60-M-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS


NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS



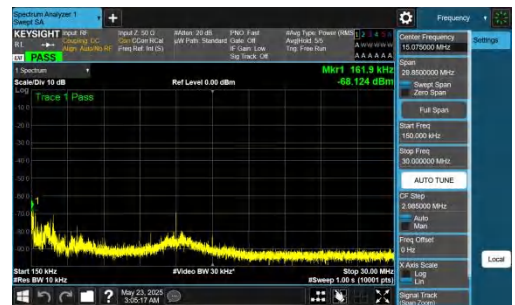 
NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-60-H-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS

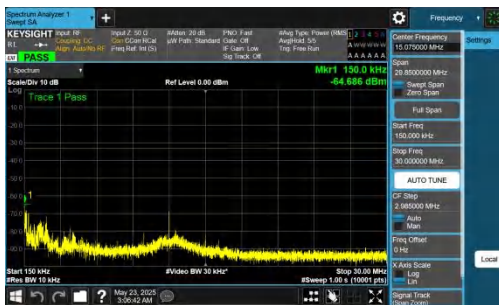 


NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS


NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS


NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-30-1000-PASS



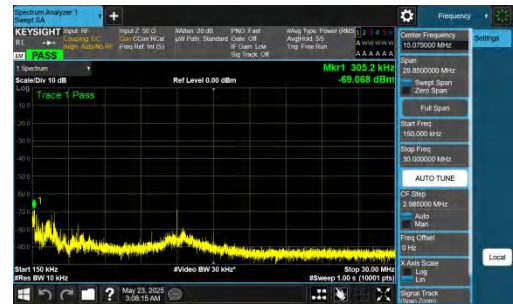 
NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-1.000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-30.00-6000-PASS



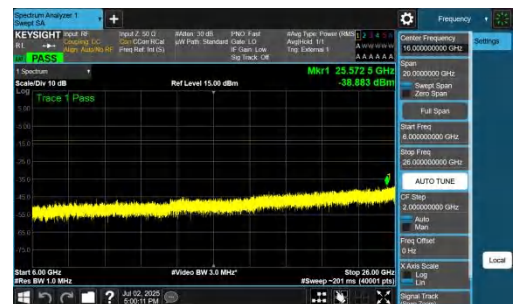 
NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-6.000-26000-PASS

NTNV-n78(3700-3800)-PC2-30-60-H-DFT-QPSK-Inner_1RB_Right-26.000-40000-PASS


NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-0.00
9-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-0.15-
30-PASS

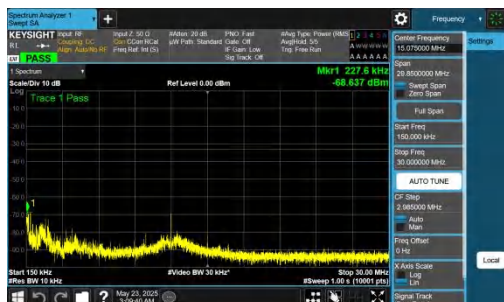 
NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-30-1
000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-1000
-3000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-6000
-26000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS



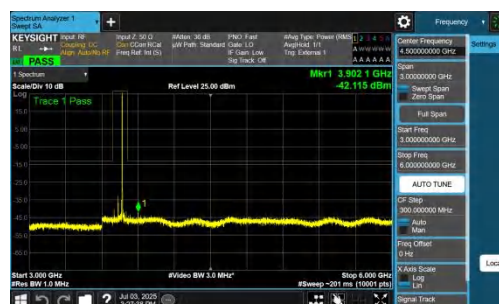 
NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-0.09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-300-0-6000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Left-260-00-40000-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-0.0-09-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-0.15-30-PASS



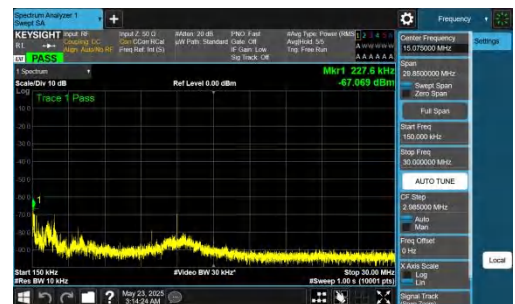 
NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-30-1000-PASS


NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-10
00-3000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-300
0-6000-PASS

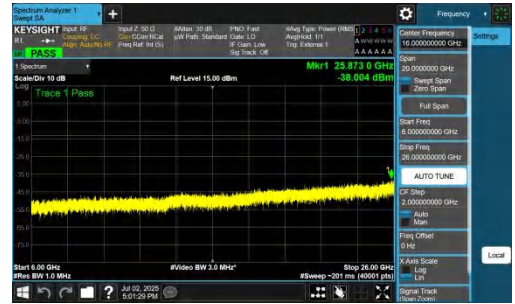 
NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-60
00-26000-PASS

NTNV-n78(3700-3800)-PC2-30-70-L-DFT-QPSK-Inner_1RB_Right-260
00-40000-PASS

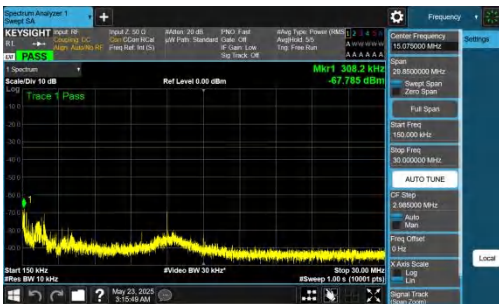 
NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-0.15
-30-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-100
0-3000-PASS


NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-300
0-6000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-600
0-26000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Left-260
00-40000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-30-
1000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-1
000-3000-PASS

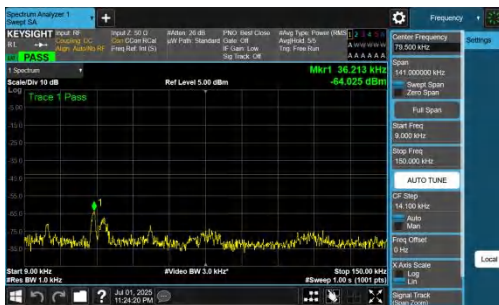 
NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-30
00-6000-PASS



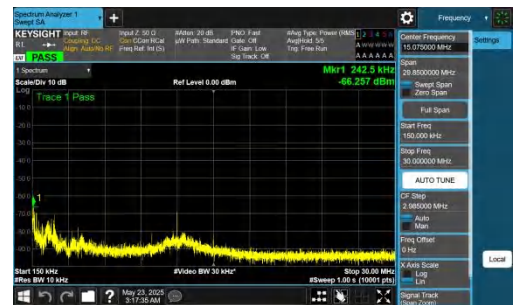 
NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-6000-26000-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-BPSK-Inner_1RB_Right-26000-40000-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-0.009-0.15-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-0.15-30-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-30-1000-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-1000-3000-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-3000-6000-PASS



NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-6000-26000-PASS


NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Left-26
000-40000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-0.0
09-0.15-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-0.
15-30-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-30
-1000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-1
000-3000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-30
00-6000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-6
000-26000-PASS

NTNV-n78(3700-3800)-PC2-30-70-M-DFT-QPSK-Inner_1RB_Right-26
000-40000-PASS