

The GPS
device that
keeps track
of your kid



No matter
what planet
he's
on.





Getting Started

As you look at your new Amber Alert GPS Armor device (Armor), you will notice a few things. First, there is not an ON or OFF button. Your unit is on all of the time. It can't be turned off by your child or anyone else. It can only be turned off through a secure tracking portal or command that you have access to.

The charging port is located on the top of the device between the 2 buttons. Your unit comes with a charger, but is compatible with any micro USB charger. Immediately charge your unit for 4 hours before first time use. Please charge next to a window or door to receive a strong GPS signal. (When charging, red light blinks; when fully charged red light stays solid.) We recommend that you charge your unit each evening so that when your child goes out the door, you have the confidence that the unit will be at its peak performance.

The red button on the top of the device is the SOS button. It is for use in an emergency. Holding down this button for four seconds or more sends an alert to your

pre-determined emergency contacts. This button also feels different. It has a bump on the top. In case you cannot see which button to push, you can simply feel which button to push in case of an emergency. Please practice this with your child.

The green button on the top of the device is the voice button. It is for used when making or receiving a call to the device. When the green button is pressed for four seconds, the device will call the pre-designated number listed in the web portal. If you'd like to call the device, simply call the phone number of the device provided to you. The device will not ring or vibrate when called. It will automatically pick up after 2 audible rings on the callers end. You can begin speaking, or you can place your phone on mute to listen in. The wearer of the device does not know a call has been made unless you begin speaking.



Continue To Setting Up Your GPS...

Setting Up Your Amber Alert GPS Armor

Included in this packaging is a quick start guide. This quick start guide will help you get started. It includes the URL (www.amberalertgps.com) to the tracking portal, user name, password, and phone number of your device. Please keep this information safe and secure.

The Armor device comes activated and ready to go. It has been tested for quality assurance before shipment. It is your responsibility to log into the tracking portal and set up the necessary users for your device. It's simple-but if you have problems you can ask your kids to help you. NOTE: the device will not work unless set up is completed.

When setting up your device, you'll be asked to give your device a name. You'll also need to set up preferences like feet/meters, MPH/Kilometers, etc. You will determine the trusted individuals you want notified when your child presses the SOS button.

Your Cell Phone and Amber Alert GPS Armor

A mobile web based App for the Armor device has also been designed to work with almost all Smart Phones. This App is free and is easy to install. Instructions are provided on the quick start guide.

After your Armor device has been charged, it will begin reporting to the tracking portal immediately. Each location is logged on the maps and the reports page.

To view the locations, you can log in to the tracking portal from your computer or you can log on using the App from your Smart Phone. Using your Armor device is that easy.

Depending on the subscription plan you ordered, you will have the following features available:

Basic

Locate via the App or Computer, Live Tracking (all locates logged into the tracking portal).

Unlimited

Locate via the App or Computer, Live Tracking (all locates logged into the tracking portal). Plus SOS, safe zone, speed alerts, page, destination alert, low battery and bread crumbing.

2-Way Voice Monitoring can be added to either plan. SMS (text) Alerts can be added to either plan.





Alerts

Alerts can be sent two ways: email and/or SMS (text). Email alerts can be sent to 10 trusted individuals. SMS (text) alerts can be sent to 2 users. Please note that SMS (text) alerts are an additional cost.

The Email or SMS (text) message will display:

- The name of the alert. (Help Me!, Speed!, Safe Zone!, Destination!, etc.)
- The name of the unit. (The name you chose when setting it up.)
- The address of where the unit is currently located with date and time.
- An active URL to click on to view the map.

Here is a list of features and how they work:

SOS

SOS is activated one way only – by pressing the red button on the device for 4 seconds. Once activated, the device will send out email alerts every 5 minutes to all authorized users for up to 1 hour. If you have purchased the SMS (text) alerts, then the device will send out SMS (text) alerts every 5 minutes to two primary users.

To turn off the SOS Alert, simply log into the

tracking portal and press “Stop” under the alerts tab. An email and/or SMS (text) alert will be sent notifying users that the SOS was stopped by an authorized user.

Locate

To locate your Armor device at any given time, simply log in to the tracking portal via the App or computer. Locations are updated every 1-2 minutes.

Locate

To locate your Armor device at any given time, simply log in to the tracking portal via the App or computer. Locations are updated every 1-2 minutes.

Safe Zone

The Armor device allows you to set 3 safe zones at a time. In the tracking portal, click the Alerts Tab. The safe zone menu is the first alert available. Simply input the address and radius of the safe zone(s) and click save. After you have entered all of the desired safe zones, you must click the start button to be activated.

To deactivate: click stop in the safe zone section under the Alerts Tab.

Once the safe zone is breached, the device will send out two email alerts every 5 minutes to all users. If SMS (text) alerts have been purchased, then the device will send out two SMS (text) alerts to the primary users.

Speed

To set a speed alert, log in to the tracking portal and click the Alerts Tab. The speed alert is the second alert on the right hand side. Select the desired speed in the drop down menu and click the start button to activate.

To deactivate: click stop in the speed section under the Alerts Tab.

Destination Alert

The Armor device allows you to set 3 destination alerts at a time. In the tracking portal, click the Alerts Tab. The destination alert menu is located on the right had side. Simply input the address and radius of the destination(s) and click save. After you have entered all of the destinations, you must click the start button to be activated.

To deactivate: click stop in the destination alert section under the Alerts Tab.



Once the device has arrived at the destination, the device will send out an email alert all users. If SMS (text) alerts have been purchased, then the device will send out an SMS (text) alert to the primary users.

Bread Crumb

To have your device report on a set interval, log in to the tracking portal and select the Alerts Tab. On the right hand side, select bread crumb. From the drop down menu, select 15, 30, 45 or 60 minute intervals. Click the start button to activate. Emails will be sent to all users at appropriate interval.

To stop the bread crumbs, click stop in the bread crumb section under the Alerts Tab.

2-Way Voice Monitor

To set up the designated number for the 2-Way Voice, click on the User's Tab. On the right hand side, select Voice Users. Fill in the name and phone number and click the save button. When the green button is pressed for 4 seconds on the device, this is the number that will be called.

If you would like to place a call to the device, simply call the device's phone number. The device will automatically pick up without the

wearer of the device doing anything. Begin speaking. If you would just like to listen in, place your phone on mute.

Hang up to disconnect.

Predator Alert

The Armor device is the only GPS device on the market that lets you know when it is near a registered sex offenders residence. In the tracking portal, click the Alerts Tab. The predator alert menu is located on the right had side. Simply click the start button to be activated.

To deactivate: click stop in the predator alert section under the Alerts Tab.

Once the device has arrived is within 500 feet of a registered sex offenders residence, the device will send out an email alert all users. If SMS (text) alerts have been purchased, then the device will send out an SMS (text) alert to the primary users.

Low Battery

The device will send two low battery alerts via email to all users. One alert will be sent when the battery is at 15% and

the final alert will be sent at 7%. The final alert will advise the user that the unit will be turning off.

Turn Off

To turn the unit off, log in to the tracking portal and select the Settings Tab. On the right hand side, select unit status. Click the turn off button.

To turn the unit back on, press and hold the red and green buttons simultaneously until the unit beeps. If traveling by plane, make sure you do this prior to boarding.

Page

To page the device, click the Settings Tab. Select Page Device from the menu on the right hand side. Click the start button to initiate the page. Unit will begin to beep. The unit will beep for 2 minutes if not shut off.

To turn off the page, press the green button for 2 seconds.

Attaching The Amber Alert GPS Armor Device

How you attach the Armor device to your child is a matter of personal preference. Some simple principles apply:

- Make it secure
- Make it inconspicuous
- Make it easy and comfortable
- Make it a habit

You can go to our website to purchase a variety of accessories that make it fun for your child to wear their Armor device every day. If using a pouch to carry your Armor device, please make sure that the green and red buttons are facing up. This will allow easier access to the SOS and voice buttons if necessary.



We call it Amber Alert
so you'll never have to.

amberalertgps.com

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and*
- (2) This device must accept any interference received, including interference that may cause undesired operation.*

Any change or modification to the product not expressly approved by Amber Alert GPS Group could void the user's authority to operate the device.

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This device was tested for bodyworn operation. The maximum SAR value reported is 0.491W/kg.

For normal operation the use of beltclips, holsters and similar accessories should not contain metallic components. Use of non-approved accessories may violate FCC RF exposure guidelines.