

## CARE INSTRUCTIONS

- Keep GoDogGo CLEAN and DRY to insure proper operation.
- DO NOT turn GoDogGo “OFF” during MID-LAUNCH CYCLE.
- ALWAYS turn HandRemote lights “OFF” when NOT in USE.
- ALWAYS turn GoDogGo “OFF” and UNPLUG when CLEANING.
- DO NOT use or leave unit in WET CONDITIONS.
- DO NOT submerge GoDogGo in WATER.
- DO NOT use or leave EXPIRED batteries in GoDogGo or Remote.
- DO NOT use PRESSURE SPRAYER or WATER HOSE to clean unit.
- DO NOT use with BALLS RETRIEVED from WATER.
- DO NOT leave WET or SOILED balls in GoDogGo to avoid mold and bacteria growth.
- AVOID use in temps below 45° - Like any gear driven mechanism GoDogGo will operate slower and may hesitate in colder conditions. ALWAYS STORE INDOORS!



### CLEANING GoDogGo® Fetch Machine

The best way to clean GoDogGo® of debris is to wipe the channel down with a damp cloth. An air hose may be used to carefully blow remaining debris from the ball track and sensor switch, being careful not to blow debris inside the base.



### SENSOR SWITCH MAINTENANCE

Frequent cleaning of the sensor is recommended for dogs that produce heavy saliva or when used with balls that retain dirt/debris.

*When cleaning the sensor switch, a Q-Tip or corner of a paper towel may be used to wipe around and under the sensor tip.*



### DO NOT TURN UNIT OFF DURING MID-LAUNCH CYCLE

Turning GoDogGo off during “mid cycle” while launcher is rotating may cause the spring to over stretch and result in reduced launch distance. This may also cause the launching mechanism to stick when restarting GoDogGo.

*\*Always store GoDogGo at lowest tension setting with the green launching mechanism in the 12 o'clock position for longer spring life and better performance.*

## TECHNICAL ASSISTANCE

### Having trouble?

Send an email to: [warranty@godoggoinc.com](mailto:warranty@godoggoinc.com)

Most set-up or operation issues can be solved with a quick email to our warranty department. Be sure to contact GoDogGo, Inc with any questions prior to returning GoDogGo® RemoteFetch.



 
### REPLACEMENT PARTS

Replacement parts can be obtained from GoDogGo®, Inc. on the Warranty/Parts page at [www.godoggoinc.com/warranty.html](http://www.godoggoinc.com/warranty.html)

**LIFETIME WARRANTY** on the KICKER/PIN , SPRING, PULL-RING & SAFETY SENSOR SWITCH. Shipping & Handling apply.

## QUICK START INSTRUCTIONS

1. SET LAUNCH DISTANCE with ADJUSTMENT RING found on BOTTOM of UNIT to ONE of the 3 SETTINGS; LOW, MED, or HIGH.
2. PLUG in the AC ADAPTER or INSERT 6 D-SIZE BATTERIES.
3. FLIP BLACK TOGGLE SWITCH to the “ON” POSITION.
4. SELECT DESIRED LAUNCH TIME of 4, 7 or 15 SECONDS.
5. STAND CLEAR of LAUNCH AREA! KEEP YOURSELF and YOUR DOG a MINIMUM of 2 FEET from the FRONT of the UNIT.
6. The FIRST BALL will LAUNCH after the 4 second “SAFETY DELAY”.
7. For CONTINUOUS BALL LAUNCHING, FILL the BUCKET with DESIRED NUMBER of BALLS or TRAIN your DOG to PLAY with 1 BALL and have him RETURN ball to the BUCKET for INDEPENDENT PLAY.
8. NEVER TOUCH the SENSOR SWITCH when UNIT is turned ON.



## GETTING STARTED

**GoDogGo® is powered by AC Adapter and Battery Power.**

•If using AC ADAPTER- Connect the end of cord to the AC input on the control panel and then into the wall outlet. NEVER USE THE AC ADAPTER WHILE THERE ARE BATTERIES IN THE UNIT. THIS MAY CAUSE THE UNIT TO OVERHEAT AND THE BATTERIES TO ERUPT AND SEEP.

•If using BATTERY POWER- Install 6 size D batteries in the compartment located on the bottom of the unit. Disconnect AC adapter from outlet.



WARNING: DO NOT USE GoDogGo in WET CONDITIONS or on WET GRASS!



STAND CLEAR OF LAUNCH AREA! Keep yourself and your dog a minimum of a 2 foot distance from the front of the unit. Keep all children, spectators, and operators away from launch pattern to avoid contact with a ball.

Once you have determined where you will exercise your pet with GoDogGo®, adjust the unit’s appropriate launch distance and intermittent time sequence. The following conditions will determine how you will preset the unit.



DO NOT USE IN EXTREME HEAT OR COLD!  
ALWAYS CONSIDER YOUR PET’S HEALTH!

1. Size of play area or yard
2. Physical condition of your pet
3. Weather




First determine the distance you wish to launch the ball from 15' to 30'+, then make the adjustment from the bottom of the unit. ONLY MAKE ADJUSTMENT WHILE UNIT IS TURNED OFF AND UNPLUGGED! Take hold of the adjustment ring and position it in one of the 3 slots provided; LOW, MED or HIGH.

**GoDogGo® may be used with a variety of ball sizes and types.**  
Launch distance will vary depending on the ball size, type, and condition.

GoDogGo® is designed to launch tennis balls approximately 15 to 40+ feet at 4, 7 or 15 second intervals.

NOTE: Launch distance will be affected by the condition and type of ball used; i.e. WET or OLD balls do not perform as well as NEW, DRY hi-pressure balls. TEMPERATURE is also a factor as warmer conditions cause the air inside pressurized balls to expand which contributes to longer launch distances. Longer launch distances require more time for the dog to retrieve the ball. The setting will also depend on your pet’s abilities. When loading the bucket of GoDogGo®, the maximum ball count is 17 with full size balls or 25 with small size balls. Overloading the bucket may result in balls binding up in the bucket or along the track.

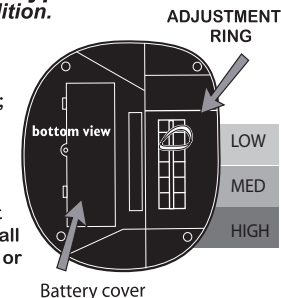

**Now...Get Ready, Set, Fetch with GoDogGo® Fetch Machine!**