



Amulet Remote Product Guide



FCC certification information

This product is certified under US FCC ID: YOURXT9000-18XXE

Amulet Devices makes the following representations:

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference,
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Per FCC regulation 47 CFR 15.21: Changes or modifications not expressly approved by Amulet Devices, as the party responsible for compliance, can void the user's authority to operate the equipment.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Getting started with your Amulet remote 1

Installing your Amulet Remote. 1

First Switch On 5

How to get help. 6

Working with media 8

Common commands 8

Volume Control by voice. 8

Navigation within Screens. 8

Playing Music 9

Artists, Albums & Songs 9

Playlists, Genres and Favorites 13

TV, Videos and Movies 15

Navigation within Media. 15

Movies 16

Videos. 18

Recorded TV / TV Series 20

Live TV / TV Guide 22

Photos 24

Media Center Pages 25

Help Commands 25

Voice Typing 26

Speech Profile Commands 26

Refreshing and updating the Media Indexes. 27

Miscellaneous Commands 27

Troubleshooting 28

What to do if Amulet does not respond to commands correctly. 28

Audio Output settings 28

Sound Recorder 28

Speech Training 28

Troubleshooting Installation 29

Logo not lighting up at all 29

Microphone Level not going up when Speaking 29

Logo flashing red while tilted 29

Re-pairing the remote to the USB dongle. 29

All the Buttons Explained. 31

The Amulet Logo 31

Media Center Buttons 32

Amulet Setting - Customizing your experience. 34

Working with Multiple speakers. 38

The Voice Profile Button and Voice Profile Commands 39

Optimizing your Media setup 40

Controlling other bits of equipment 42

Normal Media Center Learning 42

Additional Learned Key Combinations 43

Special Key Combinations 43

A – Z Command reference 44

Chapter

1

Getting started with your Amulet remote


This chapter will introduce your Amulet remote and allow you to get going straight-away.

Installing your Amulet Voice Remote.

You will find an Installation Guide and Getting Started guide in the shipping box. The details within the Installation guide and quick start guides are reiterated here for reference. If you have already installed and run through the getting started guide you may want to skip this section of the guide.

1. What is in the package?

- A. Remote
- B. USB Dongle
- C. Charging Cable
- D. Software & Documentation CD
- E. Quick Start Cards

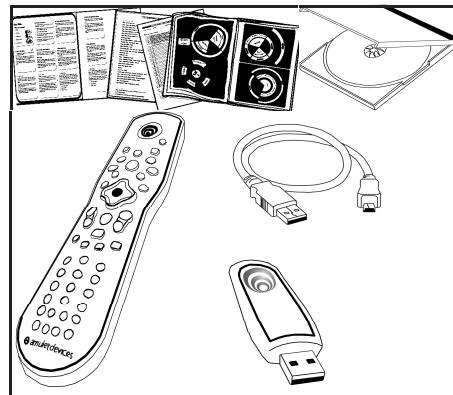


Note:


If you have any issues with assembly watch the “Amulet Remote Hardware” video on the CD.

2a. Putting in the battery

The rechargeable battery for your remote has been removed for shipping. To insert the battery:

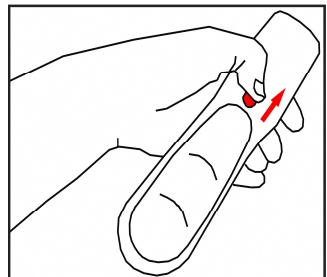


Hold the remote with the battery cover facing down. Slide the release clip towards the top to release the cover.

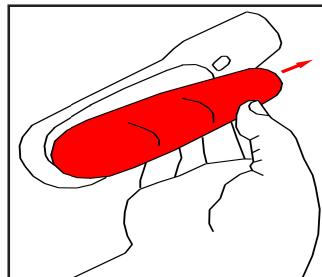


The battery cover falls downwards and can then be removed.

2b. Putting in the battery

Insert the battery with the metal contacts face down and facing the top of the remote.

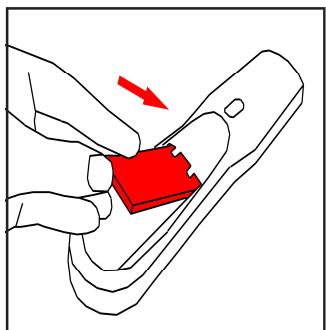

Push down on the back of the battery to clip it in place. Replace the cover.

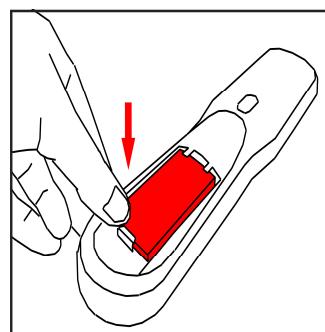


3. Putting the Remote On Charge

The battery shipped with the remote is partially charged so that you can use your remote right away.

Note:

While not necessary, if you want to charge your remote before use, remove the rubber cover on the bottom end and plug the small end of the charging cable into the connector. Plug the other end of the cable into any spare USB port on your Media Center. A **FLASHING GREEN** logo at the top of the remote means that it is charging. The logo changes to **SOLID GREEN** when fully charged.

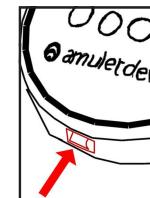

4. Link the Media Center to the Remote

 
To allow you to use voice commands, the remote is linked to the Media Center through the USB dongle. The dongle can be plugged into any free USB port. When you plug in the dongle it will be recognised as a new audio device. There is no need to install drivers in advance.

You can check the connection between the remote and the USB dongle by tilting the remote vertically as if speaking into a microphone. When the link is active the logo will go solid red and the USB dongle will display a solid light. If you experience any issues refer to the Troubleshooting section of this guide.



5a. Install the Software

To allow spoken commands to be recognised within Windows Media Center you must install the software from the CD. Before installing the CD close Windows Media Center if it is running. To begin installing the software, insert the CD.



The CD will automatically start and prompt you to run Setup. Click on the Setup icon to begin installation. If this does not happen run Setup.exe from the CD. The software supports both 32-bit and 64-bit versions of Windows; Setup will select the correct version. If you see a requester asking if you want to allow the software to make changes to your computer, click Yes.

5b. Install the Software

After installation is finished, a demonstration video plays to show you some of the ways you can use your Voice Remote. While the video is playing, Amulet performs a quick initial scan of your media. (A full scan continues in the background, and may take up to an hour to complete.)



When the video is over, Media Center will restart. Soon afterwards, you will hear the message "Welcome to Amulet". This means Amulet is ready to respond to your voice commands.

First Switch On

In normal use, the Amulet Voice Remote behaves like a standard remote. When you lift it up to your mouth to speak into it, however, the microphone turns on, indicated by the logo at the top of the remote lighting solid red. If you move beyond the range of the remote's ability to transmit voice commands, the logo shows Flashing Red when elevated. You will then need to move closer to the Media Center.

If you lift up your remote to speak into it and the logo lights up, you can talk to the Media Center. When you are finished speaking commands, simply lower the remote.

When Media Center starts, the Amulet software loads automatically. Once you hear the "Welcome to Amulet" voice prompt, Amulet is ready and waiting for your commands.

A useful speech command to check that everything is working correctly is: "**WHAT TIME IS IT?**". If you hear a spoken response, then everything is working correctly. The installation video will have given you some insight into the use of your Voice Remote.

Remember that while the Amulet remote allows you to do most things via voice, the remote is designed to allow you to do things via voice or the buttons on the remote. Some things such as volume adjustment may feel more natural to do via the buttons but can also be done via voice. Other things such as selecting an artist or TV channel are natural operations for the power of voice.

Tips for using the remote

- Wait until the logo lights solid red before speaking.
- Hold the remote 6-8 inches from your mouth.
- Lower the remote between commands.
- Speak clearly and distinctly to allow the software to learn your voice.
- Watch the microphone level displayed on Amulet screens to ensure you are being heard.
- Use the recognition indicator on Amulet screens to confirm that your commands are recognized with 70%+ confidence.
- If you make a mistake, pause before trying again to allow the software to recognize a new command.

How to get help.

This guide is one part of a linked set of help information that includes:

- User Guide
- Video Guides
- Quick Reference Cards
- On-Line Help.

User Guide

This User Guide is designed as a drop-in guide for guidance on complex operations that are not covered elsewhere. If you need to do something just look it up in the contents page and go to the step by step instructions for that operation. This guide also provides help in setting up your system to get the best from your Amulet Remote. Finally, if you get into difficulty, this guide is the place to come for troubleshooting advice.

Quick Reference Cards

The quick reference cards included in the box will help you get started. Keep these handy to try out some commands.

Video guides

You can access the Amulet user interface pages using the **Amulet menu strip** available on the Media Center start page. Introductory videos demonstrating how to use the software are located under **Help Videos** on the Amulet menu strip. The following Videos are available:

- **Amulet Remote Hardware** – Demonstrates the key elements for installation and charging of the remote.
- **Amulet Introduction.wmv** – Plays during installation to introduce the product.
- **General Help** – Provides an overview of the key features of the Voice Remote.
- **Music Help.wmv** – Demonstrates how Amulet lets you control your music.
- **TV and Video Help.wmv** – Demonstrates how Amulet allows you to work with your TV and Videos programs
- **TV Guide Help.wmv** – Demonstrates how Amulet allows you to move around the TV Guide.
- **Troubleshooting Help.wmv** – If you are have trouble getting commands to work, this give a walkthrough of the key check you should do.
- **Speech Profile Help.wmv** – Explains how Voice Profiles work if you need to support several people with very different voices will be using your Amulet Remote.

On-Line Help

While using the system you can always ask for help to get a set of commands to try. The on-line help provides both general command listings and media specific commands.

What you will not find in this guide.

The guide does not provide a detailed explanation of all areas of Windows Media Center but rather provides key information to allow the efficient operation of Windows Media Center using your voice.

The keystroke sequences used to achieve operations within Windows Media Center are not covered. For these sequences refer to your Windows Media Center Documentation.

Where should you start it your want to understand it all?

It is recommended that you read the [Common Commands](#) section first to be familiar with these before looking at particular media types. You can also read in sequence if you want to be familiar with all operations before starting. If something is not doing what you expect, check the troubleshooting topics.

What are all the red bits?

The command descriptions within the guide have the following syntax:

Curved **()** brackets around a set of words means that only one of these can be said following a command word

Square **[]** brackets around a word or words means that the words are optional

Curly **{ }** brackets around a set of words indicates that the enclosed words should be substituted by an appropriate phrase, such as "**Black Eyed Peas**", to make a selection

What can I say and when?

Within the guide commands are grouped by Media type. This is for ease of understanding. In general all commands can be spoken at all times. For example, you do not need to be in the music screen before you can select an artist. Similarly, you do not need to be in the Recorded TV screen to select a TV program. You can speak commands at any time.

Chapter

2

Working with media

This chapter will explain how to access and control each of the key media elements of the system.

Common commands

The following commands are common to all areas.

Volume Control by voice.

Volume

VOLUME ON / OFF	FULL VOLUME
SOFT VOLUME	QUIET
NORMAL VOLUME	VOLUME UP / DOWN
LOUD VOLUME	

Navigating within Screens.

When in the TV guide or any Windows Media Center Screen you can use the following commands to Navigate by voice.

NAVIGATION

Go To TOP	PREVIOUS PAGE
Go To BOTTOM	GO UP [1 TO 9]
GO RIGHT [1 TO 9]	GO DOWN [1 TO 9]
GO LEFT [1 TO 9]	SELECT
PAGE UP	OKAY
PAGE (UP DOWN)	CANCEL
NEXT PAGE	


EXAMPLES

GO UP 2	NEXT PAGE
GO DOWN 3	PREVIOUS PAGE
GO LEFT 1	SELECT
GO RIGHT [1 TO 9]	

Playing Music

To get an overview of how Amulet allows you to work with music watch the Video “Music Help” from the help video icon on the Amulet Strip in Windows Media Center.

To see your music collections just say:

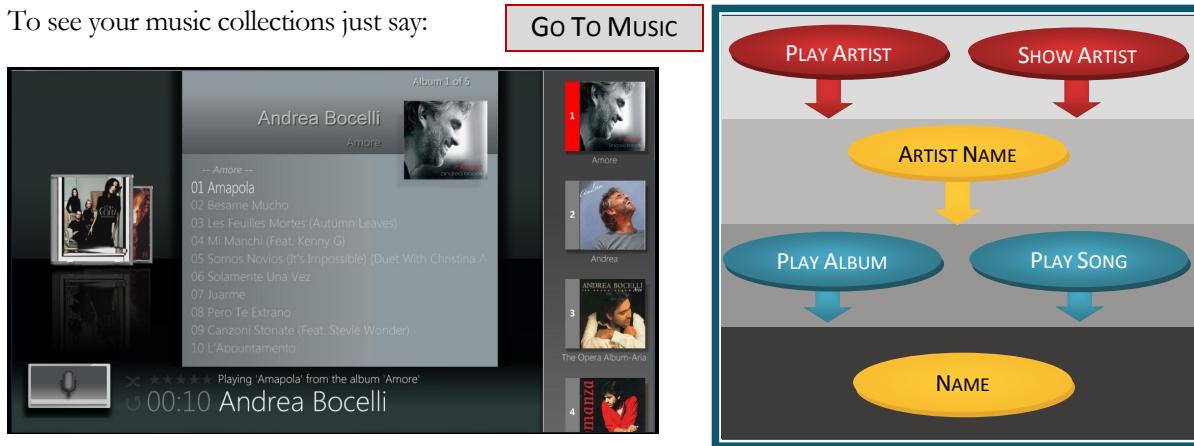

Artists, Albums & Songs

The screen shows a view of your **music collection**, to remind you of albums you may not have heard in a while. To play a particular artist, just say the name of the artist you want to listen to.

ARTIST	DESCRIPTION
PLAY ARTIST <i>{artist}</i> PLAY ARTIST <i>{ artist number}</i>	<p>Begins playing music by the selected artist. Loads the selected Artist's albums and songs for selection. Selection can be made either by the artist name or the associated number.</p> <p>artist The name of an artist or band stored in your music library. By default, band names which begin with the word 'The' may be spoken with or without using 'The'. For example, "Play Artist Beatles" and "Play Artist The Beatles" will both work. The 'ProcessThe' setting turns this on and off.</p> <p>ARTIST NUMBER The number of a musical artist in your music library, using the numbering scheme displayed by the command Show Artists.</p> <p>EXAMPLES PLAY ARTIST Crowded House</p>
SHOW ARTIST <i>{ARTIST NAME}</i> SHOW ARTIST <i>{NUMBER}</i>	Displays albums and songs by the selected artist so that they can be selected for play.

PLAY SOMEONE ELSE
SHOW ANOTHER ARTIST

Begins play of music by a randomly selected artist. Loads the selected artist's albums and songs for selection. Selection can be made either by the artist name or the associated number.

SHOW SOMEONE ELSE

Loads the selected artist's albums and songs for selection. Selection can be made either by the artist name or the associated number.

SHOW / HIDE ARTISTS

Show or hide song name display. This display automatically appears when an Album is selected.

ALBUM

DESCRIPTION

PLAY ALBUM {ALBUM}
PLAY ALBUM { ALBUM NUMBER }

Loads the selected Album and displays the song list for the album.

ALBUM

The name of an album in your music library by the most recently selected musical artist or band. For example, in order to listen to Voodoo Lounge by the Rolling Stones, you first select the artist with "Play Artist Rolling Stones" and then select the album, "Play Album Voodoo Lounge". When the Recognize Partial Song & Album Names setting is enabled, saying only part of the album name is enough to select it.

ALBUM NUMBER

The number of an album in your music library by the most recently selected musical artist or band. Album numbers are displayed in the album strip on the right-hand edge of the Amulet Music page.

EXAMPLES

PLAY ALBUM CROWDED HOUSE
PLAY ALBUM NUMBER 2

SHOW ALBUM {ALBUM NAME}
SHOW ALBUM {NUMBER}

Displays songs by the selected artist so that they can be selected for play.

EXAMPLES

SHOW ALBUM CROWDED HOUSE
SHOW ALBUM NUMBER 2

PLAY ANOTHER ALBUM

Begins play of another randomly selected song by the active artist.

SONG	DESCRIPTION
PLAY SONG {SONG NAME} PLAY SONG NUMBER { SONG NUMBER}	<p>Plays the selected Song by the currently displayed artist.</p> <p>SONG The name of a song in your music library by the most recently selected musical artist or band. For example, in order to listen to Beautiful Day by U2, you first select the artist with “Play Artist U2” and then select the song, “Play Song Beautiful Day”. When the Recognize Partial Song & Album Names setting is enabled, saying only part of the song name is enough to select it.</p> <p>SONG_NUM The number of a song in your music library by the most recently selected musical artist or band. Song numbers are shown in the song window on the Amulet Music Page, displayed when you say “Show Songs”.</p> <p>EXAMPLES PLAY SONG SOMETHING SO STRONG PLAY SONG NUMBER 6</p>
SHOW SONG {SONG NAME} SHOW SONG { SONG NUMBER}	<p>Displays a song by the selected artist.</p> <p>EXAMPLES SHOW SONG SOMETHING SO STRONG Show Song Number 6</p>
PLAY SOMETHING ELSE PLAY ANOTHER SONG PLAY ANOTHER TRACK	<p>Begins playing a randomly selected song by the active artist.</p>
SHOW SOMETHING ELSE	<p>Highlights a randomly selected song by the active artist.</p>
SHOW SONGS HIDE SONGS SHOW TRACKS HIDE TRACKS	<p>Show or hide song name display. This display automatically appears when an Album is selected.</p>

PLAYBACK CONTROL

STOP SONG
STOP TRACK
PAUSE SONG
PAUSE TRACK
CONTINUE
NEXT / PREVIOUS SONG
NEXT / PREVIOUS TRACK
FAST FORWARD SONG
FAST FORWARD TRACK
TURN ON / OFF SHUFFLE
TURN ON / OFF REPEAT

DESCRIPTION

Voice equivalent of standard Media control operations

INFORMATION

NAME THAT SONG
WHAT SONG IS THIS?
WHAT SONG IS THIS
WHAT SONG IS THAT
NAME THAT SONG
NAME THAT TUNE

DESCRIPTION

Amulet will describe the currently playing song.

WHO SINGS THAT SONG?
WHO SINGS THIS TUNE ?
WHO SINGS THAT SONG?
WHO SINGS THIS SONG?
WHAT'S PLAYING?

Name the Song, Artist and Album for the current playing song.

SHOW NOW PLAYING
SHOW WHAT'S PLAYING
SHOW CURRENT PLAYLIST

Will switch to current playing media from any point in Windows Media Center. For example if showing one artist and playing another, this command will switch back to the playing artist and display its details.

Playlists, Genres and Favorites

PLAYLISTS	DESCRIPTION
WHAT PLAYLISTS DO I HAVE? WHAT PLAYLISTS CAN I SAY? TELL ME MY PLAYLISTS TELL ME ABOUT PLAYLISTS WHAT ARE THE PLAYLISTS?	A selection of your playlists is spoken back to you. If you say this again further suggestions are made.
SHOW PLAYLISTS SHOW CURRENT PLAYLIST	Shows a list of the available Playlists on your system. You can use the navigation keys to move through the list and select a playlist. Alternatively use Play PlayList command to select a Playlist.
PLAY PLAYLIST {PLAYLIST NAME} PLAY PLAYLIST NUMBER {PLAYLIST NUMBER}	<p>Plays the selected Playlist.</p> <p>PLAYLIST NAME The name of a playlist in your music library, i.e. a named list of songs, created from within the standard Media Center interface.</p> <p>PLAYLIST NUMBER The number of a playlist in your music library, using the numbering scheme displayed by the command Show Playlists.</p>
SHOW / HIDE CURRENT PLAYLIST SHOW / HIDE [MUSIC] QUEUE	Will switch to current playing media from any point in Windows Media Center. For example if showing one artist and playing another, this command will switch back to the playing artist and display its details.
SHOW / HIDE PLAYLIST	Show or hide playlist name display.
SHOW / HIDE CURRENT PLAYLIST	Show or hide current playlist.

GENRES	DESCRIPTION
WHAT GENRE DO I HAVE? WHAT GENRE CAN I SAY? TELL ME MY GENRE TELL ME ABOUT GENRE WHAT ARE THE GENRE?	A selection of your playlists is spoken back to you. If you say this again additional suggestions are made.
PLAY GENRE { GENRE NAME } [MUSIC] PLAY GENRE { GENRE_NUM } PLAY SOME { GENRE NAME }	<p>Plays the selected Genre.</p> <p>GENRE NAME The name of a musical genre in your music library, used to categorize music by type.</p> <p>GENRE_NUM The number of a musical genre in your music library, using the numbering scheme displayed by the command Show Genres.</p>
SHOW GENRE { GENRE NAME } SHOW GENRE { GENRE NUMBER } SHOW SOME { GENRE NAME }	Show the song list for the selected Genre.
SHOW / HIDE GENRES	Show or hide genre name list.
FAVOURITES	DESCRIPTION
SHOW FAVOURITES	Show the favourites song list based on your selected start ratings.
PLAY FAVOURITES	Start playing songs from your favourites List the favourites song list based on your selected start ratings.
RATE THIS SONG AS { STAR_RATING } RATE THAT SONG AS { STAR_RATING } RATE THIS TRACK AS { STAR_RATING } RATE THAT SONG AS { STAR_RATING } RATE THIS SONG AS { STAR_RATING } RATE THIS TRACK AS { STAR_RATING }	<p>Rates the current song and adds it to your favourites list.</p> <p>STAR_RATING A musical star rating of the form 1-5 stars, or 0 stars, or no stars or unrated. For example, "1 star" and "5 stars" are both valid star ratings, as is "no stars".</p>

TV, Videos and Movies

To get an overview of how Amulet allows you to work with music watch the Video “TV and Video Help” from the help video icon on the Amulet Strip in Windows Media Center.

To see your Movie collection just say:

Go To MOVIES
Go To FILMS

To see your TV Series collection just say:


Go To TV SERIES

To see your Home Movies collection just say:

Go To HOME MOVIES

To see your Recorded TV collection just say:

Go To RECORDED TV

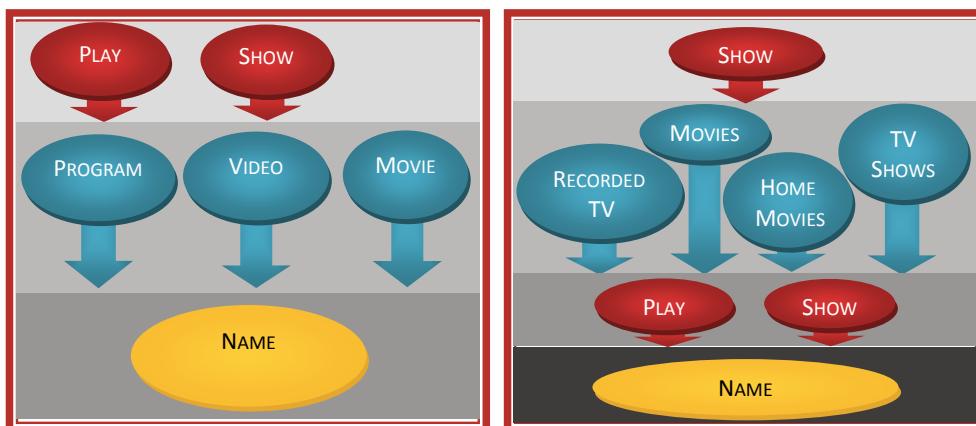

Navigation within Media.

Skip / Jump

Description

Skip To {POSITION}
Skip Forward To {POSITION}
Skip Back To {POSITION}

Jump To {POSITION}
Jump Forward To {POSITION}
Jump Back To {POSITION}

While watching the video, DVD or recorded TV program, if you have already seen some of the item or you just want to see the best bit, you can ask Amulet to do the following.

{POSITION} Is A TIME POSITION WITHIN A MOVIE OR PIECE OF MUSIC. THIS CAN BE IN SECONDS, MINUTES AND SECONDS, OR HOURS, MINUTES AND SECONDS.

EXAMPLES

SKIP To 32 Minutes	SKIP FORWARD 10 Minutes
SKIP FORWARD 30 Seconds	SKIP BACK 5 Minutes
SKIP BACK 20 Seconds	

(SKIP | JUMP) OVER ADS

SKIPS FORWARD A DEFINED AMOUNT IN RECORDED TV TO AVOID ADS.

Movies

NAVIGATE MOVIE LIST

DESCRIPTION

Go To MOVIES [PAGE]

Go To FILMS

SHOW MOVIES

SHOW FILMS

Show RECENT MOVIES

Show RECENT FILMS

Show All Movies

Show All Films

Displays a list of Movies.

SHOW { MOVIE_GENRE } MOVIES

SHOW { MOVIE GENRE } FILMS

Displays a list of movies of a particular type.

EXAMPLES

PLAY COMEDY MOVIES

SELECT A MOVIE

DESCRIPTION

PLAY MOVIE {MOVIE NAME}

WATCH MOVIE {MOVIE NAME}

PLAY FILM {MOVIE NAME}

WATCH FILM {MOVIE NAME}


Begins playing the named movie.

EXAMPLES

Play Movie QUANTUM OF SOLACE

SHOW MOVIE {MOVIE NAME}	Displays details of the named movie.
SHOW FILM {MOVIE NAME}	
DELETE MOVIE {MOVIE NAME}	Removes the named Movie from your collection. Amulet will confirm that you wish to delete the movie.
DELETE FILM {MOVIE NAME}	
PLAYBACK CONTROL	DESCRIPTION
STOP [TRACK] PAUSE [TRACK] CONTINUE NEXT / PREVIOUS [TRACK] NEXT / PREVIOUS CHAPTER FAST FORWARD [TRACK] FAST REVERSE [TRACK] REWIND [TRACK] FAST REWIND [TRACK] SLOW MOTION [TRACK]	Voice equivalent of standard media control operations.
INFORMATION	DESCRIPTION
WHAT MOVIE IS THIS WHAT MOVIE IS THAT	Provides the name of the current movie.
SHOW NOW PLAYING GOTO NOW PLAYING	Begins playing the currently active media from any point in the Media Center screens.
MEDIA CENTER PAGE	DESCRIPTION
Go To MOVIE LIBRARY [PAGE]	Display the media Center Movie page.

Videos.

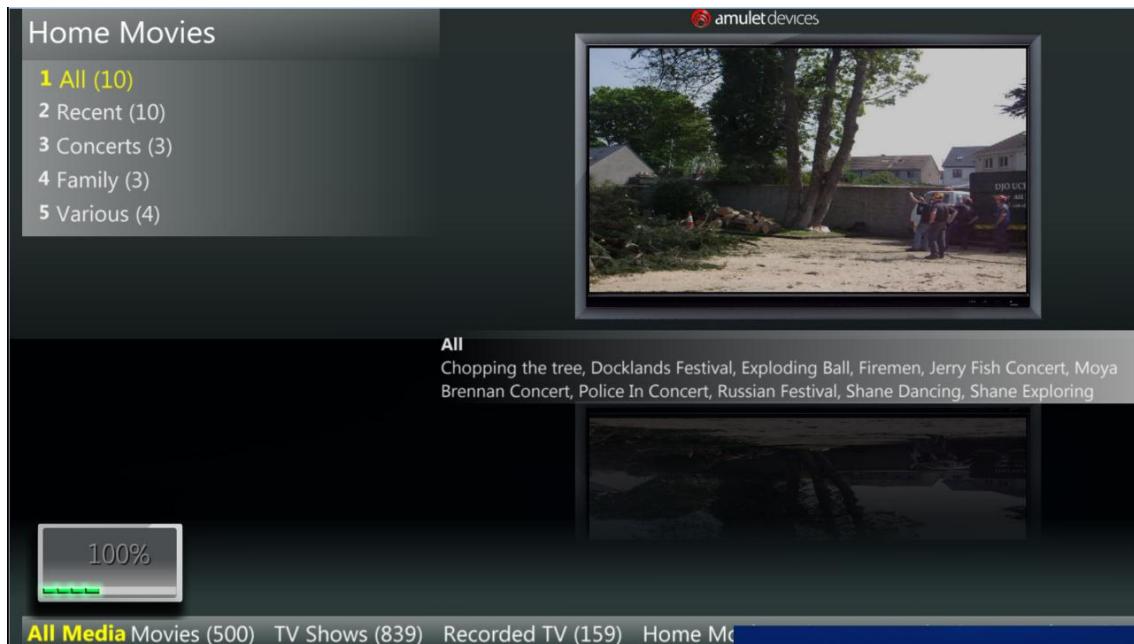

NAVIGATE VIDEO LIST	DESCRIPTION
Go To HOME MOVIES	Displays a list of Movies.
Go To HOME VIDEOS	
Go To VIDEOS	
SHOW HOME MOVIES	
SHOW HOME VIDEOS	
SHOW VIDEOS	

SELECT A VIDEO	DESCRIPTION
PLAY VIDEO {VIDEO NAME} WATCH VIDEO {VIDEO NAME}	Begins playing the selected Video. Examples WATCH VIDEO HEROES SERIES ONE PLAY VIDEO NUMBER 5 PLAY EPISODE HEROES 104 COLLISION PLAY EPISODE NUMBER 4

SELECT A VIDEO	DESCRIPTION
SHOW VIDEO {VIDEO NAME}	Displays details of the named video.
DELETE VIDEO {VIDEO NAME}	Deletes the named Video. Amulet will confirm this choice with you.

PLAYBACK CONTROL	DESCRIPTION
STOP VIDEO PAUSE VIDEO CONTINUE NEXT / PREVIOUS [TRACK] FAST FORWARD [TRACK] FAST REVERSE [TRACK] REWIND [TRACK] FAST REWIND [TRACK] SLOW MOTION [TRACK]	Voice equivalent of standard media control operations.
INFORMATION	DESCRIPTION
WHAT VIDEO IS THIS WHAT VIDEO IS THAT	Provides the name of the current Video.
SHOW NOW PLAYING GOTO NOW PLAYING	Begins playing the currently active media from any point in the Media Center screens.
MEDIA CENTER PAGE	DESCRIPTION
Go To My Videos [PAGE]	Display the media Center Videos page.

DELETE SERIES {PROGRAM NAME}	
PLAYBACK CONTROL	DESCRIPTION
STOP PROGRAM PAUSE PROGRAM CONTINUE NEXT / PREVIOUS [TRACK] FAST FORWARD [TRACK] FAST REVERSE [TRACK] REWIND [TRACK] FAST REWIND [TRACK] SLOW MOTION [TRACK]	Voice equivalent of standard media control operations.
SHOW NOW PLAYING GOTO NOW PLAYING	Begins playing the currently active media from any point in the Media Center screens.
INFORMATION	DESCRIPTION
WHAT PROGRAM IS THIS WHAT PROGRAM IS THAT	Amulet will speak the name of the current playing Media.
MEDIA CENTER PAGE	DESCRIPTION
Go To My TV PROGRAMS[PAGE] Go To My RECORDED TV [PAGE] Go To RECORDER STORAGE SETTINGS Go To SCHEDULED [TV] RECORDINGS [PAGE]	Display the relevant Media Center page.

Live TV / TV Guide



LIVE TV

DESCRIPTION

Go To LIVETV [PAGE]

Starts to play the named Live TV Channel.

Go To TV GUIDE [PAGE]

Starts to play the named Live TV Channel.

WATCH CHANNEL{CHANNEL}

Starts to play the named Live TV Channel.

WATCH CHANNEL NUMBER {CHANNEL_NUM}

CHANNEL

The name of a TV channel available in your current TV lineup.

CHANNEL_NUM

The number of a TV channel available in your current TV lineup.

NEXT DAY

PREVIOUS DAY

NEXT WEEK

PREVIOUS WEEK

PLAYBACK CONTROL

STOP PROGRAM
PAUSE PROGRAM
PLAY PROGRAM
CONTINUE
NEXT / PREVIOUS [TRACK]
FAST FORWARD [TRACK]
FAST REVERSE [TRACK]
REWIND [TRACK]
FAST REWIND [TRACK]
SLOW MOTION [TRACK]

DESCRIPTION

Voice equivalent of standard media control operations.

**TV GUIDE**

SHOW CHANNEL {CHANNEL}
SHOW CHANNEL NUMBER {CHANNEL_NUM}

DESCRIPTION

Display the media Center Movie page.

SHOW [CHANNEL] {CHANNEL} [AT {TVTIME}] [ON {TVDATE}]
SHOW [CHANNEL] {CHANNEL} [ON {TVDATE}] [AT {TVTIME}]
SHOW DATE {TVDATE}
SHOW DATE {TVTIME}


Display the media Center Movie page.

{TVDATE} A DATE FOR THE TV GUIDE WITHIN THE NEXT THREE WEEKS. IN ADDITION TO DATES LIKE **21 JAN, FEB 4**, YOU CAN ALSO USE **MONDAY TO SUNDAY, NEXT MONDAY TO NEXT SUNDAY, TODAY, TONIGHT, TOMORROW AND NOW**.

{TVTIME} A TIME OF DAY WHEN A PROGRAM MIGHT BE BROADCAST. TIMES ARE GIVEN IN THE 12-HOUR OR 24-HOUR CLOCK, AND HAVE FIVE MINUTE GRANULARITY. EXAMPLE TIMES INCLUDE 7 O'CLOCK, 4 PM, 9:30 AM, 22 00, 23:45.

RECORD THIS [PROGRAM]
RECORD THAT [PROGRAM]

Photos

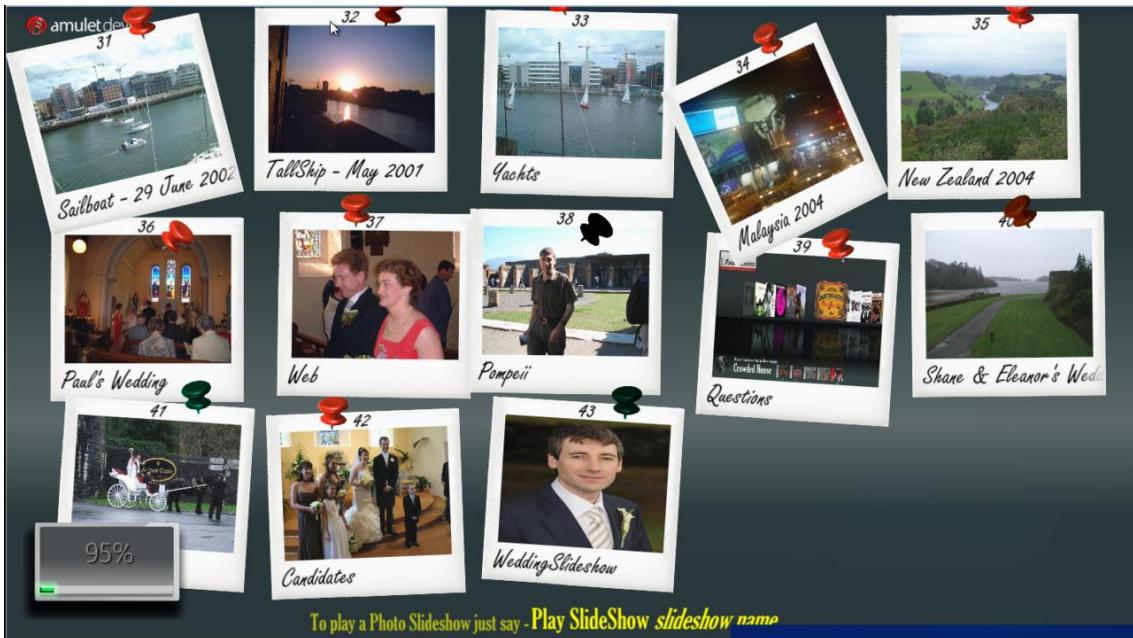

PHOTOS

DESCRIPTION

Go To PHOTOS [PAGE]

Display the media Center Movie page.

PLAY SLIDE SHOW {SLIDE SHOW}

Display the media Center Movie page.

WATCH SLIDE SHOW {SLIDE SHOW}

PLAY SLIDE SHOW NUMBER {SLIDE SHOW_NUM}

WATCH SLIDE SHOW NUMBER {SLIDE SHOW_NUM}

MEDIA CENTER PAGE

DESCRIPTION

Go To SLIDE SHOW [PAGE]

Display the media Center Movie page.


Go To My PICTURES [PAGE]

Go To SLIDE SHOW SETTINGS [PAGE]

Media Center Pages

MEDIA CENTER PAGE	DESCRIPTION
Go To [ALL] MEDIA SHOW [ALL] MEDIA Go To Start [PAGE] Go To Settings [PAGE] Go To Screen Saver [PAGE] Go To More Programs [PAGE] Go To Internet Radio [PAGE] Go To FM Radio [PAGE] Go To Visualizations [PAGE]	Display the media Center Movie page.

Help Commands

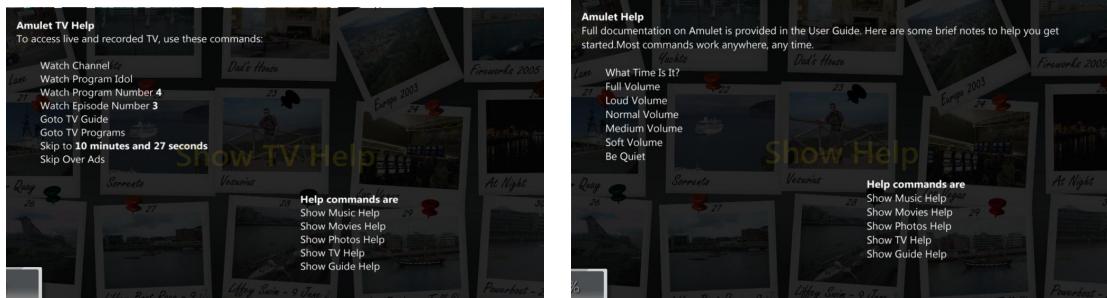

HELP PAGE	DESCRIPTION
SHOW HELP WHAT CAN I SAY HIDE HELP	
HELP PAGE	DESCRIPTION
SHOW MUSIC HELP SHOW PHOTOS HELP SHOW TV HELP SHOW MOVIES HELP	

Voice Typing

HELP PAGE	DESCRIPTION
START TYPING STOP TYPING TYPE IN {LETTERS} BROWSE TO {LETTERS}	
IN TYPING MODE	DESCRIPTION
{ LETTERS }	
WORKING WITH DIALOG BOXES	DESCRIPTION
YES NO OKAY CANCEL NEXT PREVIOUS BACK FINISH	

Speech Profile Commands

FINDING WHAT CURRENT PROFILE IS	DESCRIPTION
WHO IS THIS WHO ARE YOU LISTENING TO WHO IS TALKING WHO IS SPEAKING WHAT IS THE CURRENT PROFILE WHAT [SPEECH] PROFILE IS THIS	
FINDING WHAT PROFILES ARE AVAILABLE	DESCRIPTION
WHAT PROFILES DO I HAVE WHAT PROFILES CAN I SAY TELL ME ABOUT PROFILES WHAT ARE THE PROFILES GO TO SPEECH PROFILES [PAGE] Go To [SPEECH] PROFILE EDITOR) [PAGE]	
SELECTING A PROFILE	DESCRIPTION

SELECT PROFILE PROFILE
THIS IS PROFILE

Refreshing and updating the Media Indexes.

UPDATE INDIVIDUAL INDEXES

DESCRIPTION

(UPDATE | INDEX | RE-INDEX) PHOTOS
(UPDATE | INDEX | RE-INDEX) SLIDESHows
(UPDATE | INDEX | RE-INDEX) MUSIC
(UPDATE | INDEX | RE-INDEX) VIDEOS
(UPDATE | INDEX | RE-INDEX) MOVIES
(UPDATE | INDEX | RE-INDEX) TV
(UPDATE | INDEX | RE-INDEX) PROGRAMS
(UPDATE | INDEX | RE-INDEX) TV PROGRAMS
(UPDATE | INDEX | RE-INDEX) CHANNEL NAMES

Miscellaneous Commands

TIME

DESCRIPTION

WHAT TIME IS IT
WHAT'S THE TIME
WHAT IS THE TIME

RESET MEDIA CENTER DISPLAY

DESCRIPTION

SET MEDIACENTER WINDOWED MODE
SET MEDIACENTER FULL SCREEN
SET MEDIACENTER FULL SCREEN
MAXIMIZE MEDIACENTER
MAXIMIZE M.C.E
MAXIMIZE AMULET

TEST COMMANDS

DESCRIPTION

(TRY | TRYOUT) COMMAND

REPEAT BACK {ECHO_STRING}

ECHO_STRING

An arbitrary piece of text, with no gaps, which will be repeated back verbatim by Amulet.

Troubleshooting

This chapter will explain how to overcome typical issues you may experience.

What to do if Amulet does not respond to commands correctly.

The Amulet Remote is designed to recognize 98% of people at installation time. If you experience issues with Amulet recognizing your particular voice then there are several things you can do.

The Amulet program group gives you access to the relevant tools.

Select Start Menu->All Programs->Amulet Devices ->Speech Setup. This gives access to three tools which should be used in the following order:

Audio Output settings

This option allows you to confirm that the recording levels are correct to get good voice recognition.

If you select this option you will see a tabbed display for the playback and recording devices on the system. Select recording devices and speak into the amulet remote. Check that the green level meter fills a significant part of the slider. If this is not the case you will need to run the setup wizard again to reset the recording level. Try speaking more quietly during the setup to allow your system to boost recording levels.

Sound Recorder

This option allows you to confirm that there are no external interference sources interfering with voice recognition.

If you select this option you will invoke the Microsoft voice recorder. Start the recorder and speak several commands. Stop the recording, saving the recorded speech to your desktop or another convenient place. Now replay this recording to confirm there are no distortions in the playback. If the recording is distorted try to identify interference sources close to the media center and re-run the setup wizard to reset the remote's input levels to remove this distortion.

Speech Training

This option allows you to do training of the voice recognition software to better operate with your voice.

The voice recognition software can operate in learning mode to learn your voice as you use the system or remain in a multiple voice mode to allow it to be used by many users. When you select this option you will be able to train the voice recognition software to better recognize your voice. Create a new profile to allow you to return to the base profile later. Click on “Train Profile” to train the system to your voice. You should not need to train more than once. A second training session can be done if desired. If you have completed the steps above and are still having problems please mail support@amuletdevices.com.

Troubleshooting Installation

Logo not lighting up at all

Check the battery installation and place the remote on charge. See the installation section of this document and the Amulet Remote Hardware video for guidance.

Microphone Level not going up when Speaking

Check that the Amulet Voice Remote is the default audio input device. Restart Media Center after this is corrected.



Logo flashing red while tilted

Move the remote close to the USB dongle. Check that a solid or flashing blue LED can be seen on the dongle. If not, plug the dongle into a different USB port. If the dongle light remains flashing blue when the remote's logo is flashing red, try recharging your remote. If the problem persists, check out the PAIRING section below.



Re-pairing the remote to the USB dongle.

During the manufacture process a particular USB Dongle is linked to a particular Voice Remote. In the unlikely event that the link established between the USB Dongle and the Voice Remote is broken or you need to pair to a new USB Dongle please follow the following procedure.

To complete this procedure you will need a paper clip or similar thin piece of metal to reach the pairing buttons on the USB dongle and Voice Remote. The diagrams below show the locations of the pairing buttons on the USB Dongle and the Voice Remote. To access the pairing button on the voice remote you will need to remove the battery compartment cover. Follow the instruction in section to do this. If you are having difficulties watch the [Amulet Remote Hardware](#) video to see this done.

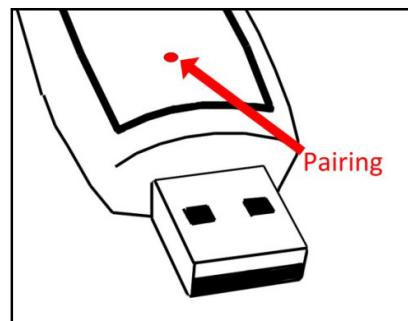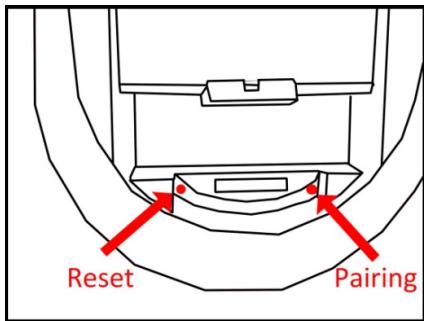

Place the USB Dongle in pairing mode. This is done by slotting the USB Dongle into the Media Center and then pushing and holding the pairing button on the USB dongle, until it starts to flash rapidly. At this point remove the paper clip. The USB Dongle is now ready to receive the pairing request from the Voice Remote.

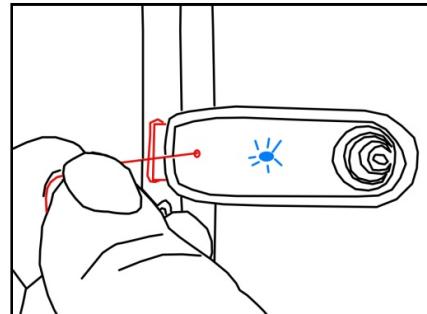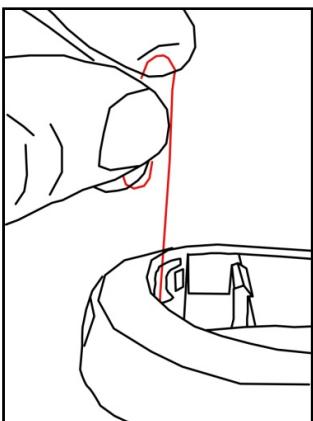


To get the Voice Remote to issue the pairing request you must push the pairing button on the remote until the light on the USB goes solid. At this point the USB dongle and Voice Remote have been paired.

You can now retry the operation you have an issue with previously.

All the Buttons Explained.

This chapter will explain what all the Buttons do and how you can control stuff beyond your Media Center.

The Amulet Logo

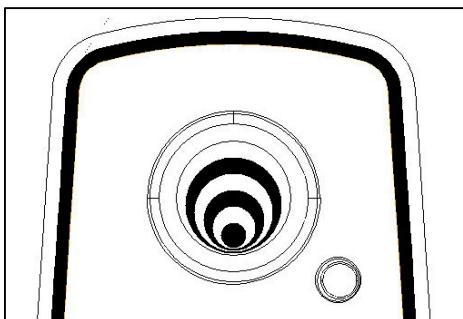

The circular logo at the top of the Amulet remote lights in different colors, to show what the remote is doing:

RED	
ON	Microphone on, listening for speech commands
FLASHING	Unable to establish wireless microphone link: check USB dongle is plugged in, and remote hasn't moved out of range

GREEN	
ON	Remote is plugged in to USB socket and fully charged
FLASHING (SLOW)	Remote is plugged in to USB socket and currently charging
FLASHING (FAST BURST)	Remote is entering deep sleep mode (press Green Windows button to wake it up)

BLUE	
ON	Remote is transmitting a built-in Media Center remote keystroke

CYAN	
ON	Remote is transmitting a learned keystroke
FLASHING (MEDIUM)	Remote is in learning mode, waiting for a key stroke
FLASHING (FAST)	Remote is in erase mode.
FLASHING (FAST BURST)	Successful learning or erasing.


YELLOW	
FLASHING	Error, failed to learn a button, failed to erase a button, low battery, other.

MAGENTA/ PURPLE	
FLASHING	Remote is in pairing mode, waiting to pair with a new USB dongle

Media Center Buttons

This conceptual remote control represents the required set of functionality that must be provided by the Windows Media Center remote control. OEM partners can add additional functionality; however, this functionality must not interfere with or displace the required functionality.

The Windows Media Center remote can be separated into the functional areas described in the following list. The buttons in each functional area on the remote control should remain clustered together in the final remote control design because the buttons provide related functionality in terms of how the user interacts with and controls Windows Media Center. Microsoft will provide localized text for the remote control. These text strings must be used to maintain consistency between the program's user interface text and the remote control.


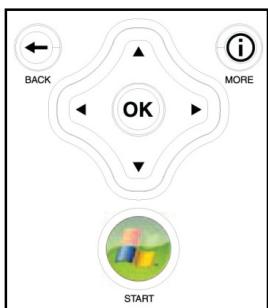


Navigation controls.

The navigation controls form the main interaction point with the user interface. These controls enable the user to control Windows Media Center easily. This interface is based on a focus point that can be moved around the screen to perform a function or task in Windows Media Center. This "tab interface" lets the user to navigate through the user interface when they are sitting farther away from their display (compared to where they are sitting in a typical computer scenario).

Transport controls.

The transport controls are used to manage and play digital media content in Windows Media Center. This includes playing digital audio and video files and streams, playing and recording TV, playing CDs and DVDs, and playing slide shows. All buttons in the transport control cluster must be grouped together on the remote control, and additional buttons cannot be placed in the middle of the cluster of transport control buttons.

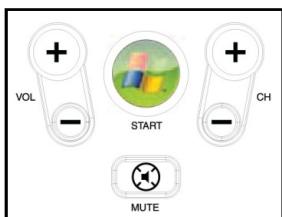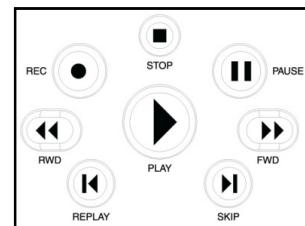

Audio and video controls.

The audio and video (A/V) controls enable the user to do tasks such as adjust the volume and change channels. The Standby button is included in this functional group even though the button is placed on a different part of the remote control (to prevent the user from accidentally pressing the button when using the remote control).

Sleep Toggle

This button performs the action the user has configured for the Windows Sleep button.



 
Typically, that action puts the Windows Media Center computer into standby or sleep mode if the computer is running. If the computer is in sleep mode, the computer wakes from sleep mode.

Numeric keypad


The numeric keypad is used to enter numbers in Windows Media Center.

*TV Power*


In addition to controlling the Windows Media Center, the remote can control TV power. See the section on controlling other bits of equipment to see how to do this.

*Interactive TV buttons*

The Interactive TV buttons are dedicated to starting and navigating TV experiences such as Teletext or Broadcast Markup Language (BML).

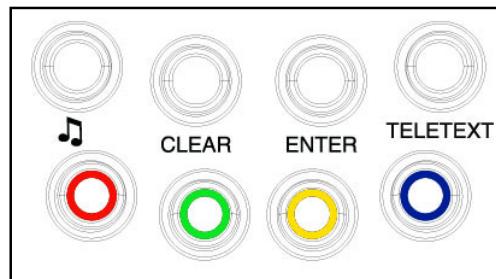*Short Cut buttons*

Media Center shortcut buttons allow you to quickly go to an experience—such as to play or record TV, display the Guide, or play a DVD—by pressing a single button.

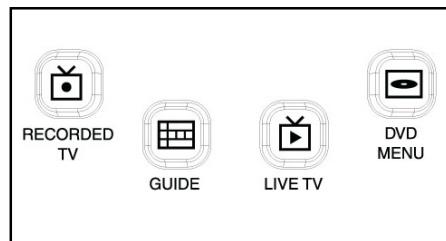

Chapter


5

Amulet Setting - Customizing your experience.



This chapter will explain how to customize your Amulet experience using the Settings page on the Amulet Strip within Media Center.

<General>	
< General >	Welcome Message – Define what is said when the Amulet software starts. Default : “Welcome To Amulet”
Start Page	Start Page – Select an Amulet Page to Go To after the Amulet Software starts. Default : “Welcome To Amulet”
Automatically Show Song Window	Automatically Show Song Window – Include totals against each category. Default : “Yes”
Ad Skip Duration	Ad Skip Duration – Define how much to skip forward when the “SKIP OVER Ads” Command is spoken.
Show full category menus	Show Full Category Menus – Expand the categories menus under Movie and Tv to include years, Actors, etc.

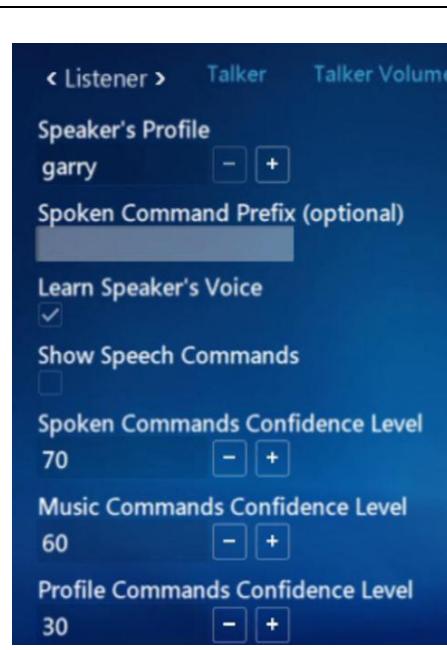

<Listener>

Speaker's Profile - Set the speech profile to be loaded when Media Center starts.

Spoken Command Prefix (optional) – Set a prefix to be used before commands. This is optional but may help with recognition accuracy.


Learn Speaker's Voice – Set the system to continue to learn as you speak or to stop learning. It can be useful to turn this off to allow more voices to be recognized.

Show Speech Commands – Control whether speech commands are shown on the screen as they are recognized.

Spoken Commands Confidence Level – Define the % confidence that a recognition match must have to be acted on. **Default** : 70%

Music Commands Confidence Level - Define the % confidence that a recognition match must have to be acted on within the Music screen. **Default** : 60%

Profile Commands Confidence Level Define the % confidence that a recognition match must have to be acted on when selecting a user profile. Can be helpful to adjust this if the voice types are diverse. Alternatively you can use the profile button. **Default** : 30%

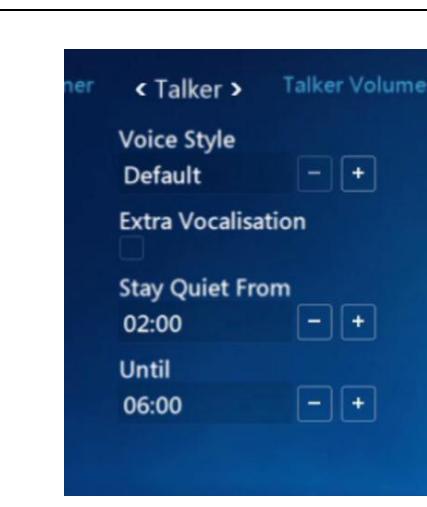


<Talker>

Voice Style – Select which of your installed voices Amulet should use to talk to you.

Extra Vocalisation – Get Amulet to read back menu items and item descriptions to you.

Stay Quiet from ... Until

Tell Amulet when to be quiet and not disturb you. Normally this would be during the night so that if anything happens that it would normally tell you about, it does not speak and disturb you.

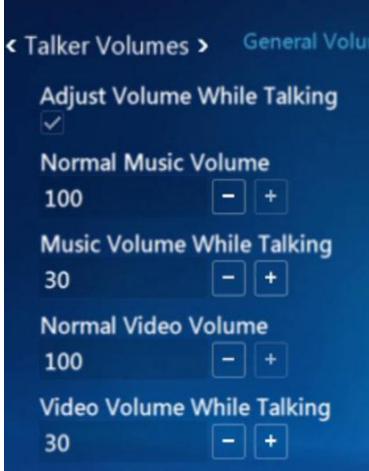

<Talker Volumes>


Adjust Volume While Talking – Decide whether the audio tracks for music and visual Playback are lowered when Amulet is delivering a audio response.

Normal Music Volume - % of 100% Volume Level

Music Volume While Talking - % of 100% Volume Level

Normal Video Volume - % of 100% Volume Level

Video Volume While Talking - % of 100% Volume Level

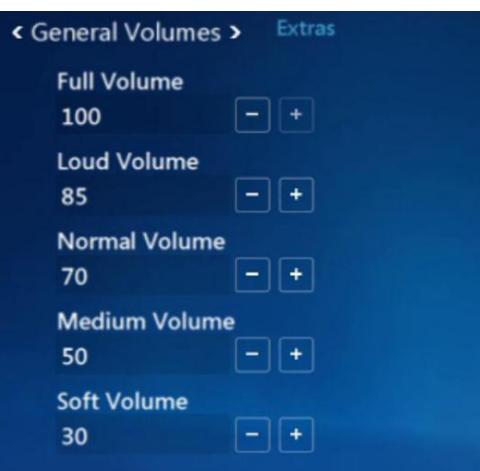

<General Volumes>

Full Volume - % of 100% Volume Level

Loud Volume - % of 100% Volume Level

Normal Volume - % of 100% Volume Level

Medium Volume - % of 100% Volume Level

Soft Volume - % of 100% Volume Level

	<p><Extras></p> <p>Panel Options – Change the look of the Amulet Movie and TV screens.</p> <p>ALL – Highlight each area in own panel (Default)</p> <p>INFO – Highlight the Info Panel</p> <p>MENU – Highlight the Info Panel</p> <p>NONE – Do not apply Highlights.</p> <p>Numbered Lists – Include numbers with item names.</p> <p>Show Totals for Lists – Include totals against each category.</p> <p>Recognize Partial Song and Album Names – Enable Partial matching of item names for music.</p> <p>Default: Enabled</p>
<p>Recognize Partial TV and Movie Names – Enable Partial matching of item names for Movies and TV.</p> <p>Default: Enabled</p>	
<p>Recognize Partial Photo Names – Enable Partial matching of item names for Photos.</p>	
<p>Default music page – Specify what page you want to go to if you select music from the TV or Movies.</p> <p>Start Menu – Media Center start page</p> <p>Amulet Music – Amulet Music page</p> <p>None – Remain on current page.</p>	

Chapter

6



Working with Multiple speakers.

This chapter will explain how to use Voice profiles to support multiple speakers with your Amulet Voice remote.

The Amulet Remote is designed to recognize 98% of people at installation time. It uses a learning algorithm to learn your voice as you use it. If several people with very different voices will be using your Amulet Remote you should consider the use of voice profiles to improve each individuals experience rather than using the same profile for everyone.

Speech profiles allow multiple speakers to be supported. Watch the video “[Speech Profile Help](#)” to see how to use and setup voice profiles. At installation a single “Default” profile is created but additional profiles can be created and.

Once setup, Speech profiles can be selected via voice or if the individuals using the remote are too diverse via the Profile Button on the Remote. When the Profile Button is pressed, the name of the current profile is spoken. Each subsequent button press will select an alternative profile.

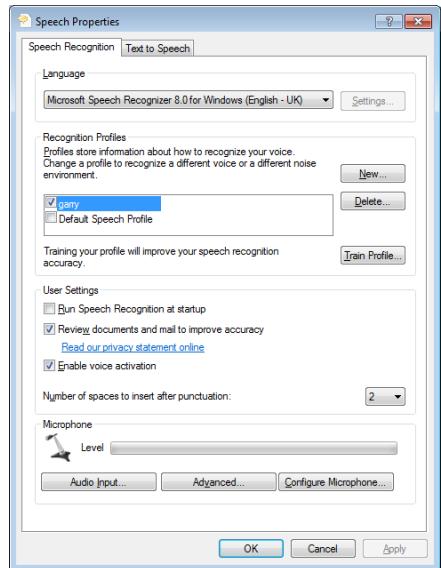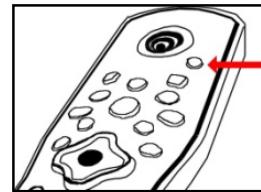

To setup a voice profile you will need to access the speech properties page. The simplest way to get there is to use Amulet. Simply say, “[GOTO PROFILE EDITOR](#)” The Amulet program group also gives you access to this.

Use the “new” to create a new profile with your name associated with it. You may want to run the configure microphone after you have created your profile as this will associate a particular microphone level with your profile.

While not necessary you can take this opportunity to run a training session for your profile. Once you are finished close the dialog and return to media center. Ask Amulet who it is listening to to activate your profile.

You are now ready to use your profile and use amulet commands and the profile to move between profiles.

The Voice Profile Button and Voice Profile Commands

When the Profile Button is pressed, the current profile is identified as "**THIS IS <speaker>**" while newly loaded profiles are just referred to as "**<speaker>**".

If you want to know what profile is active simply ask Amulet :

WHO IS THIS? or WHO ARE YOU LISTENING TO?

If you want to know what profiles are available simply ask Amulet :

WHAT PROFILES DO I HAVE? or WHAT PROFILES CAN I SAY?

To select a profile say :

THIS IS <PROFILENAME> or SELECT PROFILE <PROFILENAME>

Details of the other variants of these commands are described in the commands section.

Optimizing your Media setup

This chapter will give some guidance and tips on how best to setup your Media to allow voice selection.

One of the critical elements in getting the best from your Voice Remote is to arrange your media to make it available for voice selection. Amulet identifies three forms of video files:

- DVDs (stored in VIDEO_TS folders on the hard drive)
- Videos (stored in .avi, .mkv, .wmv, and other files)
- Recorded TV programs (stored in .dvr_ms or .wtv files)

Amulet uses a combination of filename, foldername, embedded metadata and online databases to determine where each video file should be grouped in the Amulet media hierarchy, and what is the most appropriate spoken vocabulary name to use. Generally, an item's title is used as its vocabulary name, though for episodes, both the series title and episode title are recognised.

Movies:

- Anything recorded from TV, where the TV guide metadata says its a movie
- Any video files or DVD folders where the filename gives a successful result at TheMovieDB.org
- Movies grouped according to genre, as reported by TheMovieDB.org

TV Series:

- Anything recorded from TV which is marked as episodic in the TV guide
- Any video filenames containing the phrase S##E##, e.g. S03E12
- Any video filenames containing the phrase #x##, e.g. 3x12
- Series name for qualifying video filenames is taken as the parent folder name
- If series name present on TheTVDB.com, then additional metadata for episodes is downloaded

TV Programs:

- Anything recorded off TV
- Programs are grouped according to episode, and by title
- Additional metadata fetched from TheTVDB.com

DVDs:

- Any DVD contained inside a VIDEO_TS sub-folder

- o DVD title is taken from the parent name folder, or from a `dvdid.xml` file if present
- o Additional metadata is downloaded from TheMovieDB.org

Home Movies:

- o Any video filename of the form `abcd#####` (e.g. `DSCF1234.AVI`)
- o Any video filename of the form `MOV#####` (e.g. `MOV00123.AVI`)
- o Any video stored using motion JPEG compression internally
- o Videos are grouped according to parent folder name

Unsorted:

- o All other videos or DVD
- o Videos are grouped according to parent folder name

Chapter

8

Controlling other bits of equipment

This chapter will explain how to program your remote to control other bits of equipment.

The Amulet Voice Remote is a learning remote. You can teach it IR codes for any of your additional devices.

Normal Media Center Learning


As with other Media Center Remote controls, the TV, VOL +, and VOL – buttons on the remote control for can “learn” IR commands from other remote controls. This allows you to turn on your TV and adjust volume on an audio receiver as well as controlling your media center from a single remote.

Notes

- By default, the VOL + and VOL - buttons on the remote control for Media Center PC control the system volume on your computer, and the TV button has no command assigned to it until it “learns” one.
- Do not perform this procedure in bright natural or artificial light.

To program buttons on the remote control by using the learning feature

1. Place the Amulet Voice Remote control with its learning lens, 2 to 3 inches apart from the remote control from which it is learning.
2. On the Amulet Voice Remote, press and hold the DVD MENU and OK buttons at the same. The Logo on the remote will start to flash slow blue to indicate it is in learning mode.
3. On the Amulet Voice Remote, press and release the TV, VOL +, or VOL – button, depending on which command you want it to learn. The Logo on the voice remote will show a solid blue to indicate it is ready to learn.
4. If you delay too long in completing the next step the logo on the Voice Remote will flash green and go off to indicate it timed out.
5. Test the button. If the Voice Remote did not learn the command, repeat steps 1 through 3.

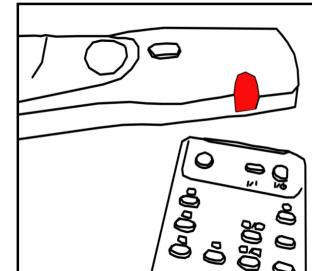

To restore the default remote control settings:

1. Press and hold the DVD MENU button and LEFT navigation button at the same time until the Logo on the Voice Remote flashes Blue.

2. Press the OK button twice. The logo on the remote will go a solid Blue for a few seconds and then flash and go off.

Following this operation, the TV button will have no command assigned to it and the VOL + and VOL – buttons will adjust the Media Center PC system volume.


Additional Learned Key Combinations

In addition to the standard Media Center programmable buttons the Amulet Voice Remote allows up to 4 remapping schemes for the buttons on the remote to control more devices and more functions.

Learn a Key

OK+DVD -> Enters learning mode. Then press TV/Power, Vol+, Vol-, or MusicNote

immediately to train that button in Media Center mode. Alternatively, press a coloured button (red, green, yellow, blue) followed by any other button to train that button when the appropriate coloured keymap is selected. Once selected, the LED will flash Cyan; point the slave remote towards the Amulet IR learning window on the side, then press the slave button being taught to the Amulet until the flashing LED goes solid.

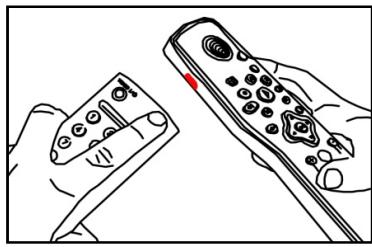

Remove a Learned Key

LEFT+DVD -> delete a keymap entry. Press the key to be deleted (possibly with a colour prefix) followed by OK to confirm.

Remove all Learned Keys

The sequence LEFT+DVD / OK / OK will delete all keymap entries.

Switching between Key Maps

(Red, Green, Yellow, Blue) -> Activate one of four custom keymaps. Unprogrammed keys default to their normal Media Center behavior. Press the Green Button to return to the media center key map.

Special Key Combinations

TV+DVD -> Enter deep sleep (Press Media Center button to exit)

Gesture+DVD -> Type firmware version as <major> * <minor> to Notepad.



A – Z Command reference

This Appendix gives a breakdown of all possible commands

A-Z SPEECH VOCABULARY

A		<i>Index Music</i>
B		<i>Index Slideshows</i>
	<i>Be Quiet</i>	<i>Index Dvds</i>
	<i>Browse To</i>	<i>Index Photos</i>
	<i>Back</i>	<i>Index Tv</i>
C		
	<i>Cancel</i>	<i>Jump Back {Number} Minutes</i>
	<i>Continue</i>	<i>Jump Forward {Number} Minutes</i>
D	<i>Delete <Mediaitem></i>	<i>Jump Over Ads</i>
E		<i>Jump To {Number} Seconds</i>
F	<i>Fast Rewind</i>	<i>Jump Back {Number} Seconds</i>
	<i>Fast Forward Track</i>	<i>Jump Forward {Number} Seconds</i>
	<i>Finish</i>	<i>Jump To {Number} Minutes</i>
	<i>Fast Reverse Track</i>	<i>Jump To (Start, Middle Or End)</i>
	<i>Fast Forward</i>	
	<i>Full Volume</i>	
G		
	<i>Go Back [1 To 9]</i>	<i>Maximise Media Center</i>
	<i>Go Left [1 To 9]</i>	
	<i>Go To Dvds</i>	
	<i>Go To More Programs</i>	<i>Next Chapter</i>
	<i>Go To Music Albums</i>	<i>Next Song</i>
	<i>Go To Music Songs</i>	<i>Next</i>
	<i>Go To My Music</i>	<i>Next Day/Previous Day</i>
	<i>Go To My Videos</i>	<i>Name That Song</i>
	<i>Go To Photo Details</i>	<i>Next Page</i>
	<i>Go To Radio</i>	<i>Next Track</i>
	<i>Go To Recorder Storage Settings</i>	
	<i>Go To Slideshow Settings</i>	
	<i>Go To Start</i>	<i>Ok</i>
	<i>Go To Tv Programs</i>	
	<i>Go To Visualisations</i>	<i>Okay</i>
	<i>Go Down [1 To 9]</i>	
	<i>Go Right [1 To 9]</i>	
	<i>Go To Live Tv</i>	
	<i>Go To Movie Library</i>	<i>Play Artist {Artist Name}</i>
	<i>Go To Music Artists</i>	<i>Play Album {Number}</i>
	<i>Go To Music</i>	<i>Play Another Genre</i>
	<i>Go To My Pictures</i>	<i>Play Another Song</i>
	<i>Go To Photo</i>	<i>Play Episode Number {Number}</i>
	<i>Go To Programs</i>	<i>Play Genre{Type}</i>
	<i>Go To Recorded Tv</i>	<i>Play Slideshow Number {Number}</i>
	<i>Go To Scheduled Tv Recordings</i>	<i>Play Song {Song Name}</i>
	<i>Go To Slideshow</i>	<i>Play Someone Else</i>
	<i>Go To Tv Guide</i>	<i>Play Track</i>
	<i>Go To Videos</i>	<i>Play Tv Program {Program Number}</i>
	<i>Go Up [1 To 9]</i>	<i>Play Video Name {Video Name}</i>
	<i>Go To My (Recorded) Tv</i>	<i>Previous Page</i>
	<i>Go To Recorded Tv</i>	<i>Previous Chapter</i>
H		<i>Pause Movie</i>
	<i>Hide Songs</i>	<i>Play/Show Playlist Number <X></i>
	<i>Hide Speech</i>	<i>Pause Track</i>
I	<i>Index Channel Names</i>	<i>Play Album {Album Name}</i>
		<i>Play Another Artist</i>
		<i>Play Another Album</i>
		<i>Play Dvd Number {Number}</i>
		<i>Play Favourites</i>
		<i>Play Movie {Movie Name}</i>
		<i>Play Song Number {Number}</i>
		<i>Play Some {Genre} Music</i>
		<i>Play Something Else</i>

A-Z SPEECH VOCABULARY

Play Tv Program {Program Name}	Stop Video
Play Track	Set Media Center Fullscreen
Play Video Number {Number}	Show Dvd {Dvd Name}
Previous Track	Show Music Queue
Pause Program	Show Speech
Pause Song	Silence
Play Another Song	Skip Back {Number} Seconds
Play Another Genre Play/Show Genre Number X	Skip Forward {Number} Seconds
Previous	Skip To {Number} Minutes
Q	Skip To (Start, Middle Or End)
Quiet	Stop Track
R	Soft Volume
Rate That [As] [1-5] Stars	Show Artists
Re-Index Channel Names	Show Genres
Re-Index Music	Show (Program Tv Program Tv Show) <X>
Re-Index Slideshows	Show Playlists / Show Genres / Hide Playlists / Hide Genres
Rate This As XXXX	T
Record <Channel> At <Time>	Type In
Record <Channel> At <Time> On <Date>	Type Clear
Rate This Song [As] [1-5] Stars	Turn (On Or Off) Sound
Rate This Song.	U
Re-Index Dvds	Update Channel Names
Re-Index Photos	Update Music
Re-Index Tv	Update Slideshows
Record <Channel> On <Date> At <Time>	Update Videos
Rate This XXXX	Update Tv
Repeat On/Off	Update Photos
Rate This	Update Dvds
Rewind	Update Movies
S	Update Photos
Select	V
Set Mediacenter Windowed Mode	Volume (Soft, Normal, Loud Or Full)
Show Dvd Number {Number}	Volume Up/Down
Show Songs	W
Show Tracks	What Time Is It?
Skip Back {Number} Minutes	What Program Is This?
Skip Forward {Number} Minutes	Watch Dvd {Dvd Name}
Skip Over Ads	Watch Episode Number {Number}
Skip To {Number} Seconds	Watch Video {Video Name}
Stop Music	Who Sings That?
Stop Song	What Movie Is This?
Shuffle On/Off	What Song Is This?
Sound On/Off	Watch Tv Program Number {Number}
Show Album Number <X>	What Genres Do I Have
Show Artists	Watch Channel {Channel Name}
Show Slow Motion	X
Show Song XXX	Y
Show <Playlist/Artist/Genre>	Z
Show Another Genre	Yes
Show/Play Artist Number <X>	
Show/Hide Artists	