

Test Set-up Photos

For model:HT702



Connected to PC:Conducted Emission Test Set-up



IP Call:Conducted Emission Test Set-up

For model:HT704




Connected to PC:Conducted Emission Test Set-up




IP Call:Conducted Emission Test Set-up

For model:HT702

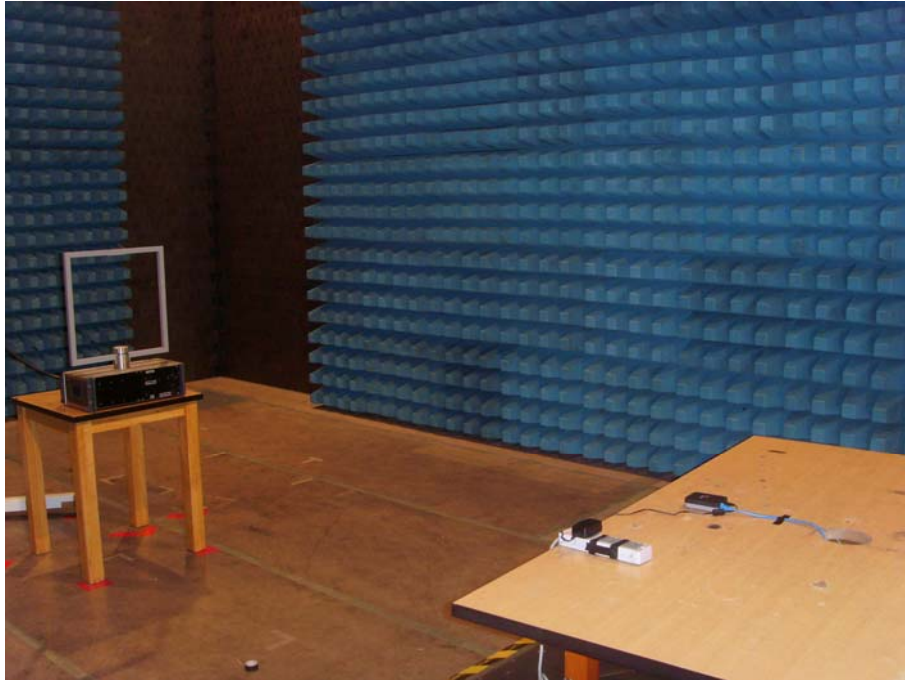


IP Call: Radiated Emission Test Set-up(9kHz to 30MHz)

For model:HT704

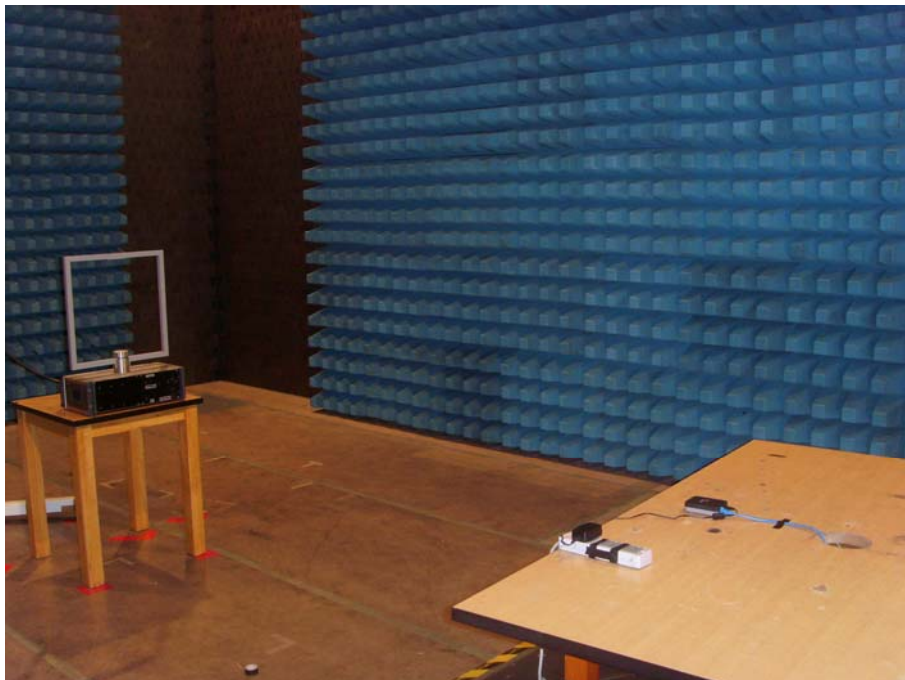

IP Call: Radiated Emission Test Set-up(9kHz to 30MHz)


For model:HT702

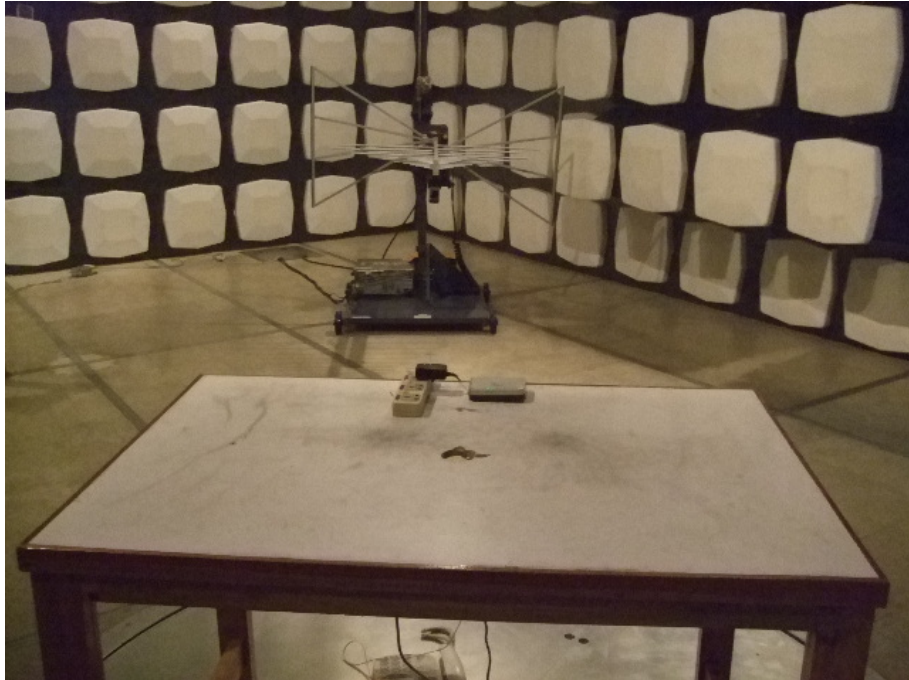


IP Call:Radiated Emission Test Set-up(Below 1GHz)



IP Call:Radiated Emission Test Set-up(Above 1GHz)

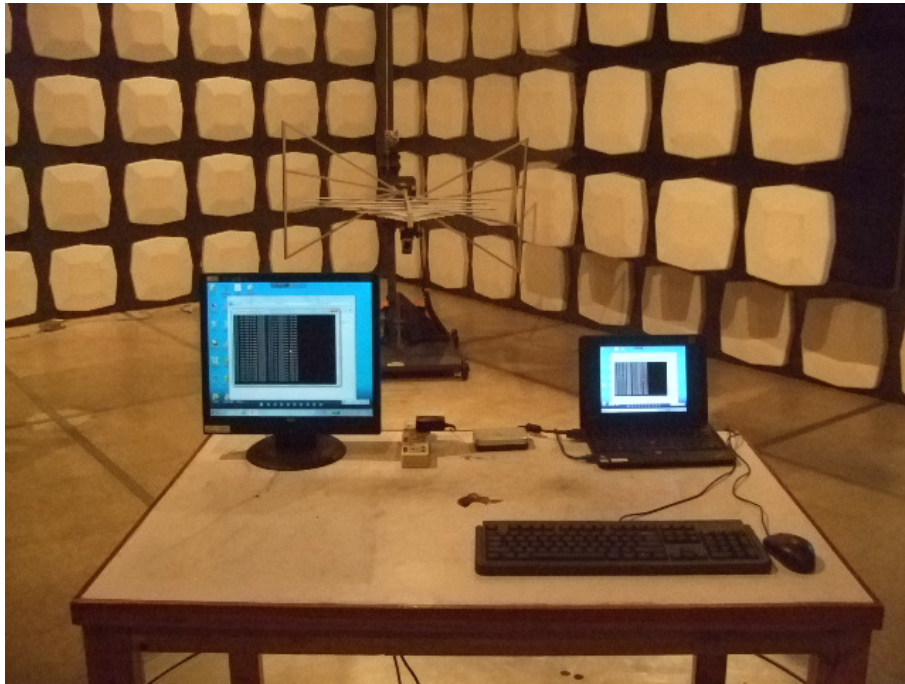


Connected to PC:Radiated Emission Test Set-up (Below 1GHz)

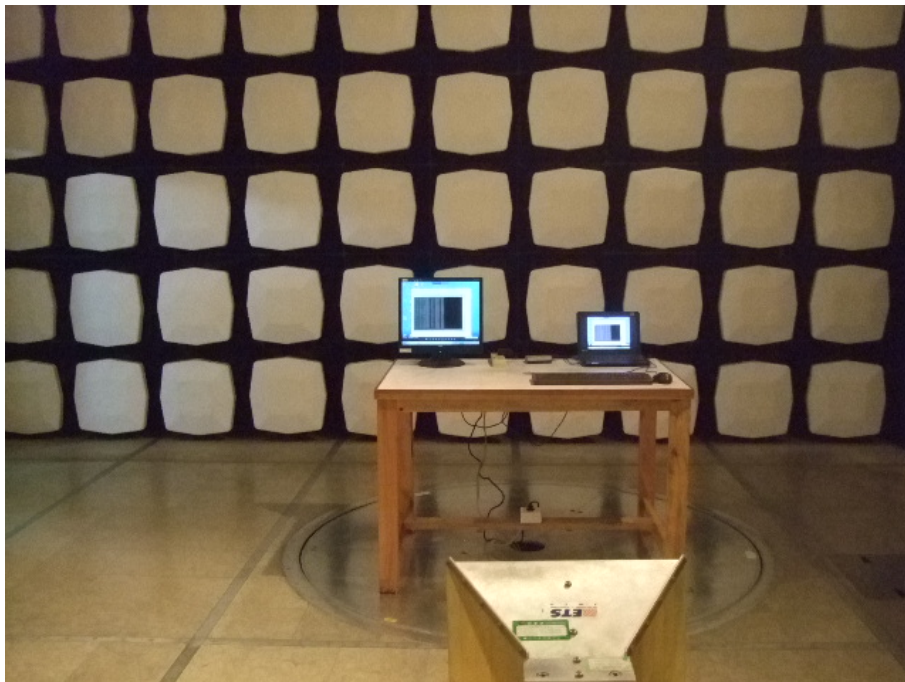


Connected to PC:Radiated Emission Test Set-up (Above 1GHz)


For model:HT704

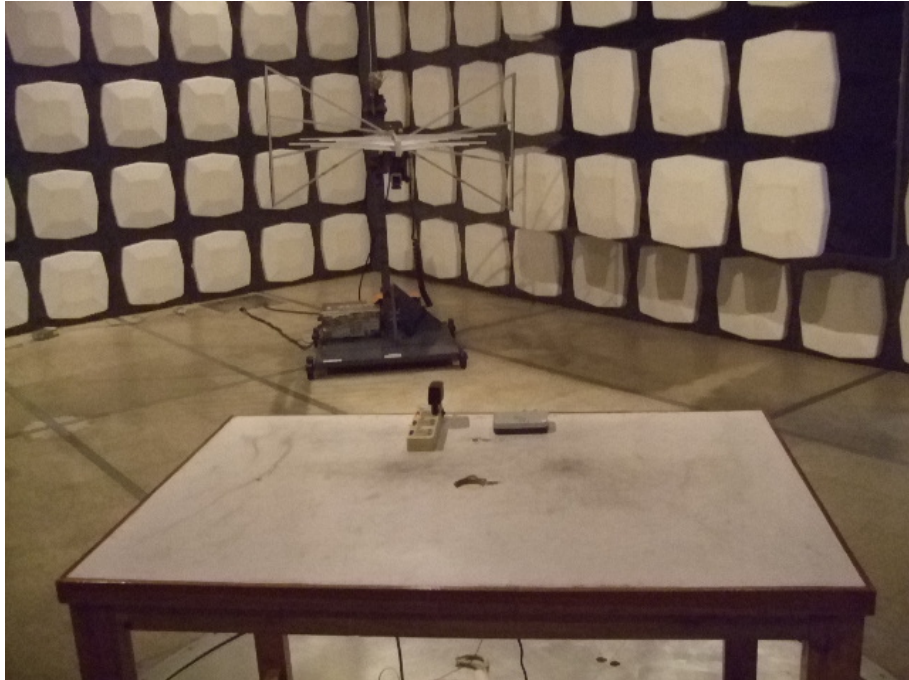


IP Call:Radiated Emission Test Set-up(Below 1GHz)

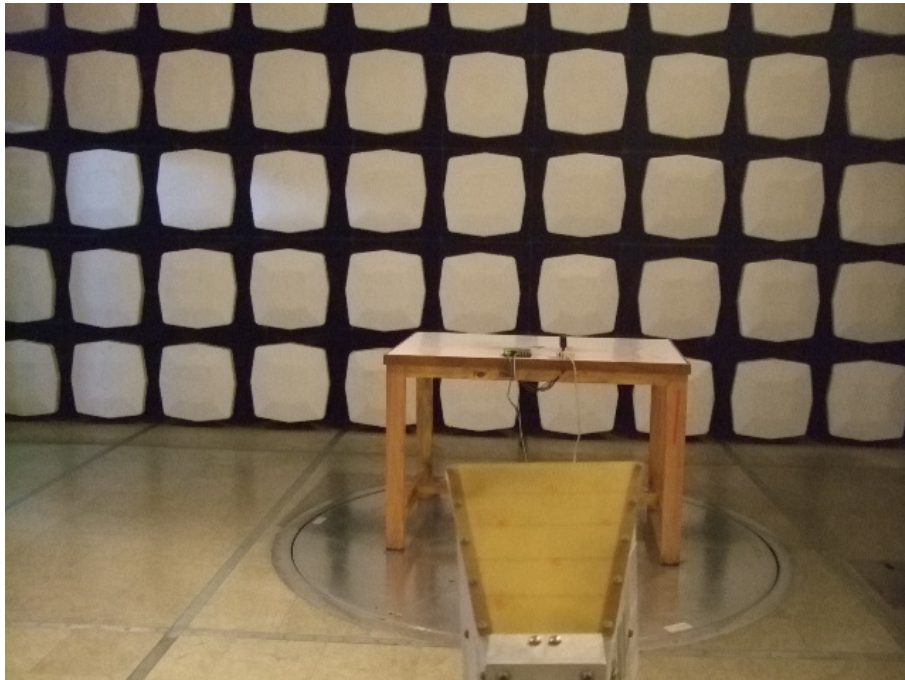

IP Call:Radiated Emission Test Set-up(Above 1GHz)

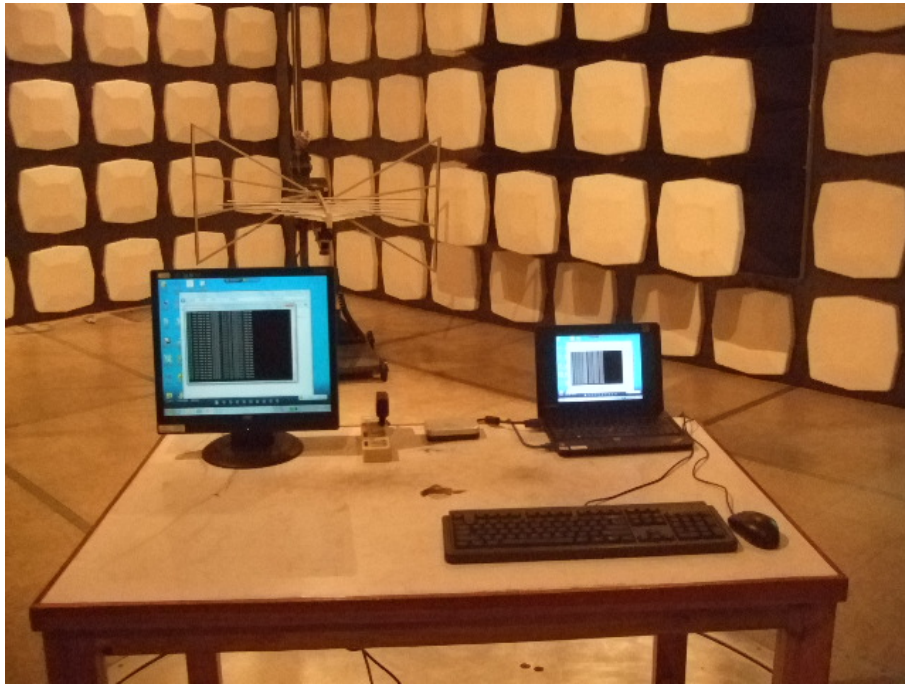

Connected to PC: Radiated Emission Test Set-up (Below 1GHz)

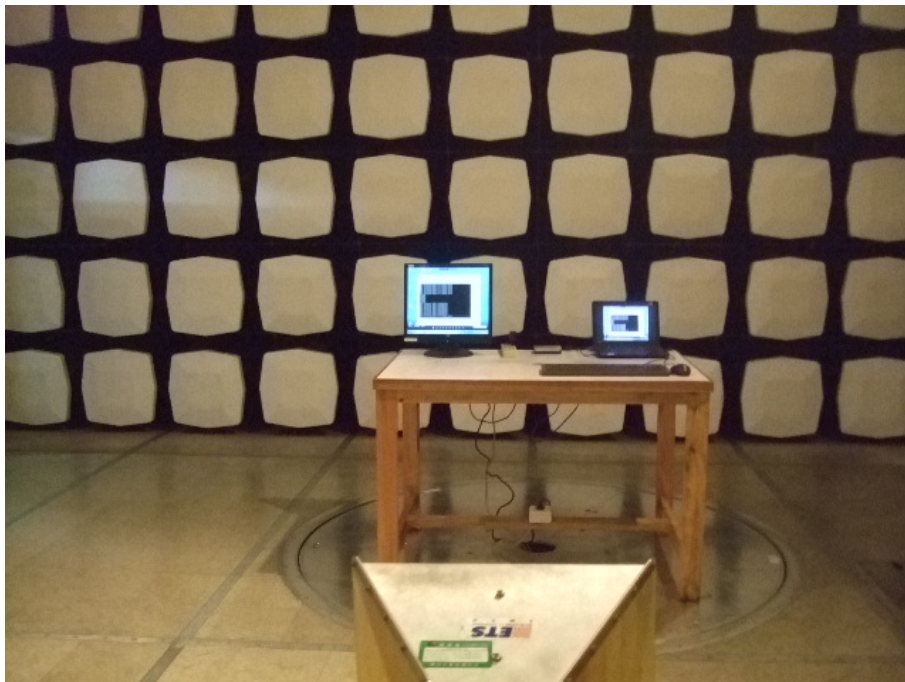

Connected to PC: Radiated Emission Test Set-up (Above 1GHz)