

FCC STATEMENT

Potential for Radio/Television Interference

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Industry Canada licence-exempt RSS standard(s).

Operation is subject to the following two conditions:

- (1) this device may not cause interference, and

- (2) this device must accept any interference, including interference that may cause undesired operation of the device.

FCC Radiation Exposure Statement

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

Under Industry Canada regulations, this radio transmitter may only operate using an antenna of a type and maximum (or lesser) gain approved for the transmitter by Industry Canada. To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (e.i.r.p.) is not more than that necessary for successful communication.

Do not transmit for more than 60% of the total transmitting use time; transmitting over 60% of the total use time may exceed the limits: Exemption from Routine Evaluation Limits-SAR

Evaluation requirements. So nominal transmitting operation is 10% and 90% stand-by time.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

CAN ICES-3 (B)NMB-3(B)

1 YEAR WARRANTY

In the U.S.A. and Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-866-537-2249 and a convenient service center address will be provided to you. Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions, or if in Canada, Sunbeam® Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar

product of equal or greater value. This is your exclusive warranty.

DO NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty.

This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty. This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized Sunbeam® service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

What are the limits on Sunbeam's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition. Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty. JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise. JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

In the U.S.A., this warranty is offered by Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431.

In Canada, this warranty is offered by Sunbeam® Corporation (Canada) Limited, doing business as Jarden Consumer Solutions located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1.

PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.

© 2012 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions.

All rights reserved. Distributed by Sunbeam® Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

Printed in China

SPR-0912-571P

PN 147950 SBRT 552

Sunbeam®



rechargeable remote trainer



STATIC INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

- This device should only be used when training dogs for deterring unwanted behaviors.
- This device is not a toy; keep out of reach of children.
- This device is not intended to provide protection against aggressive dogs.
- This basic remote trainer should only be used on one dog at a time.
- Your dog should be in good health when using this product.
- This product is not to be used on dogs less than 9 lbs.
- This product is not to be used on dogs less than 6 months old.
- Your dog should not be left unattended with this collar on. Avoid leaving the collar on the dog for more than 8 continuous hours per day. Prolonged collar use can cause pressure sores which may lead to skin irritation such as contact dermatitis or decubitus ulcers. If a rash is discovered discontinue use until the skin area heals completely. If condition persists for more than 48 hours, contact your veterinarian.
- Do not attach a leash to the Sunbeam® Rechargeable Remote Trainer. A separate collar or harness may be used provided it does not interfere with the remote trainer.

SAVE THESE INSTRUCTIONS

- This product should be used when training dogs to deter unwanted behaviors.
- This product can be used indoors and outdoors.
- Adjustable collar fits neck sizes up to 28".
- 3 levels of correction can be adjusted for your dog
- Low battery indicator
- Waterproof
- Rechargeable battery

DO NOT USE THIS REMOTE TRAINER UNTIL YOU HAVE READ THESE INSTRUCTIONS

Collar



PRODUCT OVERVIEW:

Remote Control



HOW IT WORKS:

The Sunbeam® Rechargeable Remote Trainer should be used as a training aid for you and your pet. This specially designed system will shut off if there is an excess of corrections, for example, if something is leaning on the correction button or if there is continuous pressing. This is called Over Correction Mode and will cause the unit to turn off and automatically reset.

IMPORTANT: The Sunbeam® Rechargeable Remote Trainer has a range of up to 400 yards. For the best results at long ranges, hold the remote above your head and point to the receiver. Other factors that may affect range include weather, terrain and other radio frequencies transmitted in the area. (fig. 1)



figure 1

OPERATING INSTRUCTIONS

CHARGE THE RECEIVER COLLAR

IMPORTANT: This step is to be completed when the collar is NOT on your dog.

- Locate the charging jack on the Receiver Collar and lift the rubber cover. (fig. 2)
- Insert one of the charger connectors into the charging jack. (fig. 3)
- Plug the charger into a standard wall outlet.
- While the collar battery is charging:



figure 2



figure 3

- If the Receiver Collar is turned off, the center LED light will flash red and green indicating the battery is charging. The center LED light will flash green indicating when it is fully charged. If the LED is flashing red discontinue charging the unit. Review the instructions to ensure that you are properly charging the receiver collar battery.
- If the receiver collar is turned on, there will be no indication that the battery is charging or is fully charged. When the battery is low, all 3 LED lights will flash red to remind you to charge the Receiver Collar battery.
- Charge the Receiver Collar for 24 hours for the first charge. Recharge the Receiver Collar for 12 hours. When charging is complete, remove the charging connector and replace the rubber cover.

CHARGE THE REMOTE CONTROL

- Locate the charging jack on the Remote Control and lift the rubber cover. (fig. 4)
- Insert one of the charger connectors into the charging jack. (fig. 5)
- Plug the charger into a standard wall outlet.
- While the Remote Control battery is charging:
 - If the Remote Control is turned off, the LED lights will flash red and green indicating the battery is charging. The LED lights will flash green indicating when it is fully charged. If the LED is flashing red discontinue charging the Remote Control. Review the instructions to ensure that you are properly charging the Remote Control battery.
 - If the remote Control is turned on, there will be no indication that the battery is charging or is fully charged. When the battery is low, the Power LED light will flash red to remind you to charge the Remote Control battery.
- Charge the Remote Control for 24 hours for the first charge. Recharge the Receiver Collar for 12 hours. When charging is complete, remove the charging connector and replace the rubber cover.



figure 4



figure 5

COLLAR FITTING

Proper fit of the Sunbeam® Rechargeable Remote Trainer is essential to establish a good training foundation and optimal performance.

Note: Collar should be in the OFF position before proceeding with fitting the collar on your dog.

STEP 1: Ensure dog is in a relaxed position.

STEP 2: With the collar clasp open loosen the adjustment buckle such that it can reach completely around your dog's neck. (fig. 6) Place the main unit directly over the dog's voicebox. When buckled, the collar should rest directly behind the dog's ears (the highest part of the neck). (fig. 7)

Note: Make sure both stainless steel probes go through the coat completely and make contact with the skin.



figure 6



figure 7

Use the longer stainless steel probes if the coat does not allow the shorter probes to reach the skin.

Before changing the stainless steel probes you must completely discharge the collar by holding a plastic handle screwdriver across both stainless steel probes for 5 seconds. Make sure the metal portion of the screwdriver is touching both stainless steel probes and the unit is in the OFF position.

Trimming the hair around the dog's neck where the stainless steel probes will touch the skin is optional, **DO NOT** trim the hair so short that the skin is completely exposed as this might allow for an irritation or rash to occur.

Use a wrench when assembling or disassembling the stainless steel probes, do not over tighten. (fig. 8)



figure 8



figure 9



figure 10

STEP 3: Close and lock clasp. (fig. 9)

STEP 4: Adjust for proper fit by pulling on strap until you can fit two fingers in between your dog's neck and the collar. (fig. 10)

Note: Verify that the main body of the collar unit is directly over the dog's voicebox. The collar should be firm but not excessively tight.

STEP 5: Let your dog wear the product for sufficient time confirming that they are moving around normally. This step is to ensure that under daily activity the collar will remain secure and not become loose.

STEP 6: Reattach collar to your dog. Check the fit of the collar several times per day. Wipe the stainless steel probes weekly with a damp cloth while collar is in off position.

Reminder: If you choose to use a 2nd collar, leash or harness system make sure it does not interfere with the operation of the Sunbeam® Rechargeable Remote Trainer.

READY TO USE

Note: **COLLAR FITTING** step must be completed before you are ready to use.

STEP 1: Holding the main body of the Sunbeam® Rechargeable Remote Trainer in both hands **PRESS** and **HOLD** the Main Control Button for 4 seconds.

Note: You will hear 2 audible beeps and 3 LEDs flash **GREEN** indicating the device is on.

The default correction level is **LOW**; this setting will illuminate GREEN for 10 seconds and then turn off. During the ten seconds, you may toggle to different correction levels by pressing the Main Control Button.

STEP 2: Set correction level by pressing and holding (approximately 2 seconds) the Main Control Button until a GREEN LED illuminates at the desired setting.

When a GREEN LED is illuminated press the Main Control Button once to toggle to the next correction level. Once a correction level is chosen all 3 GREEN LEDs will illuminate every 10 seconds to advise the unit is on. **IMPORTANT:** Always make sure to turn off the collar when not in use to conserve battery life.

Note: It is recommended to start on the **LOW** setting and monitor your dog's behavior before determining if a higher correction level is needed. The Sunbeam® Rechargeable Remote Trainer retains the last correction level setting and will resume this mode when the unit is turned on.

STEP 3: Attach collar to your dog as you did in the **COLLAR FITTING** stage.

STEP 4: Turn on the remote control by pressing the On/Off button for 2 seconds.

STEP 5: To begin using the remote trainer, find your dog's recognition level starting with the warning button. Once an unwanted behavior takes place, such as chewing, digging, barking, jumping, biting or whining, immediately press the warning button. Each dog will react differently and reactions may include a dip of the head, shaking the head, whining, excessive barking or confusion. Some dogs will respond to the warning button and stop the unwanted behavior. If this is the case, continue training your dog using the warning button and skip to STEP 7.

IMPORTANT: Your timing on this step is crucial. If the unwanted behavior has stopped before you have time to press the warning or correction button, DO NOT press the warning or correction button. The warning or correction button should only be used at the exact moment the unwanted behavior is taking place.

STEP 6: If the dog does not respond to the warning button, starting on the LOW setting, press the correction button. If your dog does not respond to the correction on the LOW setting, toggle the collar setting to MEDIUM and HIGH, if necessary.

STEP 7: Once your dog's recognition level has been identified, continue training with that setting. As soon as the unwanted behavior stops, be sure to reward your dog with praise, petting or a treat.

Note: If you use the warning button to first alert your dog of the unwanted behavior and then use the correction button, there is a chance your dog will



associate the warning tone with the correction. Once your dog has made this association, continue use of the remote trainer utilizing the warning button only.

SPECIAL OPERATING NOTES

REMOTE CONTROL: For precaution, the collar will be ready to use 10 seconds after the user has selected or made adjustments to the correction level on the collar. The collar will not react to the handheld remote when the user turns the collar on and/or toggles the correction settings during this period.

WARNING BUTTON: If the user presses the warning button on the remote control, the transmit GREEN LED on the remote will flash. There will be an audible beep at the collar unit.

CORRECTION BUTTON: If the user presses the correction button on the remote control, the transmit GREEN LED on the remote will flash. If the collar can receive the signal from the remote control, the collar's GREEN LED of the selected correction level will light up during the correction period.

OVER CORRECTION MODE: If too many corrections occur within a 60 second period, the remote control will be deactivated for two minutes. This is to protect the dog in case something may be accidentally activating the correction button. The transmit RED LED on the remote control will be flashing during the entire two minute period. The unit will resume normal operation after this two minute period.

LOW BATTERY MODE: On the collar all 3 LEDs will flash RED for 5 seconds when the battery needs to be charged. On the remote control the power LED will flash RED and automatically turn off.

TRAINING GUIDE

Proper training is essential to achieving the best results from the Sunbeam® Rechargeable Remote Trainer. For best results, prior to use of the remote trainer, you should put the collar on your dog for a few days without turning it on. You do not want the dog to associate the collar with the correction because the dog can become collar smart. The dog that is collar smart will only behave when the collar is on. Your goal is to eliminate the unwanted behavior whether the collar is on or off.

When first starting to use the remote trainer you should closely monitor your dog's reaction to the correction. You should be inside a protected area. The protected area should not be a cage, crate or kennel. If outside, your dog should be in a safe protected area so that it cannot run away when it receives a correction from the remote trainer.

Do not let your dog see the handheld remote when you are pushing the warning button or the correction button. You do not want your dog to associate the correction with you.

Each dog can have a different reaction to the correction it receives from the remote trainer. Reactions can vary from a dip of the head, to shaking the head, whining, excessive barking, confusion or running away. In the event of an extreme reaction or aggression, wait until your dog is calm before approaching your dog.

The remote trainer should be used when you want to deter unwanted behavior. Do not leave the remote trainer collar on your dog when you are not present. Consistently using the remote trainer at the right time will give you the best results. The more disciplined you are when using the remote trainer the better your dog will understand that unwanted behaviors are not acceptable.

It is important for the training process to be interactive. Once your dog has received a correction and stopped the unwanted behavior you should reward your dog with a treat or praise.

HINTS AND TIPS

Is this product right for me and my dog?

- The Sunbeam® Rechargeable Remote Trainer is best used in conjunction with behavior training from a qualified behaviorist or obedience trainer.
- Before using the remote trainer on an aggressive or phobic dog, consult a qualified behaviorist or obedience trainer.
- If your dog begins to display aggressive behavior during or after using the Sunbeam® Rechargeable Remote Trainer, discontinue use immediately and consult a qualified obedience trainer or behaviorist.
- All training methods require time, commitment and consistency to achieve optimum results.

CARE AND MAINTENANCE

- Always remove the battery before cleaning
- Use a clean damp cloth, water only
- Never use any household or industrial cleaners
- Do not submerge the unit in water or any other liquid
- Keep the dog's coat and skin clean in the area where the collar makes contact
- Check the fit of the collar several times per day
- Wipe the Stainless Steel Probes weekly with a damp cloth while collar is in off position

Note: The Lithium coin batteries used in this product contain perchlorate material. Special handling may apply in California. Go to: www.dtsc.ca.gov/hazardouswaste/perchlorate for more information.