



# User Manual



**Model: FN3104W**

Version: V1.0

# Table of Contents

---

Table of Contents.....	I
Security Warning.....	III
Preface.....	IV
Important Safety Instructions.....	V
1 Overview.....	1
1.1 Product Introduction.....	1
1.2 Key Features.....	1
1.3 Relevant Version.....	3
1.4 Icons Description.....	3
1.5 Common Operations.....	4
1.6 USB Mouse Operation.....	5
2 GUI.....	6
2.1 Login.....	6
2.2 Setup Wizard.....	6
2.3 Shortcut Menu.....	6
2.4 Menu.....	8
2.4.1 Adding Devices.....	9
2.4.2 Playback.....	11
2.4.3 Schedule.....	14
2.4.4 Device Information.....	15
2.4.5 Settings.....	18
2.4.6 System.....	31
3 Web.....	35
3.1 Instructions before Login.....	35
3.2 Log In.....	35
3.3 Live Video.....	38
3.4 Parameter Configuration.....	42

3.4.1 Adding Devices.....	42
3.4.2 Schedule Record.....	43
3.4.3 Alarm.....	44
3.4.4 Device Information.....	48
3.4.5 Basic Settings.....	51
3.4.6 System Management.....	60
3.5 Playback.....	65
4 Appendix.....	68
4.1 HDD Capacity Calculation.....	68
4.2 Common Operations.....	69
4.3 Specifications.....	74
4.4 FAQ.....	78
4.5 Glossary.....	80
4.6 CE & FCC.....	81
4.7 WARRANTY.....	81
4.8 Statement.....	85
4.9 Obtaining Technical Support.....	86

## Security Warning

- Please change the password of your Foscam NVR APP account, NVR and cameras user name regularly, the password should be the combination of numbers, letters and special characters.
- Please keep the user name and password of your cameras, NVR and Foscam APP account safe.
- Please update your camera to the latest firmware every three months, which make you have better product experience and ensure the safety of your NVR and cameras.

# Preface

---

Welcome to use our product, Network Video Recorder (NVR) Kit. This document mainly focuses on the installation and configuration of NVR Kit application system. With high performance video, user-friendly GUI, and practical industrial designs. This series NVR Kit is suitable for civil applications such as homes, stores, internet cafes, and small businesses in addition to mainstream security and surveillance applications.

## Default Settings

NVR / Camera: Default administrator&password is admin & (blank).

## Declaration

- The feature of product on this manual is just for reference. Please prevail in physical product.
- The manual provides multiple product models for reference. The specific operations are not listed one by one. Please follow the operations depending on the actual product.
- Because the actual environment may be discrepant, the actual values of some data may be different from the values provided in the manual. If there are any question or dispute, the final interpretation of prevails.
- If you do not follow the manual during operation, you will bear any loss caused thereof.

# Important Safety Instructions

---

This chapter describes how to use the product properly so as to prevent danger and property loss. Be sure to follow the security instructions when operating this product.

## Installation Environment

- Ensure device is installed in the well-ventilated, dust-free environment.
- It is recommended to use a voltage stabilizer for supply of power. If the power supply was unmatched, the device might work abnormally or stop working.
- Check that the voltage of the extra power supply is the same with the NVR's requirement, and the ground connection is working properly.
- The distance between the NVR and other device or wall should be more than 6cm / 2.4in away to facilitate heat dissipation.

## Precautions

- Please keep the device horizontally and avoid inclination or inversion.
- Don't touch the power switch with wet hand or damp items to avoid shock.
- Do not splash liquid or metal filing on the NVR To avoid short-circuit fault or blaze.
- The NVR does not contain any storage device. Please install a hard disk or connect to storage device firstly. Otherwise, you cannot perform operations such as recording and playback.
- Please press power button to shut down the NVR instead cutting off the power directly to avoid to damaged the storage device.
- Do not take the device apart when it is operating (or connecting to power).

# 1 Overview

---

## 1.1 Product Introduction

The series of product is a NVR Kit. This advanced product series receives a high quality video stream that is transmitted digitally by the IP Camera (IPC). The product can perform live video preview, recording, playback, remote access, and backup simultaneously.

## 1.2 Key Features

### Network Monitoring

You can access the NVR system remotely through the browser on a PC or access the NVR system locally by using the display or monitor.

### Multi-screen Preview

Multi-screen preview indicates that several pages are displayed on the screen of the monitor based on the same scale.

### Recording

The NVR supports recording and storing video files on a Hard Disk Drive (HDD). Stored videos files can be queried or played back through Web or local GUI.

Recording can be classified into schedule recording, manual recording, and alarm recording from low priority to high priority. If recording of any two types is enabled at the same time, only the recording of a higher priority takes effect.

- **Schedule Recording**

You can select the scheduled time segment to enable or disable recording.

- **Manual Recording**

You can manual enable recording in the corresponding channel.

- **Motion Detection Recording**

After the motion detection function is enabled and recording is selected, motion detection recording is enabled when motion detection is triggered in the detection time segment and detection area.



#### **Note**

When NVR system time and IPC time are different, the NVR recording will be based on the NVR system time.

## Playback

You can play recording video files stored in the Hard disk. Recording includes schedule recording, manual recording, and alarm recording. Single-screen playback and four-screen synchronous playback are supported. When display mode is 1080P, it only supports the single-screen playback.

## Alarm

### Motion Detection Alarm

You can configure motion detection information about the corresponding channel in the NVR system. When an object moves in the detection time segment and detection area, an alarm is triggered, the NVR system enables motion detection recording, sends pictures to your mailbox, and uploads pictures to your FTP server.

## IPC Management

You can search for IPC devices in the LAN through the NVR and add IPC devices to the NVR channel. Through the NVR, you can also manage IPC devices.

## HDD Management

When the HDD becomes exceptional (for example, HDD Loss, HDD Full, and HDD Error), the NVR buzzer sounds an alarm.

When the HDD is full, you can select the cycle cover the earliest recording or stop recording.

## Other Functions

- Support the logging function.
- Support local GUI output and perform shortcut operations through the mouse.
- Three roles can access the NVR, which are respectively visitor, operator, and administrator. The rights of the three roles vary from low to high.



## 1.3 Relevant Version

Name	Recommended Configuration
Monitor	You are recommended to equip a 16:9 monitor with the resolution higher than 1280 * 720.
Network	10/100M Ethernet or above.
Browser	This product supports 32-bit IE8 or later versions and does not support 64-bit IE browsers. It also supports Apple Safari and Mozilla Firefox browsers.

## 1.4 Icons Description

- In the live view mode, there are icons at the right top of the full screen.



: The HDD is full, and the recording has been stopped.



: A HDD is not inserted into the NVR or the HDD connected to the NVR is abnormal.

- In the live view mode, there are icons at the right bottom of the screen for each channel,



: NVR is recording for the IPC.



: The alarm of the IPC is triggered.

- The icon  at the right top of the windows: Exit current menu to upper level menu.

## 1.5 Common Operations

### Starting Up the NVR

Turn on the power switch on the rear panel. The Power indicator LED should turn green indicating that the device begins to start up.



#### Note

If the power LED indicator on the front panel is off, please check if the power supply is plugged into an electrical outlet and the power switch is turned on;

### Shutting Down the NVR


There are two proper ways to shut down the NVR in the GUI interface.

- After login, right-click the mouse, you can click **Shutdown** in the shortcut menu.
- Choose **Menu > System** in the Menu interface, then click **Shutdown** in the System interface.

Then turn off the power switch on the rear panel, the power LED indicator on the front panel turns off.

### Reset

You can reset the NVR device to restore the factory settings. You can choose any one of the following methods operate.

- Reset button: Press and hold it for 3 seconds to reset all parameters to factory defaults on the bottom of the NVR.
- Local GUI: Choose **Menu > System** in the Menu interface, then click **Factory Reset** in the System interface.
- Web GUI: Choose  **(Parameter Configuration) > System Management > Factory Reset**. The **Factory Reset** page is displayed.

## 1.6 USB Mouse Operation

Plug USB mouse into one of the USB interfaces on the rear panel of the NVR.

The operation of the mouse on the local GUI is shown as below.

Name	Action	Description
Left-Click	Single-Click	Menu or window: select and enter.
	Double-Click	Preview mode or Playback mode: Switch between single-screen and multi-screen.
	Click and Drag	Time or Area box: Select the time or zone range. Time bar: Drag time bar.
Right-Click	Single-Click	Live view: Show menu.  Menu: Exit current menu to upper level menu.



### Note

The Single-Click mentioned in this article is refer to the left mouse click.

## 2 GUI

---

You can visit the local NVR device via the display or monitor, and view or manage NVR system.

NVR device is connected to the network, mouse, and mobile storage devices have been successfully installed. Make sure the video output device is connected successfully.

### 2.1 Login

For the operation, please refer to the **Quick Installation Guide**.


### 2.2 Setup Wizard

By default, the Setup Wizard starts once the NVR has loaded. The Setup Wizard can walk you through some important settings of the NVR. If you don't want to use the Setup Wizard at that moment, right click the mouse to quit.

For the operation, please refer to **the Quick Installation Guide**.

### 2.3 Shortcut Menu

After login, right-click the mouse, you will enter the shortcut menu.

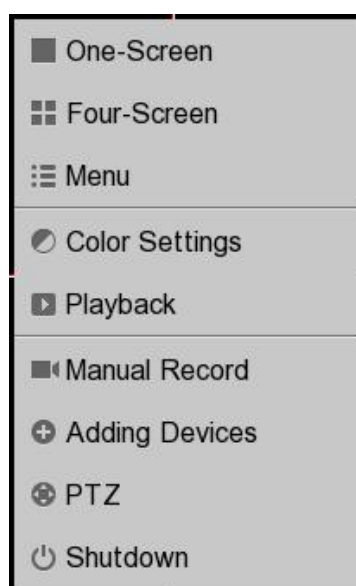

## One-Screen / Four-Screen

Switch between different channels video.


Note: The NVR Kit supports four channels.

## Menu

Click **Menu** to enter the **Menu** interface, it includes Adding Devices, Playback, Schedule, Device Information, Settings and System. For details, please refer to [2.4 Menu](#).

## Color Settings

Click **Color Settings** to choose a channel to alter the color, then adjust the parameters of hue, brightness, contrast, saturation and sharpness.

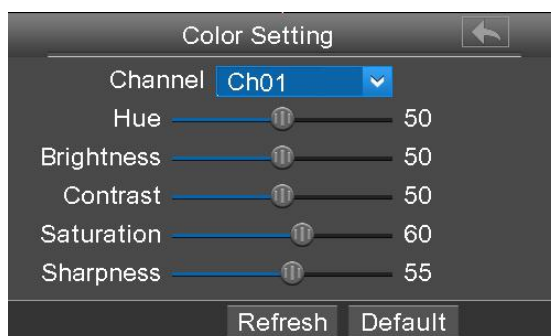


## Playback

You can display the video of every a channel for playback. For details, please refer to [2.4.2 Playback](#).

## Manual Record


Click **Manual Record** to set manual record for single channel or all channels.

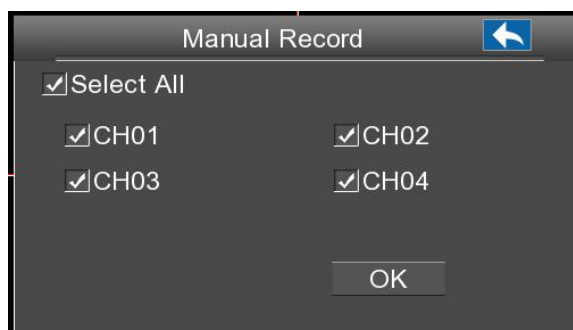

### [Enable Manual Record]


Check the **Channel** checkbox, Click **OK** button to take effect.

Right-click the mouse to back to the Live view interface. In the live view interface, there are icon

 at the right bottom of the screen for the channel.

#### [Disable Manual Record]

Uncheck the channel checkbox, Click **OK** button to take effect.

Right-click the mouse to back to the Live view window. In the live view mode, The icon  disappeared at the right bottom of the screen for the channel.

## Adding Devices

You can add and connect the IP Camera, configure the connection of IP cameras, delete the connection of IP camera. For details, please refer to [2.4.1 Adding Devices](#).


## Shutdown

Click **Shutdown** to enter the Shutdown page. You can log out, reboot or shut down the NVR system.



## 2.4 Menu

Right-click in live view mode and select **Menu** from the **Shortcut Menu**, the **Menu** interface is displayed.

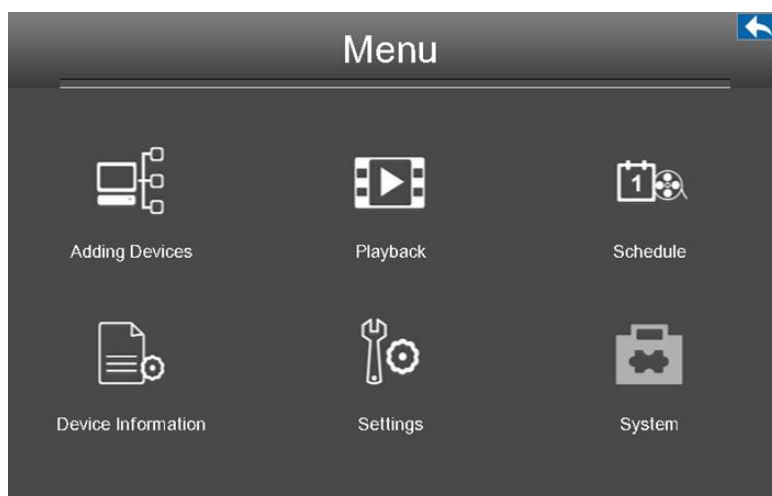

## 2.4.1 Adding Devices

Right-click in live view mode and select **Adding Devices** from the **Shortcut Menu**, or select **Menu > Adding Devices** in the Menu interface. The **Adding Devices** interface is displayed.

You can search and add the online IP cameras by following the operation. After adding IP cameras, the basic information of the camera lists in the **IP Camera List**, and you can configure the basic setting of the IP cameras.



### Note

Before adding the IP Camera, make sure that the IP Camera supports FS or ONVIF protocol. And you have the user name, password and port number of the IP camera.



NVR will automatically detect all the online IP Cameras which they can connect to. You will need to know your IP Camera name and password to connect.

## Automatic Adding IP Camera

If the camera connected camera which is equipped in the package. You can automatically add the camera to your NVR. Check the Automatic adding IP camera checkbox. The NVR system will automatically synchronize its password with the Manually adding IP Camera.

## Manually Adding IP Cameras

If the connected camera which is not the equipment in the package. You can manually add the camera to your NVR.

1. Uncheck the **Automatic Adding IP Camera** checkbox.
2. Click the **Manually Add** button to adding devices page.

The screenshot shows the 'Adding Devices' window. At the top, there is a table with columns: Device Name, IP Address, Protocol, Port, and MAC Address. The table contains two rows: 'FI9900E' with IP '172.16.10.100' and 'IPC 1' with IP '192.168.10.135'. The 'IPC 1' row is highlighted. Below the table, there is a scroll bar. Under the scroll bar, there are input fields for 'Channel' (set to 1), 'HTTP Port', 'IP Address' (set to 000.000.000.000), 'Subnet Mask' (set to 000.000.000.000), 'User Name' (set to admin), and 'Password'. At the bottom, there are 'Refresh' and 'Add' buttons. Three callout boxes with arrows provide instructions: '1. Select the IPC.' points to the 'IPC 1' row; '2. Input the User Name and Password of the IPC.' points to the 'User Name' and 'Password' fields; '3. Click Add button.' points to the 'Add' button.

Device Name	IP Address	Protocol	Port	MAC Address
FI9900E	172.16.10.100	HT	88	0000beef0091
IPC 1	192.168.10.135	HT	88	0000beef0091

1. Select the IPC.

Channel: 1 HTTP Port:

IP Address: 000.000.000.000 Subnet Mask: 000.000.000.000

User Name: admin Password:

Refresh Add

3. Click Add button.

2. Input the User Name and Password of the IPC.

### Note:

Make sure that the IP address of the IP camera and NVR's in the same network segment, and the subnet mask and gateway are the same as the NVR's.



3. And the camera and its information will be added in the IP Camera list. Finally, click the Save button to take effect.





4. Right-Click to return the previous interface.

## 2.4.2 Playback




Right-click in live view mode and select **Playback** from the **Shortcut Menu**, or choose **Menu > Playback** in the Menu interface. The **Playback** interface is displayed.

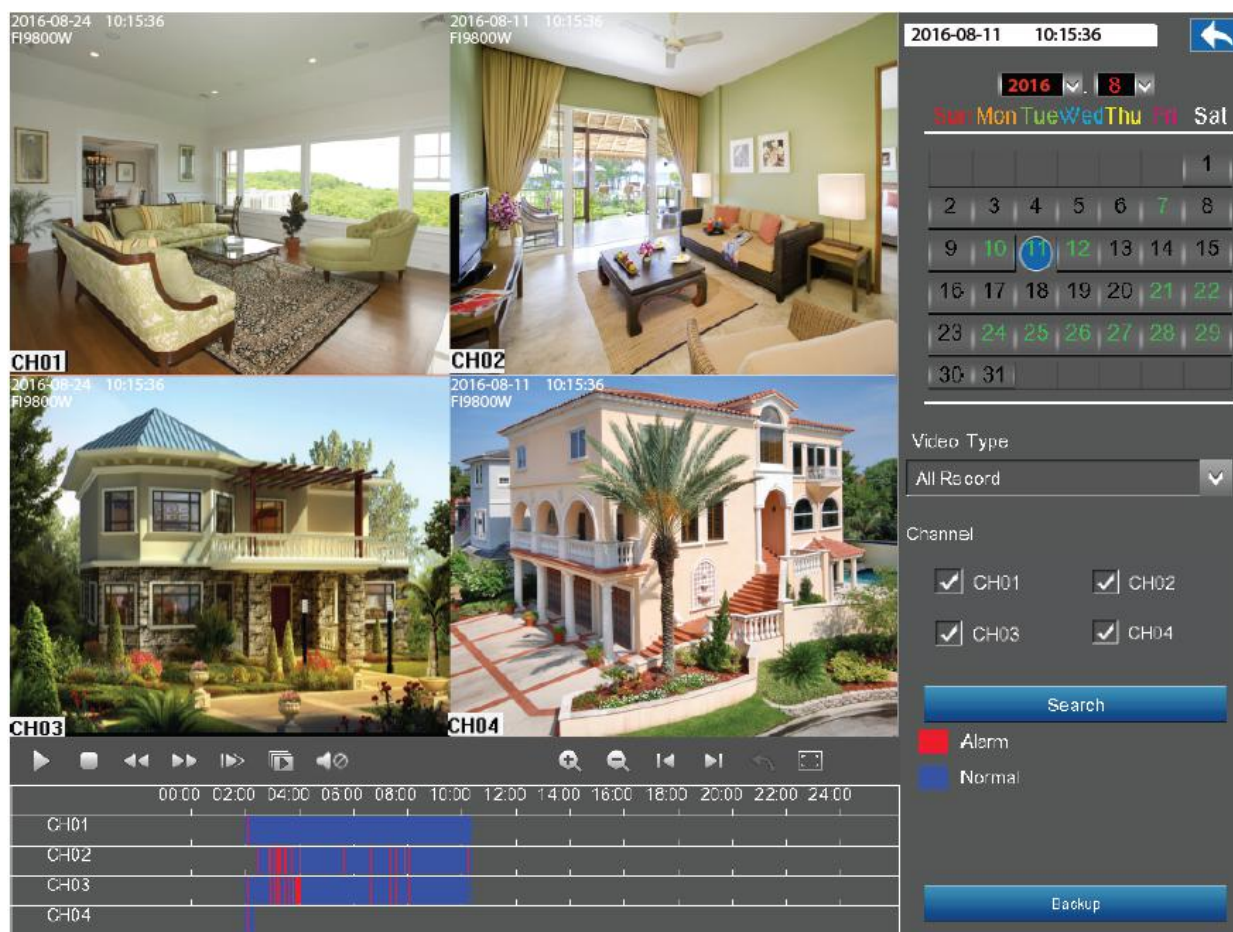


It supports single-screen or four screens.









1. Select a date with recording in calendar.
2. Select the **Video Type**, and check the checkbox from **Channels**. You can select up to four channels for playback at the same time.
3. Click **Search** button to search the matched recorded files. If there are search results, then they will be shown in the time bar area.
4. Click the icon  to play the recording video.

### Manage the recording

Button	Description
	After searching file, click the button to play.
	Stop
	Fast backward. The fast backward speed can be 4 times, 8 times, 16 times or 32 times of the normal playing speed. Click this button. The multiple of normal

	playing speed is displayed in the upper right corner of the playback page. For example, << <b>X4</b> indicates the current fast backward speed is four times of the normal speed.
	Fast forward. The fast forward speed can be twice, 4 times, 8 times, 16 times or 32 times of the normal playing speed. Click this button. The multiple of normal playing speed is displayed in the upper right corner of the playback page. For example, >> <b>X2</b> indicates the current playing speed is twice of the normal speed.
	Slow progress. The slow progress speed can be 1/2 times, 1/4 times, 1/8 times, 1/16 times or 1/32 times of the normal playing speed. Click this button. The multiple of normal playing speed is displayed in the upper right corner of the playback page. For example, >> <b>X1/2</b> indicates the current playing speed is 1/2 times of the normal speed.
	Frame forward. View the image of each frame.

## Playback time and maximized video playback

Button	Description
	Zoom-in time axis.
	Zoom-out time axis.
	Left moving time axis.
	Right moving time axis.
	Return to the last playback progress bar.
	Make the playing video maximized. After the video is maximized, right-click to exit the currently maximized video.

## 2.4.3 Schedule

Choose **Menu > Settings > Schedule** in the Menu interface. The **Schedule** interface is displayed.

You can enable or disable schedule record for the every channel.

### [Enable Schedule Recording]

1. Select channel from drop-down box list.
2. Check the Enable checkbox to enable Schedule Recording function.
3. Check the **Select** checkbox.

**Note:** Check **Clear** checkbox and if you want to clear the area.

4. Click and drag the mouse in the relative positions. The selected area is red.
5. Click Save button to take effect for one certain channel.

The icon indicate starts schedule recording at the right bottom of the screen for certain channel.

### [Disable Schedule Recording]

1. Select channel from drop-down box list.
2. Uncheck the **Enable** checkbox to disable Schedule Recording function.
3. Click **Save** button to take effect for one certain channel.

## 2.4.4 Device Information


Choose **Menu > Device Information** in the Menu interface. The **Device Information** interface is displayed.

You can view the Firmware Version, Manage HDD Info and System Log.



### Firmware Version

Choose **Menu > Device Information > Firmware Version** in the Menu interface. The **Firmware Version** interface is displayed. You can view the Device Type, Device Name, Firmware Version and Application Version.

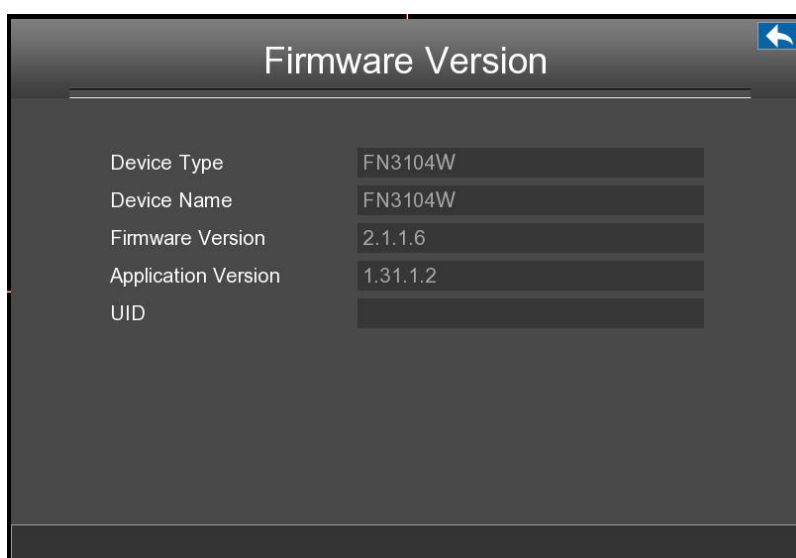

## HDD Info

Choose **Menu > Device Information > HDD Info** in the Menu interface. The **HDD Info** interface is displayed. You can see, refresh, and format hard disk.




**Overwrite:** When the HDD is full. You check the **Overwrite** checkbox, the NVR will cycle cover the earliest recording; If not, the NVR will stop recording when the HDD is full.

**Refresh:** Click the **Refresh** button then you can update to the latest information on the hard disk.

**Format Hard Disk:** If the disk is uninitialized, select the record disk, then click **Format Hard Disk** to format the record disk if the format is incorrect.

## System Log

Choose **Menu > Device Information > System Log** in the Menu interface. The **System Log** interface is displayed. The operation, alarm, exception and information of the NVR can be stored in log files, which can be viewed and exported at any time.




The screenshot shows the 'System Log' interface. At the top, there's a title bar with a back arrow. Below it, there are two dropdown menus: 'Type' set to 'All Log' and 'Channel' set to 'All Channels'. Underneath, there are date and time pickers for 'Start Time' (2014-01-02 00:00:00) and 'End Time' (2014-01-02 23:59:59), followed by a 'Search' button. A table with the following headers is present: 'Channel', 'Option', 'Time', and 'System Log'. The table body is currently empty. Below the table, there's a status bar showing '0/0' and navigation arrows. At the bottom, there are two more dropdown menus: 'Object' set to 'SanDisk' and 'backup se', followed by a 'Backup' button.

### [Searching Log]

1. Select the log type, channel and time.
2. Click the **Search** button to list all matched logs.


## 2.4.5 Settings

Choose **Menu > Settings** in the Menu interface. The **Settings** interface is displayed. You can configure the General, Stream, network, display, Alarm Settings and OSD.

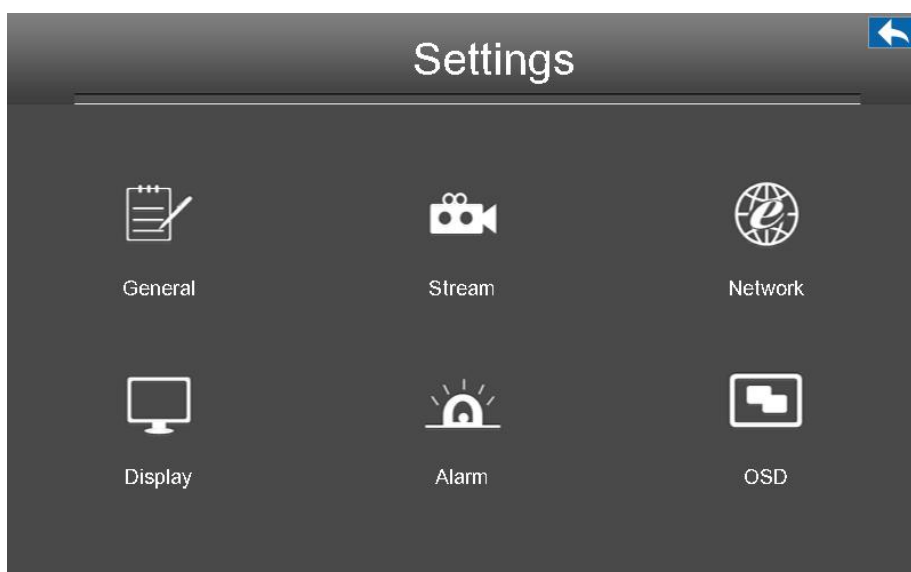


### General

Choose **Menu > Settings > General** in the Menu interface. The **General** interface is displayed. You can configure the basic information of the NVR.

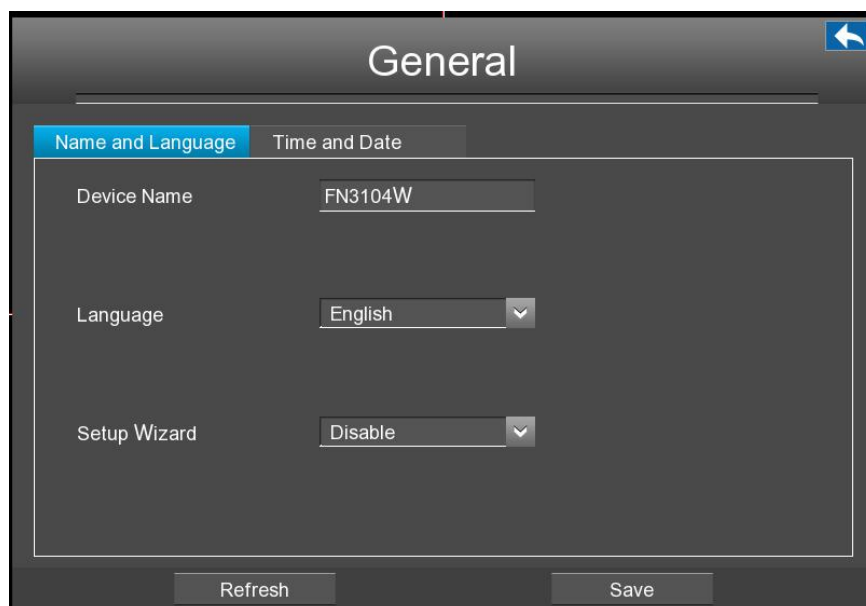



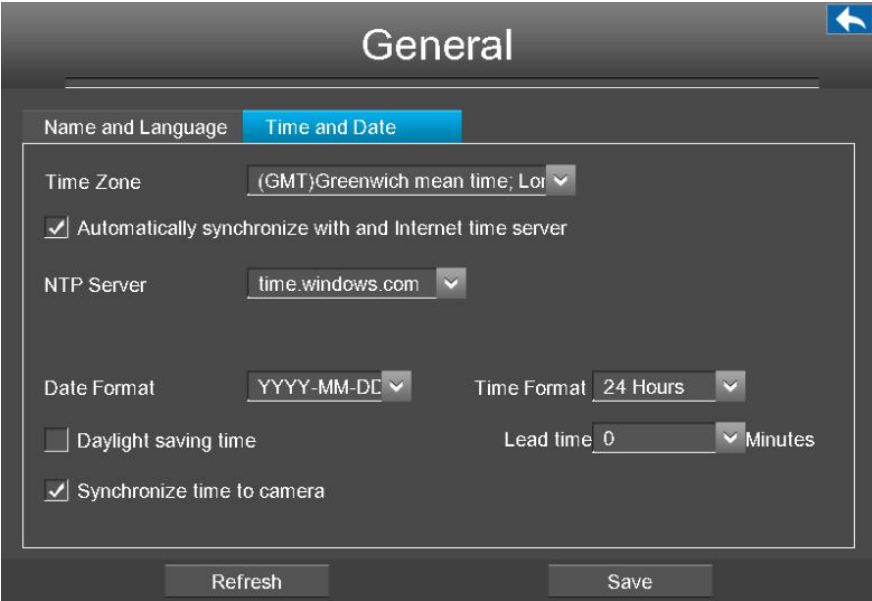

**General**

Name and Language | **Time and Date**

Time Zone: (GMT)Greenwich mean time; Lor ▼

☒ Automatically synchronize with and Internet time server

NTP Server: time.windows.com ▼

Date Format: YYYY-MM-DD ▼ Time Format: 24 Hours ▼

☐ Daylight saving time Lead time: 0 ▼ Minutes

☒ Synchronize time to camera

Refresh Save

**NOTE**

Please do not modify the NVR system time when recording.


Parameter	Description
Device Name	You can modify your device name to help you identify it.
Language	Configure the language of the NVR interface.
Setup Wizard	Whether to enable setup wizard when the NVR system starts again.
Time Zone	Please select the time zone according to the actual situation.
Automatically synchronize with and Internet time server	Whether synchronize your NVR with an Internet time server. Check: You need to configure the <b>NTP Server</b> . Uncheck: You need to configure the <b>Date</b> and <b>Time</b> .
Date Format	You need to configure the date format.
Time Format	You need to configure the time format.
Daylight saving time	Check the checkbox, then select the daylight saving time from the dropdown list.
Synchronize time to camera	Time set by the NVR system. Whether to synchronize the time to the connected IPC device.

Click **Save** button to take effect.

## Stream

Choose **Menu > Settings > Stream** in the Menu interface. The **Stream** interface is displayed.

You can configure the encoding scheme parameters of the IP Camera, the NVR system will synchronize your IP camera with encoding scheme.

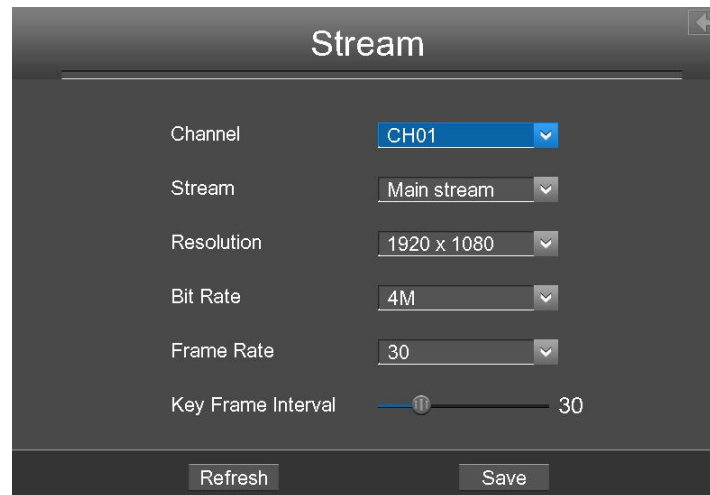

The screenshot shows the 'Stream' configuration window. It has a title bar with the word 'Stream' and a back arrow icon. Below the title bar, there are several configuration options, each with a label and a control element:

- Channel:** A dropdown menu showing 'CH01'.
- Stream:** A dropdown menu showing 'Main stream'.
- Resolution:** A dropdown menu showing '1920 x 1080'.
- Bit Rate:** A dropdown menu showing '4M'.
- Frame Rate:** A dropdown menu showing '30'.
- Key Frame Interval:** A slider control with a blue bar and a circular knob, with the value '30' displayed to the right.

At the bottom of the window, there are two buttons: 'Refresh' and 'Save'.

Parameter	Description
Channel	You can select the channel for the IP Cameras.
Stream	You can set the value of Resolution, Bit Rate, Frame Rate, Key Frame Interval when the video was set the main stream.
Resolution	The resolution of the IP Camera.  The higher the resolution is, the sharper the video quality is, but also with the increasing stream, which will take up the higher bandwidth.
Bit Rate	Generally speaking, the larger the bit rate is, the clearer video will become. But the bit rate configuration should combine well with the network bandwidth. If the bandwidth is very narrow, and bit rate is large, that will lead to video can not play well.
Frame Rate	Note that a larger frame size takes up more bandwidth. <ul style="list-style-type: none"><li>● When the video format is 50Hz, the maximum frame rate is 25 fps.</li><li>● When the video format is 60Hz, the maximum frame rate is 30 fps.</li></ul> You should choose a lower frame rate when the bandwidth is limited. Normally, when the frame rate above 15, you can achieve fluently video.
Key Frame Interval	The time between last key frame and next key frame. The shorter the duration, the more likely you will get a better video quality, but at the cost of higher network bandwidth consumption.

Click **save** button to take effect.

## Network

Choose **Menu > Settings > Network** in the Menu interface. The **Network** interface is displayed. You can configure the information of Network, DDNS, E-Mail, FTP and Wireless.

### [Network]

Select the **Network** page, you can configure the network information of the NVR.

**Network**

Network DDNS EMail FTP Wireless

Type DHCP

HTTP Port 88

HTTPS Port 443

IP Address 192.168.001.106

Subnet Mask 255.255.255.000

Gateway 192.168.001.001

Preferred DNS Server 192.168.008.008

Alternate DNS Server 211.162.078.002

MAC Address 00bbbbbbb01

UPNP ☒

Refresh Save

Parameter	Description
Type	<p>You can select the network type from the drop-down list box.</p> <p>If select the <b>DHCP</b>, NVR system will automatically obtain an IP address and other network settings from that server.</p> <p>If select the <b>Static IP</b>, you can configure an IP address and other network settings.</p>
HTTP Port	The default value is 88.
HTTPS Port	The default value is 443.
IP Address	<p>You can configure the IP address of the NVR system.</p> <p><b>Note:</b></p> <p>The IP of IP cameras, PC and NVR should be in the same network segment and in the same LAN.</p>
Subnet Mask	The subnet mask of the NVR system.
Gateway	The gateway of the NVR system.
Preferred DNS Server	The preferred DNS server of the NVR system.
Alternative DNS Server	The alternative DNS server of the NVR system.

MAC Address	<p>You can use the UPnP function to enable the fast connection of the device to the WAN via a router without port mapping.</p> <p><b>Note:</b></p> <p>If you want to enable the UPnP function of the NVR, you must enable the UPnP function of the router to which your NVR is connected.</p>
UPNP	You can enable or disable the UPNP function.

Click **Save** button to take effect.

How to configure the **IP Address, Subnet Mask, Gateway, Preferred DNS Server, alternative DNS Server**, please refer to [4.2 Common Operations](#) 2. Configure the IP Parameters.

## [DDNS]

Select the **DDNS** page, you can configure the DDNS information of the NVR.

The NVR has embedded a unique DDNS domain name when producing, and you can directly use the domain name, you can also use the third party domain name.



### Note

Here take *a6747.myfoscam.org* for example.

**Enable DDNS:** Check the DDNS checkbox to enable this feature.

Click **Save** button to take effect. Then you can use *http:// Domain name + HTTP Port* to access the NVR via internet.

Take hostname **a6747.myfoscam.org** and HTTP Port. **88** for example, the accessing link of the camera via internet would be *http://a6747.myfoscam.org:88*

**Third Party DDNS:** You can also use third part DDNS, such as www.no-ip.com, www.3322.com. If you set the third party DDNS, refer to [4.2 Common Operations](#) 1. Third Party Domain Name Settings.

## [EMail]

Select the **EMail** page, you can configure the E-mail information of the NVR.

The system can be configured to send an email to the designated users if an alarm or motion event is detected etc..

Before configuring the Email settings, the NVR must be connected to a local area network (LAN) that maintains an SMTP mail server.

The screenshot shows the 'Network' configuration page with the 'EMail' tab selected. The settings are as follows:

- Enable E-Mail: ☐
- Authentication: ☐
- SMTP Server:  Other: ☒
- SMTP Port:
- Enable SSH:
- SMTP Username:
- SMTP Password:
- Sender:
- Recipient Address 1:

Buttons: Refresh, Save

Parameter	Description
Enable E-Mail	Check the checkbox to enable the E-mail function.
Authentication	Whether to verify the user name and password during login to the mailbox.
SMTP Server	The SMTP Server IP address or host name.
SMTP Port	The SMTP port is usually set as 25. Some SMTP servers have their own port, such as 587 or 465.
Enable SSH	Transport Layer Security usually is None. If you use Gmail, Transport Layer Security must be set to TLS or STARTTLS and SMTP Port must be set to 465 or 25 or 587, which port you choose

	should be decided by which Transport Layer Security you select.
SMTP User name	The user account of sender's Email for SMTP server authentication.
SMTP Password	The password of sender's Email for SMTP server authentication.
Sender	The Email address of sender.
Recipient Address	The Email address of user to be notified. you can set 4 receivers

Click **Save** button to take effect.


Click **E-Mail Test** to see if Mail has been successfully configured.

If the test success, you can see the success information, at the same time the receivers will receive a test mail.

## [FTP]

Select the **FTP** page, you can configure the FTP information of the NVR.

The system can be configured to send an picture to the FTP server if an alarm or motion event is detected etc..

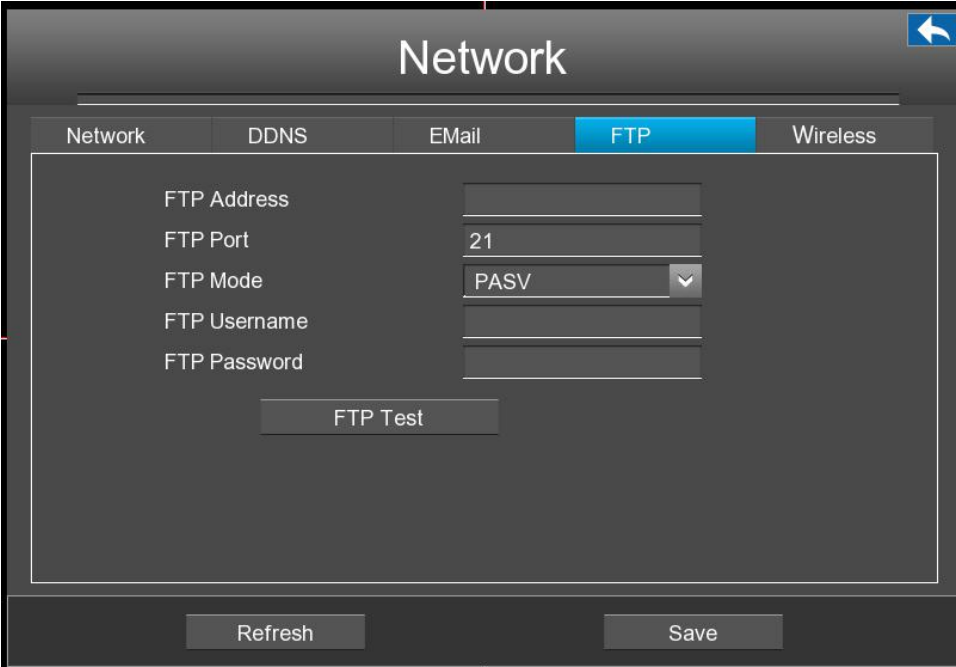

The screenshot displays the 'Network' configuration window with the 'FTP' tab selected. The window has a dark grey background with white text. At the top, the title 'Network' is centered. Below it, there are five tabs: 'Network', 'DDNS', 'Email', 'FTP' (highlighted in blue), and 'Wireless'. The main content area contains the following fields and controls:

- FTP Address: A text input field.
- FTP Port: A text input field containing the value '21'.
- FTP Mode: A dropdown menu showing 'PASV' with a downward arrow.
- FTP Username: A text input field.
- FTP Password: A text input field.
- FTP Test: A button located below the password field.
- Refresh: A button at the bottom left of the window.
- Save: A button at the bottom right of the window.

Parameter	Description
FTP Address	<ul style="list-style-type: none"><li>● If your FTP server is located on the LAN, you can set FTP address as ftp://IP address/dir.(eg.ftp://192.168.1.103/dir).</li><li>● If your FTP server is located on the WAN, you can set FTP address as ftp://domain name/dir.(eg.ftp:test.no-ip.org/dir).</li></ul>
FTP Port	Default port is 21.You can also change this port manually through FTP server.
FTP Mode	Here supports two modes: PORT and PASV.
FTP Username	The user account of FTP server.
FTP Password	The user password of FTP server.

Click **Save** button to take effect.

Click **FTP Test** to see if FTP has been successfully configured.

If the test success, you can see the success information.

## [Wireless]

Select the **Wireless** page, you can configure the wireless information of the NVR.

The screenshot shows the 'Network' configuration interface with the 'Wireless' tab selected. It includes a checkbox for 'Automatic channel optimization' which is currently unchecked, and a dropdown menu for 'Channel selection' set to 'other'. A red text warning is displayed: 'The use of radio channel has to meet local laws and regulations.' At the bottom of the interface are 'Refresh' and 'Save' buttons.

Select **Automatic Channel Optimization**, NVR will choose the channel automatic. Or you can select the channel from the dropdown list. Don't tick **Automatic channel optimization** when you want to select the channel manually.



## Display

Choose **Menu > Settings > Display** in the Menu interface. The **Display** interface is displayed. You can configure the Resolution, Transparency, and Mouse Sensitivity for the NVR.



Parameter	Description
Resolution	The output resolution of the NVR.
Transparency	Configure the transparency of the NVR output interface.
Mouse Sensitivity	Configure the sensitivity of the mouse.

## Alarm Settings

### [Motion Detection]

Follow the steps to set the motion detection parameters. In the live view mode, once a motion detection event takes place, the NVR can analyze it and perform many actions to handle it. Enable motion detection function can trigger certain channels to start recording, or trigger full screen monitoring, output alarm, send Email, upload figure to FTP, buzzer alarm and so on.


In the live view mode, there are icons at the right bottom of the screen for each channel.

- The Icon  indicate alarm was triggered.

- The Icon  indicate the IPC is recording.

In this chapter, you can follow the steps to schedule a record which triggered by the detected motion.

Choose **Menu > Settings > Alarm Settings > Motion Detection** in the Menu interface. The **Motion Detection** interface is displayed.

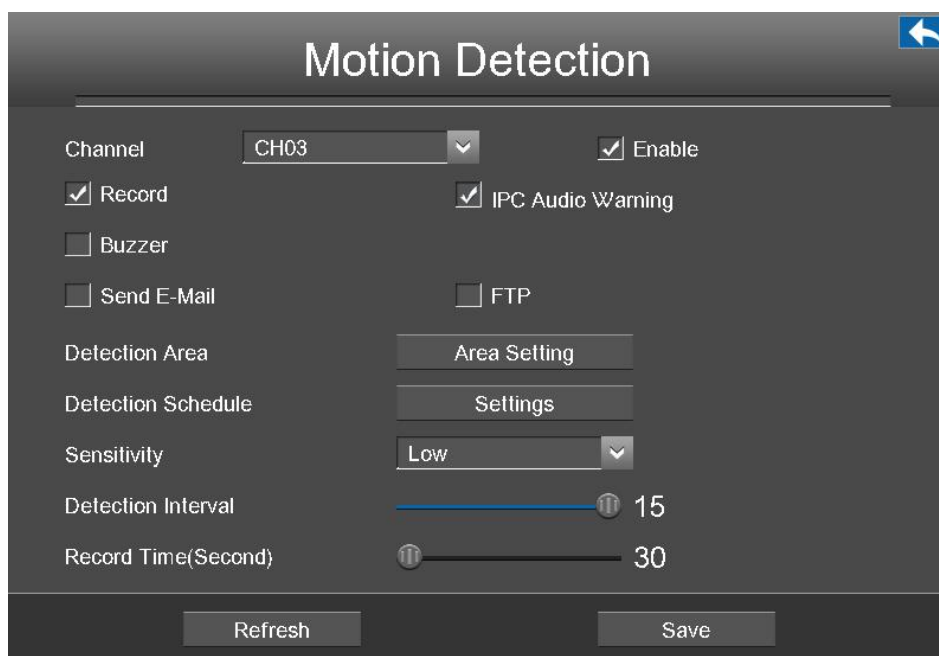

**Motion Detection**

Channel: CH03 ☒ Enable

☒ Record ☒ IPC Audio Warning

☐ Buzzer ☐ FTP

☐ Send E-Mail

Detection Area: Area Setting

Detection Schedule: Settings

Sensitivity: Low

Detection Interval: 15

Record Time(Second): 30

Refresh Save

- Step1 Select channel from drop-down box list.
- Step2 Check the checkbox to enable motion detection function.
- Step3 Check the checkbox to select the linkage method. You may refer to follow table for details of linkage methods.

Parameter	Description
Record	If you select this checkbox, when the Motion detection is triggered, the NVR will record automatically and store the record files to the HDD.
IPC Audio Warning	If you select this checkbox, when the Motion detection is triggered, the people around the camera will hear beep alarm sound of the IPC.
Buzzer	When the Motion detection is triggered, you can choose whether to enable buzzing sound of the NVR device.
Send E-Mail	When the Motion detection is triggered, you can choose whether to send e-mail. <b>Note:</b> Make sure you have set Email.
FTP	When the Motion detection is triggered, you can choose whether to upload detection picture to FTP server. <b>Note:</b> Make sure you have set FTP.

**Step4 Set Detection Area.**

1. Click **Area Setting** button and it pop up a window.
2. Drag and **draw** the area for motion detection by left mouse.
3. Right-click with your mouse to save and quit. When something moving in the detection area, the NVR will alarm.

**Step5 Set Detection Schedule.**

1. Click **Settings** button for the detection schedule.

Set up arming schedule of the channel for the motion detection.

You can choose a week, one day of a week, the certain time period for the motion detection alarm.

2. Check **Select** checkbox to select the area.
3. Drag and draw the area for motion detection by left mouse.

**Note:** Check **Clear** checkbox and If you clear the area, then drag and draw the area for motion detection by mouse.

4. Click the **OK** button to save and exit the window.

**Step6** Select the **Sensitivity** from the drop-down box list. And then you can enable the detection area.

You can drag the time bar to select the detection interval and record time.

Parameter	Description
Sensitivity	The higher the sensitivity, the NVR will be more easily alarmed.
Detection Interval	The Triggered Interval time between two motion detection. The unit is second.
Record (Time Second)	When you check the <b>Record</b> , you need to configure motion detection recording time. The unit is second.

**Step7** Click **Save** button to take effect.

When the motion has been detected during the detection time in the detection area, the NVR will alarm and adopt the corresponding alarm linkage.

**Note:** You must set the detection area and detection schedule, or else there is no alarm anywhere and anytime.

-----End

### [Other Alarm]

Choose **Menu > Settings > Alarm > Other Alarm** in the Menu interface. The **Other Alarm** interface is displayed.



Click **Save** button to take effect.

## OSD

Choose **Menu > Settings > OSD** in the Menu interface. The **OSD** interface is displayed. You can configure the OSD (On Screen Display) information.




Parameter	Description
Channel	Select the channel from the drop-down list.
Channel Name	It displays the IPC device name of the corresponding channel.
Display Channel Name	Whether to display the IPC device name on the selected channel.
Display Time	Whether to display the IPC device time on the selected channel.

### 2.4.6 System

Choose **Menu > System** in the Menu interface. The **System** interface is displayed.

You can manage the NVR device about User Account, Upgrade, Factory Reset, Para Export, Auto Restore, Log Out, Reboot, Shutdown.

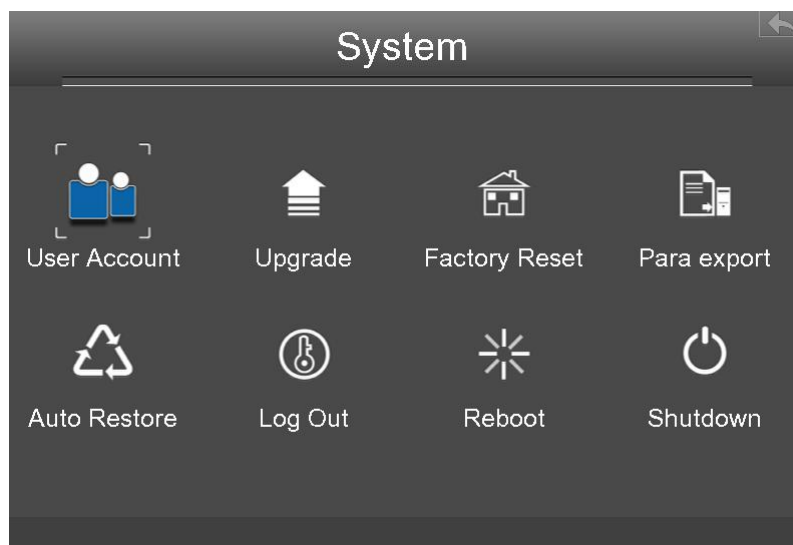

## User Account


Choose **Menu > System > User Account** in the Menu interface. The **User account management** interface is displayed.

User levels by permission from low to high are visitor, operator, administrator. Different user levels have different operating permission. The default user name of device administrator is admin with no password.

The administrator has the permission to add and delete all users and configure user parameters.

You can add, modify, delete user name / password or distribute authority for users.

The valid value range of User name and Password is 1 ~ 20 characters, it contains the English letter, numeric and symbol.

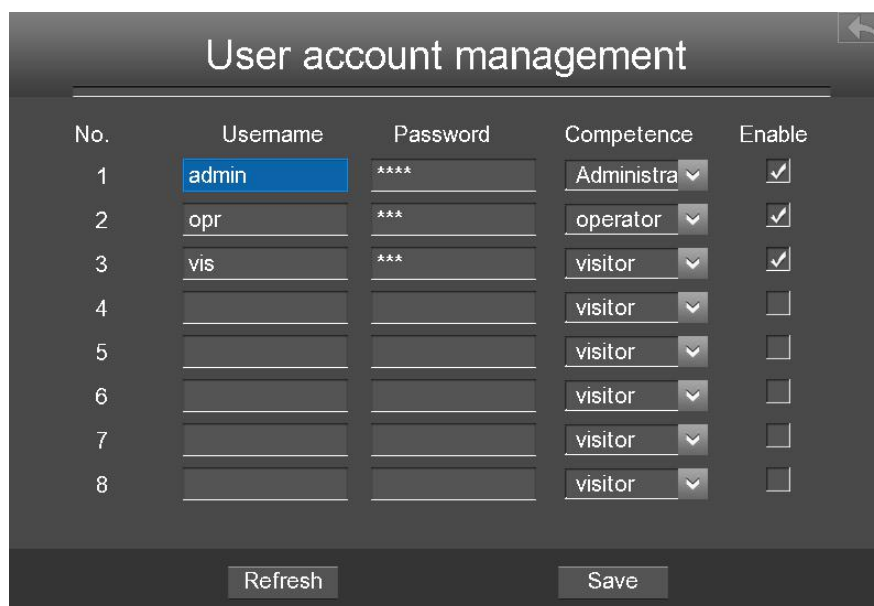

After configure the user name, password and competence, you need to check **Enable** checkbox.  
Then click **Save** button to take effect.

## Upgrade

Choose **Menu > System** in the Menu interface. You can check for updates by network.

### [Remote Upgrade]

Click the **Remote Upgrade** button, the system will check the software version. If your software is not latest, you can upgrade it by remote upgrading.

#### NOTE:

Don't shut down the power during upgrade. After upgrading, you can see the upgrade result.

## Factory Reset

Choose **Menu > System** in the Menu interface, then click **Factory Reset** in the System interface.

Click **OK** button in the pop-up message box and all parameters will return to factory settings. Click **OK** button and then the NVR device will reboot automatically.

## Para Export

Choose **Menu > System** in the Menu interface, then click **Para Export** in the System interface. Click the button to import or export the parameter.

## Auto Restore

Choose **Menu > System > Auto Restore** in the Menu interface. The **Auto Restore** interface is displayed.

You can configure the Date and Time. The NVR will maintain system at the setting time.

## Log Out

After logging out, the monitor turns to the live view mode and if you want to do some operation, you need to input user name and password to log in again.

Choose **Menu > System** in the Menu interface, then click **Log Out** in the System interface. Click **OK** button in the pop-up message box, the NVR system will log out.

**Note:** After you have logged out the system, menu operation on the screen is invalid. It is required to input a user name and password to unlock the system.

## Reboot

Choose **Menu > System** in the Menu interface, then click **Reboot** in the System interface. Click **OK** button in the pop-up message box, the NVR system will reboot.

## Shutdown

Choose **Menu > System** in the Menu interface, then click **Shutdown** in the System interface.

Click **OK** button in the pop-up message box, the NVR system will shut down.

It is recommended that cut off the power after shutting down.



## 3 Web

---

You can access and manage the NVR on a PC through Web browser.

### 3.1 Instructions before Login

Before accessing the NVR Kit by using the Web browser, you need to obtain the following information:

- The NVR and the PC must be connected to the same LAN and are in the same network segment.
- You can query or allocate the IP address of the NVR by using the following methods:  
Through operation on the local GUI, configure an IP address for the NVR. For the specific operation, please refer to [4.2 Common Operations](#) 2. Configure the IP Parameters.  
Allocate an IP address for the NVR through a router.
- This product supports 32-bit IE8 or later versions and does not support 64-bit IE browsers. It also supports Apple Safari and Mozilla Firefox browsers.


### 3.2 Log In

**Step1** Log in to the Web client of the NVR. You can directly enter the IP address and port in the browser or search out the NVR by using the search tool. Here we take search tool as an example.

**Step2** Find the folder "Equipment Search Tool" in the CD, then go to the the folder "For windows OS" or "For Mac OS". Copy and paste the search tool file to your computer, or drag it onto your desktop.



**Step3** Enable the DHCP feature of your router, then open the Equipment Search Tool program. It should display the NVR's IP address in your LAN.

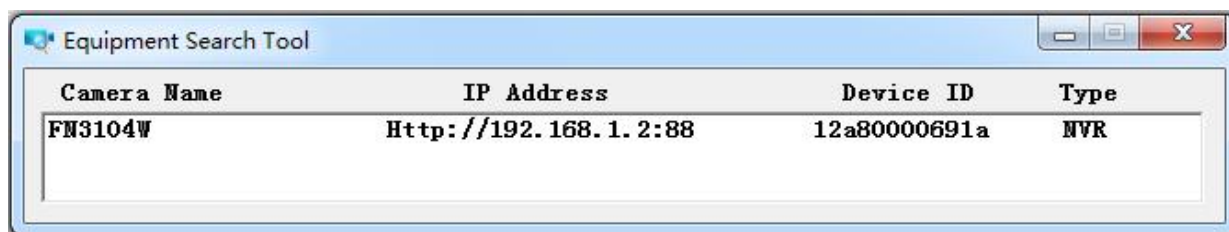


Camera Name	IP Address	Device ID	Type
FN3104W	Http://192.168.1.2:88	12a80000691a	NVR


**Step4** Double-click the NVR, and your default browser will open up to the NVR's login page. When logging in for the first time, you will need to install the add-on.

It will pop up the message below the page, as shown in the following figure.

Click **Install** button to install the add-on. Please follow the installation instructions. (Please close the browser during installation.)

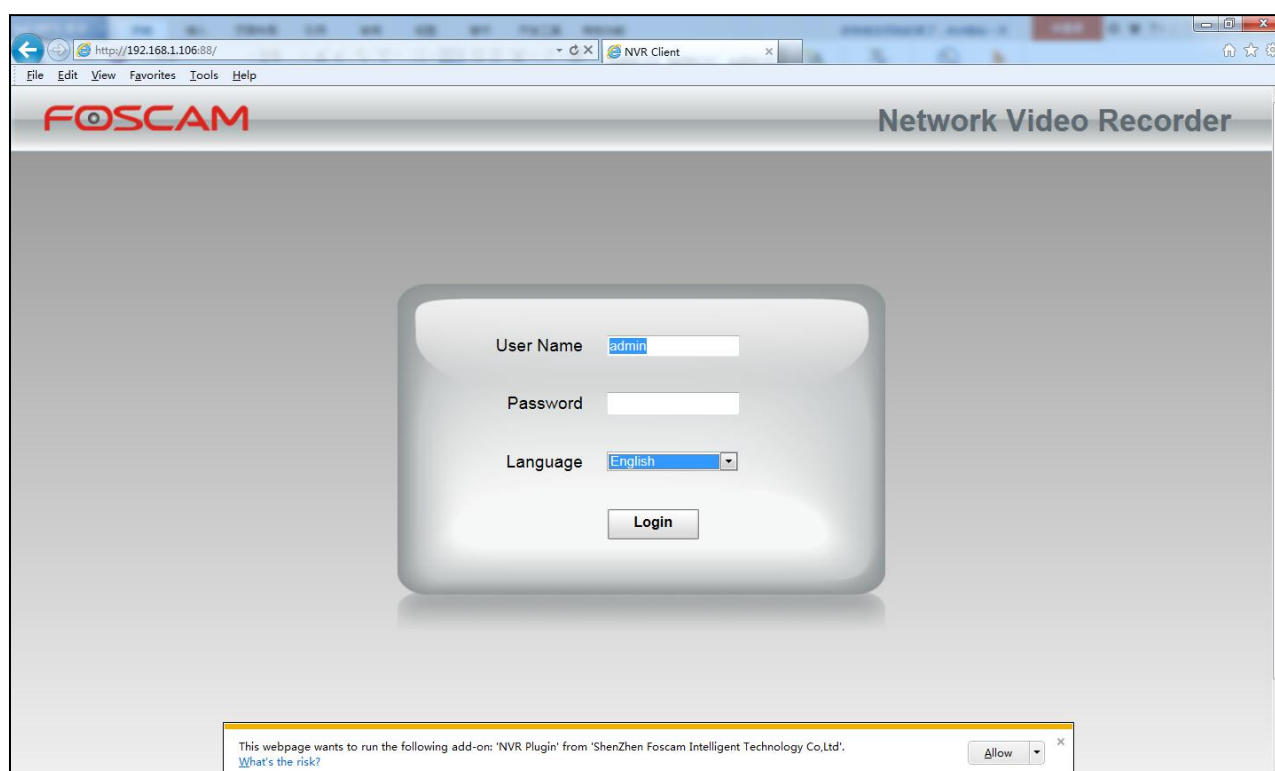

**Step5** After installing the add-on, refresh the browser and enter the login interface.

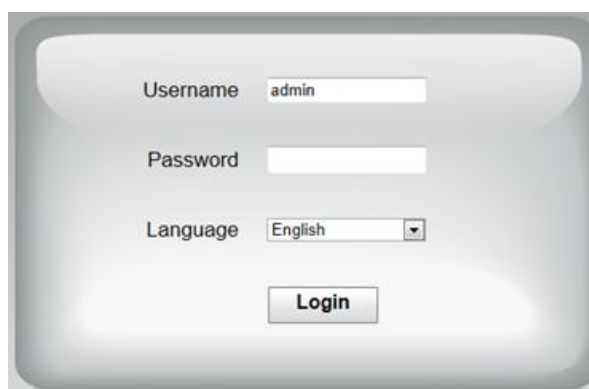

Input the follow parameter.

Parameter	Description
User name / Password	The user name and password of the NVR client.  The default administrator user name is admin with a blank password, please set the new user name or password at first using and prevent unauthorized users login the NVR.
Language	Select the language type of the NVR client.

Step6 Click **Login** button.








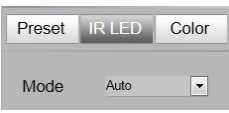




When you log in for the first time, it will come to the operating of modify the user name and password automatically. Enter the New User name, New password and Confirm the password.






-----End

## 3.3 Live Video


After log in, the live view interface will display. You can configure the play / stop the live view, manual recording, manual capturing, preset, cruise, led, color and so on.



Section	Icon	Name	Description
1		Live Video	Click this button and back to the realtime preview window.
		Parameter Configuration	There are Adding Devices, Schedule Record, Alarm, Device Information, Basic Settings, System Management in the Parameter Configuration interface.
		Playback	Playback the recorded video files of a specific channel in the live view mode.
		Logout	Disconnect the link between the client page of the current browser and the NVR server.
2		Channels	In channels of the NVR, you can add IPC devices. The blue indicates that the channel is previewing state. You can see the video of the connected camera.  The gray indicates that the channel is off line state. There was not the connected camera in this channel.
		Play	Play an IPC monitoring video in a channel of the NVR. By default, the video is played.
		Stop	Stop playing the monitoring video in the channel.
3		IR LED	You can configure the LED of the IP Camera. There are two modes: Manual and Auto.
		Color	You can configure the color of the IP Camera.
4		Play all	Play monitoring videos in all channels.
		All off	Close monitoring videos in all channels.
		1 Channel	Click this button, It will display one channel in the live view interface.

	4 Channels	Click this button, It will display four channels in the live view interface.
	Take Snapshot	Select the channel, click this button, and you can take a snapshot of the monitoring video page of a corresponding channel to the local computer. You can set the storage path, refer to the <b>Web &gt; Parameter configuration &gt; Basic Settings &gt; Storage Location</b> .
	Record	Click this button to manually record the content on the monitoring page. The recorded content is stored in the HDD of the NVR.
	Audio	Click this button to play the recording sound.
	Full Screen	Click this button or double-click the monitoring page to make the monitoring page displayed in full screen. Press <b>Esc</b> to exit full screen mode.

When the IPC which you add to the NVR has PT function, you can set the cruise and preset for the PZ IPC through Preset.

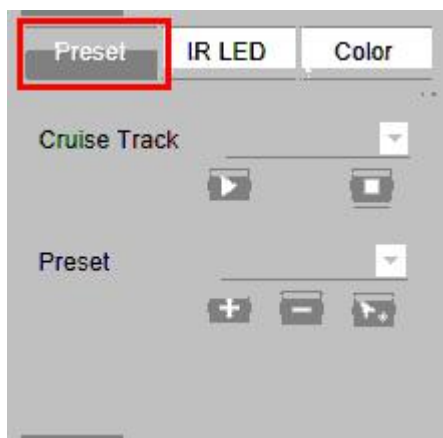

## Setting Cruise



The default cruise tracks have two types: Vertical and Horizontal.

Vertical: The IP camera will rotate from up to down.

Horizontal: The IP camera will rotate from left to right.



: Start cruise.




: Stop cruise.

If you want to define or change the cruise trace, please go to **Parameter Configuration > Service configuration > Preset Settings**.

#### [How to do cruise?]

Step1 Select one track in the track drop-down list.

Step2 Click , the IP camera will cruise following the predefined path.

Step3 Click  and finish cruising.

## Preset Settings



The default preset position is TopMost, BottomMost, LeftMost, RightMost, you can add other preset positions.



Add: Click this icon to save the position you need the IP camera to remember.






Delete: Select one preset position and click this button to delete it.




GO: Select one preset position in the preset drop-down list and click Go to make the IP camera move the preset position.

#### [How to do preset position?]


Step1 Rotate the IP camera and stop at a desired place where you want make preset position.

Step2 click  button and input a descriptive name for the preset position. The preset position cannot contain special characters. Then click  to save it. If you want to reset the preset position, click .

You can move the IP camera and stop at another place, and set another preset position. You can do all the preset positions with this method.


**Step3** If you want to see one preset position you have set, only select the preset position name from the preset drop-down list, and click  button, the IP camera will go to the preset position.

## 3.4 Parameter Configuration

Choose  (**Parameter Configuration**), you can adding devices, schedule record, alarm, device information, basic settings and system management.

### 3.4.1 Adding Devices

NVR provide a function of auto searching IP camera. When there are supplied IP cameras in the same network segment of a LAN with NVR, you may add it in one button with IP Camera's user name, password and port number.

Choose  (**Parameter Configuration**) > **Adding Device**. The **IP Camera Setup** page is displayed.

#### [Auto Adding IPC]

Check the **Automatically search for and add all devices** checkbox if the connected cameras which are the equipments in the package. And make sure you can view all connected cameras are in **The Current LAN IPC List** box. The NVR system will automatically synchronize its password with the cameras. Then you can see the videos of the cameras on the Realtime Preview of the NVR.

IP Camera Setup

Refresh

☒ Automatically search for and add all devices

The Current LAN IPC List

FI9800W(172.216.10.102)  
FI9800W(172.216.10.100)  
FI9800W(172.216.10.101)  
FI9800W(172.216.10.103)

Refresh

Channel01 FI9800W(172.216.10.100)  
Channel02 FI9800W(172.216.10.103)  
Channel03 FI9800W(172.216.10.102)  
Channel04 FI9800W(172.216.10.101)

Note: If you want to access an IP Camera from the internet, make sure the camera is accessible on the internet.  
You need to enter correct host name or remote IP address and port numbers.

#### [Manually Adding IPC]



If the connected cameras which are not the equipment in the package, you can uncheck the **Automatically search for and add all devices** checkbox to manually add the other cameras. After select any one of the channels, input information of the IPC. Then click **Add** button to finish adding.

Step1 Select one channel from Channels.

Step2 Choose the IP Camera in the list of **'The Current LAN IPC List'** .

Choose the Protocol from the drop list. Input the User Name and Password of the IPC.

Select the FOSCAM protocol for Foscam brand IPC, and select the ONVIF protocol for other brands IPC.


Step3 Click **Add** button to finish adding.

-----End


### 3.4.2 Schedule Record

You can enable or disable schedule recording for the every channel.

Set the recording schedule, and then the NVR automatically starts / stops recording according to the configured schedule. The recording files will be save to the HDD or mobile store device.

The Icon  indicate starts schedule recording at the right bottom of the screen for certain channel.

Step1 Choose  **(Parameter Configuration) > Schedule Record**. The **Schedule** page is displayed.

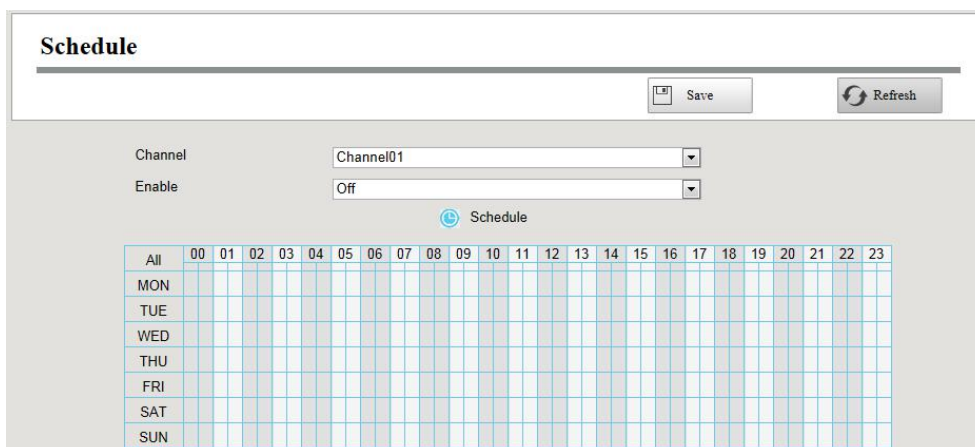

Step2 Select channel from drop-down box list.

Step3 Enable the **Enable** schedule record.

Step4 Set Recording schedule time of the channel.

You can choose a week, one day of a week, the certain time period for the recording.

For detailed procedure, please refer to [3.4.3 Alarm](#) Motion Detection.

Step5 Click **Save** button to take effect.



-----End

## 3.4.3 Alarm

### Motion Detection


Follow the steps to set the motion detection parameters. In the live view mode, once a motion detection event takes place, the NVR can analyze it and perform many actions to handle it. Enable motion detection function can trigger certain channels to start recording, or trigger full screen monitoring, output alarm, send Email, upload FTP, buzzer alarm and so on.

In the live view mode, there are icons at the right bottom of the screen for each channel.

- The Icon  indicate alarm was triggered.
- The Icon  indicate the IPC is recording.

You can follow the steps to schedule a record which triggered by the detected motion.

Choose  (Parameter Configuration) > Alarm > Motion Detection. The Motion Detection page is displayed.

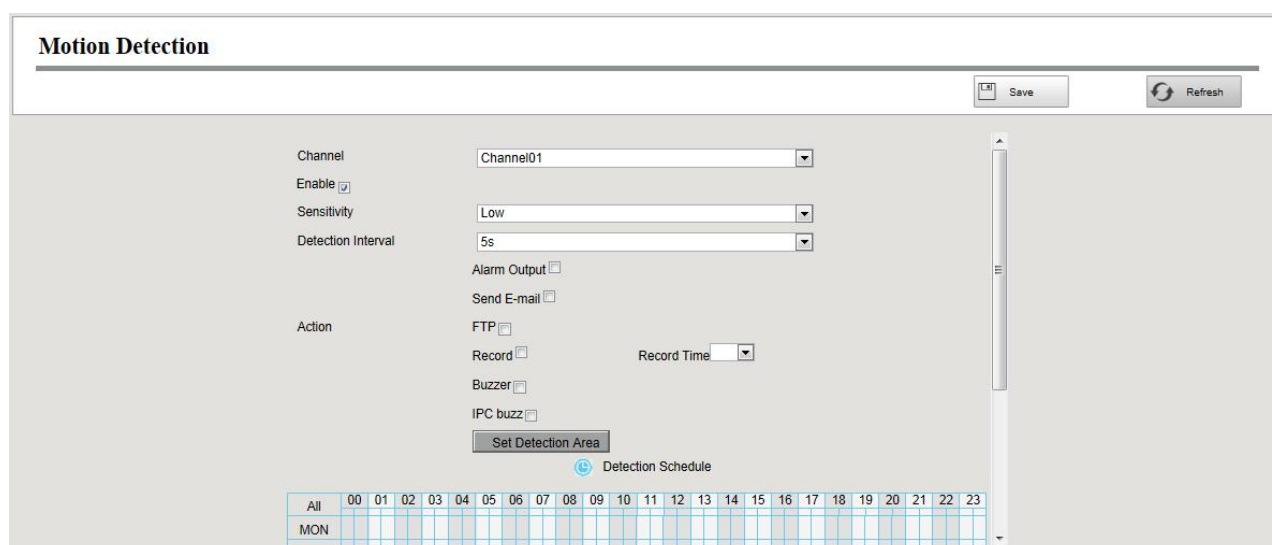

	00	01	02	03	04	05	06	07	08	09	10	11	12	13	14	15	16	17	18	19	20	21	22	23
All																								
MON																								

Step1 Select channel from drop-down box list.

Step2 Check the **Enable** checkbox to enable motion detection function.

Step3 Select the **Sensitivity** and **Detection Interval**.

The higher the sensitivity, the NVR will be more easily alarmed.


The Detection Interval time between two motion detection.

Step4 Check the checkbox to select the linkage method. You may refer to follow table for details of linkage methods.

Parameter	Description
Send E-Mail	When the Motion detection is triggered, you can choose whether to send e-mail. <b>Note:</b> Make sure you have set Email.
FTP	When the Motion detection is triggered, you can choose whether to upload detection picture to FTP server. <b>Note:</b> Make sure you have set FTP.
Record	If you select this checkbox, when the Motion Detection is triggered, the NVR will record automatically and store the record files to the HDD.
Record Time	When you check the <b>Record</b> , you need to configure motion detection recording time.
Buzzer	When the Motion detection is triggered, you can choose whether to enable buzzing sound of the NVR device.
IPC Buzz	If you select this checkbox, when the Motion Detection is triggered, the people around the camera will hear beep alarm sound of the IPC.

Step5 Set Detection Area

1. Click **Set Detection Area** button and it pop up a window.

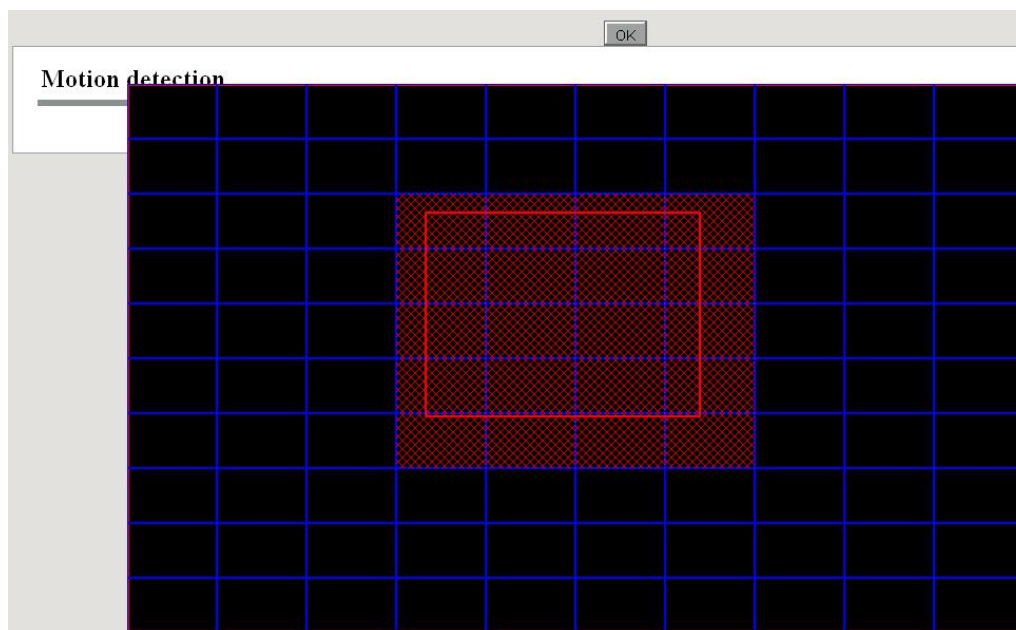

2. Drag and draw the area for motion detection by left mouse.

**Note:** To clear the motion detection area, drag and draw the motion detection area by left mouse.

3. Click **OK** button to save and quit. When something moving in the detection area, the NVR will alarm.


#### Step6 Set Detection Schedule

Set up arming schedule of the channel for the motion detection.

You can choose a week, one day of a week, the certain time period for the motion detection alarm.

- Choose all Time Period


Click the black button up the MON, you will see all time range turn red. When something moving in the detection area at anytime, the NVR will alarm.

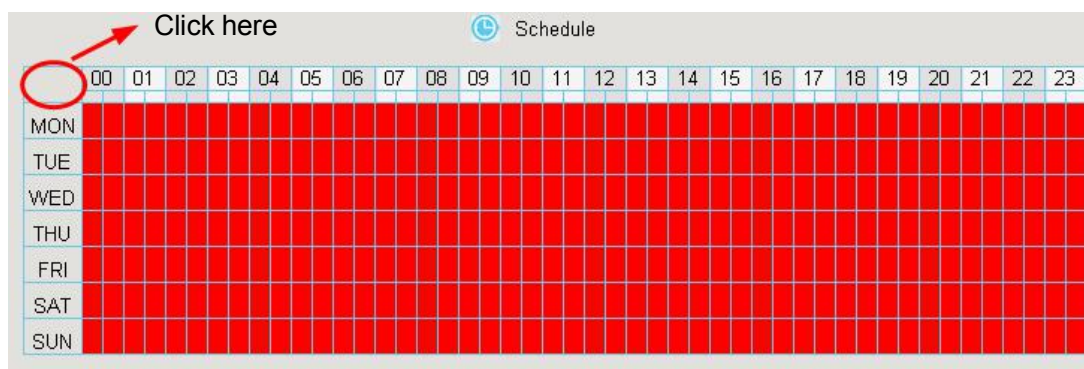

- Choose one day


Click the week day words, the corresponding row will be selected.

For example, click TUE, the all column of TUE turns to red, that means during Tuesday whole day, when something moving in the detection area, the camera will alarm.

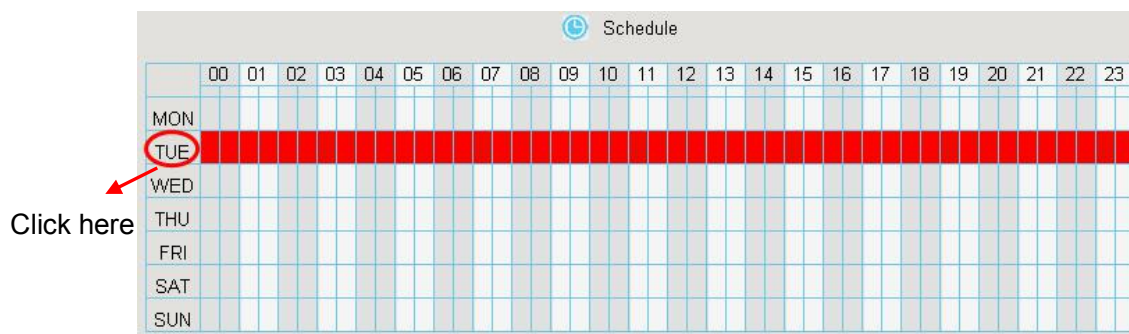

- Choose the Certain Time Period

Press the left mouse and drag it on the time boxes, you can select the serial area.

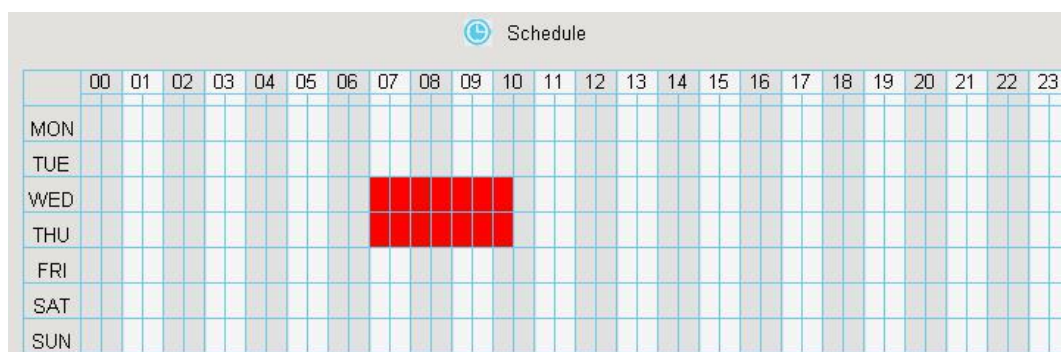


**Step7** Click **Save** button to take effect.

When the motion has been detected during the detection time in the detection area, the NVR will alarm and adopt the corresponding alarm linkage.



**Note:** You must set the detection area and detection schedule, or else there is no alarm anywhere and anytime.

-----End

## Other Alarm

**Step1** Choose  (Parameter Configuration) > Alarm > Other Alarm, The **Other Alarm** page is displayed.

**Other Alarm**

 Save  Refresh

Type	Buzzer
HDD Loss	<input type="checkbox"/>
HDD Full	<input type="checkbox"/>
HDD Error	<input type="checkbox"/>
Video Loss	<input type="checkbox"/>
Network Exception	<input type="checkbox"/>

Step2 Select Type form drop-down box list.

Step3 Check the **Buzzer** checkbox if you want to enable buzzing sound of the NVR device.


Step4 Click **Save** button to take effect.

-----End



## 3.4.4 Device Information

### Firmware Version

You can view the NVR system information, or modify the **Device Name**.

Choose  **(Parameter Configuration) > Device Information > Firmware Version**. The **Firmware Version** page is displayed.

**Firmware Version**

 Save  Refresh

Device Type	<input type="text" value="FN7108E"/>
Device Name	<input type="text" value="FN7108E"/>
System Firmware Version	<input type="text" value="2.1.1.5"/>
Application Firmware Version	<input type="text" value="1.41.3.2"/>
Plug-in Version	<input type="text" value="3.0.0.2"/>
UID	<input type="text"/>


Firmware Version	
Device Type	FN3104W
Device Name	FN3104W
System Firmware Version	2.1.1.6
Application Firmware Version	1.31.1.2
Plug-in Version	3.1.0.2
UID	

Parameter	Description
Device Type	The product type of NVR.
Device Name	The device name is a unique name that you can give to your device to help you identify it. You can change your NVR name.
System Firmware Version	Display the system version of your NVR.
Application Firmware Version	Display the application firmware version of your NVR.
Plug-in version	Display the plug-in version of your NVR.

Click **Save** button to take effect.

## Hard Disk Information

You can configure the Disk Saturation, Pre-record Time for HDD information.

Step1 Choose  (**Parameter Configuration**) > **Device Information** > **Hard Disk Information**.  
The **Hard Disk Information** page is displayed.

Hard Disk Information			
NO.	Type	Status	Available Space / Capacity (G)
1	SATA Hard Drive	Recording	7.12T/7.28T
<input type="button" value="Format Local Disk"/>			
Disk Saturation	Cover The Earliest Record		
Pre-record Time	5s		
Attention: You will irretrievably lose all of the files in your disk if you format it!			

Step2 You can configure the following settings.

- **Format Hard Disk:** Click the **Format Hard Disk** button to initialize the SATA disk for recording.

Note: Initializing the HDD will erase all the data saved on it, please backup the data before formatting hard disk if necessary.

- Disk Saturation: When the disk is saturated, you can choose to stop recording or cycle coverage.
- Pre-record Time: The time you set to record before the event.  
For example, when an alarm triggered the recording at 11:00, if you set the pre-record time as 5 seconds, the camera records it at 10:59:55.

Step3 Click **Save** button to take effect.


-----End

## System Log

Choose  (Parameter Configuration) > Device Information > System Log. The System Log page is displayed.

The operation, alarm, exception and information of the NVR can be stored in log files, which can be searched and viewed at any time.

The Log Type contains Alarm log, System log and Operation log.

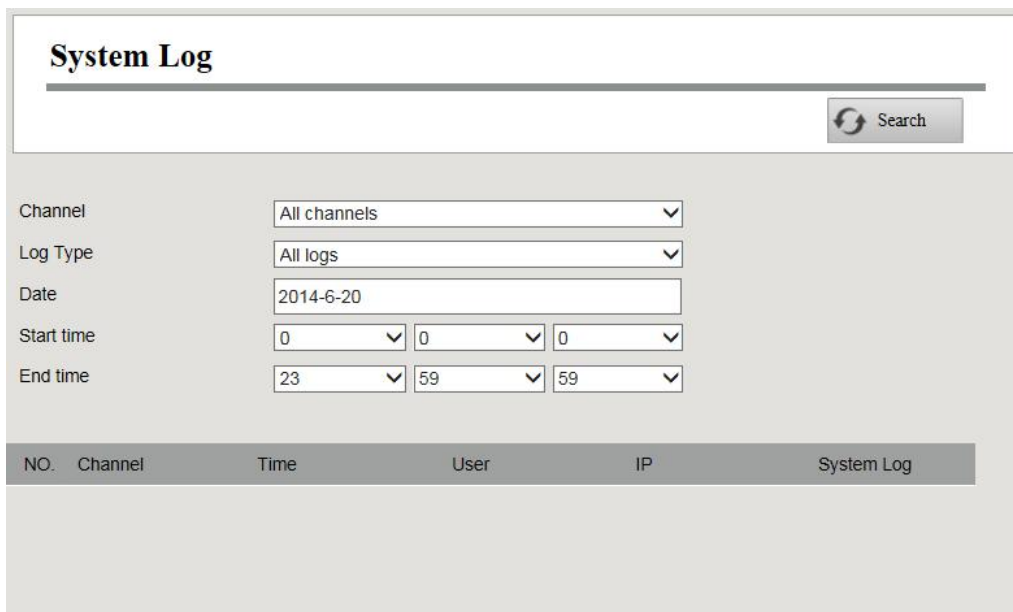

NO.	Channel	Time	User	IP	System Log
-----	---------	------	------	----	------------

[Search Log]


1. Select the Channel, Log Type, Date, Start time and End time.
2. Click the **Search** button to list all matched logs.




## 3.4.5 Basic Settings

### System Time

You can configure the date and time of the NVR.

**Step1** Choose  **(Parameter Configuration) > Basic Settings > System Time**. The **System Time** page is displayed.

**Step2** Configure the system time of the NVR.

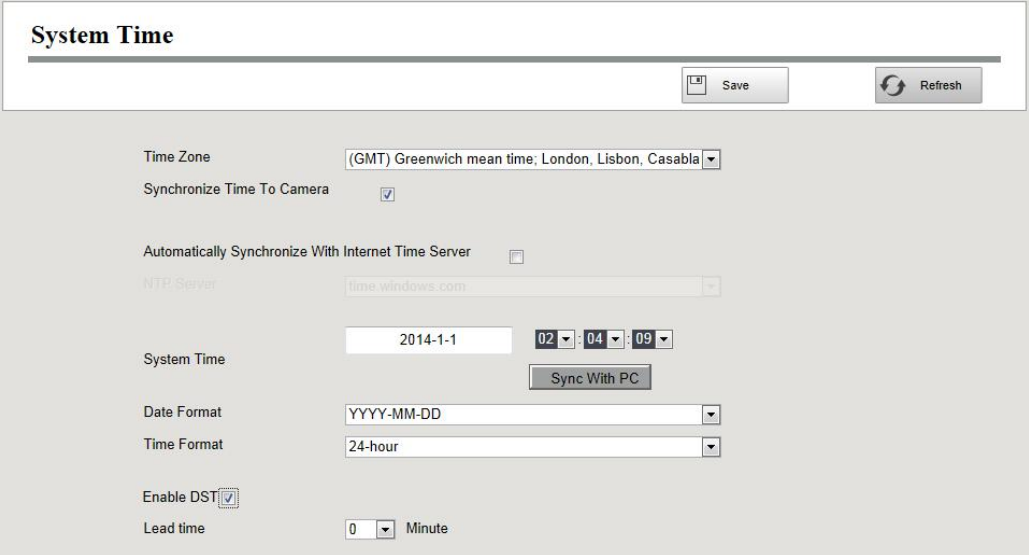

**System Time**

Time Zone: (GMT) Greenwich mean time; London, Lisbon, Casablanca

Synchronize Time To Camera: ☒

Automatically Synchronize With Internet Time Server: ☐

NTP Server: time.windows.com

System Time: 2014-1-1 02:04:09

Date Format: YYYY-MM-DD

Time Format: 24-hour

Enable DST: ☒

Lead time: 0 Minute

Buttons: Save, Refresh, Sync With PC

**Step3** Select the **Time Zone** from the drop-down list.

**Step4** If you check the **Synchronize Time To Camera** checkbox, the default settings of the NVR for the IP camera is applied to the added camera.

**Step5** Configure the system date and time.

- If you check the **Automatically Synchronize With Internet Time Server** checkbox, a Network Time Protocol (NTP) Server can be configured on your NVR to ensure the accuracy of system date / time. Choose the one that is closest to your NVR.
- If you uncheck the **Automatically Synchronize With Internet Time Server** checkbox, configure the following NTP settings.

Parameter	Description
System Time	<p>There are two different ways for the date format to synchronize the date and time of the NVR.</p> <ul style="list-style-type: none"> <li>● input the date and time manually. .</li> <li>● Click <b>Sync with PC</b> button to synchronize the date and time of the NVR system with your computer.</li> </ul>


Date Format	Select the date format from the drop-down list.
Time Format	Select the time format from the drop-down list.

Step6 Click **Save** button to take effect.



-----**End**

## Network

You can configure the network information of the NVR.

Step1 Choose  **(Parameter Configuration) > Basic Settings > Network**. The **Network** page is displayed.

### Network

 Save Refresh

Network Type	DHCP
HTTP Port	88
HTTPS Port	443
IP Address	192.168.1.100
Subnet Mask	255.255.255.0
Default Gateway	192.168.1.1
Primary DNS Server	192.168.8.8
Alternative DNS Server	211.162.78.2
UPNP	Enabled

Step2    Configure the network parameter.

Parameter	Description
Network Type	You can select the network type from the drop-down list box. <ul style="list-style-type: none"><li>● If select the <b>DHCP</b>, the NVR system will automatically obtain an IP address and other network settings from that server.</li><li>● If select the <b>Static IP</b>, you can configure an IP address and other network settings.</li></ul>
HTTP Port	The default value is 88.
HTTPS Port	The default value is 443.
IP Address	You can configure the IP address of the NVR system. <b>Note:</b> The IP of IP cameras, PC and NVR should be in the same network segment and in the same LAN.
Subnet Mask	The subnet mask of the NVR system.
Gateway	The gateway of the NVR system.
Primary DNS Server	The primary DNS server of the NVR system.
Alternative DNS Server	The secondary DNS server of the NVR system.
UPnP	You can use the UPnP function to enable the fast connection of the device to the WAN via a router without port mapping. <b>Note:</b> If you want to enable the UPnP function of the NVR, you must enable the UPnP function of the router to which your NVR is connected.

How to configure the **IP Address**, **Subnet Mask**, **Gateway**, **Preferred DNS Server**, **Alternative DNS Server**, please refer to [4.2 Common Operations](#) > 2. Configure the IP Parameters.

Step3    Click **Save** button to take effect.

-----End

## Channel Selection



The screenshot shows a web interface titled "Channel selection". At the top right, there are "Save" and "Refresh" buttons. Below the title bar, there are two settings: "Automatic channel optimization" with an unchecked checkbox, and "Channel selection" with a dropdown menu currently showing the number "6". At the bottom of the interface, a red text message reads: "The use of radio channel has to meet local laws and regulations."

The default selection is Automatic channel optimization, NVR chooses the channel automatic. Or you can select the channel from the dropdown list. Don't tick Automatic channel optimization when you want to select the channel manually.


Note: Make sure that the radio channel meets local laws and regulations.

-----End



## Email

The system can be configured to send an email to the designated users if an alarm or motion event is detected etc..

Before you configure the Email settings, the NVR must be connected to a local area network (LAN) that maintains an SMTP mail server. The network must also be connected to either an intranet or the Internet depending on the location of the e-mail accounts to which you want to send notification.

Step1 Choose  **(Parameter Configuration) > Basic Settings > Email**. The **Email** page is displayed.

## Email

 Save
  Refresh

Enable E-Mail	<input type="text" value="Enabled"/>
SMTP Server	<input type="text"/> <p>Example: smtp.sample.com/cn/com.cn</p> <p>SMTP server address supports English, numbers and @ _ . -</p>
SMTP Port	<input type="text" value="25"/>
Transport Layer Security	<input type="text" value="None"/> <p>G-Mail only supports TLS at Port 465 and STARTTLS at Port 587 or 25. Hotmail only supports STARTTLS at Port 587 or 25.</p>
Authentication	<input type="text" value="Yes"/>
SMTP Username	<input type="text"/> <p>Example: someone@sample.com</p> <p>The maximum length of the user name is 63, support numbers, letters and symbols @ _ . \$ * -</p>
SMTP Password	<input type="password"/> <p>The maximum password length is 16, including numbers, letters and symbols ~ ! @ # %</p>

Step2    Configure the Email parameter.

Parameter	Description
Enable E-Mail	Enable or Disable the Email function.
SMTP Server	The SMTP Server IP address or host name.
SMTP Port	The SMTP port is usually set as 25. Some SMTP servers have their own port, such as 587 or 465.
Transport Layer Security	Transport Layer Security usually is None.  If you use Gmail, Transport Layer Security must be set to TLS or STARTTLS and SMTP Port must be set to 465 or 25 or 587, which port you choose should be decided by which Transport Layer Security you select.
SMTP Username	The user account of sender's Email for SMTP server authentication.
SMTP Password	The password of sender's Email for SMTP server authentication.
Sender	The Email address of sender.
Receivers Address1/2/3/4	The Email address of user to be notified. you can set 4 receivers

Step3    Click **Save** button to take effect.

Step4    Click **Test** to see if Mail has been successfully configured.


If the test success, you can see the success information, at the same time the receivers will receive a test mail.

-----End

## FTP Settings

The system can be configured to send an picture to the FTP server if an alarm or motion event is detected etc..

Step1 Choose  (Parameter Configuration) > Basic Settings > FTP Settings. The FTP Settings page is displayed.

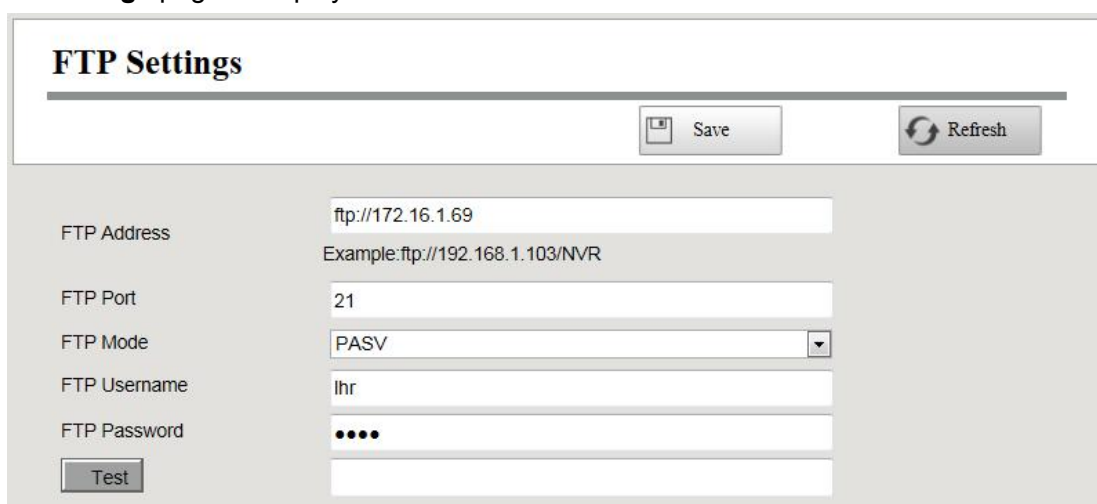

Step2 Configure the FTP parameter.

Parameter	Description
FTP Address	<ul style="list-style-type: none"><li>● If your FTP server is located on the LAN, you can set FTP address as ftp://IP address.(eg.ftp://192.168.1.103/dir).</li><li>● If your FTP server is located on the WAN, you can set FTP address as ftp://domain name/dir.(eg.ftp://test.no-ip.org/dir).</li></ul>
FTP Port	Default port is 21. If changed, external FTP client program must change the server connection port accordingly.
FTP Mode	Here supports two modes: PORT and PASV.
FTP Username	The user account of FTP server.
FTP Password	The user password of FTP server.

Step3 Click **Save** button to take effect.


Step4 Click **Test** to see if FTP has been successfully configured.


If the test success, you can see the success information.

-----End

## DDNS

The Foscam NVR has embedded a unique DDNS domain name when producing, and you can directly use the domain name, you can also use the third party domain name.

Choose  (**Parameter Configuration**) > **Basic Settings** > **DDNS**. The **DDNS** page is displayed.

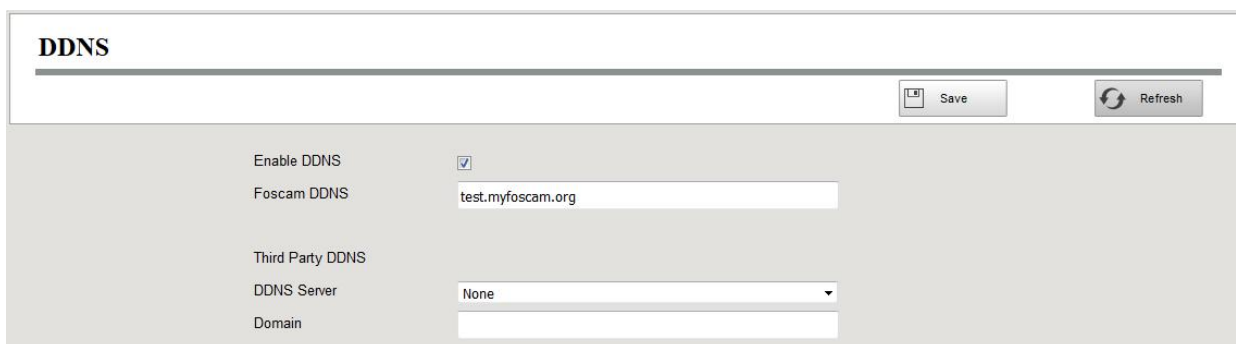

### Note

Here take *test.myfoscam.org* for example.

**Enable DDNS:** Check the DDNS checkbox to enable this feature.

Click **Save** button to take effect. Then you can use *http:// Domain name + HTTP Port* to access the NVR via internet.

**Third Party DDNS:** You can also use third part DDNS, such as *www.no-ip.com*, *www.3322.com*. If you set the third party DDNS, refer to the [4.2 Common Operations](#)

1.Third Party Domain Name Settings.

## OSD

You can configure the OSD (On screen Display) information of the NVR.

Step1 Choose  (**Parameter Configuration**) > **Basic Settings** > **OSD**, The **OSD** page is displayed.

OSD

Save

Refresh

Channel

Channel04

Channel name

FI9900E

Display Channel Name

Yes

Display Time

Yes

☐ Enable Privacy

**Step2** You can configure the follow parameters.

Parameter	Description
Channel	You can select one channel from drop-down box list..
Channel name	<p>You can modify the IP Camera's name.</p> <p>After you modify the name and save the modification, the NVR system synchronizes the channel name to the corresponding IPC device name.</p> <p>The channel name will be shown on the top left of the video image.</p>
Display Channel Name	There are two options: Yes or No. Select Yes and you can see the IP camera's name on the video
Display Time	There are two options: Yes or NO. Select Yes and you can see the system date on the channel video.

**Step3** You can configure the privacy zone settings for the camera. Check the **Enable Privacy** checkbox and it pop up a window. If the IPC device type is MJ or IPC protocol type is ONVIF, the feature is invalid.

**Step4** You can use the mouse to click and drag the text frame on the live view window to adjust the OSD position.

**Step5** Click **Save** button to finish the mask area setting. The mask area will be marked with black.

-----End


## Video Encode


Choose  **(Parameter Configuration) > Basic Settings > Video Encode**. The **Video Encode** page is displayed.



You can configure the encoding scheme parameters of the IP Camera, the NVR system will synchronize your IP camera with encoding scheme.

**Video Encode**

 Save

 Refresh

Channel	Channel03
Stream	Main Stream
Resolution	1280 X 720
Bit Rate	2M
Frame Rate	23


Parameter	Description
Channel	You can select the channel for the IP Cameras.
Stream	You can set the value of Resolution, Bit Rate, Frame Rate, Key Frame Interval when the video was set the main stream.
Resolution	The resolution of the IP Camera. The higher the resolution is,the sharper the video quality is, but also with the increasing stream, which will take up the higher bandwidth.
Bit Rate	Generally speaking, the larger the bit rate is, the clearer video will become. But the bit rate configuration should combine well with the network bandwidth. If the bandwidth is very narrow, and bit rate is large, that will lead to video can not play well.
Frame Rate	Note that a larger frame size takes up more bandwidth. <ul style="list-style-type: none"><li>When the video format is 50Hz, the maximum frame rate is 25 fps.</li><li>When the video format is 60Hz, the maximum frame rate is 30 fps.</li></ul> You should choose a lower frame rate when the bandwidth is limited. Normally, when the frame rate above 15, you can achieve fluently video.

Click **save** button to take effect.


## Storage Location

You can configure the storage location for snap picture and backup record file.

Choose  (Parameter Configuration) > Basic Settings > Storage Location. The **Storage Location** page is displayed.

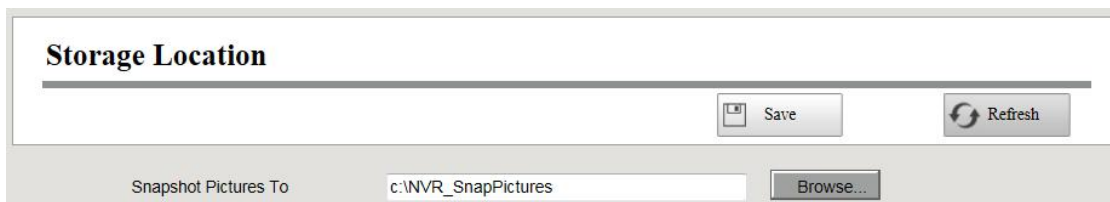


The screenshot shows the 'Storage Location' configuration page. At the top, there is a title bar 'Storage Location' with a 'Save' button and a 'Refresh' button. Below the title bar, there is a label 'Snapshot Pictures To' followed by a text input field containing 'c:\NVR\_SnapPictures' and a 'Browse...' button.

**Snapshot Pictures To:** Click the icon  (Take Snapshot) in the Real time Preview page or Playback page, the snapshot picture will be saved to the Snap Picture Path in the local computer.

## Smart Record

You can enable or disable Smart Record on this page.

When enable Smart Record, NVR can reduce the frame rate automatically to store more recording.

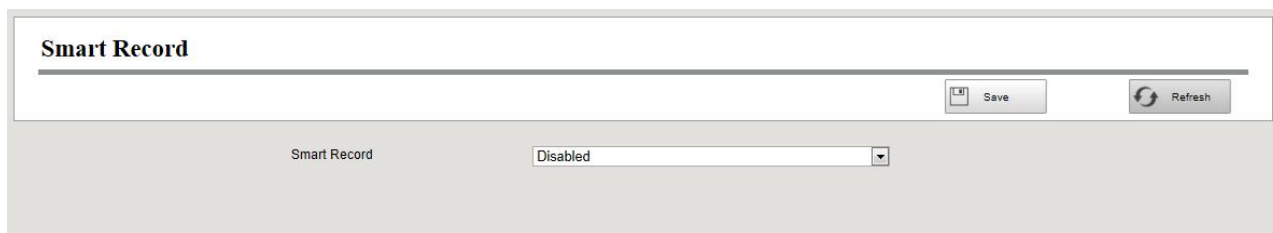

The screenshot shows the 'Smart Record' configuration page. At the top, there is a title bar 'Smart Record' with a 'Save' button and a 'Refresh' button. Below the title bar, there is a label 'Smart Record' followed by a dropdown menu currently set to 'Disabled'.

## 3.4.6 System Management

### User Account

User levels by permission from low to high are visitor, operator, administrator. Different user levels have different operating permission. The default user name of device administrator is admin with no password.

The administrator has the permission to add and delete all users and configure user parameters.

You can add, modify, delete username / password or distribute authority for users.

The valid value range of Username and Password is 1 ~ 20 characters, it contains the English letter, numeric and symbol.

Choose  (Parameter Configuration) > System Management > User Account. The **User**

**Accounts** page is displayed.

NO.	Username	Password	Competence	Enable
1	admin	...	Administrator	<input checked="" type="checkbox"/>
2			visitor	<input type="checkbox"/>
3			visitor	<input type="checkbox"/>
4			visitor	<input type="checkbox"/>
5			visitor	<input type="checkbox"/>
6			visitor	<input type="checkbox"/>
7			visitor	<input type="checkbox"/>
8			visitor	<input type="checkbox"/>

[Add a User]


1. input the Username and Password.
2. Select the user level from the **Competence**.
3. Check the **Enable** checkbox.
4. Click **Save** button to save the settings and the added new user will be displayed on the list.

[Changing Password of Admin]

1. In the **Password** text field, delete the old password, input the new password.
2. Click **Save** button to take effect.

## Import / Export Configurations

You can import or export a configuration file for NVR system.

Choose  (Parameter Configuration) > System Management > Import / Export Configuration. The **Import / Export Configurations** page is displayed.

## Import/Export Configurations

---

Backup is used to save your current settings. It is recommended to backup your configuration before modifying or upgrading firmware.

**Backup Configurations**

Settings can be restored by uploading the backup file.

Path:  **Browse...** **Import**

Note:

1. All current settings will be overwritten when importing a configuration file. If a bad configuration file is uploaded the camera may not work.
2. Do not disturb the update process by turning off the power, the IP camera may be damaged. The loading process takes about 50 seconds, the camera will reboot automatically.

- **Backup Configurations:** Backup is used to save your current settings. It is recommended to backup your configuration before modifying or upgrading firmware. Click **Backup** button and the configuration files of the NVR will be exported for backup. The name of the configuration file name is config.bin.
- **Import:** Click **Browse...**, select the config.bin file from the USB-flash disk and click the **Import** button. The loading process takes about 50 seconds, After having finished the import of configuration files, the NVR device will reboot automatically.



### Note

- Do not disturb the update process by turning off the power.
- All current settings will be overwritten when importing a configuration file. If a bad configuration file is uploaded the NVR may not work.

## Upgrade



Choose **(Parameter Configuration) > System Management > Upgrade**. The **Upgrade** page is displayed.

## Upgrade

---

☐ NVR Upgrade
 

Path:

☒ IP Camera Upgrade
 

Channel	Device Name	System Firmware Version	Application Firmware Version	Result
<input type="checkbox"/>	Channel04	FI9900E	1.11.1.6	2.74.0.11

Path:

### Upgrading NVR

Check the NVR Upgrade, then click the **Browse...** button to choose the upgrade file of the NVR. Click the Upgrade button to upgrade the NVR.

### Upgrading IP Camera

Check the IP Camera Upgrade, then check the channel.


Click the **Browse...** button to choose the upgrade file of the camera. Click the Upgrade button to upgrade the camera.

**Note:** If you want to upgrade the camera in the Kit. Please make sure that the camera is connected to NVR through the cable, so that the camera has always been powered on.

Don't shut down the power during upgrade. After upgrading, you can see the upgrade result.


Your current system version will be displayed on your screen. You may go to the **Parameter Configuration > Device Information > Firmware Version** Page to check for the latest system versions available.

## Patch Installation


Choose  **(Parameter Configuration) > System Management > Patch Installation**. The **Patch Installation** page is displayed.


You can install or install patch of the NVR.

Click **Browse** to select the patch file in the local directory.

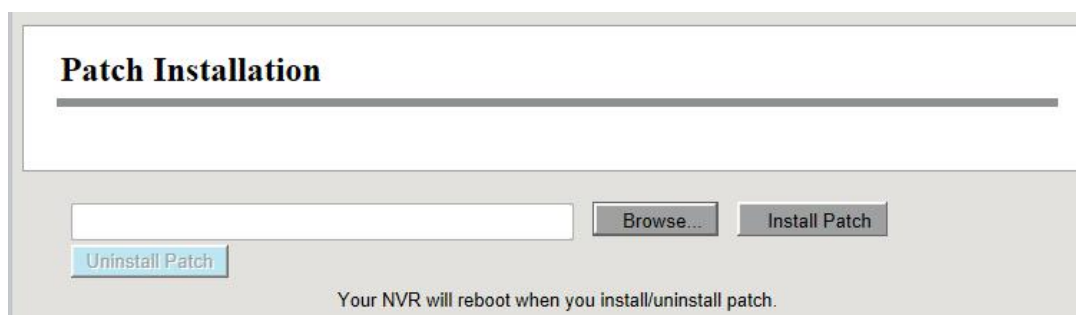

## Factory Reset

Choose  (Parameter Configuration) > System Management > Factory Reset. The **Factory Reset** page is displayed.

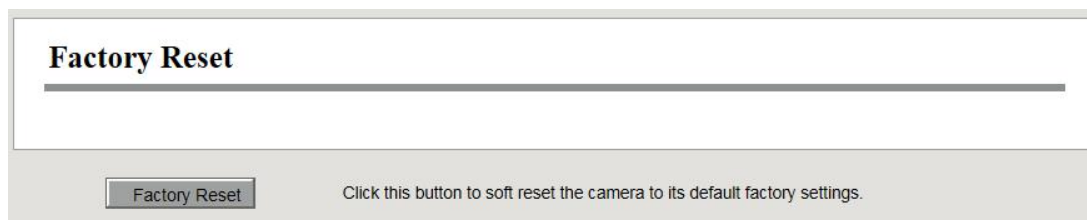


Click **Factory Reset** button, then click **OK** button in the pop-up message box and all parameters will return to factory settings. The NVR device will reboot automatically.

## Reboot

Choose  (Parameter Configuration) > System Management > Reboot. The **Reboot** page is displayed.

Click **Reboot** button, then click **OK** button in the pop-up message box. The NVR system will reboot.

## Auto Restore

Choose  (Parameter Configuration) > System Management > Auto Restore. The **Auto Restore** page is displayed.


## Auto Restore


Date:

Time:  :  :

You can configure the Date and Time. The NVR system will be maintained at the setting time.

## 3.5 Playback

Choose  (Playback), you can play the recording file of the NVR.

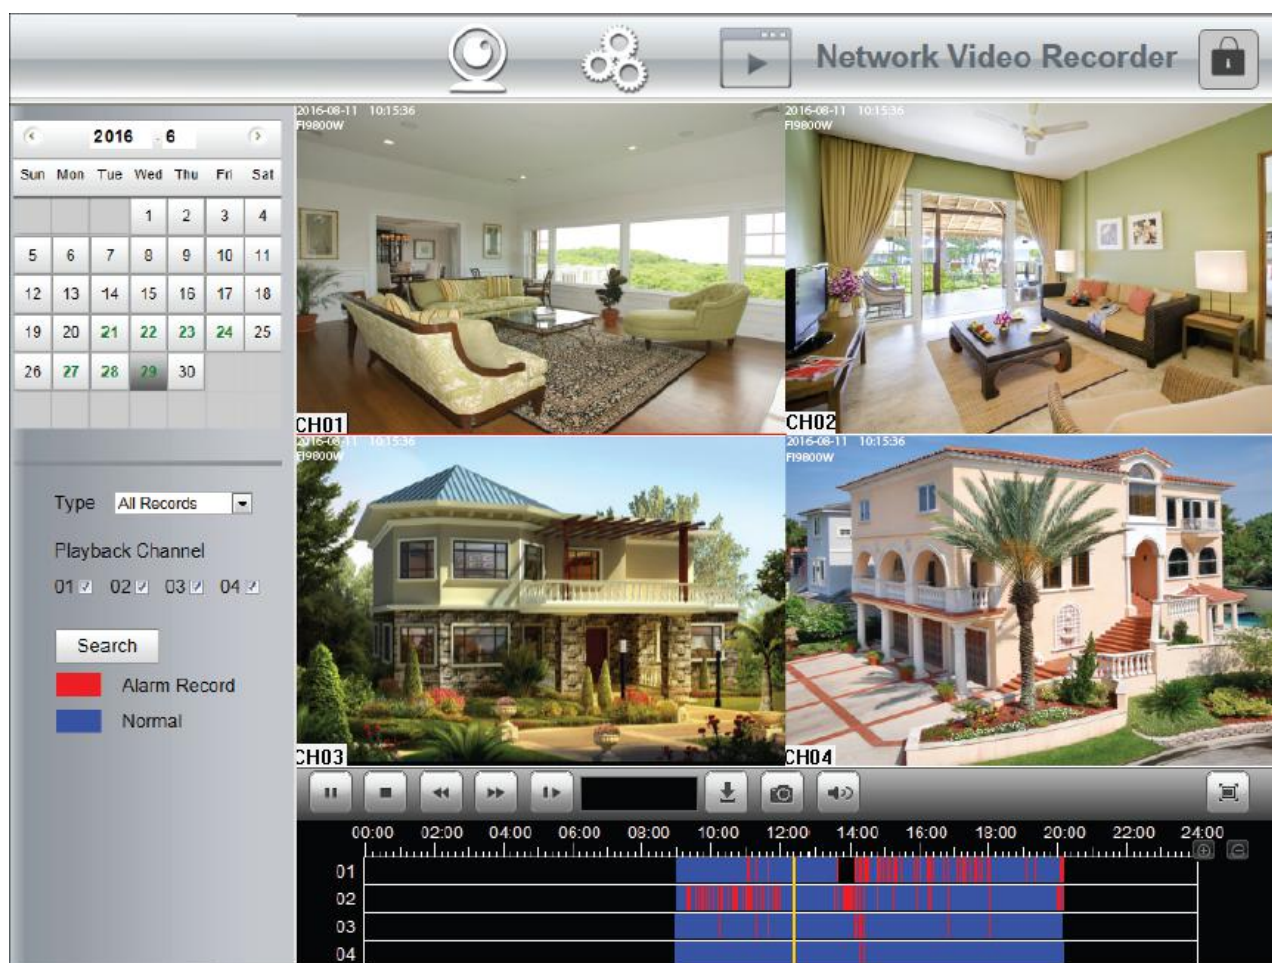










The screenshot displays the NVR playback interface. On the left, there is a calendar for June 2016. Below the calendar, there is a 'Type' dropdown set to 'All Records', a 'Playback Channel' section with checkboxes for 01, 02, 03, and 04, and a 'Search' button. The main area shows four video feeds labeled CH01, CH02, CH03, and CH04. CH01 and CH02 show interior living room scenes, while CH03 and CH04 show exterior views of a house. At the bottom, a timeline from 00:00 to 24:00 is visible, with red and blue bars indicating recording status for each channel.

1. Select a date with recording in calendar.
2. Select the **Record Type**, and check the checkbox from the **Channels**.

3. Click **Search** button to search the matched recorded files. If there are search results, then they will be shown in the time bar area.

4. Manage the recording.



Icon	Description
	Start
	Stop
	Fast backward. The fast backward speed can be 4 times, 8 times, 16 times or 32 times of the normal playing speed. Click this button. The multiple of normal playing speed is displayed in the upper right corner of the playback page. For example, << <b>X4</b> indicates the current fast backward speed is four times of the normal speed.
	Fast forward. The fast forward speed can be twice, 4 times, 8 times, 16 times or 32 times of the normal playing speed. Click this button. The multiple of normal playing speed is displayed in the upper right corner of the playback page. For example, >> <b>X2</b> indicates the current playing speed is twice of the normal speed.
	Slow progress. The slow progress speed can be 1/2 times, 1/4 times, 1/8 times, 1/16 times or 1/32 times of the normal playing speed. Click this button. The multiple of normal playing speed is displayed in the upper right corner of the playback page. For example, >> <b>X1/2</b> indicates the current playing speed is 1/2 times of the normal speed.
	<p>Download. Downloaded files are stored to the local PC. If you need to download the recording files, click the icon. Double click a record, you can see the video of this record.</p> <p>Check the record, then click the Download button to save the recording files to your computer.</p>
	Select the channel, click this button, and you can take a picture of a corresponding channel to the local computer. You can set the storage path, refer to the <b>Web &gt; Parameter configuration &gt; Settings &gt; Storage Location</b> .
	Click this button to enabled/disabled the audio.
	Full screen. Make the playing video maximized. After the video is maximized,



	press <b>ESC</b> to exit full screen.
--	---------------------------------------

## 5. Playback time

You can move the mouse to a specific time axis and click to watch the playback.

Icon	Description
	Zoom-in time axis.
	Zoom-out time axis.

## 4 Appendix

---

### 4.1 HDD Capacity Calculation

This chapter describes how to determine the size of the HDD you need when you install the NVR for the first time.

The NVR adopts the MPEG4/H.264 compression technology and its dynamic range is large.

Therefore, the capacity of the HDD depends on the estimated size of files generated in each channel every hour according to code streams.

Computational formula of HDD Capacity:

Whole HDD Capacity(M)= number of the channels \* time in need (hour) \* spent of HDD Capacity per hour (MB/hour)

The meanings of parameters are as follows:

- Number of the channels: Number of channels where you need to enable recording.
- Time in need (hour): Time you need to record.
- Spent of HDD Capacity per hour

$$\text{Spent of HDD Capacity per hour(M/hour)} = \frac{\text{BitRate}}{8\text{bit}} * 3600(\text{sec ond})$$

You can obtain the **Bit Rate** by using the following methods:

-In the GUI interface, choose **Menu > Settings > Video** , view the value of the **Bit Rate**.

-In the Web interface, choose **Parameter Configuration > Local settings > Encoding Scheme**, view the value of the **Bit Rate**.

[Example]

If you select 4M for the bit rate and select four channels for recording and one week of recording is needed, you can calculate the HDD capacity by using the following formula:

Recording time(hour) =7days\*24 hours=168 hour

$$\text{Spent of HDD Capacity per hour(M/hour)} = \frac{4\text{Mbit}}{8\text{bit}} * 3600 = 1800\text{M/hour}$$

Whole HDD Capacity(M)=4\*168(hour)\*1800 (M/hour) =1209600M,

$$1209600M = \frac{1209600M}{1024} = 1181.25G$$

According to the preceding calculation result, you are advised to buy a HDD of 1.5 TB or above.

## 4.2 Common Operations


### 1.Third Party Domain Name Settings


User can also use third part DDNS, such as [www.no-ip.com](http://www.no-ip.com), [www.3322.com](http://www.3322.com)

Here take [www.no-ip.com](http://www.no-ip.com) for example:

1) Step 1, Go to the website [www.no-ip.com](http://www.no-ip.com) to create a free hostname

Firstly: Login on [www.no-ip.com](http://www.no-ip.com) and click No-IP Free to register.

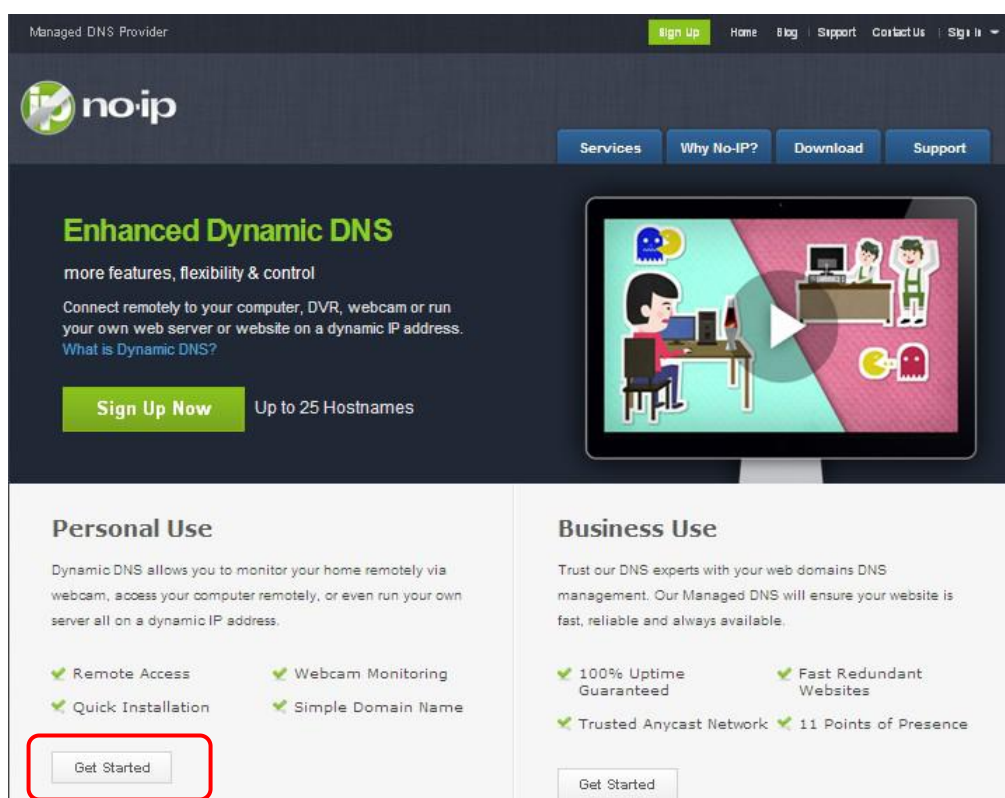


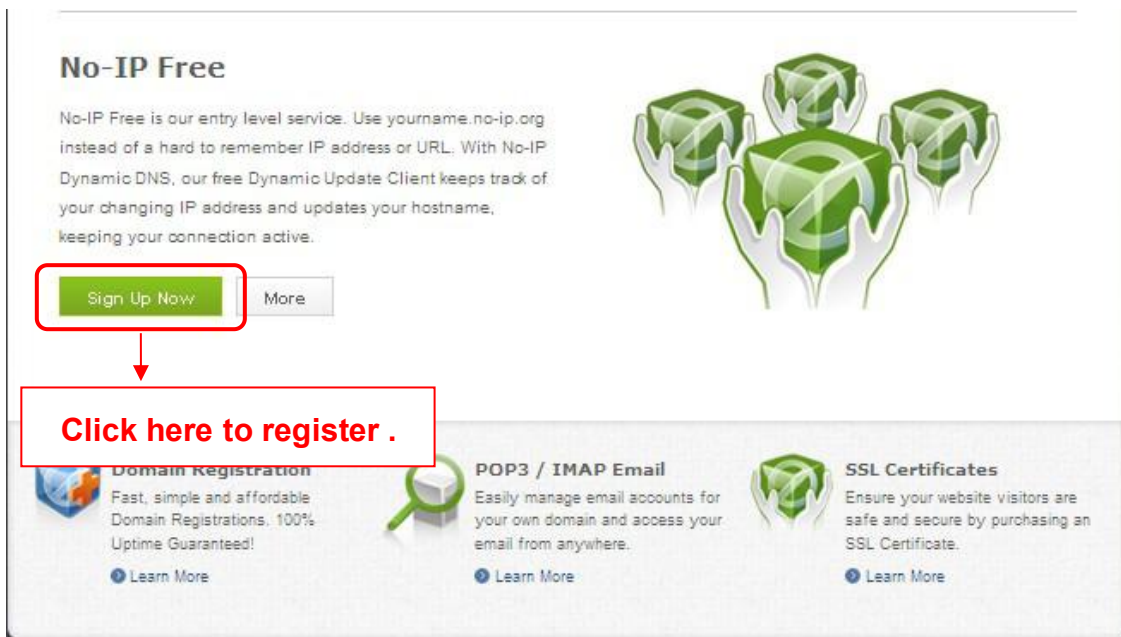


Please register an account step by step according to instructions on [www.no-ip.com](http://www.no-ip.com).

After registration, please login your email which used to register. You will receive an email from website, please click the link to activate your ACCOUNT as indicated in email.

Secondly: Login the link with the registered username and password to create your domain name.

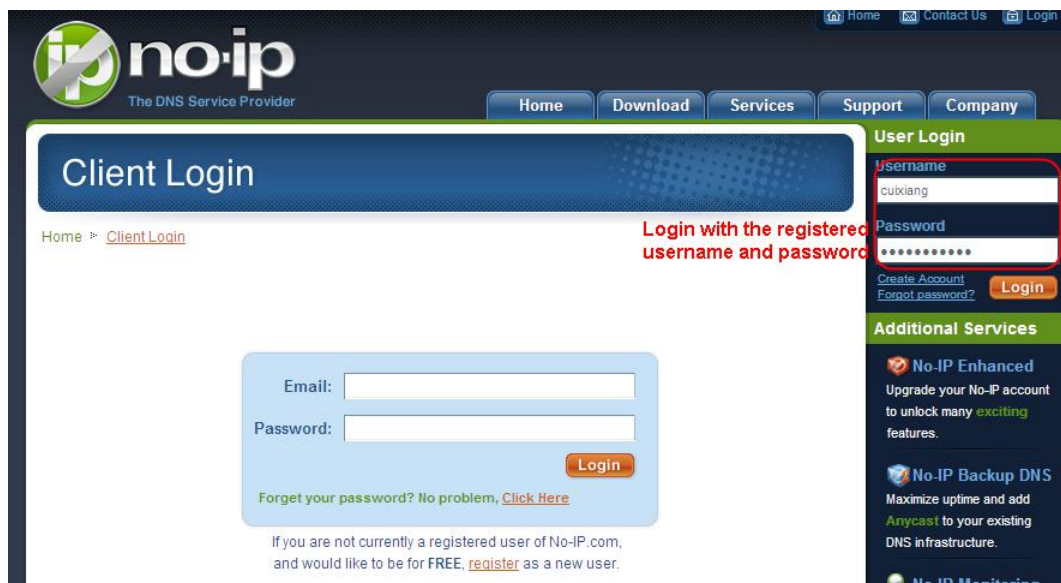

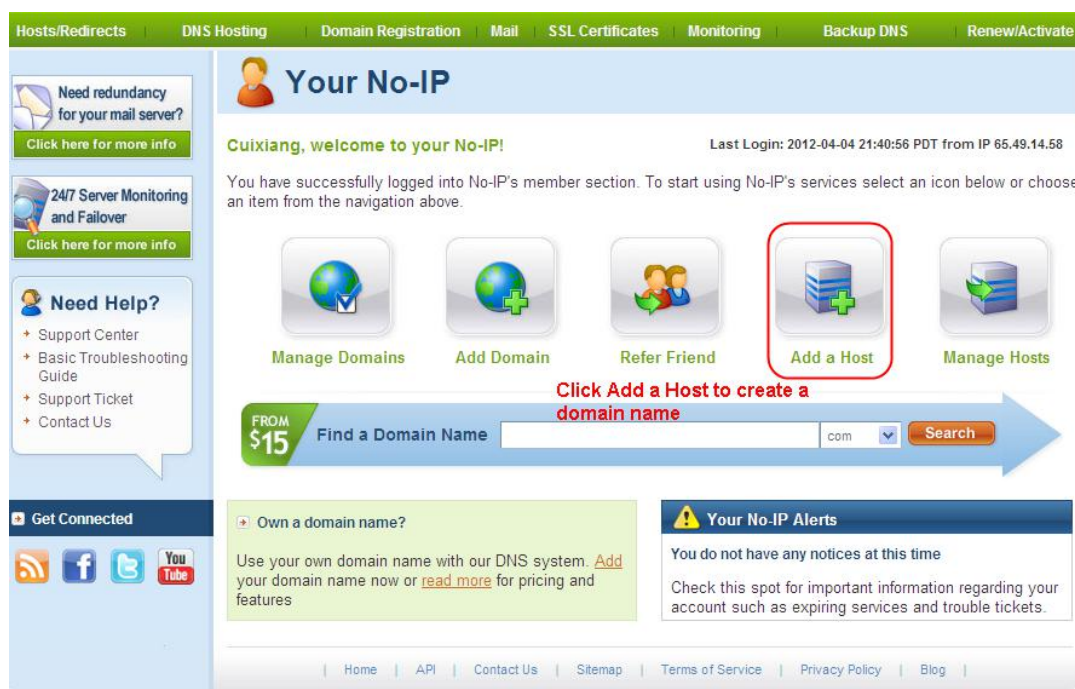

Please create the domain name step by step according to instructions on [www.no-ip.com](http://www.no-ip.com)

Step 2, DO DDNS Service Settings within the NVR

Please set DDNS Settings within the NVR by hostname, a user name and password you've got from [www.no-ip.com](http://www.no-ip.com)

Take hostname ycxgwp.no-ip.info, user name cam, password cam2012 for example.

Firstly, goes to option of DDNS Settings on the administrator panel.

Secondly, select No-IP as a server..

Thirdly, fill cam as DDNS user, fill password cam2012 as DDNS password, fill ycxgwp.no-ip.info as DDNS domain and server URL, Then click save to make effect. The camera will restart and to take the DDNS settings effective.

Fourthly, after the restart, login the NVR, and go to option of Device Status on the administrator panel, and check if the DDNS status is successful.

If failed, please double check if you have input the correct hostname, user name, and password, and try to redo the settings.

#### NOTE :

If you have set Third Party DDNS successfully ,the Domain Name will be invalid. The Third Party DDNS and the Domain Name cannot work at the same time, the last time you configured will take effect.

2) Do port forwarding within the router

Example: The camera's LAN IP address is <http://192.168.8.100:2000> , Media port no. is 9200.

Firstly, login the router, goes to the menu of Port Forwarding or Port Trigger (or named Virtue Server on



**TP-LINK**

Status  
Quick Setup  
WPS  
Network  
Wireless  
**DHCP**  
- DHCP Settings  
- DHCP Client List  
- Address Reservation  
Forwarding  
Security  
Parental Control  
Access Control  
Advanced Routing  
Bandwidth Control

### DHCP Settings

DHCP Server: ☐ Disable ☒ Enable

Start IP Address: 192.168.0.100  
End IP Address: 192.168.0.199

Address Lease Time: 120 minutes (1~2880 minutes, the default value is 120)

Default Gateway: 192.168.0.1 (Optional)  
Default Domain: (Optional)  
Primary DNS: 0.0.0.0 (Optional)  
Secondary DNS: 0.0.0.0 (Optional)

Save

- The subnet mask of the NVR must be the same as the subnet mask in LAN port status. The default gateway of the NVR is the same as the IP address in LAN port status. The preferred DNS and alternative DNS can be the same as the DNS in WAN port status.

**TP-LINK**

Status  
Quick Setup  
WPS  
Network  
Wireless  
DHCP  
Forwarding  
Security  
Parental Control  
Access Control  
Advanced Routing  
Bandwidth Control  
IP & MAC Binding  
Dynamic DNS  
System Tools

### Status

Firmware Version: 3.13.27 Build 130419 Rel.14085n  
Hardware Version: WR840N v1 00000000

#### LAN

MAC Address: 00-0A-EB-13-09-19  
IP Address: 192.168.0.1  
Subnet Mask: 255.255.255.0

#### Wireless

Wireless Radio: Enable  
Name (SSID): TP-LINK\_840  
Mode: 11bgn mixed  
Channel Width: Automatic  
Channel: Auto (Current channel 10)  
MAC Address: 00-0A-EB-13-09-19  
WDS Status: Disable

#### WAN

MAC Address: 00-0A-EB-13-09-1A  
IP Address: 192.168.3.129 Dynamic IP  
Subnet Mask: 255.255.255.0  
Default Gateway: 192.168.3.1  
DNS Server: 192.168.3.1, 192.168.3.1

Release



## 4.3 Specifications

NVR	Model	FN3104W
Video Input	IP Video Input	4-Channel HD IP camera input
Video Output	HD-OUT Output	1 * HD-OUT
	VGA Output	1 * VGA
	Display Resolution	1280 * 720/60Hz, 1280 * 1024/60Hz, 1280 * 720/50Hz, 1280 * 1024/50Hz
Recording	Recording Resolution	720P per channel ( 4ch@720P )
	Record Mode	Manual / Time Scheduled / Motion Detect
	Compression Format	H.264
Playback	Synchronous Playback	4 channels 720P synchronous video playback
	Playback Mode	Fast forward / Fast backward / Frame forward / Slow Play
Network	Ethernet	One 10/100Mbps RJ45 port
	Wireless Standard	IEEE802.11b/g/n
	Wireless Security	WEP, WPA, WPA2
	Network Protocol	IP, TCP, UDP, HTTP, HTTPS, SMTP, FTP, DHCP, DDNS, RTSP, UPnP, ONVIF



HDD	Capacity	Up to 4TB
External Interface	Network Interface	1 * 10/100 Mbps RJ45 port
	USB Interface	1 * USB2.0 interface for mouse and external storage
	Button	1 * Power on/off button, 1* Reset button
Software	Computer Operating System	Microsoft Windows XP, 7, 8, 8.1, 10, Mac OS
	Internet Viewing	Microsoft IE8 and above version, Firefox, Safari
	Smart phone	iOS, Android, 3G/4G Smartphones
Language	Language	14 languages (Chinese, English, French, Hungarian, Czech, Dutch, Greek, Russian, Polish, Spanish, Portuguese, Italian, German, Finland)
Physical and Environmental	Power Supply	DC 12V/2A
	Dimension (L * W * H)	234mm * 234mm * 52mm (9.2in * 9.2in * 2.0in)
	Net Weight	660g (1.5lb)
	Operating Temperature	-10°C ~ 55°C (-4°F ~ 131°F)
	Operating Humidity	20% ~ 85% non-condensing
	Storage Temperature	-20°C ~ 60°C (-4°F ~ 140°F)

	Storage Humidity	0% ~ 90% non-condensing
<b>Camera</b>	<b>Model</b>	<b>FI9800W</b>
Image Sensor	Sensor Type	1/4" CMOS
	Video Quality	720p (1280 * 720)
	Backlight Compensation	✓
Lens	Lens Type	f:4mm, F:2.0
	IR Range	20m (65ft)
	Infrared Mode	Automatic or manual
	View Angle	62°
Network	Ethernet	One 10/100Mbps RJ45 port
	Wireless Standard	IEEE802.11b/g/n
	Data Rate	IEEE802.11b: 11Mbps (Max.); IEEE802.11g: 54Mbps (Max.); IEEE802.11n: 150Mbps (Max.).
	Wireless Security	WEP, WPA, WPA2
	Network Protocol	IP, TCP, UDP, HTTP, HTTPS, SMTP, FTP, DHCP, DDNS, RTSP, ONVIF
Software Features	Video Format	H.264
	Multi-Stream	Dual streams

	Motion Detection	√
	Day/Night	√
Physical and Environmental	Waterproof	IP66
	Net Weight	360g(0.79lb)
	Power	DC12V
	Power Consumption	< 5W
	Dimension (L * W * H)	97mm * 67mm * 64mm (3.8in * 2.6in * 2.5in)
	Certification	FCC, IC, CE, RoHS, IP66
	Operating Temperature	-10°C~ 60°C (14°F ~ 140°F)
	Operating Humidity	10% ~ 80% non-condensing
	Storage Temperature	-20°C ~ 60°C (-4°F ~ 140°F)
	Storage Humidity	0% ~ 90% non-condensing

## 4.4 FAQ

### 1. No image displayed on the monitor after starting up normally.

- Verify the device is connected with the monitor via HD-OUT or VGA cable.
- Verify the connection cable is good.
- Verify Input mode of the monitor is correct.

Please check the input mode of the monitor matches with the output mode of the device (e.g. if the output mode of NVR is HD-OUT output, then the input mode of monitor must be the HD-OUT input).

And if not, please modify the input mode of monitor.

### 2. No record file found in the NVR local HDD, and prompt "No record file found".

- Verify the system time setting is correct.

Choose **Menu > Settings > General** in the GUI interface, and verify the time is correct.

- Verify the search condition is correct.

Choose **Menu > Playback** in the GUI interface, and verify the channel and time are correct.

- Verify the HDD status is normal.

Choose **Menu > About > HDD Info** in the GUI interface, view the HDD status.

### 3. Why recording is not performed after motion detection is enabled?

On the "Motion Detection" page, check whether the following are correctly set:

- Check whether the motion detection channel is correct.
- Check whether a trigger time segment is set.
- Check whether a detection area is set.
- Check whether recording is selected.

### 4. Why can the NVR search the IPC but cannot connect the IPC?

On the "IPC management" page, check whether the following are correctly set:

- Check whether the user name and password for the IPC are correct.
- Check whether the web page port for the IPC is correct.
- Check whether the IPC also supports the protocol selected in the NVR.

### 5. The screen of the display is incomplete.

Confirm the current resolution and check the resolution supported by the display. If the resolution is 1920\*1080, the display needs to support the resolution 1920\*1080.

### 6. Why can't opened web pages on the client be used properly after the NVR server switches to the 1080P mode?

When the NVR server switches to the 1080P mode, some functions can take effect only after the server reboots. In this case, log out of the Web client and log in to it again. In similar cases, for example, changing the IP address and HTTP port of the NVR, you need to log in to the client again.

### 7. Why can't video files be downloaded during video playback or downloaded files cannot be played back properly?

To save consumed resources, the server limits concurrency of video playback and file download. In this case, stop video playback and then download files or play back videos after video files are downloaded.


### 8. Why does the Web client prompt TIME OUT after you enable or disable UPNP in network settings?

In this case, the server restarts some applications. Accordingly, you need to exit the web client and log in to the client again.

### 9. It prompt "Have no right to create directory or file!" after taking snapshot.

When you use Windows7 or Vista, you may be not able to snapshot path because of the security settings of computer.

Please add the NVR as a trusted site to resolve this issue. Open IE browser, Choose **Tools > Internet Options > Security**, Select **Trusted sites** > then click **Sites**, it will pop up the page, as shown in the following figure.

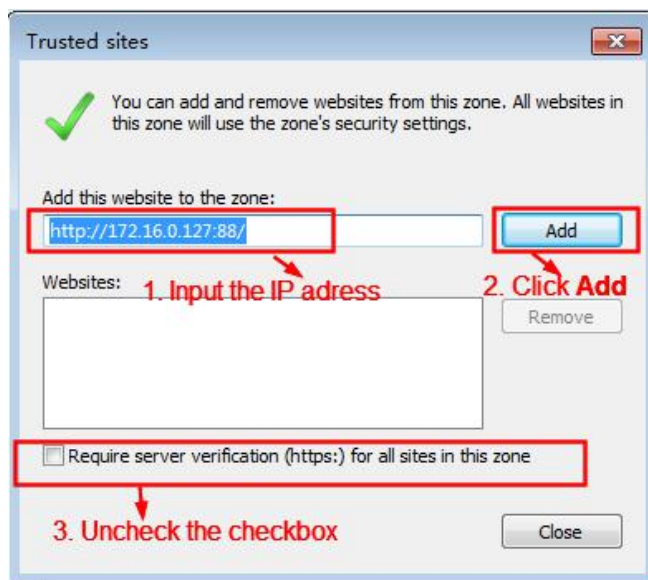

### 10. After the adding of the IPC successfully, the video of the corresponding channel has lost in the live view mode.

Make sure that the IPC display mode is not more than NVR display mode. For example: NVR display mode for the 4 \* 960P, the IPC display mode can not be 1080P.

### 11. Why does the Web client prompt the message "Plugins are not found, Click me to download" or "Find a new Plugins, Click me to download" after installing plug-in?

You need to close the current browser after installing the plug-in, and then open the browser to access the login page.

## 4.5 Glossary

Acronym	Term	Description
DDNS	Dynamic Domain Name Server	Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.
DHCP	Dynamic Host Configuration Protocol	DHCP is a network application protocol used by devices (DHCP clients) to obtain configuration information for operation in an Internet Protocol network.
HDD	Hard Disk Drive	A storage medium which stores digitally encoded data on platters with magnetic surfaces.
HTTP	Hypertext Transfer Protocol	A protocol to transfer hypertext request and information between servers and browsers over a network
PPPoE	Point-to-Point Protocol over Ethernet	It is a network protocol for encapsulating Point-to-Point Protocol (PPP) frames inside Ethernet frames. It is used mainly with ADSL services where individual users connect to the ADSL transceiver (modem) over Ethernet and in plain Metro Ethernet networks.
PTZ	Pan, Tilt, Zoom	PTZ cameras are motor driven systems that allow the camera to pan left and right, tilt up and down and zoom in and out.
NTP	Network Time Protocol	A protocol designed to synchronize the clocks of computers over a network.
NVR	Network Video Recorder	A NVR can be a PC-based or embedded system used for centralized management and storage for IP cameras.

## 4.6 CE & FCC

### Electromagnetic Compatibility (EMC)

**This device complies with FCC Rules Part 15. Operation is subject to the following two conditions.**

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is like to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

### FCC Caution

Any changes or modification not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

### CE Mark Warning



This is a Class A product. In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

## 4.7 WARRANTY

FOSCAM values your business and always attempts to provide you the very best of service.

No limited hardware warranty is provided by FOSCAM unless your **Foscam** product ("product") was purchased from an authorized distributor or authorized reseller. Distributors may sell products to resellers who then sell products to end users. No warranty service is provided unless the product is

returned to an authorized return center in the region where the product was first shipped by FOSCAM or to the point-of-purchase, which may have regional specific warranty implications.

**If you purchase your Foscam product from online store, please contact the point-of-purchase and ask for return / replacement / repair service.**

### **Limited Hardware Warranty**

- The products are warranted to be free from manufacturing defects in materials and workmanship starting from the shipping date of **Foscam**.

This limited hardware warranty does not cover:

- Software, including the software added to the products through our factory-integration system, software that included in the CD, etc.
- Usage that is not in accordance with product instructions.
- Failure to follow the product instructions.
- **Abuse firmware upgrade without the authorized technician's guidance.**
- **Normal wear and tear.**

### **Return Procedures**

- Please read **Foscam** warranty policy & policy of your reseller first before sending items back to point-of-purchase.
- Customer must first contact point-of-purchase to obtain a Return Merchandise Authorization (RMA) number before returning the product. If the product you received is suspected to be defective and the product warranty has not expired, The RMA number will allow your reseller to track your return much easier and help them expedite processing your request.
- After receiving your RMA case number, pack the item(s) very well with the original box and all the original accessories included such as power adapters, brackets, cables, manuals, and driver CD disks.
- Write your RMA number and the return reason (the problem of the product) on the warranty card along with the complete package to send them back.

### **Replacement Services**

- **If customers ask for replacement service, please contact point-of-purchase and follow their policy.**
- Our technicians will inspect all items returned for replacement requests. If the returned product is found in working order, we will return the same item received. However customers shall be



responsible for all shipping & handling charges incurred for getting the units back to customers.

- If returned products are found defective, we will replace the product and assume the shipping cost for sending back the replacement unit to customers.
- If for any reason, we are unable to provide a replacement of the original returned item(s). You will have a choice for a "Substitute" item at the same equal value.
- We do not provide exchange and replacement due to normal hardware upgrade according the market after 14 days after the product is delivered.
- Our technicians will test the product before send out the replacement, any other demand for more than two times replacement for the same product during replacement limit will be rejected.
- **Replaced products are warranted from the balance of the former warranty period.**

### **Warranty Forfeiture**

- Warranty is void if purchase from unauthorized distributor or reseller.
- Warranty is void if trade-mark, serial tags, product stickers have been removed, altered or tampered with.
- Warranty is void for mishandling, improper use, or defacing the product.
- **Abuse firmware upgrade without the authorized technician's guidance.**
- Warranty is void for physical damage, altered, either internally or externally, improper or inadequate packaging when returned for RMA purposes.
- Warranty is void if damage has resulted from accident, dismantle, abuse, or service or modification by someone other than the appointed vendor, souse, fission or the spare part has been over the period of warranty.
- Warranty is void if product is damaged due to improper working environment or operation. (For example, improper temperature, humidity, unusual physical or electrical stress or interference, failure or fluctuation of electrical power, static electricity, using wrong power adapter, etc.)
- Warranty is void if damaged by the use of parts not manufactured or sold by FOSCAM.
- Damage caused by improper installation of third-party products.
- Warranty is void if damaged for irresistible cause, such as earthquake, fire, lightning, flood, etc.
- Product beyond limited warranty.

### **Shipping Fee**

- If products are defective or damaged under normal use or operation in the replacement limit, distributors or resellers are responsible for the shipping cost the product back to customers, customers should assume the shipping cost send the product to the point-of-purchase.
- During replacement limit, if customers ask for replacement due to the product does not fit for

customer's personal expectation, customers should responsible for both shipping fee.

- Customers shall be responsible for both shipping fee if their product beyond the replacement limit but still in warranty limit.

### **Repair Service Out Of Warranty**

- FOSCAM provide extra repair service for product that out of warranty, it is chargeable. The total fee contains device cost and service fee. Device cost (including accessories) is the standard uniform price provide by FOSCAM.
- Different region may have different service fee, please contact the point-of-purchase to confirm that before you ask for this service.
- Our technicians will quote the total price after detect the product, If customers refused to repair after the quotation, customers need pay for the test fee, \$3.5/hour. If agree with the quotation, test will be free.
- Repaired product out of warranty will obtains 3-month warranty from the date of the product back to customers.

### **Limitation of Liability**

- **Foscam** is not responsible for other extra warranty or commitment promised by resellers, if your reseller promised some extra commitment or warranty; please ask for written documents to protect your rights and interests.
- **Foscam** does not offer refunds under any circumstances. Please contact the point-of-purchase and follow their refund / return policy.
- **Foscam** shall not be liable under any circumstances for any consequential, incidental, special or exemplary damages arising out of or in any connection with this agreement or the products, including but not limited to lost profits, or any claim based on indemnity or contribution, or the failure of any limited or exclusive remedy to achieve its essential purpose or otherwise. Purchaser's exclusive remedy, as against **Foscam**, shall be the repair or replacement of defective parts. If **Foscam** lists a product on its website specification in error or that is no longer available for any reason, **Foscam** reserves the right to explain it without incurring any liability.

**All rights reserved. FOSCAM and the Foscam logo are trademarks of ShenZhen FOSCAM Intelligent Technology Limited., registered in the U.S. and other countries.**

## 4.8 Statement

You are advised to be cautious in daily life, keep personal account information carefully, do not share personal account easily. Change passwords of your account and equipment periodically, and upgrade equipment firmware to strengthen security consciousness.

Our company makes no warranty, implied or otherwise, that this product is suitable for any particular purpose or use. You need to abide by the relevant laws and regulations of the use restrictions when using products. Our company takes no responsibility of illegal activities by using our products.

Our company takes no responsibility of the loss by force majeure, such as failure or faults of telecom system or the Internet network, computer viruses, malicious attacks of hackers, information damage or loss, and faults of computer system.

My company does not need to take any responsibility of the special, incidental or corresponding loss by the products of our company or any software provide by our company, including but not limited to operating loss, profit or purpose. The company only takes the responsibility applicable to national and local legal requirements.

Our company takes no responsibility of the loss caused by the following at ant time:

- 1) loss of purchases;
- 2) loss of intangible property damage, such as data, programs;
- 3) loss of compensation claimed by third-party customers.

Delete images, format the memory card or other data storage devices does not completely remove the original image data. You can restore deleted files from discarded the storage device by commercial software, but which will potentially lead to personal image data used maliciously by others. The privacy of the data security belongs to user responsibility, the company takes no responsibility.

Parts mentioned in this statement should not be understood by the configuration description of the product purchased by the customer, the product configuration must accord to the specific models purchased by the customer.

Without the prior written permission of my company, all the contents of relevant operating instructions manual affiliated to the product must not be reproduced, transmitted, transcribed or stored in a retrieval system, or translated into other languages.

Our company will reserve the right to improve and modify the product and corresponding manuals.

The company reserves the right of final interpretation on our products.

## 4.9 Obtaining Technical Support

While we hope your experience with the NVR is enjoyable and easy to use, you may experience some issues or have questions that this User's Guide has not answered.

If you have problem with device, please first contact reseller for solving the problems.

If our reseller cannot provide service, please contact our service department:

[tech@foscam.com](mailto:tech@foscam.com)

### **FCC Radiation Exposure Statement:**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

↵

### **Radio Apparatus Containing Digital Circuits (ICES-003)**

Radio apparatus containing digital circuitry which can function separately from the operation of a transmitter or an associated transmitter shall comply with ICES-003. In such cases, the labeling requirements of the applicable RSS apply, rather than the labeling requirements in ICES-003.

↵

### **User Manual Notice for Licence-Exempt Radio Apparatus**

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

(1) this device may not cause interference, and

(2) this device must accept any interference, including interference that may cause undesired operation of the device.

*Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement*

This Class A digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe A est conforme à la norme NMB-003 du Canada.

The device has been tested and compliance with SAR limits, users can obtain Canadian information on RF exposure and compliance

*Le présent appareil est conforme*

Après examen de ce matériel aux conformité aux limites DAS et/ou aux limites d'intensité de champ RF,