


# GF12 User Menu

2011.07.22



Controls .....	2
Home Key .....	2
Menu Key.....	2
Backspace Key .....	2
Search Key .....	2
On/Off Key.....	2
Touch Screen Interface.....	2
Screen Interface .....	2
Widgets.....	2
Status Bar .....	2
Status Icon .....	3
Application List .....	4
Settings .....	4
Language Settings.....	4
Screen Brightness Settings .....	6
Screen Timeout Settings.....	7
SD card Mount / Un-Mount .....	9
USB Connections .....	11
Wi-Fi Settings.....	12
Web Browsing .....	14
Task Manager .....	15
File Manager.....	16
Music Player .....	18
Video Player.....	19
Email Setup.....	20
Clock Settings .....	23
APK Installer .....	24
FCC Warning: .....	26

# Controls

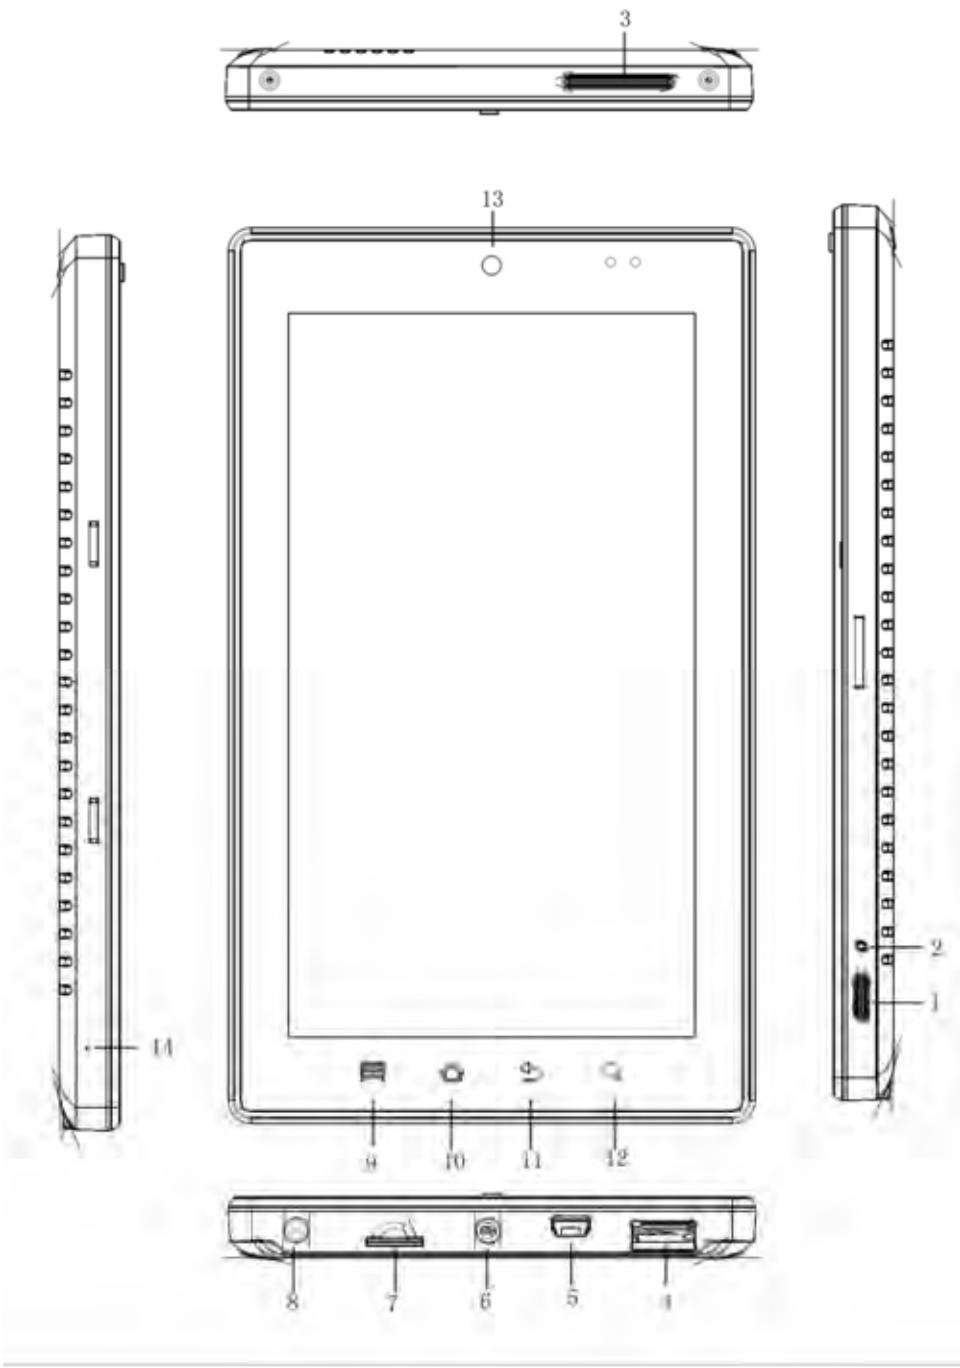

1. Power

2. Reset

3. Speaker	9. Menu Key
4. USB Host	10. Home Key
5. Mini USB	11. Backspace Key
6. Head Phone	12. Search Key
7. Micro SD Slot	13. Camera
8. DC-In Jack	14. Microphone

## **Home Key**

In the option program, menu or webpage, press home key to return to the main interface.  
Press & hold the home key and it will show your recently opened applications.

## **Menu Key**

Press the Menu key to open the sub-menu for this page.  
Press the menu key again to close the sub-menu.  
Press & hold the menu key in an application to open/close the virtual keyboard.  
When the screen is locked, press the Menu key to enable the screen. Press it again to unlock the screen.  
(If you have set the unlock mode, you can unlock the screen based on your settings.)

## **Backspace Key**

Press the BACKSPACE key to return to the previous operation or previous screen.

## **Search Key**

Press search to enter search input interface.

## **On/Off Key**

Turn ON

Press and hold Power ON/OFF key to turn on the tablet pc.

Turn OFF

Press ON/OFF key to lock the screen and enter sleep mode.

# Touch Screen Interface



## Screen Interface

Main screen interface is similar to a computer desktop.

Place application shortcuts and widgets here.

Touch and "swipe" to go to next page, move things on the screen, etc.

## Widgets

### Add Widgets:

Press the "Menu Key". The "Add to Home screen" menu will pop up offering you options to add widgets, change wallpaper, etc.

### Deleting Widgets:

Press and hold down the widgets on the screen, then a trash can icon will pop up on the right side of screen. Drag the widgets to the trash can to delete widgets.

## Status Bar

Pay attention to the status bar on the top of screen. If icons show on the left, it is a

reminder that applications are running.

## Status Icon

The icons in the status bar at the top of screen give information about i7 and convince to access your device.

Icon	Description
 SD Card preparing	It shows that a SD card is preparing to be used.
 SD Card but removed	It shows that a SD card has been unmounted but still in the device.
 Removed SD Card	It shows that there is not any SD card in the device.
 Downloading	It shows that there are files downloading.
 Clock activated	It shows that the clock is activated.
 Silent mode	It shows that the device has been mute.
 Wi-Fi connected	It shows that Wi-Fi has been connected.
 Battery status	It shows the battery status.
 Charging battery	It shows that the battery charging.
 Battery empty	It shows that the battery empty.
 Refresh Media	Press this icon to refresh the media files in device and SD card.
 ScreenShorts	Press this icon you can get a capture of the current page.
 Backspace Key	Press this icon to return to the previous operation or previous screen.
 Menu Key	Press this icon to open/close the sub-menu for that page.
 Volume down	Press this icon to decrease the volume.
 Volume up	Press this icon to increase the volume.

# Application List

Click the Application List icon to show the application library.



Touch an application icon to start it up.

Press and hold the application icon the trash can icon will pop up on the right side of the interface. Drag the icon to trash can to delete the icon.


Press the “Menu Key” on this page one sub-menu will pop up, then click “Add Applications” to recover the icon you delete.

Press the “Home” key in the application list interface to return to the home screen.

# Settings

## Language Settings

Touch: “Settings” > “Language & keyboard” > “Select language” > Choose Language

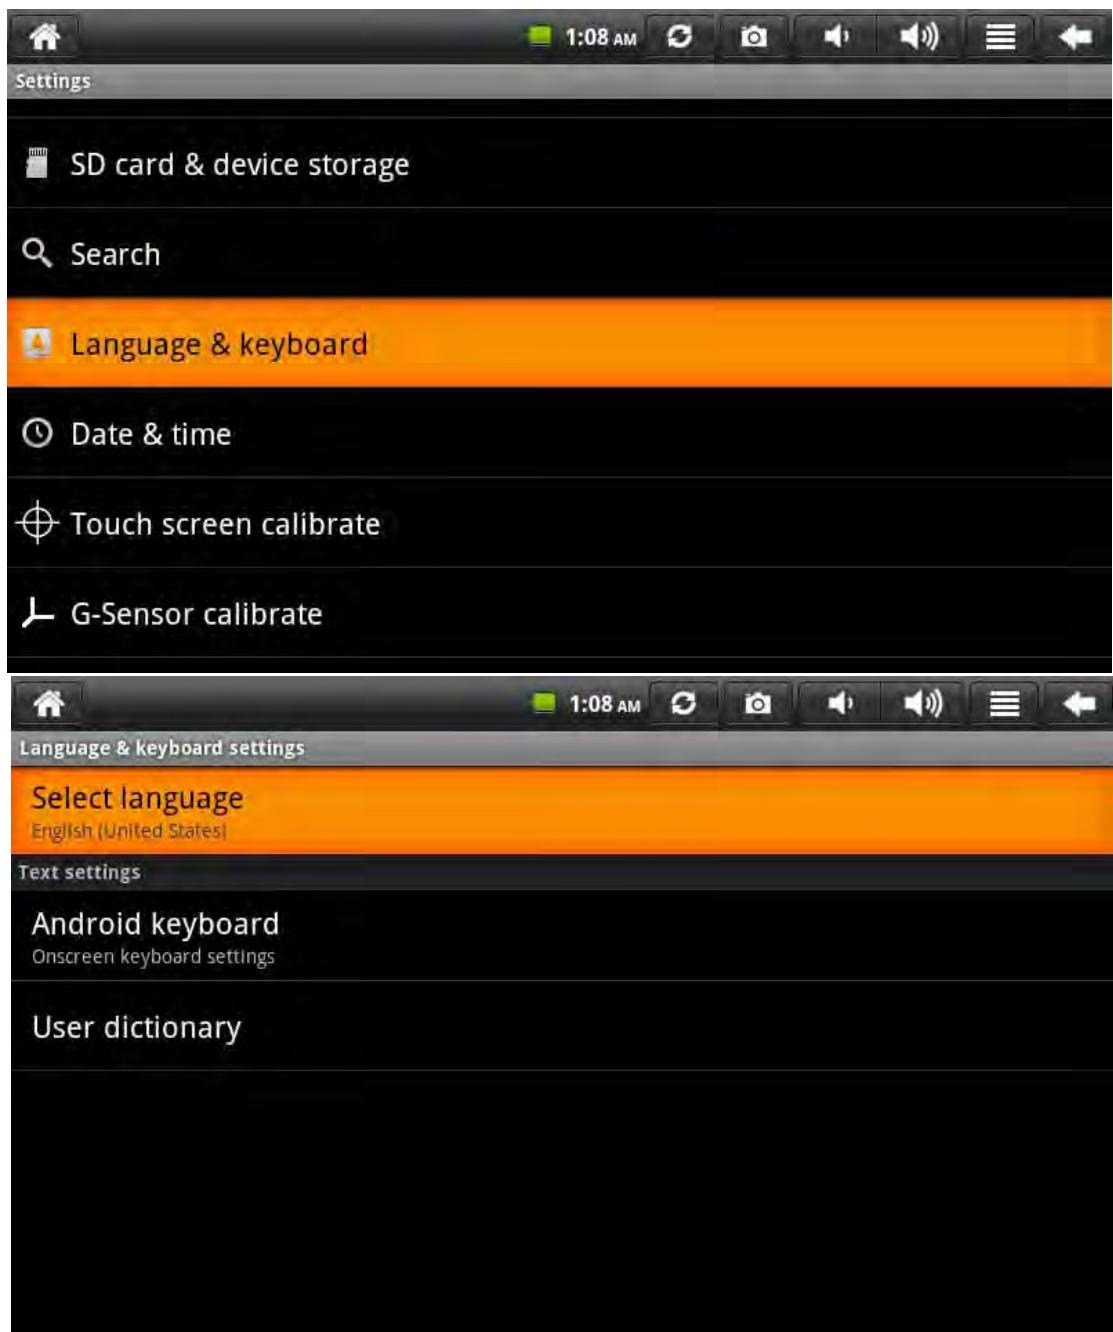




## Screen Brightness Settings


Touch: "Settings" > "Display" > "Brightness" > Adjust slider and hit "OK"




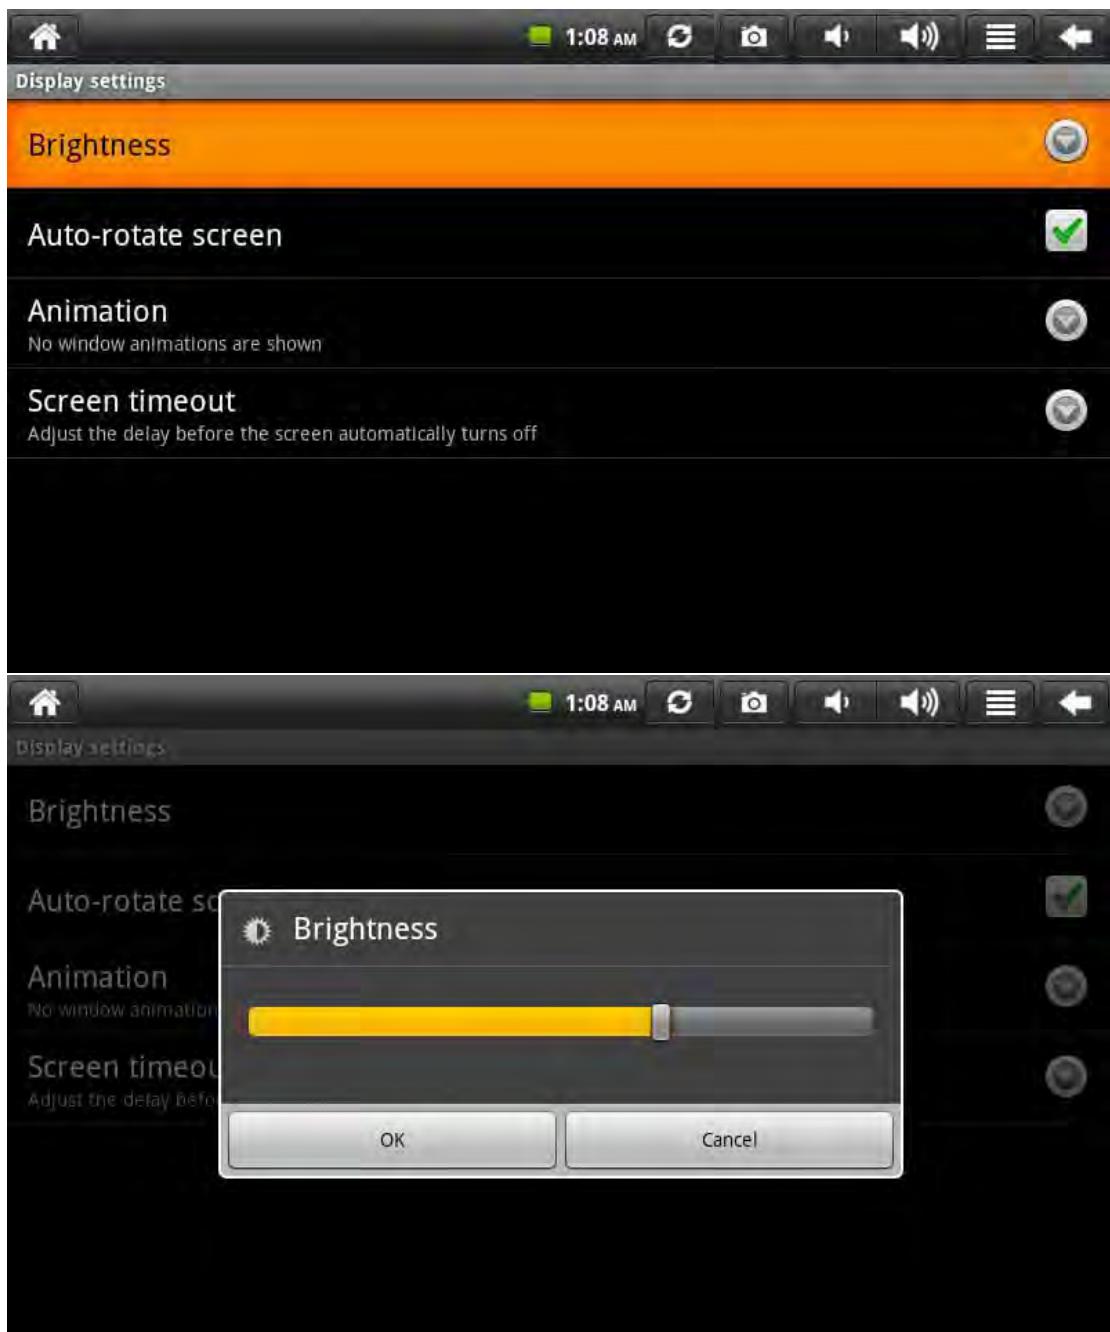

## Screen Timeout Settings

Touch: "Settings" > "Display" > "Screen Timeout" > Choose Time

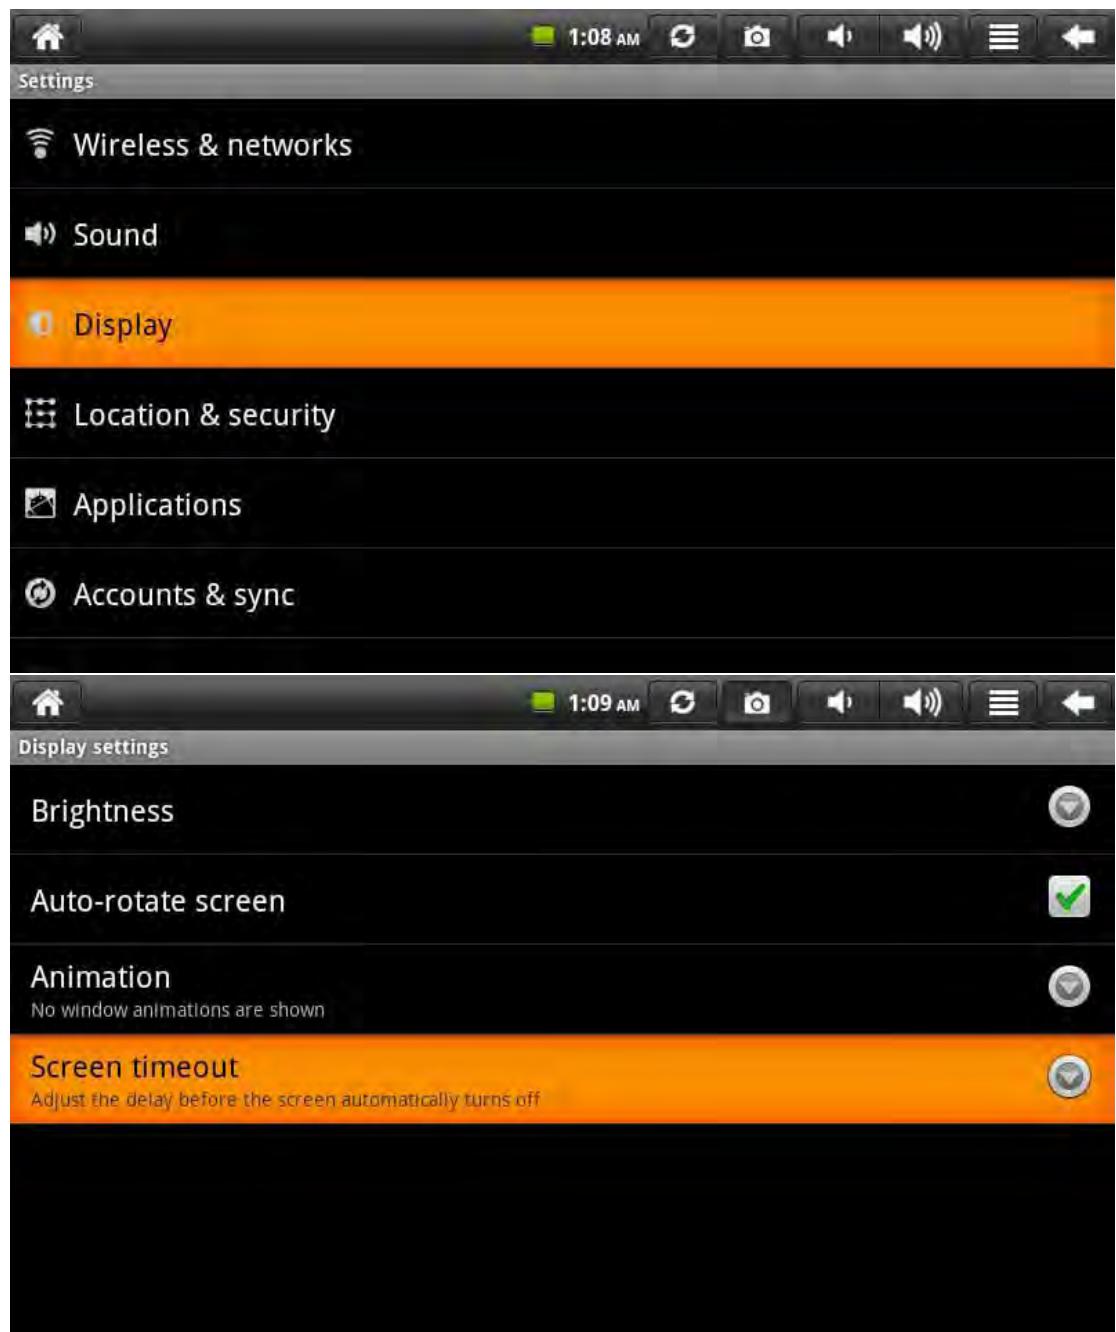


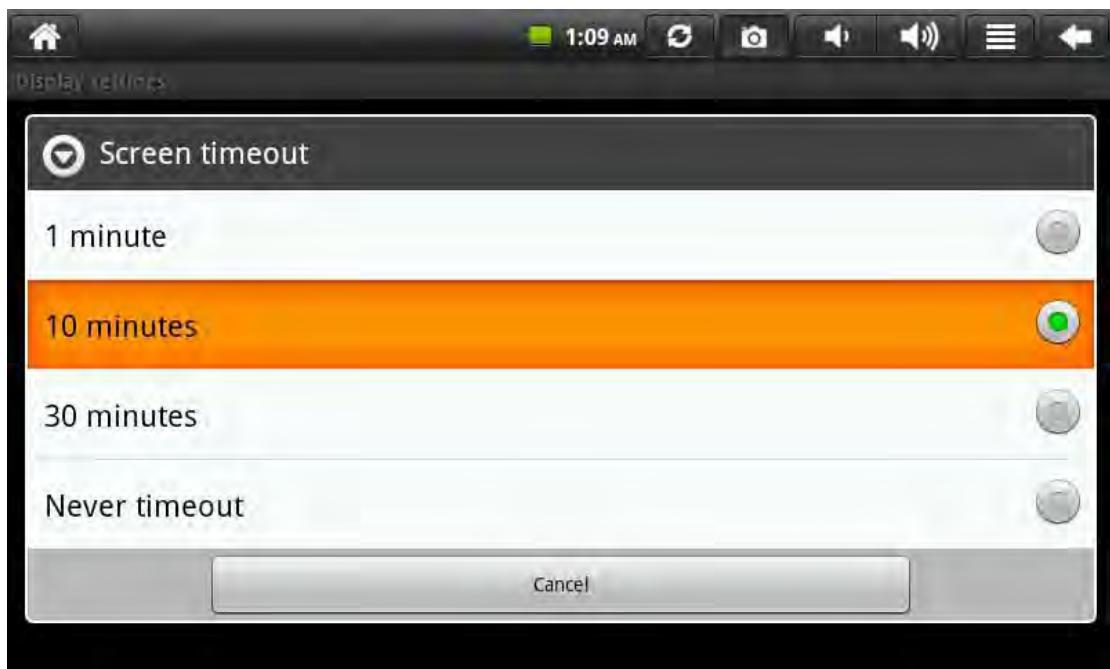

## SD card Mount / Un-Mount

After inserting a Micro-SD card to the tablet, do the following to install the card.  
Touch: "Settings" > "SD Card & Tablet Storage" >"SD1"> "Mount/Unmount SD1"



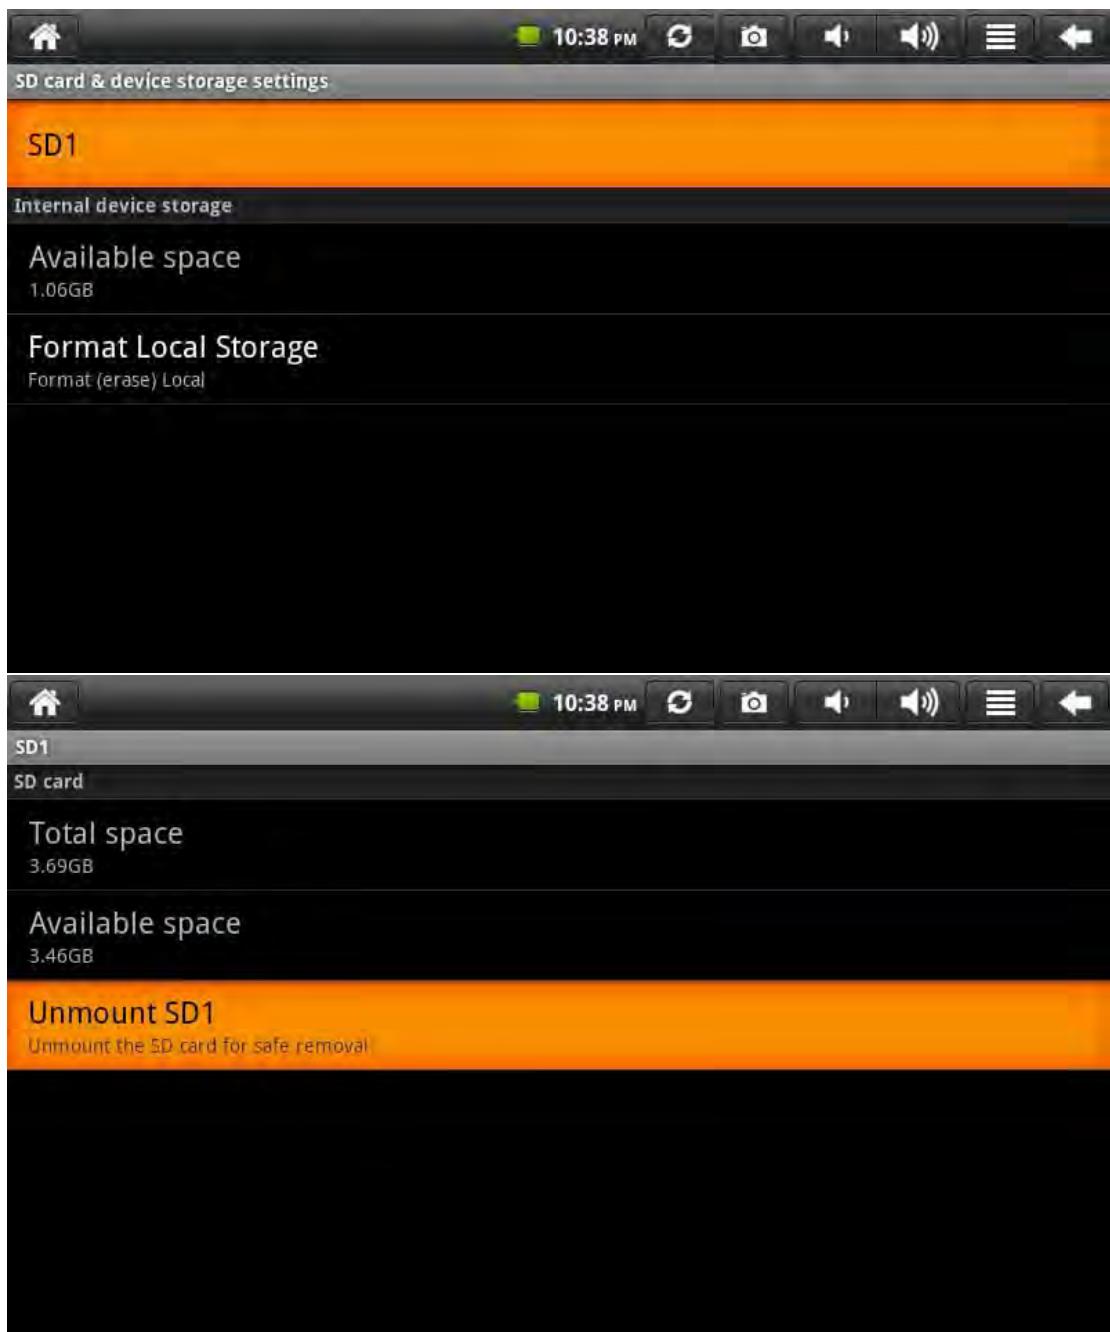

The Settings screen will also show how much memory is available on the card as well as on the internal memory.


After mounting a card, the selection will change to “Unmount SD card”  
To uninstall the card select this option.

## USB Connections




To connect a USB device such as a flash drive, plug it into Mini USB Slot, the USB connection icon will be displayed, however you must first install the device.

First, touch the status bar and swipe down to open the dialog box, and you will see the following picture:

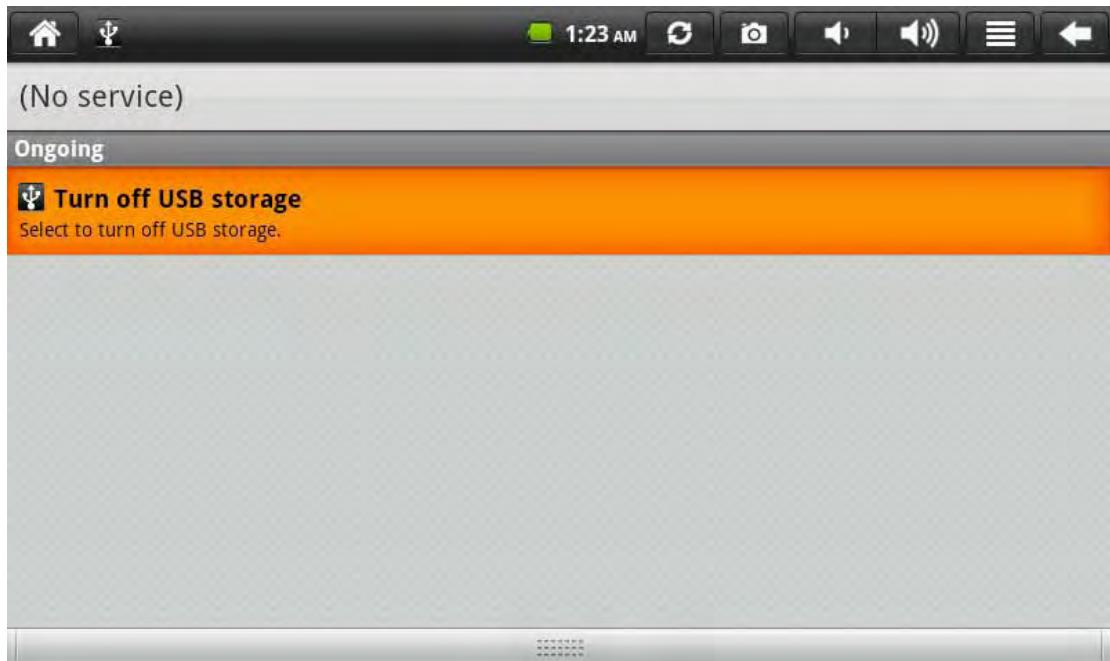

Click on the button: "Turn on USB Storage", then you will see the following picture:

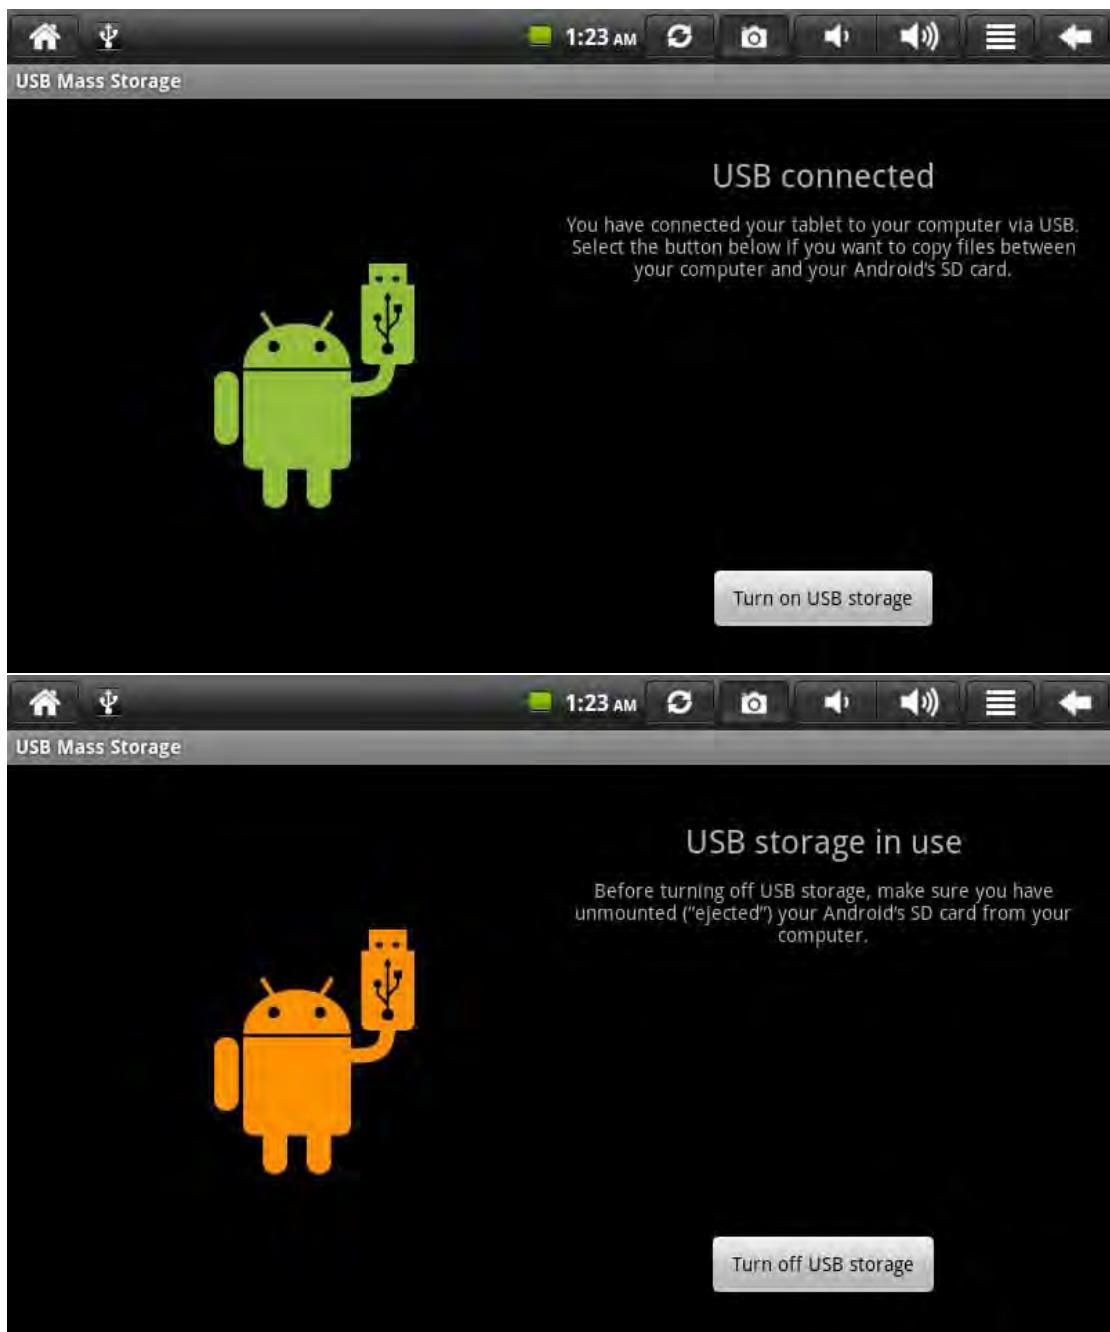


Then you can switch the USB storage on or off.


## Wi-Fi Settings

Touch: "Settings" > "Wireless & Networks" > "Wi-Fi Settings"

- 1 Click Wi-Fi (turn on Wi-Fi). Tablet will start searching for available networks.
- 2 Choose available network, input password and click "Connect".

For advanced settings, touch menu icon at right of status bar and choose "Advanced"

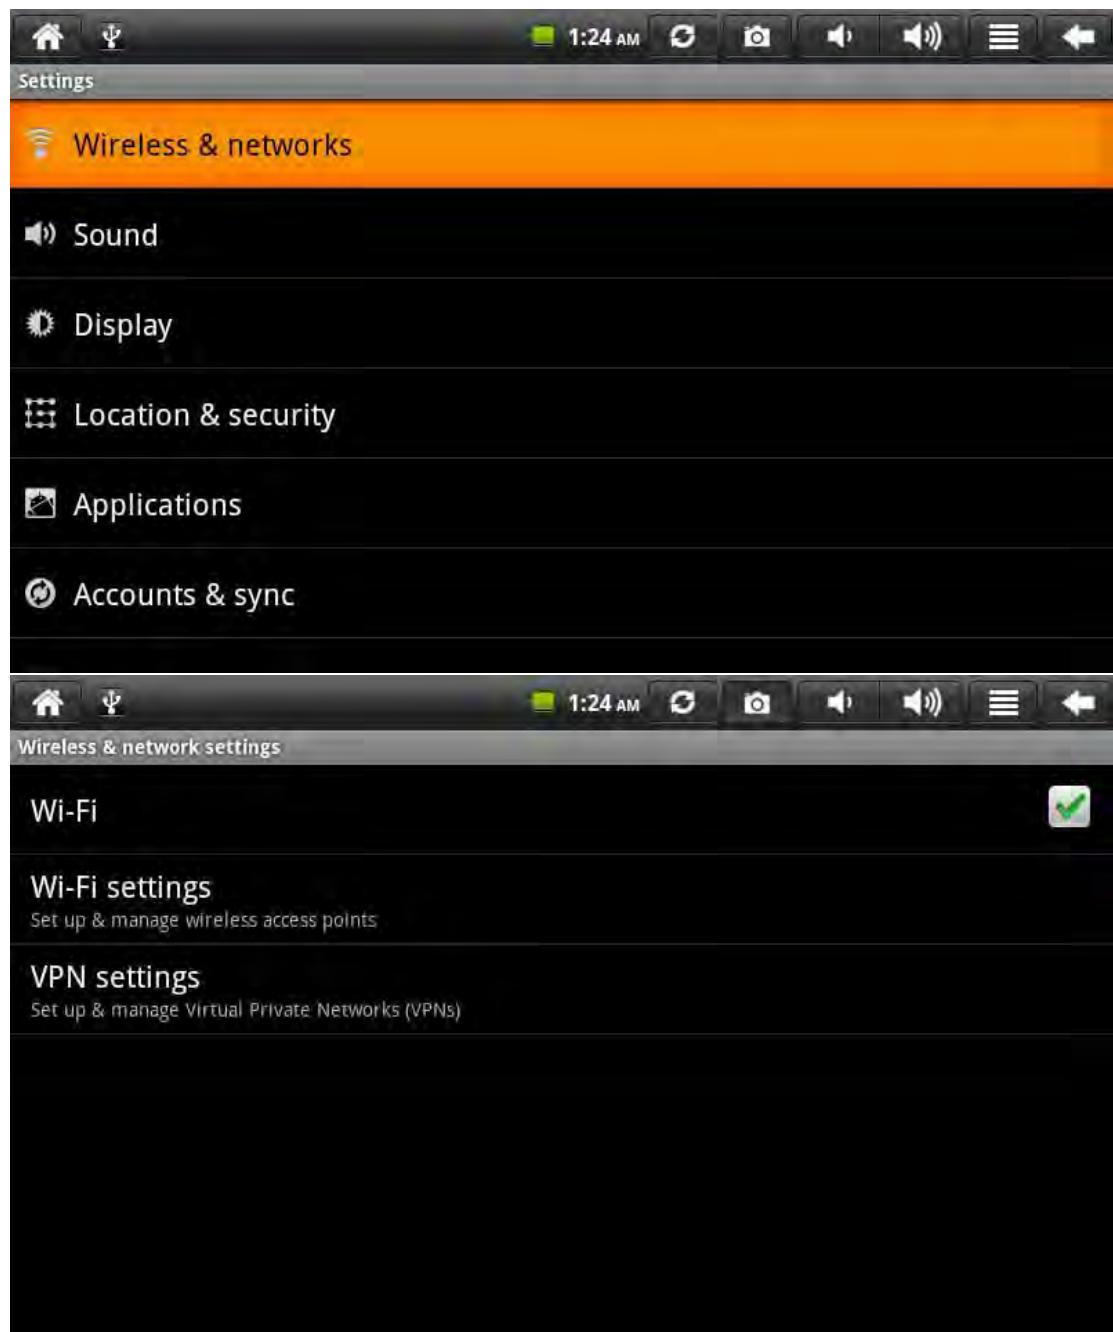

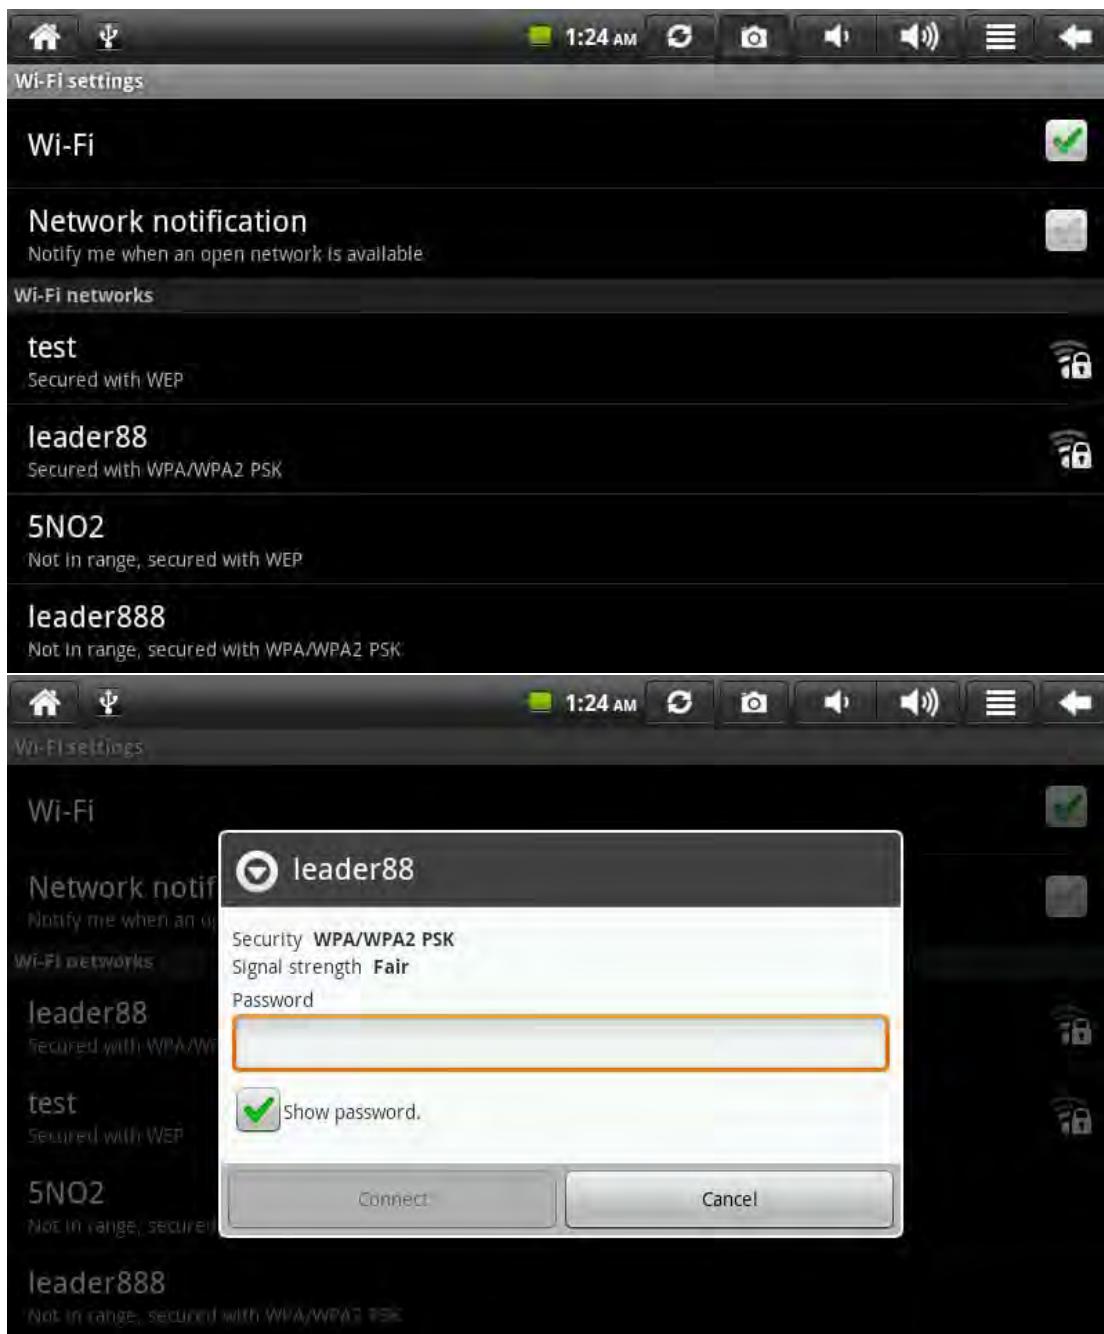

## Web Browsing

Before using the internet browser, please make sure Wi-Fi service is turned on.

Click the "Browser" icon to open the browser.

Click on the menu icon at the right side of the status bar for browser commands.

**New Window:** Opens a new browser window.

**Bookmarks:** You can also just tap on the bookmark icon on the top right of each page. Here you can see your list of bookmarks. Just tap on one of them to open it in the current window.

**New Windows:** When you have several windows currently opened, tap on

**Windows** to display the list of currently open windows. Tap on one to open it

**Refresh / Stop:** Will stop loading the web page, if it is currently loading. Will refresh the current web page once it has stopped loading.


**Forward:** Will go to the next page that you browsed.

**More:** Will give you access to other options (**Find on page** to search for a specific word on the current page, **Select text** to select a section of text to put into the system clipboard -- which you can then paste into another application such as an e-mail by holding down your finger in a text field), **Page info** to get information about the current web page, **Downloads** to view the list of items you have downloaded from the Internet. Go to **Home > Files > Downloads** to see the actual files that are saved on your device. Settings to adjust the way the browser works.

Please note that some Web features requiring special plug-in software or Active X controls may not work in this special version of the Web Browser.




## Task Manager

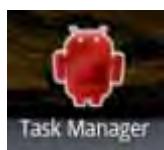

In the application list screen, click the “Task Manager”

The Task Manager shows all the running applications and how much r **Refresh** using.


Click on an application to end it (kill it) or  
uninstall it.

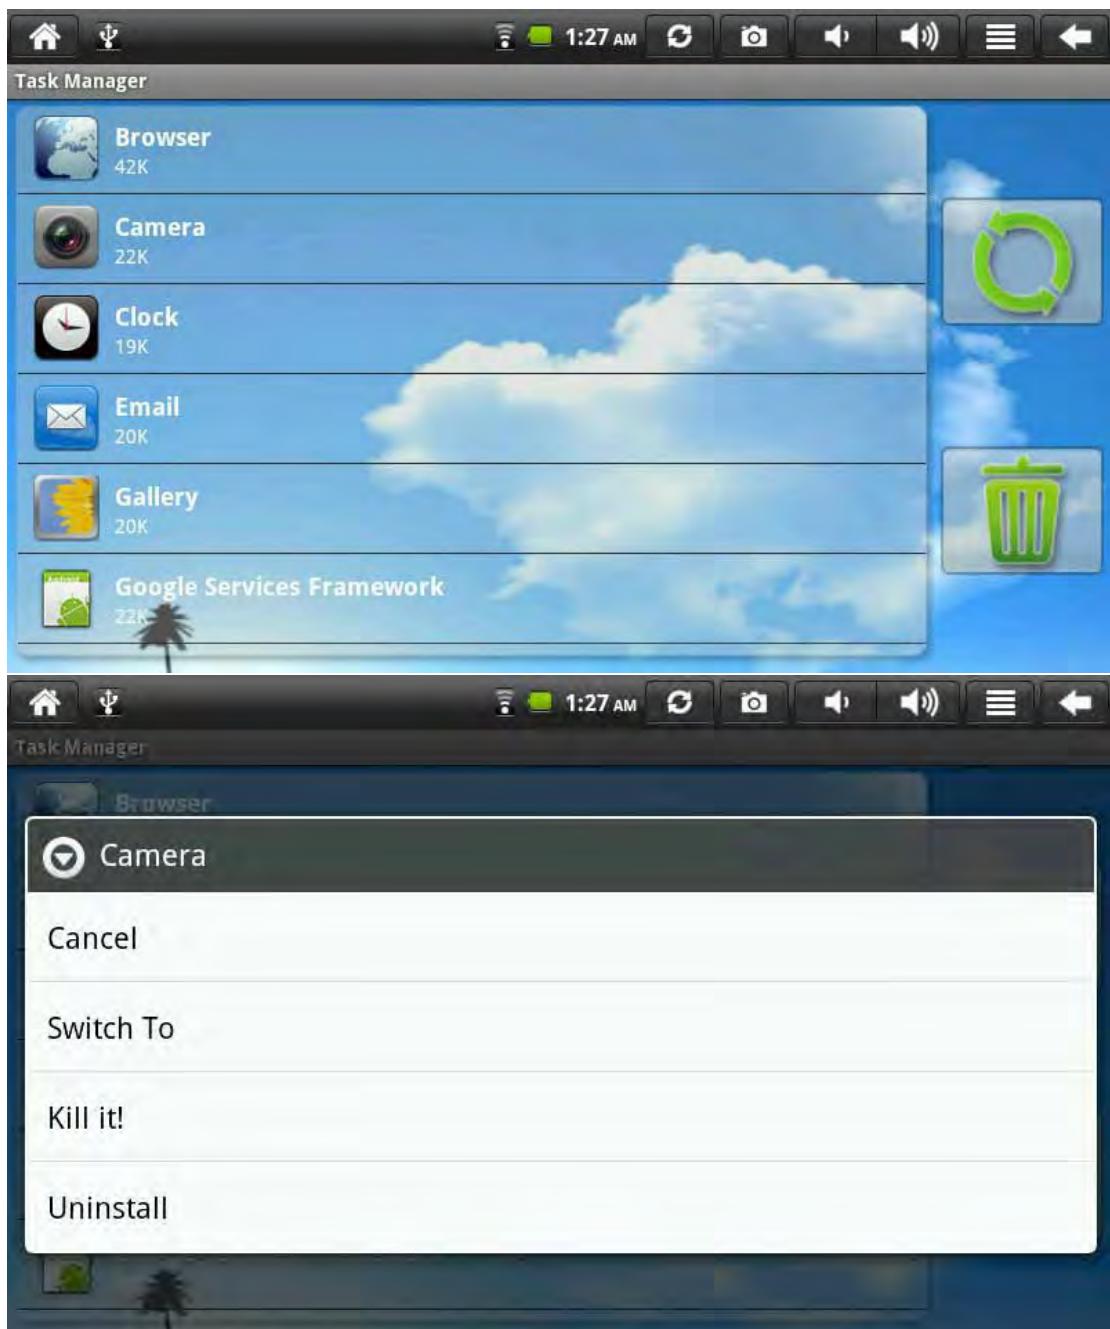

## File Manager



In the application list screen, click the “File Manager”  
Use the file manager to organize files

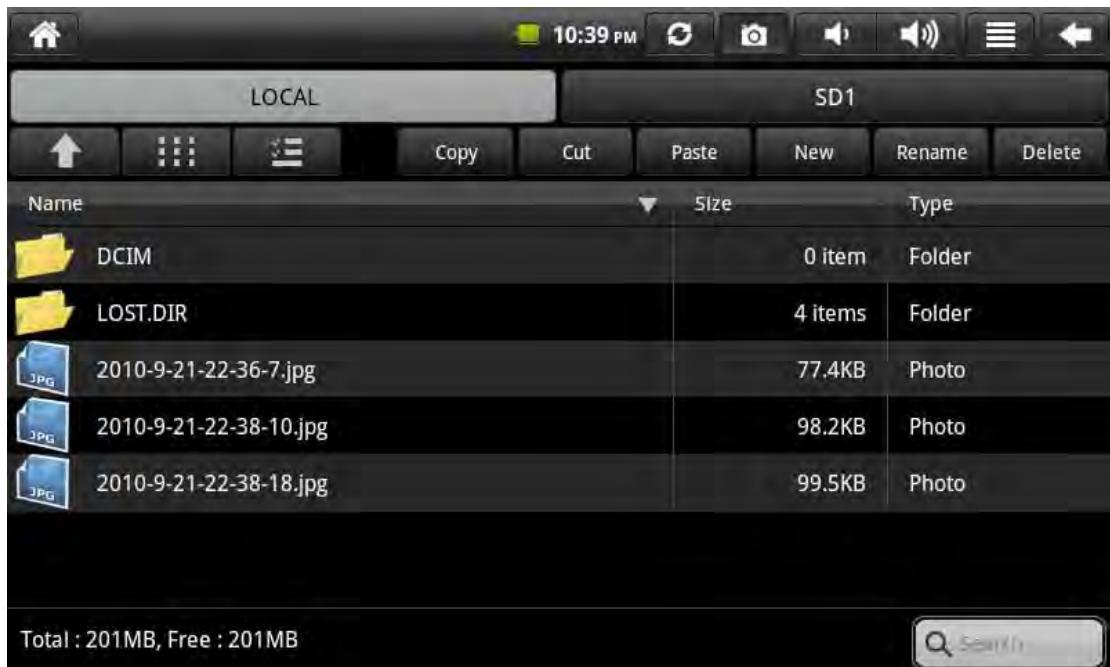

The icons across the top are for navigating to files on the LOCAL and SD1 to move up and down within the folders.

There is some bottoms menu on the top of screen.


Icon	Description
	Press this icon to return the previous page.
	Press this icon to change the interface as a desktop.
	You can select multiple files after you click this icon
	Press this icon to copy the files you selected.
	Press this icon to cut the files you selected.
	Press this icon to paste the files you copied or cut.
	Press this icon to create a new folder on the current page.
	Press this icon to rename the file you selected.
	Press this icon to delete the files you selected.

# Music Player



In the application list screen, click the "Music"

Press the icon "Music" you will see all the music files will be show on the screen. (If you cannot see the music on the list, please press the icon)

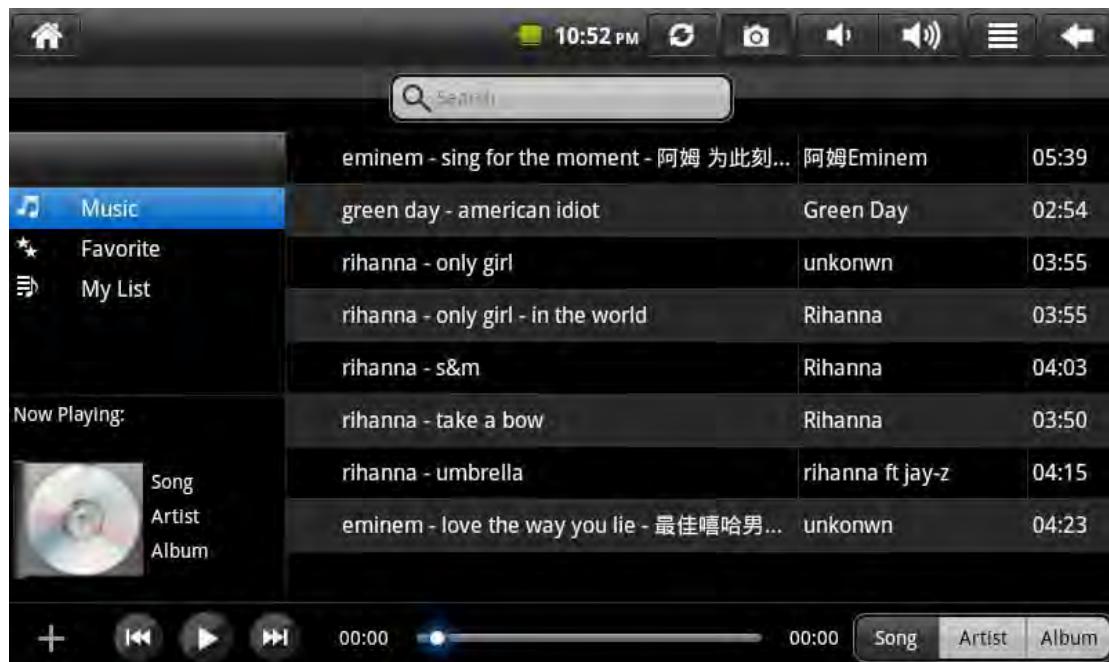

Icon	Description
	Play/Stop the music
	Previous song
	Next song
	Create a new play list
	Show the songs as file name
	Show the songs as artist's name

<input type="checkbox"/> Album	Show the songs as album's name
--------------------------------	--------------------------------

When you playing the music you will see the following picture:



## Video Player



In the application list screen, click the “Video Player”

Press the icon “Video Player” you will see all the video files will be show on the screen. (If you cannot see the video on the list, please press the  icon)




1. Select SD card source or USB
2. Select video from list
3. Video screen will appear and video will start.


## Email Setup




In the Application List screen, click the “EMAIL”  
Input email address and password. Click “Next”.

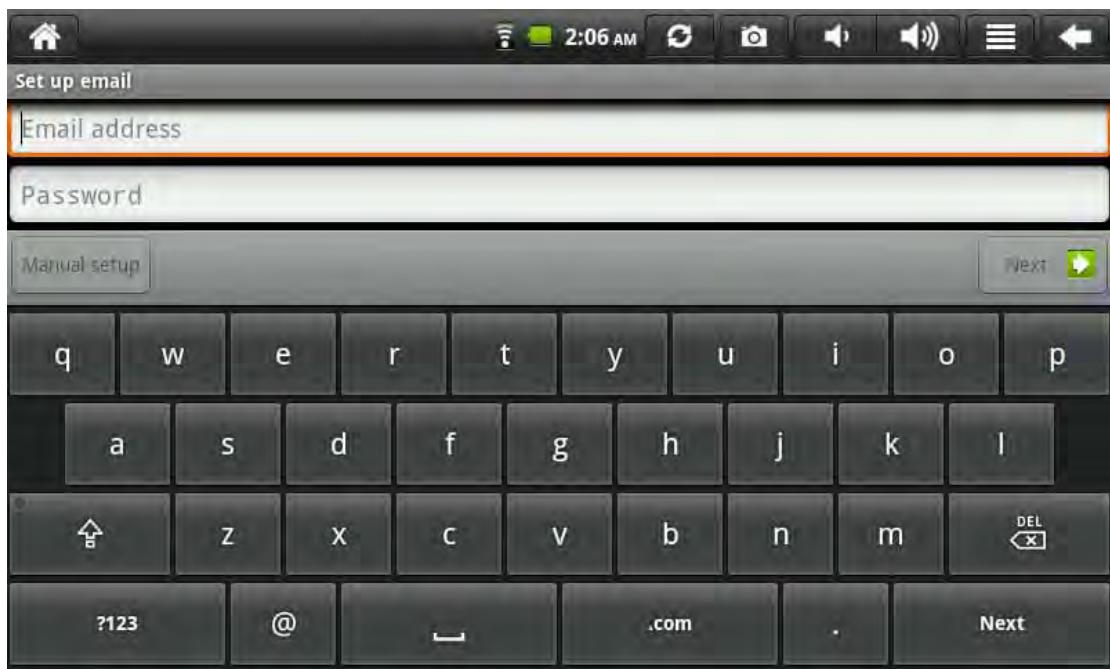

Select type of email account.

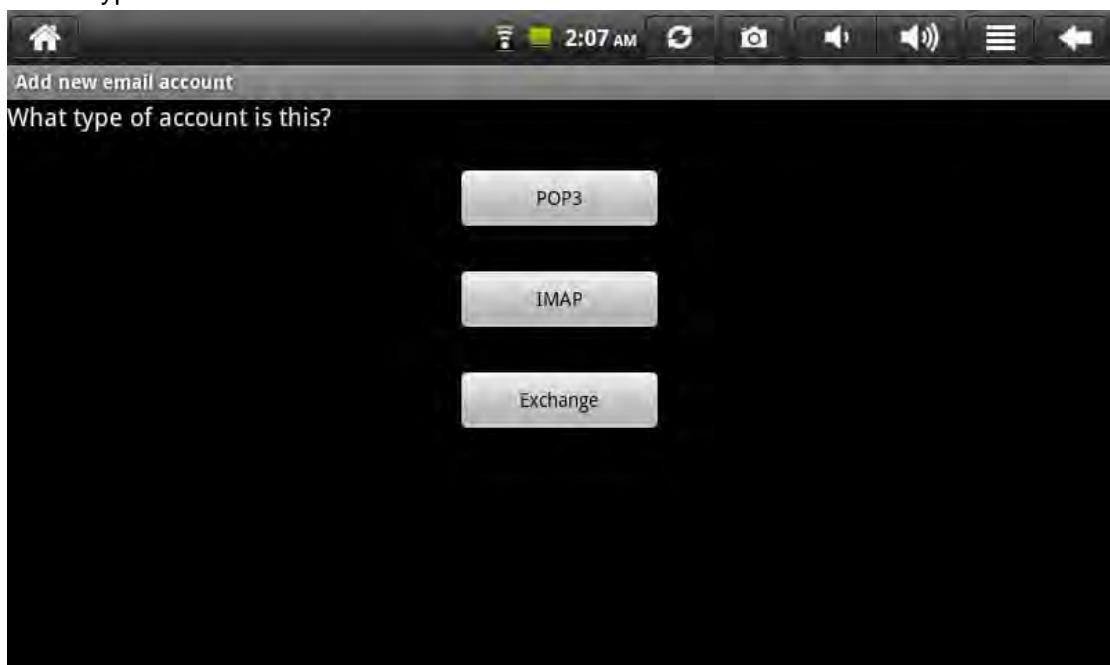


Follow the prompts to set up your email account.

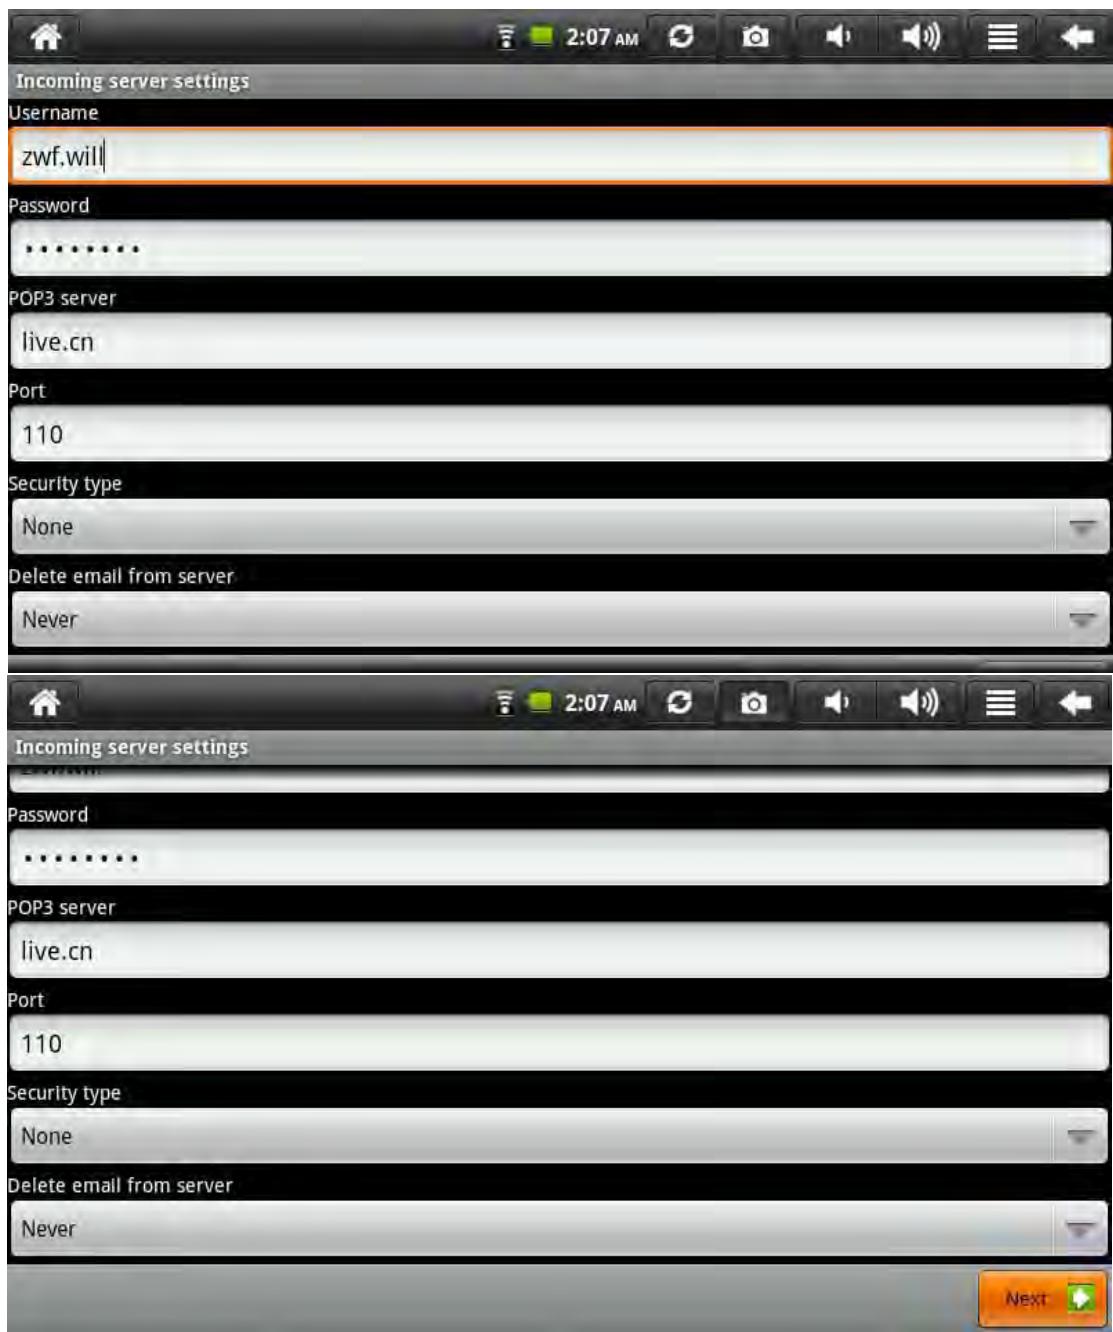

Note: The values in the fields on the left are for illustration only. Set all fields to the appropriate settings for your account.


Select "Next" to go to the next page.

If you are unsure about the settings, contact your email host for details.

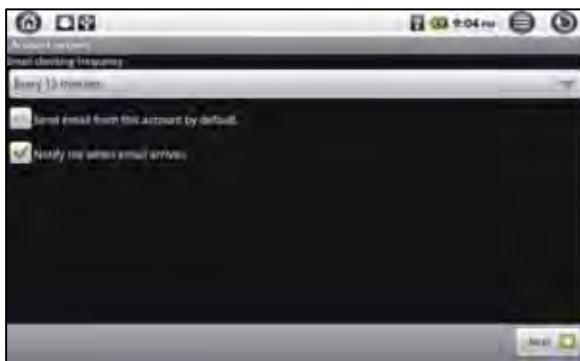

Select how often to check for new email.

Enable / disable email notification.

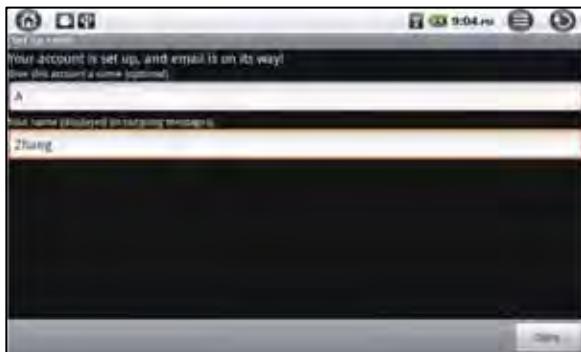

Enter a name for this email account.


Enter how you want your name to be displayed for outgoing messages.

Select "Done"

## Clock Settings




In the Application List screen, click the "Clock"

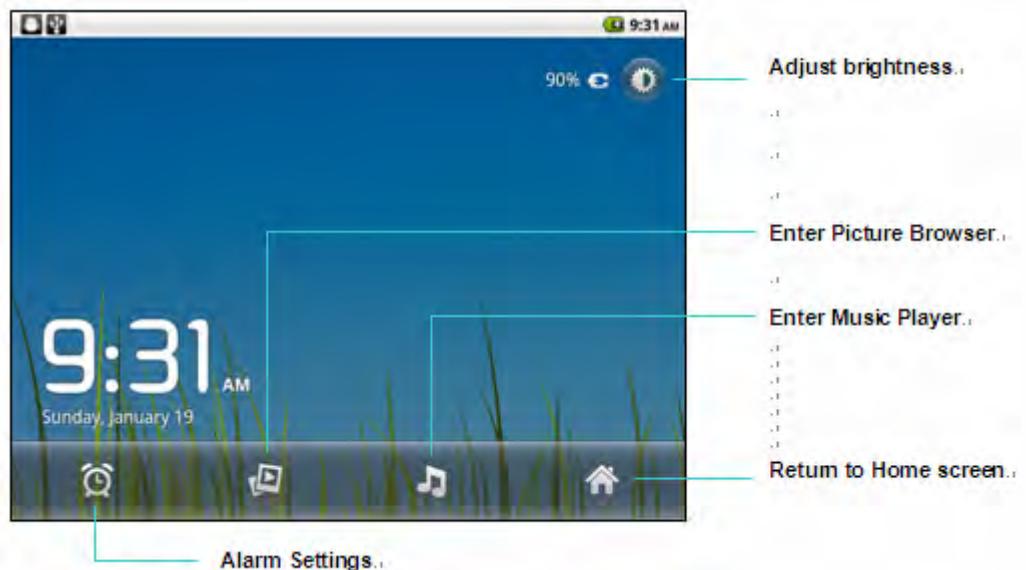


Enter "Alarm Settings" screen (see page 36)

Click "Add Alarm"

Set Time

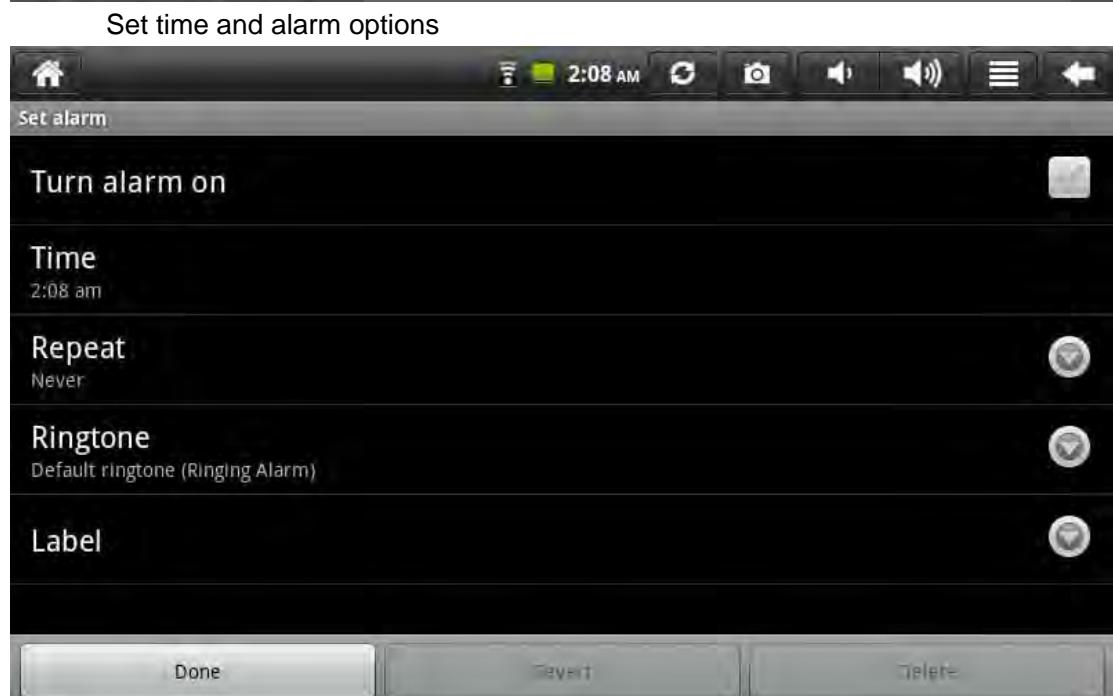

## APK Installer

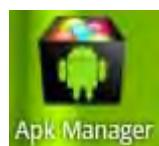

You can manage applications in your device by this program.

Press and open this application you will see all the Installation files and all the applications have

been installed in your device and Micro-SD card, like the following picture:



Had scanned: Folder : 31 File : 55 Apk file : 6			
Icon	Path	App Details	Installed
	path: /sdcard/sdcard1 name: Mobo.apk size: 3.58MB	pkg: com.clov4r.android.nil app: MoboPlayer	Installed: No
	path: /sdcard/sdcard1 name: sam2.apk size: 0.96MB	pkg: com.slideme.sam.manager app: SlideME Marketplace	Installed: Yes
	path: /sdcard/sdcard1 name: msn.apk size: 506KB	pkg: com.himsn app: Hi MSN	Installed: No
	path: /sdcard/sdcard1 name: PDF阅读器.apk size: 1.40MB	pkg: com.adobe.reader app: Adobe Reader	Installed: No
	path: /sdcard/sdcard1 name: 水果忍者.apk size: 10.21MB	pkg: com.halfbrick.fruitninja app: Fruit Ninja	Installed: No
	path: /sdcard/sdcard1 name: com.angrey.apk size: 12.23MB	pkg: com.rovio.angrybirds app: Angry Birds	Installed: No

Un/Install      Select      Scan Path      Exit

You can install/uninstall the applications here.

Press the icon  you can select multiple applications to install or uninstall.

## FCC Warning:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### RF Exposure Statement

FCC RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.