

#### TO TURN OFF

When not in call mode press and hold the nozzle until the voice command indicates the speaker is off. The red LED will flash five times.

#### PAIRING

When powered off press and hold the nozzle until the voice command indicates it is in pairing mode (Red and blue LEDs flash alternately.)

#### PAIRED

The voice command will indicate the speaker has

been paired with your device. The LEDs will then turn off.

#### PLAY/PAUSE

Short press of the nozzle when you play music

#### PREVIOUS SONG

Twist the dome to the LEFT and hold for 2 seconds to go to PREVIOUS song, repeat as needed.

#### NEXT SONG

Twist the dome to the right for two seconds to go to the next song, repeat as needed

#### VOLUME DECREASE

Twist the dome to the left and release to decrease volume one increment, repeat as necessary to achieve desired volume.

#### VOLUME INCREASE

Twist the dome to the right and release to increase volume one increment, repeat as necessary to achieve desired volume.

#### ANSWER/END A CALL

Short press the nozzle when call comes in, There

will be a two tone beep to indicate the call is picked up. When the call is disconnected the music automatically starts playing again. To send a call directly to your voicemail press the nozzle for 2 seconds.

#### MUTING

Press the nozzle for 2 seconds when on a call. The red light will flash twice.

#### LAST NUMBER RE-DIAL

Double tap the nozzle to redial last number.

#### SAFETY

Insure that all persons who use the product read and follow these warnings and instructions:

1. Do not expose the product to rain or water
2. Keep all accessories and electronics out of the reach of small children.
3. Do not use while driving, biking, walking, and jogging or where traffic is present.

#### WARRANTY INFO

##### 1 Year Warranty

Mizco International, Inc. warrants this product to be free from defects in materials and workmanship to the original purchaser for a period of 1 Year from the original purchase date. Mizco's responsibilities with regard to this limited warranty shall be limited solely to the repair or replacement, at Mizco's own option, of any product, which fails during normal consumer use.

#### Declaration of Conformity with FCC Rules for Electromagnetic Compatibility

We, Mizco International, Inc., of 80 Essex Ave East, Avenel, NJ 07001, declare under our sole responsibility that the product to which this declaration relates, complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including

#### interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is

#### noguarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit

#### different from that which the receiver is connected.

 
- Consult the dealer or an experienced radio/TV technician for help. Mizco International, Inc., is not responsible for any interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate this equipment.

#### ICES

This Class B digital apparatus complies with Canadian ICES-003.

#### Mizco International Inc.

80 Essex Ave East | Avenel, NJ 07001  
All trademarks used under license from IP Holdings Unltd LLC



#### \*ECKO UNLTD.

SPRAY  
INSTRUCTION MANUAL

Your new **Ecko Unltd. Spray** is the most unique Bluetooth wireless speaker. The Spray offers superb wireless audio streaming. With a twist of the dome or a short press of the nozzle you control the experience. **The Spray** will be your go to device for streaming audio from your phone, mp3 player, tablet or laptop.



## TABLE OF CONTENTS

WHAT'S INSIDE?	3
FEATURES	4
SPECS	6
USING THE SPRAY	
CHARGING	7
PAIRING AND BATTERY	9
AUXILIARY AND CONTROLS	10
SAFETY INFORMATION	17
WARRANTY INFORMATION	18

## WHAT'S INSIDE?

- Ecko Spray Bluetooth Speaker
- 3.5mm Audio dubbing cable
- USB to micro USB charge cable
- USB wall charger
- 1100mAh removable Li-Ion battery, (Pre-installed)

## FEATURES

### Tech

Built in omni-directional microphone for hands-free Bluetooth calling.

Stereo Bluetooth with extended dynamic range to deliver premium wireless audio quality.

Wireless range up to 33 feet (10 meters)

3.5mm audio jack for use with non Bluetooth

Up to 10 hours of playtime per battery charge

Swappable Li-Ion battery for extended playtime

For use with mobile phones, mp3 players, tablets or laptops devices

### Controls

- Play/Pause
- Skip Track/Back Track
- Answer/End call

## SPECS

Bluetooth V2.1 + EDR

Amplifier : 3.2-W/Ch Stereo Class-D Audio Amplifier

Speakers : Two full range high output 40mm (1.6") drivers with Neodymium high energy magnets

Twin 45mm (1.8") base radiators

1100mAh Li-ion rechargeable battery

## USING THE SPRAY

### Charging the Spray | Battery status information

Plug the wall charger directly into an ac outlet.

1. Plug the USB connector into the included wall charger and plug the other end into the micro USB port on the Spray.
2. The red LED in the nozzle remains on while charging . Fully charging the battery may take up to 2 hours. Once the battery is fully charged the LED indicator will turn off.

### Pairing the speaker with your Bluetooth device

1. Ensure your phone or audio device is on and the Spray is off.
2. Press and hold the nozzle until the voice command indicates it is in pairing mode.
3. On your device make sure that Bluetooth is turned on and then choose "scan for devices".
4. Select SPRAY from the list of found devices. The voice command feature will indicate when the speaker is paired with your device.

**This Spray is compatible with any mobile phone, tablet, desktop/notebook or any other device that supports the A2DP bluetooth profile and all wired devices.**

## Important note about wireless audio: Try to avoid being between your music player and the speaker, it can cause interference which may result in signal drop out. Just move your player if this should happen.

### Using the audio cable

Connect the audio cable to the Spray jack and plug the other end into the device. When using the audio cable you can control the volume from the Spray or from your device. You cannot use track controls or the microphone while connected

## via an audio cable, you must use the controls on your device.

**Important note: No sound will be heard if the speaker is paired via Bluetooth and connected via the 3.5mm cable at the same time. Either disconnect Bluetooth or remove the 3.5mm cable to resume play.**

### Changing the Li-Ion battery

Turn the speaker upside down and with a small coin turn the black screw counterclockwise until it becomes loose and you can remove the bottom

## cover. Note that It will not separate from the bottom cap piece to prevent it from being lost. Change the battery with a fully charged battery for extended playtime.

### Controls

#### TO TURN ON

When powered off press and hold the nozzle until the voice command indicates the speaker is on The blue LED will flash five times.