

Declaration

Turn to a fascinating world of beauty and style with the mobile phone. With its ornament integrated scroll audio LED with coloured keys , it will impress you with its dynamic,flashy,dazzling and unique character. Please read the user's manual so as to keep your mobile phone in the best condition. The manual has been verified and reviewed to guarantee the accuracy. Instructions and descriptions contained herein are accurate at the time of publication. However, mobile phones developed afterwards and the contents of their manual are subject to modification without further notification. Our company reserves the rights in relation to the manual.

Contents

Safety Precautions.....	
Overview.....	
1 Introduction.....	
2 Your mobile phone.....	
3 Function of main menu.....	
4 Phonebook.....	
5 Call center.....	
6 Extra.....	
7 Alarm.....	
8 Organizer.....	
9 Fun & games.....	
10 Multimedia.....	
11 Messaging.....	
12 Settings.....	
13 Services.....	
14 User profiles.....	
15 Wifi.....	
16 MSN.....	
17 Yahoo.....	
18 Skype.....	
19 Ebuddy.....	
20 Twitter.....	
21 Facebook.....	
22 FM radio.....	
23 Camera.....	
24 File manager.....	

Safety Precautions

Please read the following concise rules carefully. Nonobservance to the rules may lead to danger or violence of the laws. The user's manual gives details about the safety precautions.

Secure startup

Please don't start up the mobile phone in case it is forbidden to use wireless equipment or the usage thereof may result in any interference or danger.

Put traffic safety first

Please abide by all the local laws and regulations. Drive the automobile with both hands. Put the traffic safety first at drive.

Interference

Any wireless equipment may be subject to interference, affecting its performance.

Power-off in hospital

Please comply with any related restrictions. Turn the mobile off when you are close to medical equipments.

Power-off on the plane

Please comply with any related restrictions. Usage of wireless equipment may result in interference to the plane.

Power-off when refueling

Please don't use the equipment in gas stations. Don't use the equipment in the periphery of fuel or chemicals.

Power-off in the periphery of blasting spots

Please comply with any related restrictions. Don't use the equipment near the place of blasting.

Proper employment

Use the equipment only in proper locations as described in the product document. If not necessary, please don't touch the antenna point.

Employ proper maintenance service

Only qualified maintenance personnel are allowed to install or repair the equipment.

Accessories and battery

Approved accessories and battery are to be used. Please don't connect with unmatched products.

Waterproofing quality

The equipment is not waterproof/ Please keep it dry.

Backup

Back up or keep written records of important information stored in the equipment.

Connecting with other devices

Please read the user's manual of the device for detailed safety information when connecting the equipment with other devices.

Don't connect with unmatched products.

Emergency call

Make sure the equipment is in the covered area of the network service and the calling function is activated. As per the specific requirements, press the key of finish to clear the screen and return to the standby state. Input the emergency call number and press the call key. Tell the called your location. Don't hang up before the called tells you to.

About your mobile phone

In case usage of the wireless equipment may result in any interference or danger, please don't power on.

Network service

You should apply to the wireless service provider for opening of necessary services in order to use the phone function of the equipment. Many functions of the equipment require Turn on the mobile in order to use its functions (except for the alarm clock).

support of special network functions. The functions may not apply to all networks. As for other networks, you may have to reach necessary agreements with the wireless service provider before using the network services. Your service provider will provide necessary descriptions and interpret the charging standard to you. Certain restrictions may be formulated by some networks, which will affect the mode that you use the network service. For example, in certain networks, not all the characters and services in relation to language are supported. Your service provider may require forbidding to use or turning off part of the

functions. Then these functions will not be shown in the equipment function list. Your equipment may also be provided with some special configurations, such as name of the function list, sequence of the function list and change of icons. For more information, please refer to your service provider

Overview

The mobile phone newly launched by our company is a portable qwerty phone, and supports functions including dual cards and single -standby, single T-flash card, , FM, analog TV and Wifi etc. It makes your work more convenient and your free time more fun with the combination of its hand written function and keyboard, florid colored screen, pleasant bells, cartoon head portrait for incoming calls, strong file management function (supporting T-FLASH card), fashionable camera function and long time tape recording function, music player, video player, supporting MMS.

Password

Phone password

With the phone password, you can prevent others from using your mobile phone without your approval. The original phone password is 1234. Refer to "Security Setting" for how to change the password and how to set the mobile to show request for inputting the phone code.

PIN

PIN1 code (4 to 8 digits) is defined by the operator. This move by a personal code. For more information, see the section on security.

. Unlocking mobile device

Set a PIN code to protect your assets the device against unauthorized use. If this feature is enabled, the PIN code must be informed if the appliance is turned on. If the PIN code is not defined by the user, the device may not protect your assets against misuse.

Note:

PIN1 code (4 to 8 digits) is defined by the operator. This move by a personal code. For more information, see the section on security.

. Unlocking mobile device

Set a PIN code to protect your assets the device against unauthorized use. If this feature is enabled, the PIN code must be informed if the appliance is turned on. If the PIN code is not defined by the user, the device may not protect your assets against misuse.

Inform the password for thev mobile device and use the right directional button to eliminate possible errors. Press the CONFIRM button to finish. For example, if

the signal set is 1234, enter 1234.

If you forget your password, locate the nearest dealer to contact center to unlock the device (the original sign of the unit cell is 1234).

Restore Factory settings

To return all settings to the factory original. Report the original signal: 1234.

Introduction

Insert the SIM card , battery and memory card, this modle is dual card dual standby, supporting Wifi, TV, JAVA, FM , mp3, mp4 etc.

Your mobile phone

Read it carefully before using for best performance and to avoid the risk of accidents due to improper use. Take care of your mobile ,that will enlarge your mobile Using time.

Phonebook

In the contacts main interface, you can use two ways to quickly search the records . For example, type the letter “z” , can find “all you input about contact in start of the letter z ”

Press left soft key, can call the selected contact.

Press right soft key, can back to the contacts, return to the main menu.

- Details: view the name contact, phone number, storage location. You can also edit the selected address book, and other operation
- New :can add a call logs, and store to the phone or SIM card, based on the prompt to input the logs step by step.
- Search: enter the part or full name, press ok key to view the records.
- Write message: send the SMS or MMS to the selected phone number.
- Dial: call the selected number directly
- Send Vcard: choose to send it by SMS or Bluetooth.
- Delete: delete the selected record.
- Mark: select the appropriate phone records, you can mark all the records.
- Copy: copy to each SIM cards, copy to phone, or to record the form of the E-card to the U card or memory card.
- Copy all: copy from SIM1 to memory card, from SIM2 to memory card, SIM3 to memory card, phone to memory card, memory card to phone. (only limit to the full list appears in this button)

- Others: speed dial settings, phone number, memory status, single and double line display.
- Move: select the information move to other groups (only limit to the full list appears in this button)

Call center

In the main menu, enter to the call center interface. Press the direction key to search the missed calls, received calls, received calls, dialed calls, delete all, call timers, call cost, delete SIM card logs.

e.g. the dialed calls :

select into the list of dialed calls interface, press the left function key to enter selection menu:

- Save to phonebook: save to the selected number.
- Delete: delete the record if necessary.
- Send message: send text message or multimedia to the number.
- Call: call the selected record.
- IP dial: IP dial the number
- Edited call: edit the number then dial
- Add to blacklist: select it to reject call
- Edit before call: you can rename the select number.

Call timers: press the left soft key to confirm, you can view the card last call, dialed calls, received calls, reset all.

Call cost: press the left key, can choose to see the last call cost, total cost, reset cost, max cost, price per unit.

GPRS counter: press the left soft key, can choose to view the last transmission, last received, last sent, all sent, all receive reset counter.

Extra

In the main menu, enter to the call center interface. Press the direction key to search calculator, stopwatch and ebook reader.

calculator

Select into the calculator, use the “calculator” can do simple arithmetic.

Up, down, left, right direction keys to determine the key corresponding to the +, -, ×, ÷, =. * key corresponding to “•”. # to ±. Press the right function key return to the higher interface or back. Left key can delete the input content or results.

E-book

Select and enter into the e-book interface, view the book list. If you have already read the books, you can go directly to the last read e-books.

In the E-book reading interface, users can view electronic content page, press the left and right arrow keys to switch between pages in the neighborhood. Click the left function key pop-up options menu, to aid operations.

Alarm

On the Tools menu, select and enter the alarm clock.

Users can choose any of 5 alarm in one or more, by Edit key to open / close the selected alarm, separating different time;

Through the Options menu, can entry into the Edit interface;

Select time input and press the OK button to enter the time input interface, enter the required time to set the alarm time.

Selected input box and press the OK key can set the ring of alarm to remind, you can choose phone ring tones or choose to use other music in the phone memory.

Set the repeat mode, options for a once day and every week, every week and custom, if selected every day, you do not need to set of one or a few days in a week.

After the alarm sound can be closed or delayed, if the ring does not operate after, then this alarm will ring once every 5 minutes, can only delay 3.

Note:

Mobile support 2 alert type alarm clock for you choose, vibration and ring.

Ogranizer

On the Tools menu, select and enter the ogranizer menu. Press the direction key to search calendar, tasks and world clock. Choose the left soft button to enter into the function.

Calendar, if you see it, you can edit the calendar, check out the past time and the futrue time. Press the left function key to choose the menu, can view the current tasks, all tasks, clear tasks today, clear all, go to date, sort by week

Press confirm/OK to edit new task.

Detail function following this:

Add task, then set into the schedule screen, set the agenda of the title name, the specific time and date, suggesting that ring, mode. Selected are editing a particular agenda and press the OK button to enter the input interface (e.g. time), press the left function key to save a certain agenda, and press the OK button to enter the input interface (e.g. time), press the left function key to save the schedule and return to the superior interface.

Select the current tasks, view all the selected date on the schedule. Enter to see the specific schedule set conditions in the selected records.

Tasks, in this menu, you can write down your plan, and choose the date, call and anniversary to hlp e your memory. Woorld time, press left soft button to enter world time,, press the right of the menu to find different area time.

Fun & games

On the Tools menu, select and enter the fun & game menu. you will see yahoo, msn, facebook, twitter, java, java setting, java default security, java network and games, choose games, press left soft button to enter into games, you will see Majiang and game setting.

Slect tow bricks with the same pattern, if the tow brichs can be connected by making less than turns, they will disappear and user will gain extra time.

If with keypad: User arrow keys or (key2, 4, 6, 8) to move selection. User key 5 to select. In the game setting, you can set up audio on or off, vibration on or off, and Sound size

Multimedia

On the Tools menu, select and enter the multimedia, it includes ATV, image viewer, Video recorder, audio player, and sound recorder.

ATV

press left soft button to enter, then press left soft button, you can set region, input channel, choose program list, and scan, if all is ok, you can enter full mode.

image viewer

Browse photos, press the OK button to preview, press the left function key to view the Options menu:

- View: enter it to see the pictures.
- Delete: delete the file.

Send: as multimedia or Via bluetooth, whatever you choose what style, you should edit it, send the picture.

- Set image as Wallpaper: Set wallpaper pictures
- Storage: choose phone or memory card.
- Rename: rename the file.
- Delete: delete the files.

Video record

On the multimedia, choose the function video record, press left soft button and enter into, then press the OK button, it will start record, you can press left button to set video record, finished, saved recording.

video player

Under the multimedia menus, the choice enters the video frequency player

contact surface

Press the left soft key, enter the option menu:

Playlist: view the video player with playlist. By playlist options menu can administer play, add video, update the list, remove from the list, details, set, mark.

Full-screen playback: current video full-screen playback

Order to play: on or off the order play

Setting: Establishes the current video frequency as the starting animation, close-down animation

File properties: view the details of the current file

Ok key: switch to play or pause

Left key: enter previous chapter

Right key: enter next chapter

High and low keys: control volume size

Notes: video format is supported avi, mp4, 3gp

audio player

the left soft key or the ok key to access the options menu, you can do the following:

Music list: Press Options, you can browse, In the multimedia menu, select to confirm access to audio player interface, access to my music, the options menu:

Ok key: play music

Left key: enter previous chapter

Right key: enter next chapter

High and low keys: control volume size

Up: stop playing music.

Sopprot refresh list, background play, repaet, list aoto .

Note: supported suffix named music .MP3 format

sound rrecorder

The key features of the interface as follows:

- OK key: select the icon corresponding to the current features, such as the current icon for the audio icon to start recording or pause

recording; The currently selected icon for the stop icon to stop the current recording or stop the current recording file playing; currently selected When the icon for the Play button to play or pause the current audio file; the currently selected folder icon to open the recording file list. Record player in the Open window, the left function key to open the Options menu, you can do to begin recording, open the memory recording list and priority setting; in the recording file after recording, the left soft key to open the Options menu, you can listen, re-record, delete, send via MMS or Bluetooth, open the list with recordings.

- Volume control: the recording file playback, press the * key, under the direction of key decreases the volume; press the # key, the arrow keys to increase the volume.
- Left and right arrow keys: the icon at all effective to switch between.
- Record player in the Open window, the left function key to open the Options menu, you can do to begin recording, open the memory recording list and priority setting; in the recording file after recording, the left soft key to open the Options menu, you can listen, re-record, delete, send via MMS or Bluetooth, open the list with recordings.

Messeeaging

Choose and enter the message menu.

Press the left key into the “options”.

- Templates
- Write message
- Inbox
- outbox
- Broadcast message
- SMS settings
- MMS
- Drafts

Templates

You can edit and search the existing templates.

Write message

Choose to enter “New SMS”, in accordance with the description of the

input method, enter the appropriate content. In the input process, press the left function key to enter the edit message option:

- Send: send the message
- Insert template: insert the phone built-in common phrases
- Add contact information: Contact information can be inserted into the short message
- Add phiz: You can choose to join the appropriate emoticons.
- Save: save message.

In the editing screen, press the OK key to send the number into the editing interface: You can directly enter the phone number or press the left function key to select a contact, press the OK key information.

Choose to enter "New MMS", then input the recipient, title, edit the text, press the left function key can open the Options menu, select Send, Add recipient, preview, add, delete, set the page play time save as a draft, the text layout.

Inbox

Choose to enter all the information can view the details.

In the Inbox list interface, press the left function key to see the options menu, under the Options menu can following this:

- Reply: In the form of SMS or MMS reply to the message sender
- Delete: Deletion of information or choose to remove the appropriate information under.
- Call: call directly or IP call
- Lock: Lock the information or select the appropriate information in accordance
- Mark: Information can be marked, cancel mark, mark all, cancel all, mark the number, cancel the phone number, storage in SIM.
- Sort: Information can be sort by time, contacts, Subject, message type.

Out box

Choose to enter the Outbox list interface.

Failure to send the information on the operation, details of operation can refer to the above-mail menu.

Drafts

Choose to enter Drafts.

View the information stored in the Drafts list. Select content into view, you can edit the information. The details you can see the message menu.

Sentbox

View the send message list.

View the successful send message list.

Press ok key to view the message in details, press left to the options that have been made operational information, refer to the above mail menu.

SMS settings

SIM message center: edit and view the center number.

- Note : this function can be achieved under the conditions of the network supporting. Please contact the local network operator to the detail settings.
- Message validity period: it refers to the Information is valid for sending text messages, the other phone off, close-mail is full so it can not receive text messages, the SMS center save the message time, more than this time, letters will be automatically deleted, not being sent to the other phone.
- Status report: Select "Open", when the short message delivery is successful, other phone receives it, the machine can received an online send back a confirmation of prompt SMS has received; select Off to send a short message after a successful without confirm message. :
- Note: the status report of the SMS setting is related to the other phone and network.
- Save send messages: "stored sent messages" which you can set to prompt the user to select, save or not save
- Preferred storage: can store the file by set to the SIM card or phone.
- Signature: open or close
- Forward setting: when forwarding, you can choose whether add the information or not.

MMS settings

- MMS account: select account.
- Receive options: on or off automatically download, receive advertising that allows to send the report, set the object storage location for the phone or memory card.
- Sending options: set the validity, priority, will apply for delivery of the notice, send to read the report, anonymously sending set to turn on or off.
- Play a sound: play the sound on or off
- Restore default: all the MMS settings back to factory state.

Browse information

Set the browse information to open or close

Information capacity: View the information capacity of the state.

Broadcast message

It required network operators to provide the services.

There are four set items in this menu:

- Receive mode: open or close the mode.
- Read message: read the broadcast message
- Language: set the language you have receive the message.
- Channel settings: set the channel of the broadcast, you can do things such as choose ,add ,edit and delete

Settings

In standby mode, press the OK key to access the main menu of the drawing. Press the arrow keys to select a setting

Call settings

In the Setup menu screen, select to enter call settings interface

Card setting

To enter this menu you can select the standby mode, and auxiliary card settings, set the place name

Network setting

To enter this menu you can find the network manually, or automatically seek network settings.

Security settings

To enter this , you can see sim card security settings, phone lock, personal data security, auto keypad lock, change password, certificate manager, anti theft and card hide.

Connectivity

To enter this, you can see bluetooth and data account.

Restore factory settings

To enter this , you should input password, if you input the original password, the mobile will become original mobile .

Services

Select access to the Internet interface, press the up and down keys to select menu.

Please enter the Web address: press the OK key to access the editing interface, enter the URL to confirm, enter the SIM card selection interface, select the SIM card after parsing and open the corresponding Web site.

Home page: press ENTER to enter the SIM card after selecting the interface to select and open the URL parsing

Bookmark: Add a bookmark, press the left soft key to bookmark. Press the OK key to select the sim card and then connection, select the bookmark has been added.

Historic record: The examination had glanced over the homepage, presses the left functional key to carry on the operation to the historic record; Presses the definite key choice “the connection”, the choice current chooses the record homepage to carry on the operation.

Offline browser: browsing the Web page, select the page to save the file

to save the snapshot

Wap setting:

- 1) Browsing setting: can cleanup cache, the account of choice, downloaded the pictures, background music, accept push information of sim1, sim2, sim3.
- 2) preferred storage location: you can choose the phone or memory card with photos, music, image storage for priority
- 3) GPRS setting: In the case of single-card allows you to set the always on and need to open two or three card color is gray
- 4) Restore defaults: press ENTER to return to the default, the left soft key to cancel the operation

Note: in the Internet Options menu in the bottom part of the window, you can refresh the page, forward, backward, Favorites, set up a home page, viewing history, save the file and exit your browser.

User profiles

To enter it ,you can change general,meeting,outdoor,indoor,headset,bluetooth,stint profile those mode.

Wifi

To enter this funcation, press ok this button, then, turn on Wifi first, there are offer different systemrs for you choose, choose one, then connect, and input password, if it is worked, you can use the Wifi to surf in the internet, you do need to pay for internet.

MSN

Select and enter into the MSN interface, option start, it is need internet. if MSN connected successfluly, so you can input your MSN ID, and passward, you can chat with your msn friends.

Yahoo

Select and enter into the Yahoo interface, option start, it is need internet. if Yahoo connected successfluly, you can surf the internet.

Skype

Select and enter into the Skype interface, option start, it is need internet. if Skype connected successfluly, you can surf the internet.

Twitter

To enter it ,you choose start, it is need internet. if it connected successfluly, you can surf the internet. you can chat your idear in the internet.

Ebuddy

Select and enter into the Ebuddy interface, press , this function can make you play ganes.

FM radio

The interface of the key features are as follows:

Ok key: startup loudhailer

Left or right key: Switch the radio station has been stored in the list of previous, next

High or low key: in order search broadcasting station

Key +/- key: control the volume size.

Option menu as follows:

Automatic and save: automatic search and save in the list on the radio

Radio list: press the ok key to directly listen to the radio in the list, press the left soft key option to listen to, edit, delete, delete all.

Save: save the current station to station list

Manual search radio: for example input 90.0, confirm then listen directly

Startup loudhailer

Background: exit the radio interface can play correctly.

Help

Camera

With this feature, you can use the phone built-in camera photo, and you can adjust the camera settings. If the phone in storage space to take a new photo, you need to delete some old photographs or other documents in the document administer; in other files to free storage space.

Press the high or low keys to adjust the zoom in or zoom out multiples
Press the left or right key to make the following settings:

Shooting mode: switch to the camera, switch to the video recorder

Set to switch to take a photo; switch to take pictures, you can make the following settings:

Size: 80*60, 160*120, 320*240, 640*480

Scene modes: Auto, night

Contrast: high, middle, low

Exposal compensate

White balance: Auto, incandescent, fluorescent, daylight, cloudy, fluorescent.

Special effect: Normal, black and white, red, the green, the blue color, the yellow, the negative, remembers past times

Set to switch to the shot mode, you can make the following settings

Size: 320×240, 176×144, 160×128, 128×96.

Option button (middle key) you can setting the menu

- View picture management, picture browser options settings: change folder, send (MMS/Bluetooth), slide show, delete, set as wallpaper, rename, tag (mark/unmark/mark all/uncheck all markers), details, slide settings.
- View the video management, enter the mobile phone storage card option setting/T-flash: new folders, use video, send, delete, details, edit, find, sort, tag, and more (depending on shooting mode settings)

Note: in many more, you can view the mobile capacity/memory card capacity/format/format memory cards for mobile phones

Settings: avoid Flash, audio, image formats, display parameters

- Memory location: phone and memory card.

File manager

Select access to the Internet interface, press ok keys to select menu. Choosing **Storage path (phone or memory card)**

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Order FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commission (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ANSI C95.1> (1992) / <NCRP Report 86> (1986) / <ICIMIRP> (1996)

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Vehicle mounted external antenna (Optional, if available))

A minimum separation distance of **7.9 inches (20cm)** must be maintained between the user / bystander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

RF Exposure Information:

FCC RF Exposure requirements: The highest SAR value reported under this standard during product certification for use next to the body with the minimum separation distance of 1.5cm is **0.329 W/kg**, next to the head is **0.206 W/kg**. This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10°C , the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.