MOBO USA CORP

MOBILE PHONE

MODEL:BEAT

FCC ID: ZOJBEAT

User Manual

1	Saf	afety & Notice4				
2	keyı	pad functi	on descriptions	4		
3	Use	description	ons	4		
		3.1.1	Turning the Phone On and Off	4		
		3.1.2	Insertion of the SIM Card	4		
		3.1.3	Insertion of the Memory Card	5		
		3.1.4	IRemoval and Installation of the Battery	5		
		3.1.5	Battery Charging	5		
		3.1.6	Headset use	5		
		3.1.7	USB use	6		
		3.1.8	Phone/ SIM card unlock	6		
4	QU	ICK GUI	DE	6		
	4.1	Emerg	ency calls	6		
	4.2	Make	a call	6		
	4.3	Answe	er a call	6		
	4.4	Option	ns	6		
5	Fun	nction Me	nu	7		
	5.1	Phone	book	7		
	5.2	Messa	ges	8		
		5.2.1	Write message	8		
		5.2.2	Inbox	8		
		5.2.3	Drafts	9		
		5.2.4	Outbox	9		
		5.2.5	Templates	9		
		5.2.6	SMS settings	9		
		5.2.7	MMS	9		
		5.2.8	Voice mail server	10		
		5.2.9	Broadcast message	10		
	5.3	Call ce	enter			
		5.3.1	Call history	10		
		5.3.2	Call settings			
	5.4	Setting	gs			
		5.4.1	Dual SIM settings			
		5.4.2	Phone settings			
		5.4.3	Display			
		5.4.4	Network settings			
		5.4.5	Security settings			
		5.4.6	Restore factory settings			
		5.4.7	Sound effects			
	5.5		nedia			
	-	5.5.1	Mobile TV			
		5.5.2	Image viewer			
		5.5.3	Video recorder			
		5.5.4	Video player			

	5.5.5	Audio player	. 14		
	5.5.6	Sound recorder	. 14		
	5.5.7	FM radio	. 15		
5.6	Camre	a	. 15		
5.7	Service	es	. 15		
	5.7.1	SIM1/2 STK*	. 15		
	5.7.2	Facebook	. 15		
	5.7.3	Ebuddy			
	5.7.4	MSN			
	5.7.5	Yahoo			
	5.7.6	Internet sevice			
	5.7.7	Data account			
5.8	_	izer			
5.0	5.8.1	Extra			
	5.8.2	Calendar			
	5.8.3	Tasks			
	5.8.4	Alarm			
	-				
	5.8.5	World clock			
	5.8.6	Torch			
5.9	5.9 User profiles				
5.10	FUN &	FUN & Games			
	Games.	Games17			
5.11	1 Files manager				
5.12	Shortcuts				

1 Safety & Notice

Not following these simple guidelines may be dangerous or illegal. Read the complete user guide for further information.

TURN ON SAFELY

Do not turn on the phone when wireless phone is prohibited or when it may cause interference or danger.

ROAD SAFETY

Obey all road safety laws. Always use both of your hands to operate the vehicle while driving.

INTÉRFERENCE

All wireless phones may be sensitive to interference, which may affect performance.

TURN OFF IN HOSPITALS

Follow all restrictions. Turn off the phone near medical equipment.

TURN OFF ON AIRCRAFTS

Follow all restrictions. Wireless devices can cause interference on aircrafts.

TURN OFF WHEN REFUELING

Do not use the phone at/near refueling stations. Do not use near fuel or chemicals.

USE SENSIBLY

Only qualified personnel may install or repair this product.

ENHANCEMENTS AND BATTERIES

Use only appropriate enhancements and batteries. Do not connect incompatible products.

WATER-RESISTANCE

Your phone is not water-resistant. Keep it dry.

BACKUP COPIES

Remember to make back-up copies or keep a written record of all important information stored in your phone.

CONNECTING TO OTHER DEVICES

When connecting to any external device, read its user guide for detailed safety instructions. Do not connect with incompatible products.

2 keypad function descriptions

Left soft key: To confirm; execute functions left-down corner indicator shows

Right soft key: To delete a letter or return to upper menu; execute functions right-down corner indicator

Navigation keys: To move cursor up, down, left, right or select letters; to enter shortcuts directly

OK key: To confirm

End key: Cancel or reject calls; by long pressing can turn on/off the phone

Send Key: Dial number and answer the incoming call. In standby mode, press this key to check the call history

* key: Show symbol list in editing mode

key: Switch user profiles in standby mode; switch input method in editing mode

Number keys: Input the numbers or letters they represent.

3 Use descriptions

3.1.1 Turning the Phone On and Off

To turn on or off the phone please hold down the Hang-up key.

If you turn on the phone without having inserted the SIM card, phone will display "**Insert SIM**". After inserting the SIM card the phone will automatically check if the SIM is useable.

3.1.2 Insertion of the SIM Card

Metal interface of SIM card is very easy scrape. Before inserting into the phone you must carefully remove it.

- Turn off the phone; remove the battery and unplug other external power sources.
- Insert the SIM card into the SIM slot as shown in the following picture.
- When you need to remove the SIM card, please first turn off the phone, remove the battery, then remove the SIM card.

3.1.3 Insertion of the Memory Card

- Turn off the phone; remove the battery and unplug other external power sources.
- Put the Memory Card into the Memory Card trough.
- When you need to remove the Memory Card, please first turn off the phone, remove the battery, then remove the Memory Card.

3.1.4 IRemoval and Installation of the Battery

When removing the battery follow the following steps:

- □ Push the battery cover towards bottom;
 - □ Raise the battery bottom, break out the battery from the mobile-phone.

Warning: You must turn off your mobile phone before removing the battery. Under no circumstances should you remove the battery when the mobile phone is on as this may damage the SIM card and your mobile phone.

- When installing the battery follow the following steps:
 - □ According to arrowhead direction, push the battery to inset mobile-phone.
 - □Cover with the battery cover.
 - ③Push the battery cover towards top.

3.1.5 **Battery Charging**

- The charger connector with the top of the phone.
- The charger connector with the electrical source.
- The battery capacity indicator in Icon Area will then flash periodically; when charging at power-off status, charging indicator on the screen means the phone is charging now. If you are using a phone in low battery, it may need certain time for charging indicator to appear on the screen after starting to charge.
- When the Capacity Indicator in Icon Area is full and doesn't flash any more, the charging process is complete. If your phone is charged in power off status, charging complete screen will also display. Charging process usually takes 1-2.5 hours. Battery, phone and charger normally turns hot during charging process.
- When charging process complete, disconnect connections between AC power outlet, your phone and the charger.

Attention:

- Be sure to charge in ventilated place with the temperature ranging from -10°C to +45°C, and always use the charger provided by original manufacturer. Using unauthorized charger may cause danger, and also violates warranty coverage of the manufacturer.
- Charge your battery in time when the phone automatically powers off or displays low battery warning. The phone will automatically decrease charging time when the battery is not exhausted before charging.

3.1.6 Headset use

When you insert the headset side of the phone headset jack, the scenarios phone will automatically switch to headset mode. Through the automatic answer, you can listen to music through headphones or receive calls

3.1.7 USB use

When you insert the usb line of the phone, the phone will automatically be connected the PC, and you can select the phone as "Mass storage", "Webcam" or "COM port".

3.1.8 Phone/ SIM card unlock

In order to prevent the illegal use, your phone and SIM card can be setup separately lock password to encryption protection. Default phone lock password: 0000, default SIM card password: 1234.

NOTICE: IF YOU INPUT TRHEE TIMES ERROR PIN CODE OF THE SIM CARD, YOU SIM CARD NETWORK WILL BE LOCKED AND THE PHONE WILL BE ASKED PUK CODE.

4 QUICK GUIDE

4.1 Emergency calls

Whether install the SIM card or not, the phone can call the emergency phone number 112 for help.

4.2 Make a call

Enter the phone number, including the area code, select one of the SIM card and start to make a call. It will display flash while dialing; also it will display the talking state while talking. While in talking process, if you need to input the number, press the number key. For international calls, press "+" key to replaces "00", then press the call key.

4.3 Answer a call

Press the call key to answer an incoming call.

4.4 Options

During the call, press the "Options" to enter the call option menu, or press the "H-Free" to activate and enlarge tone, then you can press the "H-Held" to close and decrease volume. While in calling, you can do the operation:

■ Hold single call

To put a call on pause

Resume single call

To resume the call

■ End a single call

To end the call.

New call

To begin to dial new call

■ Phone book

To enter the list of phone book entries

■ SMS

Enter into SMS menu.

■ Sound Record

To record voice memos

■ Mute

To stop transmitting the user's voice.

■ DTMF

5 Function Menu

5.1 Phone book

You can use the phonebook function to save name card information such as Name, Number, Home number, Company name, Email address, Office number, Fax number, Associate picture, Associate sound, Caller group.

Note: This phone is able to save up to 500 phone book records, and the record storage of SIM card is decided by the capacity of the SIM card.

When the cusor stay at **add new contact**, press ok key into option:

- Select to add a new record to the phonebook. You can select save the number in the "To SIM1/2" or the "To phone". A new record is added to the Phone Book, except Name, Number, Home number, Office number, Fax number, you can add the content as follows:
 - Company name: to edit company name of linkman.
 - > Email address 1/2: to edit email address.
 - > Office number: to edit office number
 - **Fax number**: to edit office number
 - > Caller picture: to set a personalized picture for the current phone entry. You can select the picture of mobile telephone preediting, or can select the picture, succeed preview and appropriate size, from the [File manager].
 - Caller ringtone: to set a personalized ring tone for the current phone entry. You can control the scroll bar to select personalized income ring tones from inner ring of mobile telephone systemic.

Note: When the file is sent to user profile in the [File Manager], you can selected it to become the associate sound

Caller group: You can enter the telephone numbers saved in the phonebook into different groups according to your relation to the people.

■ Phonebook settings

- Preferred Storage You can set a default setting for the storage of telephone numbers to be saved to "SIM" or "Phone", and allow the user to choose when adding a new phone entry.
- ➤ Speed dial Setup whether to activate the function of speed dial, and you can edit corresponding speed dial numbers. If you set speed dial to "ON", then you can dial the number specified to the key by pressing and standby corresponding single key (Numeric key 2~9).
- > My number to edit or send my number
- > vCard version to show the version of the vCard.
- **Extra numbers** to edit sim1/2 owner number.
- > Save contact notify turn on or off Contact notify
- Memory Status You can view the total memory capacity and occupied memory space of the phonebooks for both the mobile phone and the SIM card.
- **Copy contacts:** to select "From SIM1/2 to phone" to copy all the telephone entries

on your SIM card onto your mobile phone, or to select "From phone to SIM1/2" to copy all the telephone entries on your mobile phone onto your SIM card, or to select "From SIM1 to SIM2/From SIM2 to SIM1" to copy all the telephone entries on one SIM card onto another SIM card.

Note: When you copy telephone number entries from your mobile phone onto your SIM card, only the names, telephone number will be copied.

- Move contacts to select "SIM1/2 to phone" or "phone to SIM1/2".
- **Delete all contacts** to select "From SIM" or "From Phone" to respectively delete all the entries in the SIM card or mobile phone phonebook.

Note: Delete all the entries from SIM card or phone, need input the password, default password is "0000".

5.2 Messages

5.2.1 Write message

Please setup the correct message center number before creates the message.

Enter into the create message sub-menu to create the message, press "confirm" key to enter into the "Options" menu

- Send to after finished to create the message, selected this operation, you can operate the message according to your requirements: send, save and send, save, send to the group, send to one contact or many and storage in the outbox.
- Insert template insert the text templates in the cursor of the current message.
- Insert number insert the telephone from the phone book to the message
- Insert name insert the contact name from the phone book in to the message
- Insert bookmark to insert bookmark to SMS.
- Save to Drafts to save this message to drafts
- Input method to offer 24 kinds of input methods.
- Edit option you can make text,copy all and cut all.

NOTICE: ONLY THE PHONE WHICH WITH EMS FUNCTIONS CAN SEND OR RECEIVE THE DORMENT ICON, FLASH ICON AND MUSIC MESSAGES.

5.2.2 Inbox

Enter into the inbox sub-menu to check the received message in the SIM card 1, SIM card 2. Press "OK" key to enter into the menu:

Reply reply the message to the sender of the current message.

Call sender to call up the current number.

Forward sent message to one contact, many, or to group

Delete delete the current message

Delete all delete all messages in the inbox.

Use number catch three or above number from the message, select anyone of the number to call, IP dialing, save or send message.

Advanced edits the current message

- Use URL If the message contains the URL, you can use the URL connect to internet.
- Copy to phone storage the message into the phone memory.

- Move to phone removed the message to the phone memory.
- Copy all copy all messages from SIM card/ phone
- Move all removed all messages from SIM card/ Phone

Edit option you can make text and copy all.

5.2.3 Drafts

The drafts box storage the MMS which not yet ready to send, you can revise and send again.

5.2.4 Outbox

Enter into the Outbox to view the message which you save in the phone (SIM card1/ SIM card 2/ Phone), also included failed to sent messages,

5.2.5 Templates

Press "OK" key to enter into the template list, you can edit, delete or create new message while you selected the template.

5.2.6 SMS settings

When using the short message function you must first make the necessary settings.

5.2.7 MMS

5.2.7.1 Writing message

You can select the recipients, CC, BBC, subject, text and attachment while writing the MMS message.

5.2.7.2 Inbox

The phone will storage the MMS in inbox

Select one MMS and press ok key "options" to the following operation:

- View view the MMS
- Reply to reply MMS to the sender
- Reply by SMS reply SMS to the sender
- **Reply all** to edit the MMS to reply all, at the same time, subject change to "Re:" and old subject.
- Forward forward the selected MMS to other contact
- **Delete** delete the MMS
- Delete All delete all SMS in the inbox
- Save as template to save the MMS as template
- **Properties**: to can look over the sender's number, subject, and sent time and date, MMS Size and so on.
- Use numbers catch the selected number to save in the SIM card or mobile phone or to call.

5.2.7.3 Outbox

This menu allows you to save the implementation of the "Save and send" after the MMS. The operation is same as inbox's

5.2.7.4 Drafts

The drafts box storage the MMS which not yet ready to send, you can revise and send again. The operation is same as outbox's.

5.2.7.5 MMS Settings

The user must make the necessary settings in order to use the MMS.

Enter the "MMS settings" submenu and make the following settings:

- Compose: include Creation mode, Picture resizing and Auto signature.
- Send: include Validity period, Delivery report, Read report, Priority, Slide timing, Delivery time.
- Retrieve: include Home network, Roaming, Read report, Delivery report.
- Filter: include Anonymous and Advertisement.
- Server profile: include Rename profile, Homepage, Data account, Connection type, User name and Password.
- Memory status: view Usage, Used space, Free space.

5.2.8 Voice mail server

This will automatically direct incoming calls to the voice mail centre when you cannot accept a call so that the caller can leave a message on the voice mail system of service network. If a message is left, you can access the message by visiting the voice mail system.

5.2.9 Broadcast message

Broadcast messages refer to public messages sent by your network operator. If you use the broadcast message service you can receive messages on all different subjects from your network operator such as: the weather, taxis, hospitals, etc. Please contact your network operator for available subjects.

Note: The network operators must support the "Broadcast Message" function for it to be available.

5.3 Call center

5.3.1 Call history

Your phone can store your last call all the time and use the time to call. Into the phone records to see phone records list the following:

5.3.1.1 All calls

Show all the call history in this menu. Press the **left soft key "Ok"** to look over call info. Press the **dial key** to dial the phone.

View to show the call history details.

Call to call up the current number.

Send text message to send the SMS to this number

Send multimedia message to send the MMS to this number

Save to Phone book to save the current number to phone book.

Add to Blacklist to add this number to blacklist

Delete to delete the current record.

Delete all to delete all the records.

Advanced

- Call timers: press left softkey to confirm, select to check last call duration, dialed calls 'duration, received calls' duration, reset all.
- Call costs: press left softkey to confirm, select to check last call cost ,all call's costs, set to zero, costs limit, price and rates
- Text msg. counter: press left softkey to confirm, select to check the quantity of sent and receive messages
- **GPRS counter:** press left softkey to confirm, select to check the GPRS transmission flux. Included "last sent", "last received", "all sent" and "all received" flux (units: Byte), and also can clear the history by "set to zero" function.

5.3.1.2 Dialed Calls

Enter "Dialed Calls" submenu, show the dial calls list of the current record. Select a record, press the **left soft key** "Ok" to look over call info. Press the **dial key** to dial the phone.

Press the left soft key "Option"; operate same with "All Calls".

5.3.1.3 Received Calls

Enter "Received Calls" submenu, show all received calls list of the current record. Select a record, press the **left soft key** "Ok" to look over call info. Press the **dial key** to dial the phone.

Press the left soft key "Option"; operate same with "All Calls".

5.3.1.4 Missed Calls

Enter "Missed Calls" submenu, will show the message of missed calls. Press the dial key to direct dial the phone.

Press the left soft key "Option"; operate same with "All Calls".

5.3.2 Call settings

5.3.2.1 SIM Card 1/ Card 2 Call settings

In this menu, you can setup the call divert, call waiting etc functions.

■ Call waiting ON/ OFF or to check the call waiting function

■ Call divert You can set and cancel the incoming call diversion function of your

mobile phone.

Call barring select to limit some call functions.

Notice: required network provider's support

5.3.2.2 Advance settings

Black list

Set up black list number and turn on or off this option.

> Auto redial

Turn on or off this option, can activate or deactivate this function.

➢ IP Dial

Mobile phone support IP dial function, it can setup at most 3 group IP number.

Select one of the IP number, press ok key to enter into the options menu to op or edit the IP number.

> Call time display

Turn on or off this option, can activate or deactivate this function.

> Call time reminder

Turn on or off this option, can activate or deactivate this function.

> Auto quick end

Turn on or off this option, can activate or deactivate this function.

5.4 Settings

5.4.1 Dual SIM settings

In the submenu, you can select **Dual SIM open**, **Only SIM1 open**, **Only SIM2 open** or **Flight** mode.

5.4.2 Phone settings

Enter the "Phone settings" submenu. Here you can make the following settings:

5.4.2.1 Time and Date

This menu includes options for setting the time and the date.

- Set home city there are many international city for select
- Set time/date setup the clock and date of the phone
- Set format setup the time to 12-hour or 24-hour format. Also can setup the date format.

5.4.2.2 Schedule power on / off

Setup the specified time to power on/ off the phone, you can setup 4 times,

5.4.2.3 Language

Setup the phone language. It contains a number of national language.

5.4.2.4 Pref. input methods

There are kinds of types of input method in the phone, setup one of the methods to be the default input method

5.4.2.5 Dedicated key

In this menu, you can **Edit** the shortcut function of **navigation keys** on standby: **Up** key, **Down** key, **Left** key and **Right** key.

5.4.2.6 Misc. setting

Setup the time length of LCD backlight.

5.4.3 Display

Setup the phone's wallpaper, screen saver and ON/ OFF animation

- Wallpaper setup the standby image.
- Analog clock screen saver Open the analog clock screensavers
- Screen saver setup whether to open the screen saver function, setup how long to into the screen saver and select the screen saver image.
- Power on display one method of Power on display's
- Power off display the operation is the same to Power on display.

- Show date and time setup the date and time display in idle on or off
- Show owner number setup the owner number display in idle on or off.

5.4.4 Network settings

5.4.4.1 Network selection

Enter into the menu; you can select re-search, network and mode method to get the network service. Select mode can select "auto" or "menu" mode by press left soft key

5.4.4.2 Preferences

Preferred network network provider which select priority while the mobile phone searching the network, enter into the menu, it will display the priorities network provider lists which customized by the user. Press left soft key to enter the "options" menu, and it includes "add from the list", "new", change the priorities" and "delete" setup items.

5.4.5 Security settings

Enter into the "security settings" menu, you can setup the SIM card 1/ card 2 security options to avoid mobile phone or SIM card be illegal use.

5.4.5.1 SIM Card 1/ Card 2 Security

- SIM card lock you can prevent the illegal use of the SIM card by using the PIN code to lock the SIM card. Notice: after enter PIN code three times error, the SIM card will be locked, you need to use the PUK code to unlock it. PIN code and PUK code will provide to you together. If not, please contact you network provider, the default PIC code normally is 1234, please change to your own password ASAP.
- **Fixed dial** to restrict your outgoing calls to select phone numbers if this function is supported by your SIM card.
- Change password to change the security code of PIN 1 and PIN 2 of SIM card 1/ card 2

5.4.5.2 Phone lock

Phone lock will prevent others to theft and use your mobile phone.

After activate the function, required input the correct phone code while switching on the phone or restore the default setting,

Notice: the default phone code is 0000, please change to your own password ASAP.

5.4.5.3 Auto keypad lock

Setup the phone to auto lock the keypad function. Select menu and press off (auto keypad lock function invalid), 5 seconds, 30 seconds, 1 minute or 5 minutes to lock the keypad, the keypad will auto lock while without any operation in standby mode.

Notice: if the keypad is locked in standby mode, press left soft key first, then press send *key to unlock.

5.4.5.4 Change password

Phone lock will prevent others to theft and use your mobile phone. Enter into this menu to change PIN code, PIN 2 code and phone password.

Note: in order to change the password successful, please must be enter 4 - 8 numbers

5.4.6 Restore factory settings

Enter the security code, the phone will restart and the menu settings will reset to their original values.

Notice: Restore factory settings code is 0000.

5.4.7 Sound effects

You can setup the audio effect.

5.5 Multimedia

5.5.1 Mobile TV

Into menu press OK key to **update list**. Select your own **location** and then press OK key.it will seach the channel automatically.

Press left soft-key "options" to the following operation:

Play play the channel which you selected
Update list select areas and then search channels

Rename change another name of the channel which you selected

Delete the channel which you selected

press left right direction key adjust the volume on television, adjust up-key to a upward channel adjust down-key to a downward channel

Settings can set brigthess, contrast, saturation audio mode
Storage can set storage path and delete all channels

5.5.2 Image viewer

Select the album sub-menu, you can quickly view files stored in an album . Please refer to the specific use of camera features in the album operation.

5.5.3 Video recorder

In the video recording interface, enter into the "options" menu to setup or save..

5.5.4 Video player

Play or manage the video files which storage in this play, includes video, 3GP, MP4 files etc.

NOTICE: ONLY CAN PLAY THE VIDEO FILE WHICH STORAGED IN THE "FILES MANAGEMENT/ MOBILE PHONE OR MEMORY CARD/ VIDEO" FOLDER.

Ok key: pause or continue to play the video. And also press number "0" key to pause or continue to play the video. Press up/down key to adjust the volume.

5.5.5 Audio player

In the music player interface, press "confirm" key to enter into the music play list, select anyone music to play, check the detail information, setup to be a ring-tone (setup this music to be an alternative ring-tones), update the play lists, music player settings operation. Press *key or # key to adjust the volume.

5.5.6 Sound recorder

You can take a recorder in this function. In the play mode, use "*" key and "#" key to adjust the volume. Press OK button to record. After record, access Options. After entering the file list, select

one file, access to Options.

5.5.7 FM radio

Select "FM radio" submenu, then press the left soft key "OK" to enter FM interface. Press the*,# key to adjust volume; press the down key to turn on/off the FM radio; press the up key to switch the Manual Search and the Auto Search.

5.6 Camrea

This mobile phone is equipped with a high vivid camera which you can use to take pictures at anytime or place and then save them on your memory card, use them as your mobile phone wallpaper (main screen size) or send them to your friends and colleagues via MMS.

In the multimedia menu interface, press the up/down keys to scroll and select "Camera".

5.7 Services

In the main menu interface, press the navigation key to select "Services".

5.7.1 SIM1/2 STK*

Press the **up/down keys** to select "**STK**". Press the **Ok key** to enter the "**STK**" main menu. Here you can use the value-added services provided by your network operator.

5.7.2 Facebook

Facebook is a social utility that connects people with friends and others who work, study and live around them.

5.7.3 Ebuddy

You can enter into Ebuddy homepage which chat on any device with a browser.

5.7.4 MSN

After entering to enter your user name and password to login MSN chat.

5.7.5 Yahoo

You can enter into yahoo homepage.

5.7.6 Internet sevice

Your mobile phone supports wireless application protocol (WAP) service. You can access many different WAP services such as news, weather reports, flight information, and others. These services are especially designed for mobile phones and maintained by WAP service providers.

In the services main menu, press the **up/down keys** to scroll and select "**WAP**" and press the **Ok key** to enter menu Here you will see the following menu options: "**Homepage**", "**Bookmarks**", "**Recent pages**", "**Offline pages**", "**Input address**", "**Service inbox**" and "**Settings**".

5.7.7 Data account

5.7.7.1 GPRS

In this menu, the mobile-phone will list **Data account** listing of GPRS data. You can select and edit the GPRS data

5.8 Organizer

5.8.1 Extra

5.8.1.1 Bluetooth

You can connect your phone to the compatible device through Bluetooth wireless technology; the longest distance is 10 meters. Because it is through radio waves to communicate, so your phone and other Bluetooth devices are not required to keep face to face, but it may interfered by the wall and other electronic equipment.

In some areas, it may be limit to use the Bluetooth wireless technology, please consult local department or network service provider.

Notice: use the Bluetooth wireless function and running other applications in the background, these features may faster consume the battery voltage, and short the battery life.

5.8.1.2 Calculator

Your mobile phone provides a calculator with 4 basic functions to facilitate simple calculations.

5.8.2 Calendar

Enter into the calendar menu, to see the schedule, new issues, skip to the specified date, to view a week and the operation of Lunar New year.

Notice: Lunar will not display while setting the phone language to English.

5.8.3 Tasks

Show all the schedules. In options menu, in includes view, add, edit, delete, delete all and send the schedule functions. (The operation is same as the memo of calendar)

5.8.4 Alarm

The phone can setup 5 alarm clocks (still effective while the phone is switch off), the default settings is off. Select anyone of the alarm clock, press ok key to select edit to setup.

5.8.5 World clock

Enter into the world time menu; the screen will display the world time zone map, View current time of corresponding zone of various countries in the world through left right key.

5.8.6 Torch

To turn on or off light

5.9 User profiles

Your mobile phone provides many different user profiles for you to set your mobile phone's ring tone, according to case and environments.

In the main menu interface, select "User profiles". Press the Left soft key to enter the "User profiles" main menu where you will be able to see the options: "General", "Meeting", "Outdoor", "Indoor", "Headset" and "Bluetooth".

Note: These six profiles have already been set and the default profile is "General" when the mobile phone leaves the factory. On entering number of dialing interface, hold down # key to quickly turn silence

on or off.

5.10 FUN & Games

Games

The phone offers interesting games, for detailed operation, please view game operation specification.

5.11 Files manager

Enter into the files management menu, the screen display the mobile phone and memory card icon (make sure the card has been inserted). The screen will show the storage capacity and available space of above two storage devices. In this menu,

Notice: you will lose all the information in the file system after format.

5.12 Shortcuts

You can edit the shortcut menu, it will display in the [shortcuts] menu.

FCC RF EXPOSURE INFORMATION:

WARNING!! Read this information before using your phone

In August 1986 the Federal Communications Commission (FCC) of the United States with its action in Report and Outer FCC 96-326 adopted an updated safety standard for human exposure to radio frequency (RF) electromagnetic energy emitted by FCC regulated transmitters. Those guidelines are consistent with the safety standard previously set by both U.S. and international standards bodies. The design of this phone complies with the FCC guidelines and these international standards. Use only the supplied or an approved antenna. Unauthorized antennas modifications, or attachments could impair call quality, damage the phone, or result in violation of FCC regulations. Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Please contact your local dealer for replacement antenna.

BODY-WORN OPERATION:

This device was tested for typical body-worn operations with the back of the phone kept 1.5cm from the body. To comply with FCC RF exposure requirements, a minimum separation distance of 1.5cm must be maintained between the user's body and the back of the phone, including the antenna, whether extended or retracted. Third-party belt-clips, holsters and similar accessories containing metallic components shall not be used. Body-worn accessories that cannot maintain 1.5cm separation distance between the user's body and the back of the phone, and have not been tested for typical body-worn operations may not comply with FCC RF exposure limits and should be avoided.

For more information about RF exposure, please visit the FCC website at www.fcc.gov

Your wireless handheld portable telephone is a low power radio transmitter and receiver. When it is ON, it receives and also sends out radio frequency (RF) signals. In August, 1996, the Federal Communications Commissions (FCC) adopted RF exposure guidelines with safety levels for hand-held wireless phones. Those guidelines are consistent with the safety standards previously set by both U.S. and international standards bodies:

<ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansice="15"><ansi

Those standards were based on comprehensive and periodic evaluations of the relevant scientific literature. For example, over 120 scientists, engineers, and physicians from universities, government health agencies, and industry reviewed the available body of research to develop the ANSI Standard (C95.1). Nevertheless, we recommend that you use a hands-free kit with your phone (such as an earpiece or headset) to avoid potential exposure to RF energy. The design of your phone complies with the FCC guidelines (and those standards).

Use only the supplied or an approved replacement antenna. Unauthorized antennas, modifications, or attachments could damage the phone and may violate FCC regulations.

NORMAL POSITION:

Hold the phone as you would any other telephone with the antenna pointed up and over your shoulder.

TIPS ON EFFICIENT OPERATION:

For your phone to operate most efficiently:

- Extend your antenna fully.
- Do not touch the antenna unnecessarily when the phone is in use. Contact with the antenna affects call quality and may cause the phone to operate at a higher power level than otherwise needed.

Vehicle mounted external antenna (Optional, if available))

A minimum separation distance of 7.9 inches (20cm) must be maintained between the user / by stander and the vehicle mounted external antenna to satisfy FCC RF exposure requirements.

RF Exposure Information:

FCC RF Exposure requirements: This transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: The manufacturer is not responsible for any radio or TV interference caused by unauthorized modifications to this equipment. Such modifications could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- -Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- -Consult the dealer or an experienced radio/TV technician for help

Do not use the device with the environment which below minimum -10 $^{\circ}\!\text{(}$, the device may not work.

Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.