

Catalogue

Specifications	2
Basic information	2
Key Instruction	2
Interface Icons	2
Install the battery	3
Insert SIM card	3
Insert SD card	3
Insert headphones	3
Insert charger	3
Power on/off your phone	4
Function Menu	5
Contacts	5
Call logs	5
Settings	6
Phone settings	6
Display	6
Security	6
Call settings	7
Connections	7
Kepad voice number	7
Incoming call soud	8
SOS	8
Internet	8
Messaging	8
Camera	9
DV	9
Profiles	9
Calendar	10
Audio	10
Video	10
My files	10
Bluetooth	11
WLAN	11
Hotspot	11
Image	12
FM radio	12
Calculator	12
Recorder	13
Clock	13
STK	13
Torch	13
Cloud phone	13

Specifications

Basic information

Phonebook capacity	Support contacts	2000	Camera/DV	Support
Speaker	Support		Audio/Recorder	Support
SMS	Support		Wi-Fi	Support
Alarm clock/Calendar	Support		USB Mode/Memory Card	Support

Key Instruction

Key Name	Function Description
Menu key	1. In standby interface can enter the main menu 2. Answer a call
Send key	1. Make or answer a call 2. Press Send key in standby mode to show all the call log
Back key	1. End an active call or reject a call 2. Press back key in standby mode show the phonebook
End key	1. End an active call or reject a call 2. Hold this key to power on/off 3. Exit from any interface to standby mode
Up/Down key	1. Scroll the cursor up and down
Left/Right key	1. Scroll the cursor left and right
0~9 key	1. Enter numbers or characters while editing text 2. Voicemail dialing(1) 3. Press 1 key to insert common symbols while editing text,excluding the numbers input mode
#key/*key	#key Press#key to change the input mode while editing text *Key Press*key to display the symbols window in the text input mode

Interface Icons

Icon	Description
	GSM system signal strength

	Current battery level display
	Missed a call
	New message
	Alarm
	WiFi signal strength
	Secure Digital Card

Install the battery

1. Put the battery in the battery compartment, note that the metal end of the battery should be firstly inserted.
2. Put on the back cover.

Insert SIM card

1. Power off the phone and remove other external power.
2. Take off the back cover and remove the battery of the phone.
3. Insert SIM card into the SIM card slot in the phone.

Insert SD card

1. Turn off the phone power and disconnect other external power sources.
2. Remove the back cover and remove the battery from the phone.
3. Insert the SD card into the SD card slot of the phone.

Insert headphones

1. The headphone jack is located directly upper left the phone and can be used with standard or 3.5mm headphones.
2. Before inserting headphones, please lower the volume of the audio to avoid damaging the ears.

Insert charger

1. The charging location is directly lower left the phone, using the standard charger or Type-C

interface charger.

2. Please ensure that the battery is on the phone before charging.

Power on/off your phone

1. Hold the End key to power on the phone. The phone will automatically search for the network.
2. When the phone is powered on, hold the End key to power off the phone.

Function Menu

Contacts

You have 2 phonebooks in this mobile phone:SIM card and the mobile.The mobile can store 2000 or more phone numbers and the SIM card's capacity depends on its type.

New:Create a new contact.

Write message:Write a message and send the text messages to this current record.

Call:Make a call of current number.

Delete:Delete the current record.

Delete multiple:Delete the selected contacts.

Import/Export:Import T card contacts to the phone/Export phone contacts to T card/copy SIM1 or SIM2 contacts to mobile,or copy phone contacts to SIM1/SIM2.

Send vCard:Send the vCard by SMS or MMS or Bluetooth.

Sync Android via BT:Synchronize contacts on Android phones.

Others

[Speed dial]:Speed dial can be set up.

[Own number]:Easy to manage,search and identify one's own phone number.

[Service number]:A phone number used to provide specific services or support.

[Memory status]:Check the storage capacity of the SIM card and phone contacts.

Call logs

Can query all call records of the mobile phone.

Missed calls:Display the missed calls about the latest time and date,caller's number and calling times.

[Details]:See the current record.

[Call]:Call the current number.

[Write message]:Send text messages to the current record.

[Add to contacts]:Save the phone number to contacts.

[Add to blacklist]:Add the current to the blacklist.

[Delete]:Choose to delete the current record.

[Delete all]:Delete all the records.

Dialed calls:Display the dialed calls about the latest time and date,caller's number and calling times.

Received calls:Display the answered calls about the latest time and date,caller's number and calling times.

Rejected calls:Display the Rejected calls about the latest time and date,caller's number and calling times.

Delete all:Clear all call records.

Call timers:Can view the duration of the call.

Data service counter:Can view data usage.

Settings

Phone settings

Time&date

[Set time/date]:Set the display date and time.

[Time format]:Choose the time and date format.

[Date format]:Choose the date format.

[Update time settings]:Turn on or off to automatically update the time according to the time zone.

Language settings

[Display language]:Display Language for your mobile.The mobile provides English,Español.

[Writing language]:Set the Pref.input method.

Shortcut settings:Define shortcuts to navigation keys and right key.

Auto power on/off:Set the automatic power on/off time.

Power management:Can view the percentage of remaining battery power.

Restore factory settings:Restore all settings and restart the phone.

(Note:The default password for the phone is 1234)

Display

Animation effect

[power on display]:Customize the animation display when starting the machine.

[power off display]:Customize animation display when shutting down the machine.

Wallpaper settings:Set the stand-by wallpaper.

Idle display settings:The following functions are displayed or not on the standby interface(Time&date/SIM1/SIM2/Today's schedule/Timer/Music/FM radio/STK/WLAN).

Screen saver settings:Turn on or off the screensaver.

Contrast:Press the left and right keys to adjust the screen brightness.

Keypad backlight time:Choose keypad backlight time for 20 secs,10 secs,5 secs Night mode and off.

Auto keypad lock:Choose the keypad lock for off,15 secs,30 secs,1 min,5 mins.

Security

PIN:Activate or deactivate SIM1/SIM2 PIN lock.

Modify PIN2:Set new passwords including PIN1,PIN2 and phone password.**Note:**Please remember your password firmly in time after changing.

Fixed dialling number:To set the fixed number(**Note:**If your SIM card supports can be restricted only to dial the selected phone number.When this feature is turned on,only a fixed dial-up table can call the phone number or a few figures in the table at the beginning of the phone number).

Phone locked:Activate or deactivate the Phone lock.(The default password is 1234).

Modify the cellphone password: Set new passwords for phone Lock. Note: Please remember your password firmly in time after changing.

Privacy: You can lock the application here. (The default password is 1234).

Lock screen by end-key: Turn on this feature to lock the phone by pressing the power button.

Blacklist: This function can help you block incoming calls that you don't want to answer.

Call settings

Dual-SIM

[Standby mode]: You can choose SIM1/SIM2/Flight mode/select when power on.

[Set SIM name]: Can set SIM name.

Call forwarding: Choose SIM1/SIM2 to open, close or enquire the call forwarding function.

Call waiting: Select SIM1/SIM2 to open, close or inquire call waiting.

Call barred: Select SIM1/SIM2 to open, close or inquire call barred.

Hide ID: Select SIM1/SIM2 to hide ID or display own ID or display ID by network.

Others

[Call time minute reminder]: You can set a time in advance, and when this time is reached during the call, the phone will emit a prompt sound.

[Auto redial]: Choose whether automatic redial will be implemented when the called party is in the busy or have no response.

[Vibration when connected]: Vibrating reminder during connection.

[Reply SMS after reject]: Reject answering and reply with text message.

Auto record voice call: After activation, recording will automatically start during the call.

Connections

Network account: APN is an important parameter in mobile network settings, usually used to connect to mobile data networks. It defines how the device accesses the Internet through the operator's network.

Data service: Turn on or off data service. (Main: Unable to access internet service after shutdown)

Data roaming: Turn on or off data roaming.

Preferred data selection: Choose to use SIM1 or SIM2 data traffic to access the Internet.

Network selection: Select automatic or manual method to search the network.

Network type: Choose network type: 4G/3G/2G.

Voz4G: Voz4G is a high-quality voice call that can be enabled or disabled on 4G Voz networks.

Kepad voice number

Enable this function, pressing the numeric keypad will emit the corresponding sound.

Incoming call sound

Enable this feature, the phone will play the caller's number when making a call.

SOS

SOS number list: Can set up 5 emergency numbers for help.

SOS message setting: You can edit the content of emergency help messages. When you press the SOS button, this message will be sent to the set emergency help number.

SOS settings: Turn on/off SOS kinetic energy and SOS assistance methods here.

Internet

This machine supports obtaining and displaying information on web pages by entering URLs or clicking on links. After connecting to WLAN, you can access the browser through WLAN.

Enter URL: Enter the complete address to access the webpage.

Bookmarks: Bookmarks can save web page links and provide quick access to websites without the need to enter URLs or search in search engines every time.

History: Through historical records, it is easy to view and review websites that have been visited before.

Messaging

Mobile phones support SMS and MMS communication methods for sending and receiving short text messages through mobile phone networks.

New chat: You create SMS messages in this menu.

Drafts: View the draft you saved.

Delete: Deletes the current message.

Delete all: Delete all text messages in the selected list.

Call: Call the contact of the selected text message.

Mark: Select multiple or all contacts to delete.

Sort: Categorize the messages by time or name

Templates: Some SMS templates are provided, also, you can edit some by yourself.

Settings: Set the message configuration and can be view the memory information of message box.

Push message: You can view the push messages.

Security inbox: Enter the password, you can view the secure messages

Cell broadcast list: You can view the Cell broadcast messages

Voice mail server: You can view and set the voice mail server

Message capacity: You can view Message capacity of SIM or phone.

Camera

This feature allows you to feel the endless charm of the imaging world, your digital camera in time to capture a brief moment, beautiful photos become memory.

More options

[Shoot mode]: Choose DC or DV mode.
[Flash]: Choose whether to turn on the flash.
[Size]: Choose the resolution of the camera.
[Night mode]: Turn on night mode.
[Brightness]: Press the up and down keys to adjust the camera brightness.
[Contrast]: Press the up and down keys to adjust the contrast.
[Cont.shot]: Continuous photography setting.
[White balance]: Set camera white balance.
[Delay]: Set delayed photography.
[Effect]: Set up special effects photography.
Image viewer: Preview pictures taken and saved in your phone.
settings: Set camera quality, shutter sound, and storage location.
Help: You can check the instructions for the camera.

DV

More options

[Shoot mode]: Choose DC or DV mode.
[Flash]: Choose whether to turn on the flash.
[Size]: Choose the resolution of the camera.
[Brightness]: Press the up and down keys to adjust the camera brightness.
[Contrast]: Press the up and down keys to adjust the contrast.
[Effect]: Set up special effects photography.
View video directory: Preview the recorded video on the phone.
settings: Set the banding, audio, video format, and storage location.
Help: You can check the instructions for the DV.

Profiles

There are Normal mode, silent mode, meeting mode, indoor mode and outdoor mode, You can pre-set the functions in each mode.

Rename: Rename the current mode.

Ring settings: Customize ringtones for incoming calls and text messages.

Adjust volume: Adjust the volume of caller ringtone, message ringtone, alarm & calendar ringtone, call volume, and power ringtone settings.

Ring type: Select modes such as mute, vibration, etc.

Other alert rings: Button sound, power on/off, low battery mode selection.

Calendar

To access the Calendar,press the left soft key.The first row displays year and month;the second row displays week;the middle part displays dates for a specific month;and the last row displays the two soft keys.In the calendar mode,view the previous week by pressing the up navigation key and the next week by pressing the down navigation key;View the previous day by pressing the left navigation key and the next day by pressing the right navigation key.The selected date is displayed in deep color.

Audio

The audio player can be play MP3 file and so on,Press the up and down keys to adjust the volume, and press the left and right keys to switch between the previous/next song.

Music list:Go to the playlist and select a list to play the music.

Add:Add the music to the saved play list or to a new play list.

Set as ringtone:Set the music as incoming call ringtone or alarm ringtone.

Shuffle:Turn on or off shuffle.

Repeat:Setting Repeat mode.

Settings:Set up relevant information of music player.

Open review:Playback the music.

Exit:Exit audio player.

Video

Play user has recorded/downloaded video files;select a video according to the Options menu has the following functions.

Open:Open local browse or internet browse or local play list.

Fullscreen play:Videos are played in full screen.

Adjust brightness:You can adjust the video brightness.

Repeat:You can set up a loop to play all videos or a single video.

Shuffle:Turn on or off shuffle.

Set as:Set the selected video to screen saver or power on/off display.

Local video play mode:Switchable audio and video synchronization modes.

Details:View detailed information of the video.

Settings reset:Restore all settings of the video.

Help:If you have any questions,please refer to the help.

Exit:Exit the video player.

My files

You can manage and assign several folders in this menu by transferring,copying and moving the

files saved in these folders.

New folder: Create a new folder.

Delete: Delete a folder.

Details: Check the file details

Edit: Can rename or copy or cut the file.

Search: Enter the keywords can to search in the file manager.

Sort: Files can be classified by name, time, etc.

Mark: Select multiple or all files to delete.

Memory status: View phone/memory memory; Format phone or memory card; Rename memory card.

Bluetooth

Bluetooth is a wireless technology standard used for data exchange and device connectivity over short distances.

Bluetooth: Press the left soft key 'Activate' to activate Bluetooth.

Bluetooth Visibility: Turn off this feature, others using Bluetooth will not be able to search for your device.

Paired device: Search for nearby devices.

Device name: Set the Bluetooth name for the current device.

Bluetooth file storage: Storage location when using Bluetooth to receive files.

Help: For more detailed information, please refer to the help.

WLAN

This machine supports wireless hotspots, and you can connect to them for internet access. The signal icon represents the strength of the signal, while the lock indicates that a password is required to connect.

WLAN: Enabling this feature will automatically search for nearby wireless networks, and you can connect by entering your account password.

Refresh: Refresh nearby wireless networks.

Add WLAN network: Enter the name of the attached wireless network to connect.

Hotspot

This machine supports providing mobile network data for other devices to use. To use this feature, a valid SIM card is required.

Hotspot: After enabling this feature, wait for other devices to connect.

Hotspot name: Modify the hotspot name of the current device. Others will find this device by the hotspot name.

Encryption type: Choose whether a password is required for connection.

Hotspot password: You can customize the password required for other devices to connect to this

device.(Hotspot needs to be turned off to set up).

Advanced settings

[Max connected num]:The maximum number of connections that can be made.

[Hide SSID]:Hide your device,others can only connect by entering the hotspot name.

Connected device list:View currently connected devices.

Image

View or modify photos saved in the album.

Set as wallpaper:Use the picture as wallpaper.

Power on/off display:Use the picture as power on/off display.

Screen saver:Use the picture as Screen saver display.

Set as contact icon:Use the picture as contact icon.

Delete:Delete the picture.

Share:Share via MMS or Bluetooth.

Edit image:Edit the current photo and generate a new one.

Mark:Select multiple images for operation.

Rename:Rename the image.

Slide play:The image will be automatically played using a slideshow.

Details:View detailed information of photos.

FM radio

This phone support the FM radio function.The up and down keys can adjust the volume, and the left and right keys can adjust the channel.

Auto search and save:Automatically search for FM channels and save them in the list.

Channel list:Set up the channel list and frequency

Save:Save the FM Channel.

Manual search:In put the frequency by manual.

Open speaker:Turn on the speaker to play FM.

Background play:Play FM in the background.

Record:To open or close the recording.

Timing record:Regularly turn on FM and record sound.

Recording file list:The recorded files will be saved here.

Storage:Choose a phone or SD card to save files.

Help:If you have any questions,please refer to the help.

Calculator

The cell phone support continuous four mixed arithmetic operation and the operation is simple, practical and convenient.

Recorder

The mobile recording function can help you record call content,meetings,lectures,or other important information.

Recording started:Click OK to start recording.

Record file list:View the recording files.

Storage:Set the recording file save path.

File format:Set recording file save format.

Clock

This feature integrates world clocks,alarms,stopwatches, and timers.

World clock:Clock displaying the time of major cities around the world.

Alarm:Set up to 3 alarm clock on your phone,an alarm clock is used to remind you to perform an activity at a specific time.

Stopwatch:A stopwatch that records time.

Timer:Press the up and down keys to adjust the time, and an alarm will sound when the time is up.

STK

STK is a standard for GSM systems that allows SIM cards to activate and control mobile device functions.It provides a set of application programming interfaces for the interaction between SIM cards and mobile devices,allowing operators to update and manage services without replacing SIM cards.

Torch

Click On/Off to turn on or off the flashlight.

Cloud phone

This phone supports cloud services and does not require local installation to access applications such as Facebook,YouTube,Music,Tik Tok,etc.

15.19 Labeling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and(2) this device must accept any interference received, including interference that may cause undesired operation.

15.21 Information to user.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Absorption Rate (SAR) information:

This mobile phone meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. This device was tested for typical body-worn operations with the back of the handset kept 1.0cm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain a 1.0cm separation distance between the user's body and the back of the handset. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

Body-worn Operation

This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 1.0 cm must be maintained between the user's body and the handset,including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.