

PORTABLE ELECTRONIC **KEY FINDER**



IMPORTANT: KEEP THIS INSTRUCTION MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT SAFETY INFORMATION.

©2011 Sharper Image Holdings, LLC. All rights reserved. THE SHARPER IMAGE® name and logo are registered trademarks of Sharper Image Holdings, LLC used under license by MerchSource, LLC. All other logos and trademarks are proprietary to their respective owners. The artwork and design of this package are protected by US copyright law and may not be reproduced, distributed, published or used for any purpose without prior written permission. Altering, removing or reproducing any of the trademark or copyright notices on this package is not permitted.

©2011 MerchSource, LLC. All rights reserved.

Distributed by MerchSource, LLC, Foothill Ranch, CA 92610.

PATENT PENDING

For customer support, please visit www.mscustomercare.com or call 1-800-374-2744

Printed in China.

INTRODUCTION

The Portable Electronic Key Finder is a device that makes finding keys simple. The everyday hassle of finding lost keys is eliminated with the touch of a button. You can count on an alarm to direct you to your keys. Whether your keys are lying close by or up to 45 feet away, the Portable Electronic Key Finder's wireless transmitter will locate your keys while being carried in-hand with ease. This package includes a remote transmitter, two key ring fobs, and a tabletop cradle for storage.

CONTENTS

Safety Information and Warnings	1
Parts	2
Battery Installation	3
Operation	4

SAFETY INFORMATION AND WARNINGS

All of the safety and operating instructions should be read, understood and followed before the unit is operated.

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- . Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio TV technician for help. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device may accept any interference received, including interference that may cause undesired operation.

SAFETY WARNINGS-PLEASE READ CAREFULLY This is not a children's product. Small parts, especially the button cell batteries, pose a choking hazard to young children the product appears cracked or broken in any manner, discontinue use and discard immediately.

BATTERY WARNING:

- DATIENT WANNUNG.

 **Do not mix oli and new batteries.

 **Do not mix oli and new batteries.

 **Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.

 **Insert batteries using the correct polarity. Do not short-circuit the supply terminal.

 **Remove batteries when not in use, Recycle or dispose of exhausted batteries according to federal, state, and local laws. Do not dispose of batteries in a fire they may leak or explode.

 **Only use manufacturer specified battery(ies), charger(s) and/or adapter, if applicable, specifie by the manufacturer.

 **Always use, replace, and recharge (if applicable) batteries under adult supervision.
- KEEP THIS INSTRUCTION MANUAL FOR REFERENCE AS IT CONTAINS IMPORTANT INFOF

PARTS

- 1. Remote Transmitter
- 2. Transmitter Cradle
- 3. Key Fobs (2)
- 4. CR2032 Button Cell Batteries (4)



Figure A

لمها

CR2032 LITHIUM


2

INSTALLING BATTERIES

REMOTE TRANSMITTER

Requires 2 AAA batteries (not included).

- 1. Grasp the back cover of the transmitter and firmly slide it down to access the battery compartment inside.
- 2. Insert 2 "AAA" 1.5V batteries into the transmitter, aligning the polarity (+/-) of the batteries to match the labels provided inside the battery compartment.
- 3. Reattach the back cover of the transmitter. Start by positioning the cover on the device with the top edge aligned at the level of the top-most screws, and then firmly push the entire cover up.

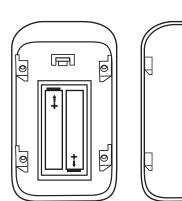


INSTALLING BATTERIES (continued)

FOBS

Each requires one CR2032 button cell battery (included). NOTE: There are four CR2032 button cell batteries included. Two must be installed prior to your first use and the other two are replacements. Follow these steps for first time installation

or if the batteries need to be replaced.

- Grasp the back cover and screw off counterclockwise. See Figure A.
- 2. Insert a new battery into the metal slot, ensuring the "+" side of the battery is facing up. The FOB will make its characteristic beeping sound as it is inserted into the slot.
- 3. Replace the back cover by screwing it clockwise back onto the FOB. See Figure B. NOTE: Be sure that the "OPEN" markings are facing the bottom as you screw on the cover. This will ensure that the pieces are properly aligned.

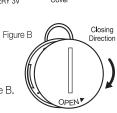

OPERATION

- 1. Attach the number-coded FOB's to key rings or other appropriate devices to be located.
- 2. Press the corresponding number-coded button on the Remote Transmitter in order to locate the desired FOB.
- 3. If the FOB is in range (45 feet), it will emit an audible beep.
- 4. If no beep is heard, change your location and press the button again. Note: The Remote Transmitter is portable, so it can be removed from Tabletop Cradle and carried with you to find devices attached to a FOB.

3

1

4