

BLUETOOTH TOWER SPEAKER 60W

BlueSYNC STW

No.: FW-1601-1



Instruction manual



READ THIS INSTRUCTION MANUAL BEFORE OPERATING THE APPLIANCE.
AND SAVE IT FOR FUTURE REFERENCE.



 
This symbol indicates that this product incorporates double insulation between hazardous mains voltage and user accessible parts.



Warning: Danger of explosion (batteries)
Insert the batteries with the correct polarity. Use the correct battery Type.

SAFETY PRECAUTIONS

The purpose of these precautions is to ensure user safety and prevent property damage. Be sure to read and observe all safety precautions when using this bluetooth tower speaker, especially when children are present.

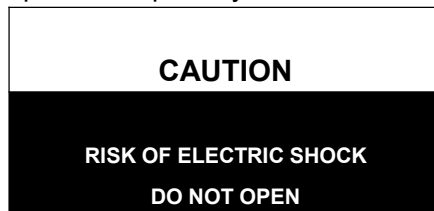

The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of un-insulated “dangerous voltage” within the products’ enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intend to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

1. Read, keep and follow these instructions.
2. The appliance is only for domestic use.
3. Please use this apparatus in moderate climates.
4. Make sure to have a minimum distance of 5cm around the unit for sufficient ventilation.
5. Check that the voltage on the type plate of your appliance corresponds with your house electricity supply (type plate is located on the back of the unit).
6. Do not use this apparatus near water.
7. Do not block any of the ventilation openings. Install in accordance with the manufacturer’s instructions.
8. No naked flame source, such as lighted candles, should be placed on the apparatus.
9. The unit shall not be exposed to excessive heat such as sunshine, fire, or the like.
10. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

11. When the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
12. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
13. Only use attachments/accessories specified by the manufacturer.
14. Unplug this apparatus during lightning storms or when unused for long periods of time.
15. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
16. Do not use a damaged power cord or plug or a loose outlet. Doing so may result in fire or electric shock.
17. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.
18. Do not let children play with the product.
19. Do not store the product in extremely cold or warm environments.
20. The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
21. The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location

NOTE: when the system is switched to standby mode, it is still consuming some power. To disconnect the system completely, remove the AC power plug from the wall outlet.

GETTING STARTED

- Read the instruction manual carefully.
- Remove the equipment from the box.
- Remove packaging and save it for future use (for example when moving the unit).

FEATURES

- Two main speakers + One Subwoofer
- Bluetooth® Connectivity
- Aux Jack Included
- 3.5mm Aux Cable Included
- USB Port for Playing MP3
- USB Port for Charging (5V,1A)
- FM Radio

- LED Display
- Wireless Remote Control

 
BOX CONTENT

- Instruction manual x 1
- AUX in cable x1
- Main unit x 1
- Remote Control x 1
- Base x1
- Assembling Screw x4
- Screw Washers x4
- AC Adapterx1

DESCRIPTION OF PARTS


Top Panel

- 1. Slot for Remote Control**
- 2. Power Button**
Press to power on or off.
- 3. Skip -**
Press to skip tracks or chapters backward.
- 4. Play / Pause Button**
Press to play or pause.
- 5. Skip +**
Press to skip tracks or chapters forward.
- 6. Source Button**
Press to switch between Bluetooth mode, USB mode, Aux mode, and FM mode.
- 7. Mute Button**
- 8. Volume -**
Press to decrease the volume.
- 9. Volume +**
Press to increase the volume

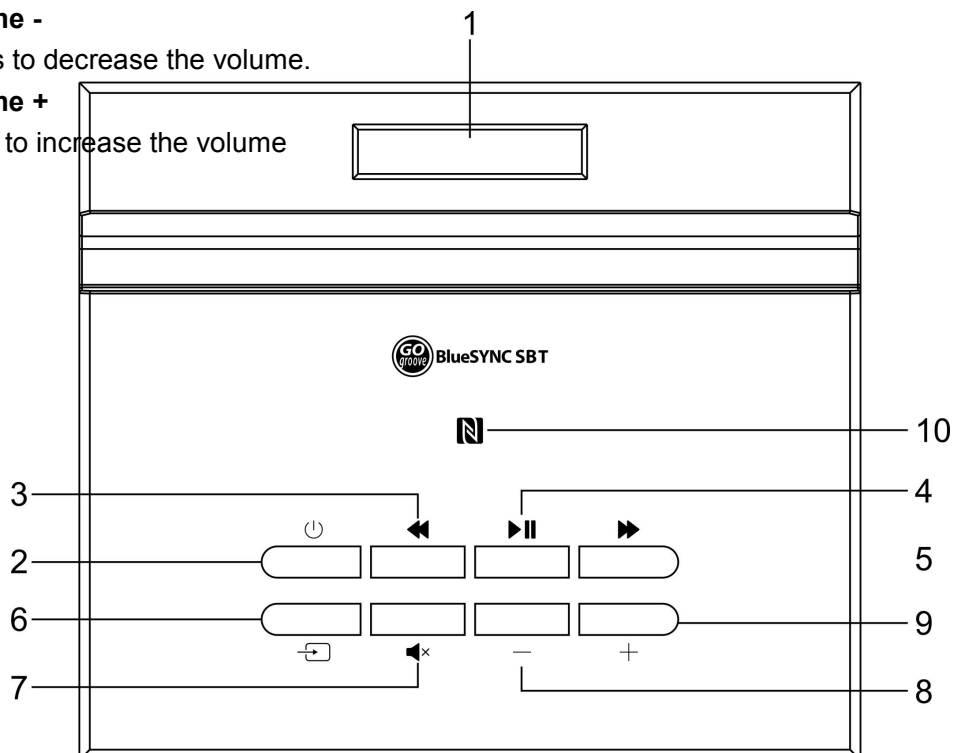


Side Panel-Left

 - 10. USB Port for Playing MP3

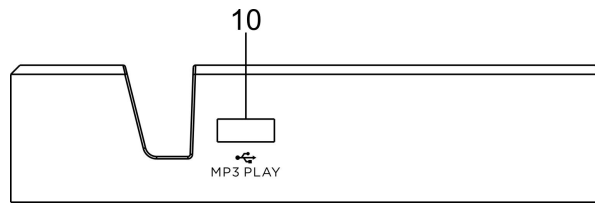


Side Panel-Right

 - 11. 3.5mm Aux in Jack
- 12. USB Port for Charging (5V,1A)

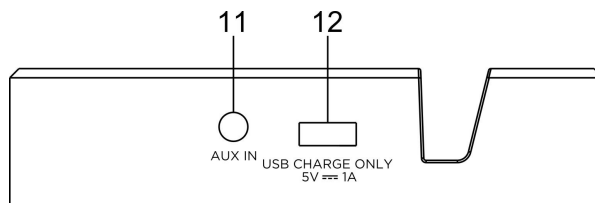


Display Panel

 - 1. LED Display
- 2. Remote Sensor

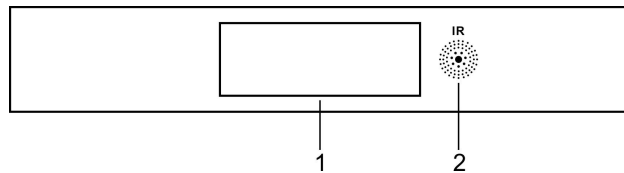

Back Panel

 - 1. FM Antenna
- 2. DC In Port (For AC Adaptor)

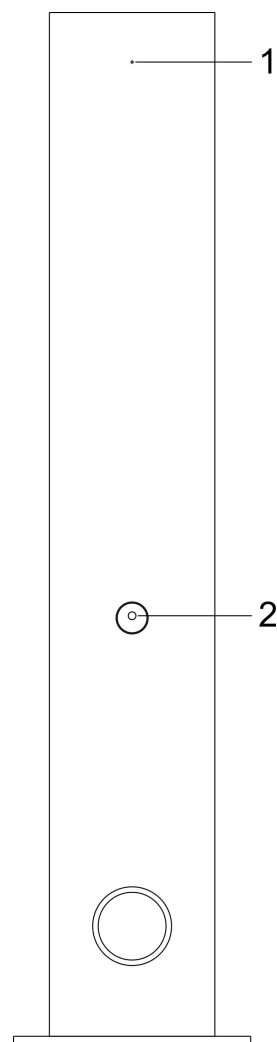

Remote Control

1. Standby Button (Power on/off)

2. Source Button

(Press to switch between Bluetooth mode, USB mode, Aux mode, and FM mode.)

3. Mute Button

4. Skip Backward Button

5. Play/Pause/Pairing Button

6. Skip Forward Button

7. Scan/Memory Button

(Short press for memory, long press for scan and save)

8. CH -

9. CH +

10. Bass+ Effect Button

 
11. Treble+ Effect Button

12. Volume+ Button

13. Bass- Effect Button

14. Treble- Effect Button

15. Volume- Button

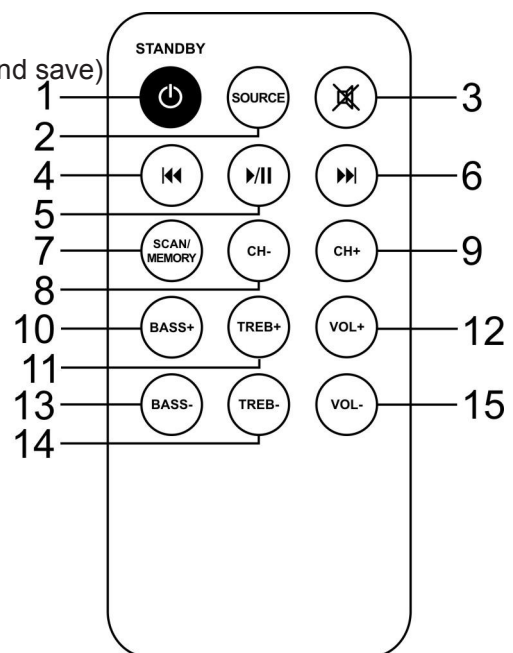

Using the Remote Control to Operate the Unit

Aim the remote control directly at the remote control sensor (IR) on the front panel. Don't put any objects between the remote control and the system while operating the unit.

Batteries

1. Slide out the battery holder from the remote control case. (Push tab "A" towards the middle first, see diagram).
2. Place one 3V CR2025 (Lithium) battery into the battery holder, observing the polar marking. If the battery is placed incorrectly, the remote control will not work. Dispose of the old battery properly. Do not leave it lying around where your child or pet could play with or swallow it.
3. Battery may explode or leak if it is mistreated. Do not attempt to recharge it or disassemble it. Do not dispose of the old battery in a fire.
4. Insert the battery holder into the battery compartment.



CAUTION: Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.

WARNING

 
Do not ingest the battery, Chemical Burn Hazard

(The remote control supplied with) This product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death.

Keep new and used batteries away from children.


If the battery compartment does not close securely, stop using the product and keep it away from children.

If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

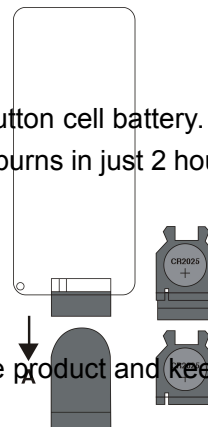

SET UP

 1. Take out the speaker body and base carefully from the box.
2. Take out the accessories(screw washers and screws)
3. Fit the base with the body by aiming the 4 holes.
4. Screw the base into the body by screwdriver with the 4pcs screw washers and screws.
5. Place the speaker standing on the floor and it's ready to use.

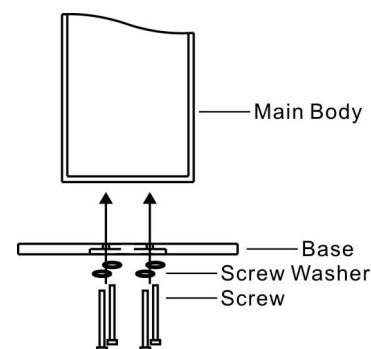

BLUETOOTH FUNCTION

1. Power on the unit, press **"SOURCE"** on the top panel or the button **"SOURCE"** on the remote control to switch to the Bluetooth mode, the LED Display will indicate "BT" and the LED icon will be blinking after 3-5 seconds, it means the speaker unit is ready to Pairing mode.
2. Turn on Bluetooth in your smart-phone/tablet and ensure it at "searching device" mode , found **"BlueSYNC STW"** and select.
3. The LED icon will light up and will hear a "DU" sound if connect is success.
4. It will auto reconnect the previous paired device when each time entering into Bluetooth mode, If the unit cannot auto connect the previous paired device, please restart the Bluetooth in the smart phone/tablet, then follow above steps to finish connection.
5. Manually turn off the Bluetooth in smart-phone or the smart-phone is far away from

the unit (over 10m), the connection between speaker and smart-phone will lose, the unit will go back to Bluetooth standby mode.

6. Ensure the Bluetooth in your smart phone at “searching device” mode, keep on pressing “Play / Pause button” on the top panel, and then follow above steps to reconnect it.

AUX-IN (Line in Type)

Require a 3.5 mm cable (included).

1. Connect a 3.5 mm cable to the Aux-in jack. Connect the other end of the 3.5 mm cable to an MP3 player or other audio source.
2. Press the “**POWER**” button to turn the unit on.
3. Press the “**SOURCE**” button on the top panel or the “**SOURCE**” button on the remote to switch to Aux-in mode.
4. Use the controls on the connected device to begin playing audio routed through the unit.

USB PORT FOR PLAYING MP3

1. Power on the unit and insert a USB Flash Drive (not supplied) into the USB Port, ensuring the plug is fully inserted at the correct way, the LED display will show small “USB”
2. The tower speaker will play music from the USB automatically or press “**SOURCE**” button on the remote.
3. The maximum size of Flash Drive that can be supported is up to 32GB.

USB PORT FOR CHARGING

1. USB power output DC **5V 1A**. It supports charging all devices in the power range.
2. When charging a device, ensure that the power supply is the right one for your device.

PLAYING THE FM RADIO

1. Press the “**POWER**” button to turn the unit on.
2. Ensure that the FM Antenna has been fully extended and press “**SOURCE**” on the top panel or the “**SOURCE**” button on the remote control to adjust to the “FM” mode.
3. Press “**SKIP FORWARD**” or “**SKIP BACKWARD**” and hold; the unit will scan the radio station, and stop once it has found one.
4. For fine tuning 0.1MHz, press the “**SKIP FORWARD**” or “**SKIP BACKWARD**” button once.

PROGRAMMING & PLAYING OF FM RADIO PRESETS

1. Follow the steps for Playing the FM Radio.
2. Press the “**SCAN/MEMORY**” button for a long time on the remote to search and preset stations in memory (i.e. “P01” – this will blink on the display - and then the preset station frequency number will be shown on the display).

3. Note: 30 FM stations can be preset.
4. To play the preset Radio Stations, press the "**CH-**" or "**CH+**" buttons to cycle through the preset FM radio stations.

MANUAL FM STATION SAVE

1. When under FM mode, press the "**SKIP FORWARD**" or "**SKIP BACKWARD**" button to choose the station.
2. Press the "**SCAN/MEMORY**" button shortly; "**P00**" will blink on the display which means you enter into the manual saving state, and then Press the "**CH-**" or "**CH+**" buttons to cycle through the preset FM radio stations.
3. Press "**SCAN/MEMORY**" button to finish manual saving.

CARE OF THE APPLIANCE

Disconnect the appliance from the power source when cleaning.

If the unit becomes dusty, wipe it with a soft and dry duster. Use a soft cloth to clean this appliance. Do not use any wax, polish sprays, or abrasive cleaners on the unit.

The normal function of the product may be disturbed by strong Electro-Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.

SAFETY INSTRUCTIONS

1. Unplug the equipment from the power outlet when not in use and before cleaning.
2. Do not play music at excessive volume levels as damage to hearing and / or equipment may occur.
3. Do not use this equipment in wet or damp surroundings.

CARE AND MAINTENANCE SPECIFICATIONS

1. Always disconnect the equipment from the power supply before cleaning.
2. Clean the equipment with a soft, damp, lint free cloth.
3. Do not use abrasives or harsh cleaners.

1. TROUBLE SHOOTING

Problem	Remedy
Power System does not turn on or does not respond to the remote control.	-Make sure AC power plug is connected to the wall socket outlet properly and it has power. -If this does not help, leave the unit unplugged before seeking advice.

Remote control No functions or short range.	-Insert new batteries. -Aim remote directly towards the remote sensor.
The sound is distorted	Check the volume setting on both the speaker and your device and adjust the volume to a suitable level.
No sound can be heard	Check the volume is set in EQ button on the remote, and then adjust the volume level in desired level.

2. TECHNICAL INFORMATION

Power Supply	DC input 15V 3A (AC adapter for AC 100-240V~50/60Hz supplied)
Speaker Units	2x3" Speakers + 1x4.5" Subwoofer
Speaker output	2x 15 watts+ 30 watts= 60 watts
Remote Control	3V (Lithium CR2025 x 1pc.)
Operation Temperature	0°C to +40°C
FM Frequency	87.5-108MHZ
Bluetooth Frequency	2402-2480MHz
Bluetooth Transmission power	≤ -3.325dBm

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Changes or modifications not expressly approved by the party responsible for compliance

could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may

cause undesired operation.



This symbol on the product or in the instructions means that your electrical and electronic equipment should be disposed at the end of its life separately from your household waste. There are separate collection systems for recycling.

For more information, please contact the local authority or your retailer where you purchased the product.