


# 使用说明

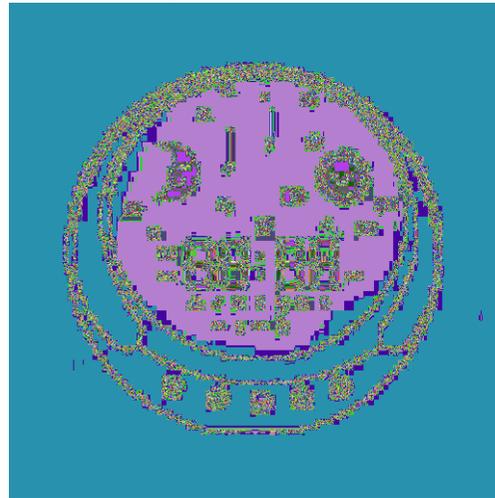

为了更好的发挥产品效果  
请先仔细阅读使用说明

## 按键控制面板功能

### 1.顶部灯光触摸控制



夜灯触摸键:  
短触切换灯光颜色,  
长按2秒为灯光亮度调节,可自然调整至合适的亮度  
共12种灯色:8种单色+3种混合+1种呼吸灯模式


### 2.按键控制



- ① 图标: 长按录音, 短按睡眠音乐
- ② 图标: 短按切换上一曲, 长按音量减
- ③ 图标: 短按暂停/播放, 长按智能声控灯开/关
- ④ 图标: 短按切换下一曲, 长按音量加
- ⑤ 图标: 短按选择所有功能以及设置确认, 长按进入功能设置
- ⑥ 图标: 麦克风MIC孔


1

## 3.面板指示灯说明

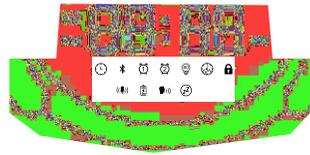

- AM:上午 PM:下午 MIN:分钟  
✱:BT模式 ⌚:时间模式 ⏰:闹钟模式 ⓓ:贪睡模式  
🎧:睡眠音乐模式 🎤:录音模式 🕒:夜灯定时模式  
🔒:智能灯光声控模式 🚫:儿童锁模式 🔋:低电压模式

## 4.后面板使用操作说明

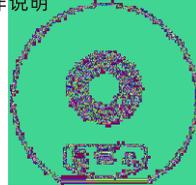

- POWER:电源开关,长按开/关  
Type-C: 充电口 (5V1A-2A)  
**\*本产品使用时需连接充电线,充电时亮红灯,满电红灯熄灭.**  
**RESET:复位键**  
**\*设备无法使用时,使用尖锐物件插入内部按键5秒键,使其重新开机.**  
**\*此功能会使所有设置回归初始设置,请勿随意使用.**

2

# Instructions for use




For better product effect  
Please read the instructions in detail first

Please charge for more  
than 10 minutes for the first use.

## Button function on control panel:


### 1. Light touch control

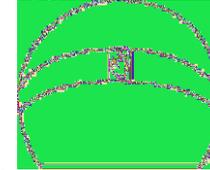

Night light touch key:  
Press for 1 second to turn the light on and off.  
Long press for 2 seconds to adjust an appropriate brightness  
of the light.

There are a total of 12 lighting colors:  
8 single colors+3 mixed colors+1 breathing light mode.

### 2. Button control

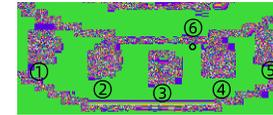

- ① icon: press to sleeping music, long press to record
- ② icon: press to switch to the previous song, long press to turn down the volume
- ③ icon: press to pause/play, long press to turn on/off the intelligent sound control light
- ④ icon: press to switch to the next song, long press to turn up the volume
- ⑤ icon: press to select all functions and confirm settings, long press to enter function setting
- ⑥ 0 Key icon: Microphone hole

1

## 3. Description of panel indicator



- AM:AM PM:PM MIN: Minutes  
⌚: Time mode ✱: Blue mode 🕒: Alarm 1 mode 🎧: Alarm 2 mode  
🎤: Night light timing mode 🎧: Sleeping music mode 🚫: Child lock mode  
🎧: Recording mode 🔋: Low battery mode  
🔒: Intelligent sound control light mode ⓓ: Snooze mode

## 4. Operation instructions for the rear panel



- POWER:power switch  
TYPE-C: Charging port (5V1A-2A)  
**\*This product needs to be connected to the charging cable when it is used, and the red light is on when charging.**  
RESET: Reset button  
**\*When the device breaks down, use a sharp object to insert the reset button for 5 seconds to turn it on again.**  
**\*\*Note: This function will return all settings to the initial settings, please don't use it arbitrarily.**

2

## 5.按键功能操作

1. BT蓝牙模式:  
短按M键选择✱进入BLUE模式,屏幕前方✱指示灯慢闪,即可打开手机搜索K5设备名称,点击完成连接,连接成功之后屏幕蓝牙图标常亮;

2.时间模式:  
短按M键切换时钟模式屏幕指示灯⌚慢闪,长按M键进入时间设置,此时小时显示跳动,按⏪或⏩设置完成后短按M键设置分钟,完成设置后短按M键即可保存设置并正常显示时间;



3.闹钟1,2模式:  
短按M键切换到闹钟模式,屏幕前方铃铛图标🔔慢闪,长按M键直到小时显示跳动,按⏪或⏩设置完成后,短按M键设置分钟,完成设置后,短按M键进入音乐选择(按⏪或⏩选择1-9首曲目,9首为录音音频,默认为静音)完成短按M键进入闹钟开关设置,按⏪或⏩选择OFF闹钟关闭 ON闹钟打开再按M键完成闹钟🔔设置;  
设置开启ON后屏幕图标灯长亮,选择OFF不开启图标灯🔔关闭;  
闹钟1设置完毕后,短按M按键,屏幕图标🔔闪烁,长按M可设置🔔时间,重复以上操作即可设置闹钟2时间;  
智能闹钟可录制喜欢的音频做为闹钟铃声,操作请看下方6.录音模式操作过程;

3

4.贪睡模式:  
闹钟响铃1分钟无操作或无触摸顶部灯控时,设备进入贪睡模式,屏幕贪睡指示灯ⓓ亮起,3分钟后闹钟重复,共3次,每次间隔3分钟;  
闹钟响起或是取消贪睡模式,请按底部任意按键,屏幕贪睡指示灯ⓓ关闭;

5.睡眠音乐模式:  
短按🎧键,屏幕前方睡眠音乐图标🎧亮起,睡眠音乐播放,短按⏪或⏩选择音乐,1-8首自然音乐可供选择。长按⏪或⏩调节音量大小,选择完成短按M键进入播放时间设置,15MIN-30MIN-45MIN-60MIN-OFF完成后短按M键退出设置完成(MIN=分钟/OFF=关闭);  
功能开启后屏幕指示灯长亮,选择OFF不开启则灯关闭

6.录音模式:  
长按🎤进入录音模式,屏幕出现准备录音程序,指示灯🎤图标亮起,请对准麦克风MIC讲话,录制10秒钟以内音频,01开始计时录音,10结束,(10秒钟录音)录制完成后按M键确认;  
设备会提取录制音频重复播放,确认按M键保存退出;  
不满意需重新录制请重复上述过程;  
录制完的音频,可为闹钟铃声使用;

7.夜灯定时模式:  
触摸音箱顶部选择好灯光颜色后,按M键选择倒计时关灯模式,屏幕前方💡灯泡图标慢闪,长按M键进入设置,屏幕显示15MIN-30MIN-60MIN-OFF,按⏪或⏩调节,短按M键确认亮灯时间;  
功能开启后屏幕图标灯长亮,选择OFF不开启则屏幕图标灯关闭;

4

8.智能灯光声控模式:  
长按🔒键进入灯光声控模式,屏幕声控灯光图标🔒亮起,此时设备MIC会监控超过2秒以上的持续声音(哭声,吵闹声,等等),2秒以后设备即会智能开启灯光照明模式,10分钟无异响即自动关闭;  
注:此功能开启时其它灯光颜色会无法控制,取消此功能请再次长按🔒键;

9.儿童锁模式:  
双手同时按下⏪和⏩,儿童锁功能开启,屏幕指示灯🚫亮起,此时所有按键功能无作用,包括开关机,防止儿童乱按;  
取消则同时按下⏪和⏩功能关闭;

10.低电模式:  
当设备电量不足时,屏幕低电指示图标🔋亮起,自动关闭灯光进入省电模式并低电报警,此时请尽快充电;

## 6.注意事项

- 1.设备充电请用经过3C认证的DC5V1-2A的充电器;
- 2.按底部按键时,手指请勿放在触摸键上,否则按键无作用;
- 3.机器无法使用时,请先确认是否儿童锁功能🚫开启,开启时请先取消;
- 4.机器灯光无法控制或只有暖色,请查看智能灯光声控模式是否开启,开启时请先取消即可正常控制;
- 5.闹钟铃响,无操作或无按顶部触摸键会进入贪睡模式,按底部任意键取消贪睡模式;  
注:以上说明书操作功能,数据等会随着产品实际细节改善优化而出现差异,恕不另行通知,以实物操作为标准;

5

## 5. Key function operation

1. Time mode:  
Press the M key to switch to the time mode⌚, the screen indicator will flash slowly. Long press the M key to enter the time setting and the 'hour' digit will be flashing, press ⏪ or ⏩ to set the 'hour' time, press the M key again to set the 'minute' time, then press the M key after the setting is completed and the time will be displayed properly.



2. Blue mode:  
Press the M key to select to enter the ✱ BLUE mode, the indicator light on the screen will be flashing slowly, you can use the mobile phone to search K5 device name, click to finish the connection; After the connection is done, the bluetooth icon on the screen is on;

3. Alarm 1,2 mode:  
Press the M key to switch to the alarm mode, the 🕒 bell icon will be flashing slowly, long press the M key until the 'hour' digit flashes, press ⏪ or ⏩ to set the 'hour', then press the M key to set the 'minute', when the setting is completed, press the M key to enter the music selection (press ⏪ or ⏩ to select all the 9 tracks, the first eight tracks are system audios, the ninth one can be recorded according to what you like, detailed operations are shown in the Recording mode at the 7th one as follows. Besides, the default setting is mute).  
Then press the M key to enter the alarm switch setting(ON & OFF), and then press the M key to finish the alarm setting;  
The bell icon indicator light will be on when the setting is turned ON, and it will be off when turned OFF.  
After alarm 1 is set, press the M button, the screen icon 🕒 flashes, long press M to set the time🕒.  
Repeat the above operation to set the alarm2.  
The intelligent alarm clock can record your favorite audio as the alarm bell.  
Please refer to the operation as follows at7.Recording mode.

3

4. Night light timing mode:  
After selecting the light color by touching the top of the device,press the M key to select the countdown light off mode🕒, the light bulb icon will be flashing slowly, long press the M key to enter the setting, the screen displays 15MIN-30MIN-60MIN-OFF, press⏪or⏩to select an appropriate time, then press the M key to confirm the lighting time; After the function is turned on, the bulb icon indicator light will be on, and vice versa.

5. Sleeping music mode:  
Press the 🎧 key, the sleeping music icon lights up🎧, then the sleeping music plays, press ⏪ or ⏩ to choose music, 1-8 natural musics are selective. Long press ⏪ or ⏩ to adjust the volume, then short press the M key to enter the playing time setting (15MIN-30MIN-45MIN-60MIN-OFF)  
After completion, press the M key to finish the setting;  
After the function is turned on, the sleeping music icon indicator will be on, and vice versa.

6. Child lock mode:  
Press⏪and⏩at the same time with both hands, the child lock🚫 function is turned on, and the screen indicator icon lights up.  
All the key function has no effect under this mode, including switch button, in this way to prevent children from pressing it randomly;  
To cancel, press⏪and⏩at the same time to turn off the function;

7. Recording mode:  
Long press🎤to enter the recording mode🎤, the recording indicator icon lights up, speak to the microphone to record an audio within 10 seconds, press the M key to confirm after the recording is completed; The device will extract the recorded audio and play it repeatedly, confirm and press the M key to save and exit;  
If you are not satisfied and need to re-record, please repeat the above process;  
The recorded audio can be used as an alarm clock;

4

8. Low power mode:  
When the device is out of power, the low battery indicator icon 🔋 will light up,the light will be automatically turned off to save power, and there will be a low battery warning tone every 15 seconds.  
Please charge as soon as possible at this time;

9. Intelligent sound control light mode:  
Long press the🔒 key to enter the sound control light mode🔒, the sound control light icon lights up, and the MIC will monitor continuous sounds that are more than 2 seconds(cries, noises, etc.), and the lighting mode will be automatically turned on, and it will be auto matically turned off if there is no any sound in 10 minutes;  
Note: When this function is turned on, the light colors cannot be controlled. To cancel this function, please long press the key🔒again;

10. Snooze mode:  
When the alarm rings over 1 minute without any operation, or without a touch at the light control on the top of the device, The device will enter the snooze mode and the snooze indicator lightⓓwill be on; To turn off the alarm or to cancel the snooze mode, please press any key at the bottom, and the snooze indicator light turns off;

## 6. Attentions

1. Please use 3C certified DC5V1-2A charger to charge!
2. When pressing the bottom key, do not touch the touch key on the top of the device, otherwise the bottom key will not work!
3. When the device does not work, please confirm whether the child lock function🚫is turned on. If it is turned on, please cancel it first!
4. When the light cannot be controlled or only in warm color, please check whether the intelligent sound control light mode is turned on, if it is turned on, please cancel it first!
5. When the alarm rings, it will enter the snooze mode when there is no operation or no touch on the top touch key, and you can press any key on the bottom to cancel the snooze mode!  
Note: The operating functions and data in the above manual will be different as the actual details of the product are improving and optimizing, so the actual operation prevails.

5

## **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

### **RF Exposure Information**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.