

CONGRATULATIONS ON YOUR EYE MASSAGER.

Please read all instructions and warnings prior to use. Keep this manual as it contains important information for future reference.

The image shows the official Bluetooth logo, which consists of a circular icon containing a stylized 'B' shape, followed by the word "Bluetooth" in a bold, sans-serif font with a registered trademark symbol.

THE BLUETOOTH® WORD MARK AND LOGOS ARE REGISTERED TRADEMARKS OWNED BY BLUETOOTH SIG, INC.

BC

MODEL # 1018944

SHARPER IMAGE® NAME AND LOGOS
(INCLUDING THE 77 LOGO) ARE TRADEMARKS OR
REGISTERED TRADEMARKS. DISTRIBUTED BY AND
© 2024 MERCHSOURCE, LLC. IRVINE, CA 92618.
ALL RIGHTS RESERVED.

FOR CUSTOMER SUPPORT, PLEASE CALL
1-800-374-2744.

Printed in China.

FCC STATEMENT

WANDBERG, changes of the requirements to this interface may affect the user's authority to operate the equipment.

- 1. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
 - a. This device may not cause harmful interference; and
 - b. This device must accept any interference received, including interference that may cause undesired operation.

FCC STATEMENT

Allowing battery to cool to room temperature before charging.
Discontinuous charging in battery becomes hot, swollen, smokes, or gives off a strong odor.
Battery changes if battery is used with the product due to be regularly examined for damage to the correct plug enclosure, and other parts. In the event of such damage, the charges must not be used until the damage has been repaired.

- Do not dismantle, crush, puncture or short-circuit battery.
- Never expose battery to extreme temperatures or moisture.
- Keep away from flame and immediately remove from sunlight.
- Only charge using the provided charger, cable, and/or adapters.
- Rechargeable battery is only to be charged by an adult.
- Allow battery to cool to room temperature before charging.
- Adult supervision is required while charging the battery.
- Discard or return damaged batteries or cells of a strong odor.
- Battery chargers used with the product are to be regularly examined for damage or signs of such damage, the chargers must not be used until the damage has been repaired.
- Product or parts of the product that have been damaged, damaged, or misused.

RECHARGEABLE BATTERY WARNINGS:

Professional use

For household use only. Not for commercial or

Never wear the eye massager during charging. Symptoms persist.

Not a pilot's team! Keep out of the reach of children
Do not use the item if you are unable to fully instruct, or like. Consult your
physician if you have any medical condition that may prevent safe use of this item.
Test your comfort level and check massaged local areas often. Individual reactions to
massage may vary. Skin irritation or physical discomfort of pain, or
loss of sensation or numbness. Consult your physician immediately if you experience any

SAFETY WARNINGS:


SHARPER IMAGE®

EYE MASSAGER


CORDLESS HEATED EYE MASK

WHAT YOU GET

- a. Eye Massager
- b. USB-C to USB-A Charging Cable

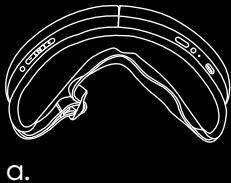


a.

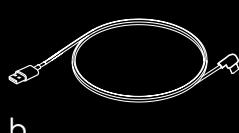


b.

LAYOUT

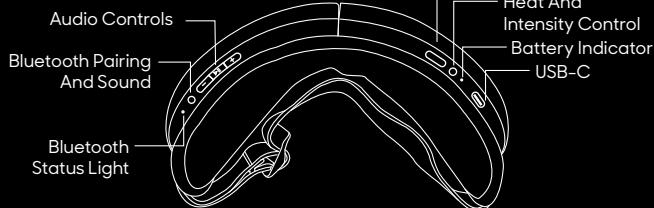


GETTING STARTED

1. Plug the USB-C side of the charging cable into the port located on the top of the eye massager.
2. Plug the USB-A side of the charging cable into a power adapter (not included).
3. Plug the power adapter into a wall outlet. The white LED on the eye massager will flash during charging.
4. Unplug the eye massager when it is fully charged. The LED will stop flashing and keep solid green. It may take up to 3 hours to fully charge the eye massager.
- Note: The eye massager cannot be used while charging. When the battery is low, a voice prompt will state "low battery" and a red LED will begin flashing. Recharge the eye massager to continue use.

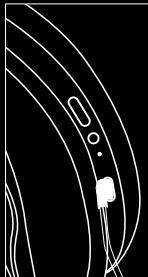



MUSIC SETTINGS

1. To cycle through the 9 built-in soundscapes and silent, quick press the Bluetooth pairing button while the eye massager is not paired with another device.
2. Press the play/pause button to play or pause audio.
3. Press the plus button to increase the volume or the minus button to decrease the volume. The eye massager powers on with audio at the lowest volume 1 and up to volume 4. Voice prompt will play the volume level.

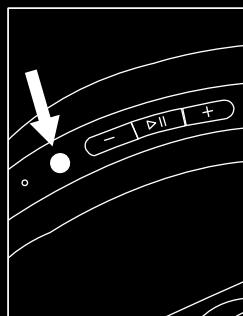

MASSAGE SETTINGS

1. Power on the eye massager to automatically activate air compression and vibration massage.
2. Quick press the power/mode button to cycle through the 4 massage modes or turn off the massage functions. Voice prompt will play for each mode.
 - Mode 1: Air Compression & Vibration.
 - Mode 2: Air Compression.
 - Mode 3: Vibration.
 - Mode 4: Off. Disables air compression and vibration. Heat and music can still be used.
3. To switch between low and high massage intensities, press and hold the heat/intensity button for 1 second. The "High/Low intensity" voice prompt will play.

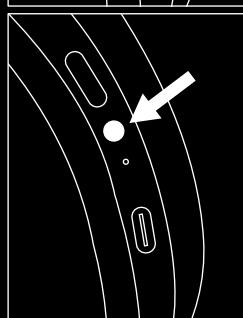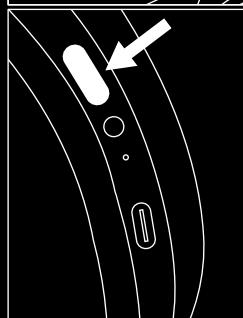


TEMPERATURE SETTINGS

1. Power on the eye massager to automatically activate hot therapy.
2. Quick press the heat/intensity button to turn the heat on or off. The "Heat Therapy On/Off" voice prompt will play.

HOW TO USE


COMFORT FIT

1. Adjust the buckle on the strap until you can easily and comfortably wear the eye massager.
2. Make sure the eye massager sits comfortably on your face and that the fitting is not too tight. Loosen the strap if necessary.

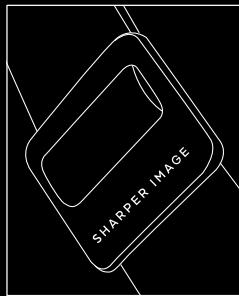


POWER

1. Press and hold the orange power/mode button for 2 seconds to power on the eye massager. The "power on" voice prompt will play.
2. Press and hold the power/mode button again to manually power off the eye massager. If left on, the eye massager will automatically power off after 15 minutes.

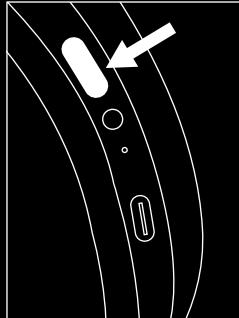

PAIRING

1. To connect your device via Bluetooth® wireless technology, press and hold the pairing button for 2 seconds. The eye massager will enter pairing mode, the "Bluetooth pairing" voice prompt will play, and the LED will start flashing blue.
2. Select "Sharper Image Eye massager" from your device's Bluetooth menu to connect the eye massager. The "Bluetooth paired" voice prompt will play, and the LED will remain lit for 10 seconds.
3. To disconnect the eye massager and return to the built-in soundscapes, press and hold the pairing button for 2 seconds, the built-in soundscapes will start playing.

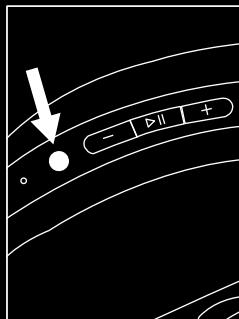

CARE INSTRUCTIONS

- Make sure the Eye massager is powered off before cleaning.
- Always clean the Eye massager thoroughly before and after each use.
- Clean the Eye massager using soft, non-abrasive cloth moistened with water only. Do not immerse the Eye massager in water.
- Do not use abrasive materials or cleaners, alcohol, chemicals, or corrosive liquids to clean the Eye massager.
- Air-dry the Eye massager in a well-ventilated area, avoiding direct sunlight.

IMPORTANT: MAINTAINING BATTERY HEALTH

- Your massager is designed with a lithium-ion battery pack for cordless convenience, increased massage duration per charge, and frequent use and recharging.
- To maintain charge capacity and prevent battery damage, all lithium-ion batteries must be regularly used and recharged.
- For optimal battery health, keep the battery at approximately 50% state of charge when not in use.
- All batteries naturally lose charge when not in use. If you will not be using the massager for an extended period, check the massager at least every 30 days to ensure the battery is at approximately 50% state of charge. Recharge as needed to maintain a 50% state of charge but do not overcharge.
- IMPORTANT: DO NOT store the battery for an extended period with above 60% or below 40% state of charge. An incorrect state of charge during storage could irreparably damage the battery and may result in reduced charge capacity, inability to maintain charge, failure to recharge, or complete inoperability of the massager.
- For the health of the battery, always store the massager in a cool, dry place. The storage location should have a consistent temperature between 40°F and 70°F (5°C and 20°C) as well as a relative humidity at 70% or lower.

STATUS LIGHT GUIDE

The status light is located next to the USB-C charging port.

- Breathing white light – charging
- No light – out of battery
- Flashing red light – battery is less than 25%
- Solid orange light – battery is less than 50%
- Solid yellow light – battery is less than 75%
- Solid Green light – Fully charged

