

pocketunes™

**Harmony.**

Device Overview



Night Light


Buttons

Display

Qi Wireless Charger

**Harmony.**  
User Manual  
PTHRM100

Device Overview

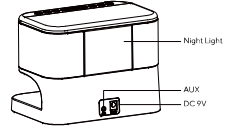

Night Light

AUX

DC PV

Button Functions

**Power button**  
Press and hold to turn on/off Harmony.  
Press to adjust LED display brightness.

**Input**  
Press to switch between Bluetooth®, White Noise, and FM Radio modes.

**Night Light**  
Press to turn on night light.  
Press again to switch between top, back, both or off.

**Wake mode**  
Press to set up alarm.  
Press and hold to rise up time.  
(Alarm ENABLED) Press to snooze for 10 minutes.  
Press and hold to turn off active alarm.  
(Alarm DISABLED) Press twice to disable/enable scheduled alarm.


**Volume -**  
Press to decrease volume.  
Press and hold to go to previous song.

**Pause/Play**  
Press to pause/play music.


**Volume +**  
Press to increase volume.  
Press and hold to go to next song.

Get Started

1. Plug in the included DC/PV adapter into the back of the Harmony clock and connect the other end to a power outlet.

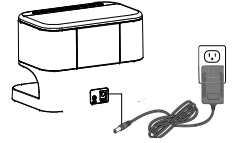

2. Press and hold the **Power** button to turn on the clock.



Set Up Time



1. Press and hold the **WAKE MODE** button to set up the clock's time.




2. Use the **W+** buttons to adjust the time. Press the **WAKE MODE** button to confirm selection.

**Set Up Soundscape (Alarm)**



1. Press the **WAKE MODE** button to set up your alarm.

Set Up Soundscape (Alarm) Continued




2. Use the **W+** buttons to adjust the time. Press the **WAKE MODE** button to confirm time.

3. Choose between 4 different soundscape settings and wake up peacefully while music plays and an LED light gradually illuminates over one minute, emulating a calming sunrise.


Morning Chime	Yellow
Ocean Sunrise	Ocean Blue
Forest Walk	Forest Green
Mountain Morning	Light Blue

4. Press the **WAKE MODE** button to confirm selection. Press the **WAKE MODE** button twice to disable/enable scheduled alarm.

Night Light

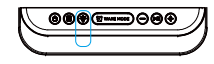

1. Press the **Night Light** button to turn on and cycle between top light, back light, both and off.



2. Press and hold the **Night Light** button to increase the brightness. Press and hold again to decrease brightness.


3. Press the **Night Light** button twice to cycle through different night light colors.

Warm White	Ocean Blue
Cool White	Forest Green
Red Orange	Light Blue
Yellow	

Qi Wireless Charging








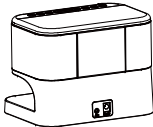
Harmony features a 5W Qi wireless charging pad. Simply align and place your phone properly on the charging pad. Your device should start charging automatically.

Note: The LED light will pulse green 3x to indicate your device is charging.



**Wireless Charging works with:**  
Samsung Galaxy S6 or newer wireless charging phones.  
iPhone® 6/iPhone® X or newer wireless charging phones.  
Plus other Qi enabled wireless charging devices and Wireless Charging Case for AirPods®.

Note: Phone cases may affect wireless charging functionality. You may remove your phone case for optimal charging results.

Bluetooth® Setup	White Noise	FM Radio	AUX	Specifications	FCC	Need Help?	
 <p>1. Press the <b>Input</b> button until you enter <b>Bluetooth®</b> setup.</p>  <p>2. On your smartphone or tablet, search for the Bluetooth® device named <b>"Harmony"</b> and tap to connect.</p>  <p>3. A prompt will play once pairing is successful. The LED light will pulse blue when in Bluetooth® mode.</p> <p>Note: Press and hold the <b>Input</b> button if you wish to exit <b>Bluetooth®</b> mode.</p>	 <p>1. Press the <b>Input</b> button until you enter <b>White Noise</b> mode.</p>  <p>2. Press the <b>↔</b> buttons to cycle between 4 different white noise options.</p> <p>Note: Press and hold the <b>Input</b> button if you wish to exit <b>White Noise</b> mode.</p>	 <p>1. Press the <b>Input</b> button until you enter <b>FM Radio</b> mode.</p>  <p>2. Press and hold the <b>Power/Play</b> button to scan radio stations 87.5-108. Stations with good reception strength will automatically save. Press again to stop on your desired station.</p> <p>Press the <b>↕</b> buttons to decrease or increase volume. Press and hold the <b>↕</b> buttons to access up to 21 saved radio stations.</p> <p>Note: Press and hold the <b>Input</b> button if you wish to exit <b>FM Radio</b> mode.</p>	<p>1. Insert an AUX cable (not included) to start playing music from your device.</p>  <p>2. Press the <b>Input</b> button to switch between modes.</p> <p>Note: Press and hold the <b>Input</b> button if you wish to exit <b>AUX</b> mode.</p>	<p><b>Reset</b></p> <p>If Harmony is not operating properly, you may reset it. To do so, power off Harmony. Then, press and hold the <b>Power</b> button for 8 seconds until Harmony powers on, then off, and then back on again. Be sure to continue pressing and holding the <b>Power</b> button throughout this process. The device should now operate as usual.</p>	<p>This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.</p> <p>Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.</p> <p><b>NOTE:</b> This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct this interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.</p> <p>To maintain compliance with FCC's RF Exposure guidelines, this equipment should be installed and operated with minimum distance between 20cm (8 inches) and your body. Use only the supplied antenna.</p>	<p>Email us at <a href="mailto:support@pockettunes.zendesk.com">support@pockettunes.zendesk.com</a> or call us at <b>1-833-909-6273</b></p> <p>We are available Monday - Friday, 9am - 5pm PST, except major holidays.</p> <p>Please email your inquiry prior to calling, as this will enable us to better assist you. Make sure to note the model number and a description of your inquiry.</p> <p>For information on recycling, please visit <a href="https://www.corenewestronics.com/support/">https://www.corenewestronics.com/support/</a></p>	<p style="text-align: right;">pockettunes® <b>Harmony.</b></p> <p style="text-align: right;">FCC ID: 2AVRVT13M100</p>