



Infinite Possibilities

# Enterprise Grade PTP and PTMP Solution

## User Manual

### ENTERPRISE GRADE POINT-TO-POINT AND POINT-TO-MULTIPOINT SOLUTION

This document helps you to understand the product features, configuration, login and logout process of UBAX through Graphical User Interface (GUI). This manual guides you through the installation process and the entire software user set.

Revision: B1

17<sup>th</sup> Nov, 2022



## Revision History

Date	Rev No.	Description	By
17-11-2022	B1	Initial Draft	Anu Sharma



## Table of Contents

<b>1 ABOUT THIS DOCUMENT</b>	<b>6</b>
<b>1.1 PURPOSE</b>	<b>6</b>
<b>1.2 REFERENCES</b>	<b>6</b>
<b>1.3 INTENDED AUDIENCE</b>	<b>6</b>
<b>1.4 DOCUMENT CONVENTIONS</b>	<b>6</b>
<b>1.5 TERMS AND ABBREVIATIONS</b>	<b>7</b>
<b>2 FEDERAL COMMUNICATION COMMISSION CERTIFIED</b>	<b>8</b>
<b>3 PRODUCT OVERVIEW</b>	<b>9</b>
3.1 2x2 UNLICENSED BAND RADIO (UBAX) WITH 25dB DISH ANTENNA	9
3.2 2x2 UNLICENSED BAND RADIO(UBAX) WITH SECTOR ANTENNA	10
3.3 2x2 UNLICENSED BAND RADIO(UBAX) WITH N-TYPE ANTENNA	11
<b>4 HARDWARE SETUP</b>	<b>11</b>
3.4 SYSTEM REQUIREMENTS	11
3.5 PACKAGING CONTENT	12
<b>4 GETTING TO KNOW THE IO UBR(UBAX)</b>	<b>12</b>
4.1 2x2 UBR (UBAX) - FRONT / SIDE VIEW WITH 25dB DISH ANTENNA	12
4.2 2x2 UBR - BACK VIEW WITH 25dB DISH ANTENNA	13
4.3 2x2 UBR (UBAX) – FRONT/SIDE VIEW WITH SECTOR ANTENNA	14
4.4 2x2 UBR (UBAX) - BACK VIEW WITH SECTOR ANTENNA	15
4.5 2x2 UBR (UBAX) - FRONT/SIDE VIEW WITH N-TYPE	16
4.6 2x2 UBR (UBAX) - BACK VIEW WITH N- TYPE	17
<b>5 INITIAL SETUP</b>	<b>17</b>
5.1 INSTALLATION SETUP	20
5.2 2x2 UBR MOUNTING TO THEX POLE	20



---

<b>6 CONNECT TO THE UBR</b>	<b>21</b>
6.1 LOGIN THROUGH GUI	21
<b>7 SCREEN TOOLBARS</b>	<b>22</b>
7.1 OVERVIEW TOOLBAR ON THE TOP	23
<b>8 STATUS OVERVIEW SCREEN</b>	<b>24</b>
8.1 SYSTEM SUMMARY	24
<b>9 LOGOUT</b>	<b>26</b>
<b>10 USE CASES</b>	<b>27</b>

## Table of Figures

Figure 1: Unlicensed Band Radio(UBAX) with 25dB Dish Antenna	
Figure 2: Unlicensed Band Radio(UBAX) with Sector Antenna	
Figure 3: Unlicensed Band Radio(UBAX) with N-Type Antenna	
Figure 4: Front/side view of the 2x2 UBR(UBAX) with 25dB Dish Antenna	
Figure 5: Back view of the 2x2 UBR(UBAX) with 25dB Dish Antenna	
Figure 6: Front/side view of the 2x2 UBR(UBAX) with Sector Antenna	
Figure 7: Back view of the 2x2 UBR(UBAX) with Sector Antenna	
Figure 8: Front/side view of the 2x2 UBR(UBAX) with N-type Antenna	
Figure 9: Back view of the 2x2 UBR(UBAX) with N-TYPE Antenna	
Figure 10: Mounting bracket attachment with the 2x2 UBR (UBAX) device	
Figure 5: Overview of the 2x2 UBR(UBAX) device with pole and mounting bracket attaching parts	21
Figure 6: Basic overview of pole mounted 2x2 UBR (UBAX) device	22
Figure 7: Basic overview of login screen	23
Figure 8: Basic overview of toolbar on top	25
Figure 9: Basic layout of the system summary screen	26
Figure 10: Basic overview of the UBR GUI with logout option	28
Figure 11: Use Case Diagram of Point-to-Multipoint Solution	29
Figure 12: Use Case Diagram of Point-to-Point Solution	29



## List of Tables

- Table 1: List of information displayed front/Side view of the 2x2 UBR(UBAX) with 25dB Dish Antenna
- Table 2: List of information displayed back view of the 2x2 UBR(UBAX) with 25dB Dish Antenna
- Table 3: List of information displayed front/side view of the 2x2 UBR(UBAX) with Sector Antenna.
- Table 3: List of information displayed back view of the 2x2 UBR(UBAX) with Sector Antenna.
- Table 3: List of information displayed front/side view of the 2x2 UBR(UBAX) with N-Type Antenna.
- Table 4: List of information displayed back view of the 2x2 UBR(UBAX) with N- Type Antenna.
- Table 5: List of actions to login through GUI
- Table 6: List of actions at overview toolbar on the top
- Table 7: List of information displayed in the system summary



## 1 About this Document

### 1.1 Purpose

This document helps you to understand and provides information to familiarize you with the product features, installation process and the entire software user set.

### 1.2 References

Following documents can be referred:

1. EMS User Manual




### 1.3 Intended Audience

The intended audiences for this document are:

- Network Administrators
- System Administrators
- Product managers
- System Integration and Verification team at HFCL Limited

### 1.4 Document Conventions

The different conventions used in this document are explained in the following table:

Convention	Description
 Note	Note provides information about important features or instructions. This appears with a background.
 Caution	This alerts you to potential damage to a program, device, or system. This appears with a background.
 Warning	This alerts you to potential injury or fatality. It may also alert you to potential electrical hazards. This appears with a background.
Courier new font	File and directory names are represented in Courier New font.
<b>Bold font</b>	Any option that needs to be selected or typed in the user interface is represented using bold font.
<home_directory>	Command variables, the values of which you must supply.
cd\$HOME	A command that you must enter in a Command Line Interface (CLI) exactly as written. This appears with a background.

## 1.5 Terms and Abbreviations

The different terms and abbreviations used in this document are explained in the following table:

Terms/Abbreviation	Expansion
UBR	Unlicensed Band Radio
BSP	Board Support
CLI	Command-Line Interface
DFS	Dynamic frequency service
EMS	Element Management System
ERPS	Ethernet Ring Protection Switching
FTP	File Transfer Protocol
GUI	Graphical User Interface
HTTP	Hypertext Transfer Protocol Secure
LOS	Line of Sight
OFDM	Orthogonal Frequency-Division Multiplexing
P2MP	Point to Multipoint
P2P	Point to Point
PoE	Power over Ethernet
QOS	Quality of service
SNMP	Simple Network Management Protocol
SSH	Secure Shell Protocol
TDMA	Time-Division Multiple Access
TWAMP	Two-Way Active Measurement Protocol
AP	Access Point
UDP	User Datagram Protocol
Wi-Fi	Wireless Fidelity
WPA	Wi-Fi Protected Access
WLAN	Wireless Local Area Network



## 2 Federal Communication Commission Certified

These equipment are tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If these equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

### *FCC Caution:*

To assure continued compliance, any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment. (Example - use only shielded interface cables when connecting to computer or peripheral devices).

### *FCC Radiation Exposure Statement:*

These equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. These equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. The antennas used for this transmitter must be installed to provide a separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

These devices comply with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

1. These devices may not cause harmful interference
2. These devices must accept any interference received, including interference that may cause undesired operation.

### 3 Product Overview

Thank you for choosing the IO's UBR (UBAX). Enterprise Grade point-to-point and point-to-multipoint solution is optimally designed to support low to medium capacity enterprise applications in unlicensed 5 GHz spectrum for short and long range links.

The UBR Configuration is controlled through CLI, UBR GUI and EMS.

#### 3.1 y2x2 Unlicensed Band Radio (UBAX) with 25dB Dish Antenna



*Figure 1: Unlicensed Band Radio (UBAX) with 25dB Dish Antenna*

### 3.2 2x2 Unlicensed Band Radio(UBAX) with Sector Antenna

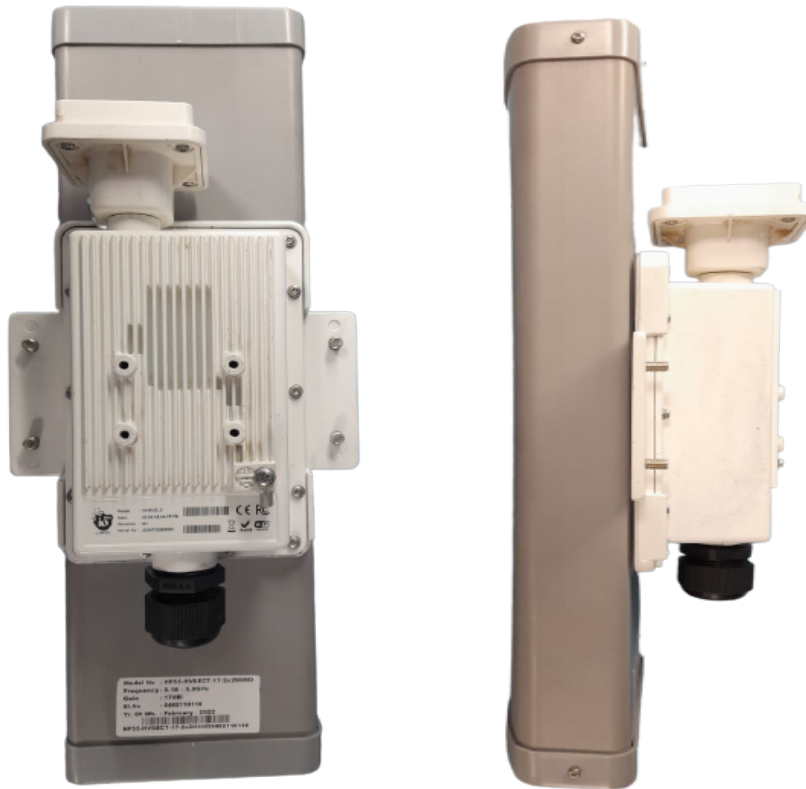


Figure 2: Unlicensed Band Radio (UBAX) with 17dBi Sector Antenna

### 3.3 2x2 Unlicensed Band Radio(UBAX) with N-TYPE Antenna



*Figure 3: Unlicensed Band Radio (UBAX) with N-Type*

## 4 Hardware Setup

### 3.4 System Requirements

Before installing the UBR, make sure that your system includes the following:

1. 10/100/1000 Mbps local area network device such as a hub or switch.
2. The Category 5 UTP straight-through Ethernet cable with RJ-45 connector included in the package, or one like it.
3. We can power up the device through an AC/DC PoE adapter which should be 803af compliant. A 100–240 V, 50–60 Hz AC power source.
4. A web browser to configure the devices.

### 3.5 Packaging Content

Your package contains the following items.

1. 2x2 UBR.
2. Mounting kit
3. Quick Start Guide with cabling and UBR setup instructions. If any parts are incorrect, missing, or damaged, contact HFCL Limited customer care support.

## 4 Getting to Know the IO UBR(UBAX)

### 4.1 2x2 UBR (UBAX) - Front / Side View with 25dB Dish Antenna

A basic overview of the front/side view of the 2x2 UBR (UBAX) is given below:

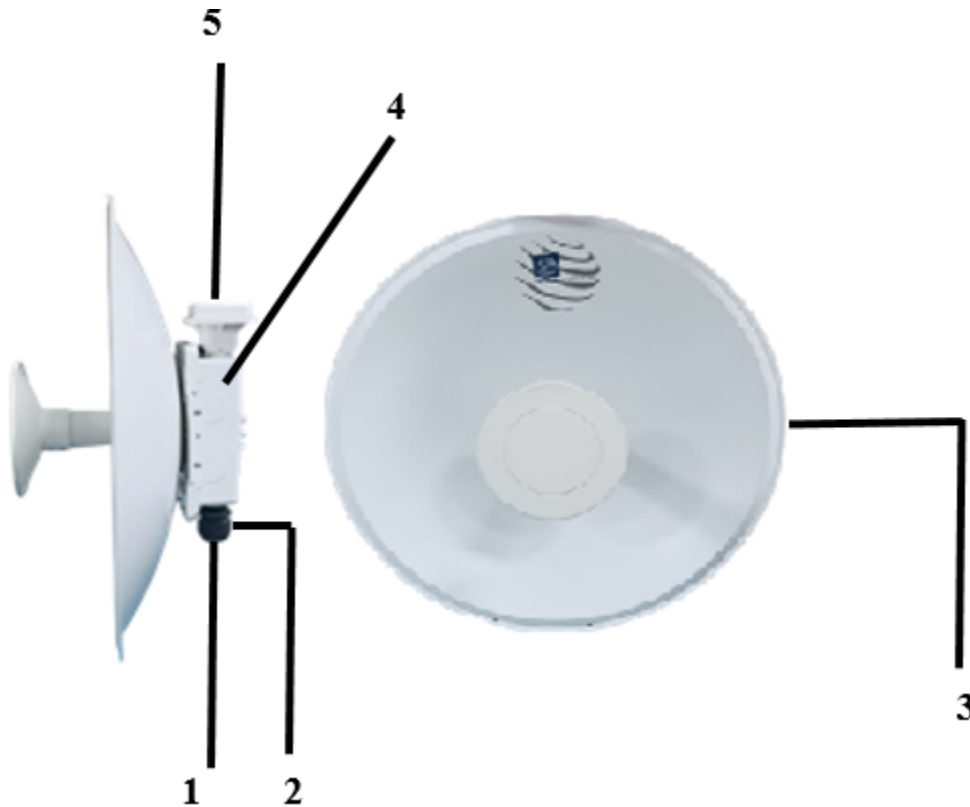


Figure 3: Front/side view of the 2x2 UBR (UBAX) with 25dB Dish Antenna

Information displayed in the above figure is detailed in the table below:

Table 1: List of information displayed in front/side view of the 2x2 UBR(UBAX)

Callout	Name	Description
1.	PoE/LAN port	This port works as both PoE power and LAN as well (power/traffic)

Callout	Name	Description
2.	Humidity controller cap	Cap to control the humidity
3.	25dB Dish Antenna	25dBi Dish Antenna is used with Outdoor UBR
4.	Assembly Screws	These Screws are used to assemble the units
5.	GPS Enclosure	GPS enclosure is used to assemble the GPS with UBR

#### 4.2 2x2 UBR - Back View with 25dB Dish Antenna

A basic back side overview of the 2x2 UBR is given below:



*Figure 4: Back view of the 2x2 UBR(UBAX) with 25dB S Dish Antenna*

Information displayed in the above figure is detailed in the table below:

*Table 2: List of information displayed in back view of the 2x2 UBR(UBAX)*

Callout	Name	Description
1.	Mounting Brackets	Mounting Brackets are provided to hold it with the pole in the field.
2.	Humidity controller cap	Cap to control the humidity
3.	External antenna	External 25dB Dish antenna is provided.

Callout	Name	Description
4.	Mounting Screws	Mounting Screws are provided for assembly in the field.
5.	GPS Enclosure	GPS enclosure is used to assemble the GPS with UBR

### 4.3 2x2 UBR (UBAX) – Front/Side View with Sector Antenna

A basic overview of the front/side view of the 2x2 UBR is given below:



*Figure 5: Front/side view of the 2x2 UBR (UBAX) with Sector Antenna*

Information displayed in the above figure is detailed in the table below:

*Table 3: List of information displayed in front/side view of the 2x2 UBR(UBAX)*

Callout	Name	Description
1.	PoE/LAN port	This port works as both PoE power and LAN as well (power/traffic)
2.	Humidity controller cap	Cap to control the humidity
3.	Sector Antenna	Sector Antenna is used with Outdoor UBR
4.	Assembly Screws	These Screws are used to assemble the units
5.	GPS enclosure	GPS enclosure is used to assemble the GPS with UBR

#### 4.4 2x2 UBR (UBAX) - Back View with Sector Antenna



Figure 6: Back view of the 2x2 UBR (UBAX) with Sector Antenna

Information displayed in the above figure is detailed in the table below:

Table 4: List of information displayed in back view of the 2x2 UBR(UBAX)

Callout	Name	Description
1.	Mounting Screws	Mounting Screws are provided to assemble the unit
2.	Humidity controller cap	Cap to control the humidity

Callout	Name	Description
3.	Sector antenna	Sector antenna is provided.
4.	GPS	GPS enclosure is used to assemble the GPS with a unit.

#### 4.5 2x2 UBR (UBAX) - Front/Side View with N-Type



Figure 7: Front/side view of the 2x2 UBR (UBAX) with N - Type

Information displayed in the above figure is detailed in the table below:

Table 5: List of information displayed in front/side view of the 2x2 UBR (UBAX)

Callout	Name	Description
1.	Top cover	Top cover is provided to the unit.
2.	Humidity controller cap	Cap to control the humidity
3.	Mounting Screws	Mounting Screws are used to assemble the unit
4.	N-Type connectors	N-Type connectors are provided.
5.	GPS	GPS enclosure is used to assemble the GPS with a unit.

## 4.6 2x2 UBR (UBAX) - Back View with N- Type

*Figure 8: Back view of the 2x2 UBR (UBAX) with N - Type*

Information displayed in the above figure is detailed in the table below:

*Table 6: List of information displayed in back view of the 2x2 UBR(UBAX)*

Callout	Name	Description
1.	Top cover	Top cover is provided to the unit.
2.	Humidity controller cap	Cap to control the humidity
3	Mounting Screws	Mounting Screws are used to assemble the unit
3.	N-Type connectors	N-Type connectors are provided.
4.	GPS	GPS enclosure is used to assemble the GPS with a unit.

## 5 Initial Setup

Observe the following safety precautions and avoid damage to the UBR (UBAX):

1. Do not power the device during installation.
2. Do not subject the device to high temperatures.
3. Keep away from high voltage cables.
4. Disconnect the device before cleaning it.
5. Do not wipe the device with a damp cloth.
6. Do not wash the device with liquid.
7. Do not open the enclosure when the UBR is working.
8. Fasten the device tightly.

**UBR:** Power up the device using power over Ethernet.



*Figure 9: Basic overview of the device UBR (UBAX) power up with 25dB Dish Antenna*



*Figure 10: Basic overview of the device power up with Sector Antenna*



*Figure 11: Basic overview of the device power up with N-Type*

## 5.1 Installation Setup

The 2x2 UBR has four holes on its back side for the attachment of the mounting bracket, as shown in “Figure 3: Back view of the 2x2 UBR” of this document. The mounting bracket is designed in such a way that the UBR can be mounted on the pole with the help of its attaching parts. It provides the freedom of movement to the UBR even after the mounting.

1. The mounting bracket is fixed onto the mounting holes of 2x2 UBR as shown in the figure below:



*Figure 12: Mounting bracket attachment with the 2x2 UBR(UBAX) device with 25dBi Dish Antenna*

## 5.2 2x2 UBR mounting to the Pole

Follow the steps given below and mount the device onto the pole:

1. Align the bracket mounted UBR device with pole holder and U-bolt.
2. The final alignment of 2x2 UBR in a pole mounting is shown in the figure below:



*Figure 13: Basic overview of pole mounted 2x2 UBR (UBAX) device*

## 6 Connect to the UBR

Follow the steps mentioned below and connect to the UBR through GUI:

1. Configure a computer with a 1-domain static IP address e.g. 192.168.1.1 and a subnet mask of 255.255.255.0.
2. For help configuring a static IP address on your computer, check the instructions or online help that came with that computer.
3. Connect the Ethernet cable to the computer.
4. Connect the other end of the Ethernet cable to the PoE/LAN port on the UBR.
5. Connect the UBR's PoE supported ethernet port (eth0) to PoE injector or PoE switch. Device will be powered On.
6. Open a web browser and enter the "UBR static IP address" in the address bar. The default static IP address is set to 192.168.1.1.
7. A login screen will appear.

### 6.1 Login through GUI

This is the 1<sup>st</sup> screen of UBR GUI. It provides access to the users with valid login credentials only. The login credentials will determine the access rights of the user. For more details on access rights and respective roles refer to "User Management" section in this document.

A basic overview of the same is shown below:

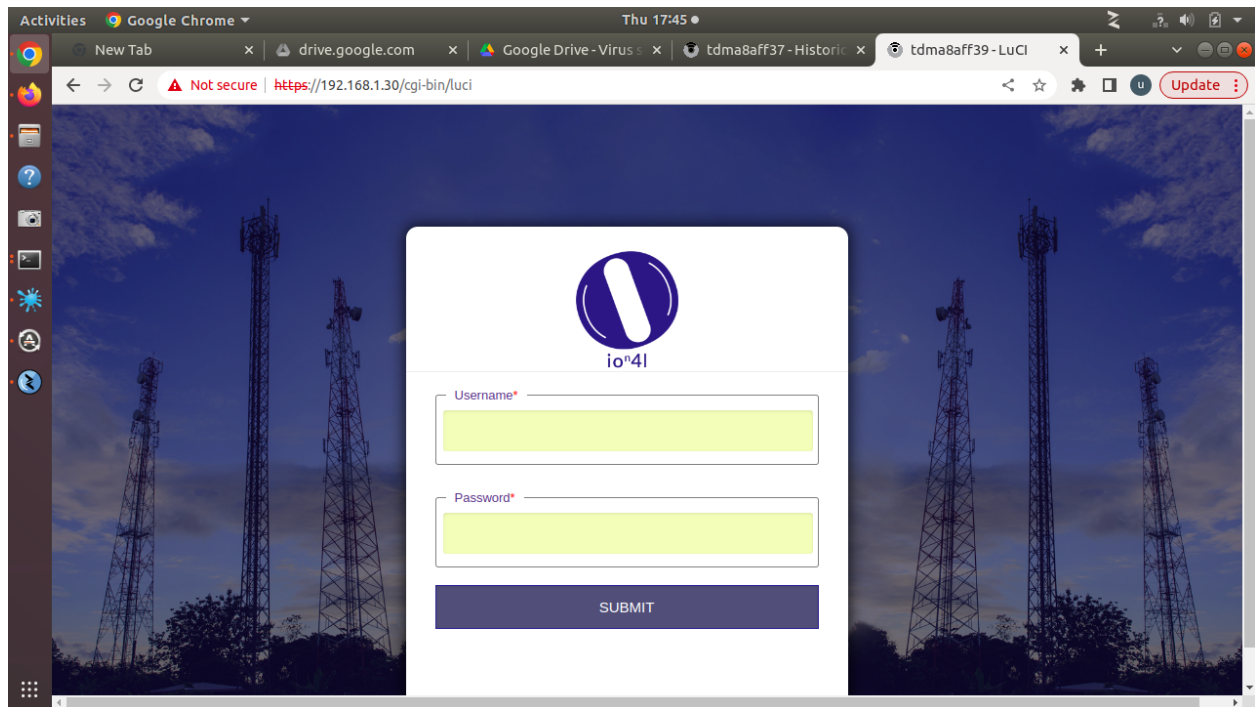


Figure 14: Basic overview of login screen

Follow the steps given below to login through GUI:

Table 7: List of actions to login through GUI

Callout	Name	Description
1.	Web browser	Open a web browser and enter the “UBR IP address” in the address bar. The default static IP address for the 2x2 UBR is set to “192.168.1.1”
2.	User name	Enter the valid “User ID”. The default user ID for the 2x2 UBR is “admin”
3.	Password	Enter the valid “Password”. The default password for the 2x2 UBR is “HFcl!@23#ion”

Click on “Submit”, a successful/authenticated login will take the user to the Status Overview screen.

## 7 Screen toolbars

The toolbars on the screen are designed for the ease of user and to aid them in accessing information. Each toolbar has its own options, through which the user can perform various activities or can view various information.

There are two toolbars provided with each screen as listed below:

1. Overview toolbar on the top

## 2. Navigation toolbar on the left

### 7.1 Overview toolbar on the top

From this toolbar, the user can view or hide the backhaul network overview of the UBR at any point of time. The backhaul network overview is available in both tabular and graphical format.

The user can click on the “Table/Graphic/All” option to view the backhaul network overview in tabular/graphical/all formats respectively. The user can click again on the same option to hide the same. The user can update the configuration of the respective UBR and can monitor the impact on the system from this toolbar without leaving the working screen.

A basic overview of the information displayed in the toolbar is given below:

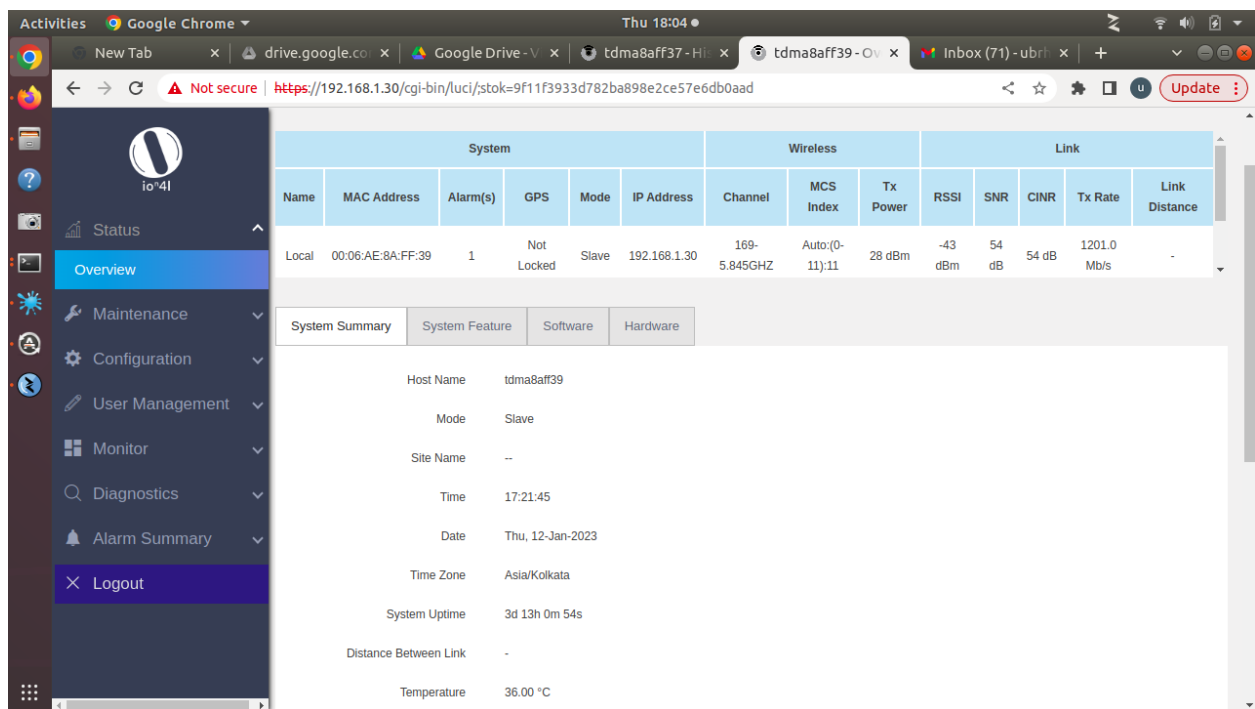


Figure 15: Basic overview of toolbar on top

The list of actions available at overview toolbar on the top is as follows:

Table 8: List of actions at overview toolbar on the top

Callout	Name	Description
1.	Table	Click on the “Table” option to view the backhaul network overview in a tabular format. Click on the “Graphic” option to hide the table and view the graphical overview

Callout	Name	Description
2.	Graphic	Click on the “Graphic” option to view the backhaul network overview in a graphical format. Click on the “Table” option to hide the graphical overview and view the tabular overview
3.	All	Click on the “All” option to view the backhaul network overview in both tabular and graphical format.
4.	User	The name of the user is displayed
5.	Bell Icon	Click on the bell icon to view all alarms and notifications of respective UBR. The user will be directed to Alarm listing page once clicked.
6.	Refresh	Click on the icon and refresh the page

## 8 Status overview screen

The screen provides the status overview of:

1. System summary
2. System feature
3. Software
4. Hardware

### 8.1 System summary

A basic layout of the system summary is given below:

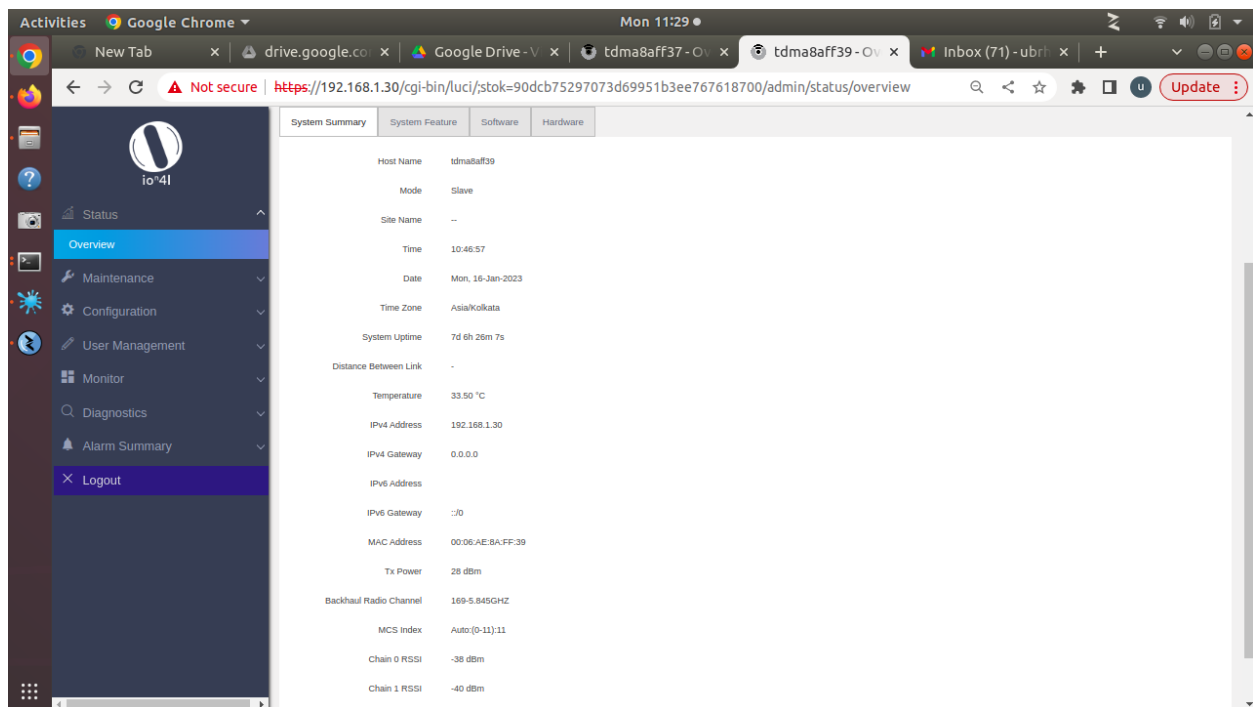


Figure 16: Basic layout of the system summary screen

Follow the steps given below to view the system summary:

Table 9: List of information displayed in the system summary

Callout	Name	Description
1.	Status	Click on the “Status” dropdown in navigation toolbar
2.	Overview	Click on “Overview” option
3.	System summary	Click on “System summary” option
4.	Hostname	Displays the “Hostname” assigned to the respective UBR in the “System Configuration” screen
5.	Mode	Displays the acting mode (Master or Slave) of the respective UBR in the P2P or P2MP link. The same is configured for the UBR in the “Link settings” section
6.	Link Type	Displays the role of the respective UBR in the link. Either the device is participating in P2P link or P2MP link. The same is configured in the “Link settings” section
7.	Site Name	Displays the name of the site with which the respective UBR is associated. The site name is given in the “System Configuration” screen
8.	Time	Displays the time details according to the time zone allocated in the “System Configuration” screen
9.	Date	Displays the date details according to the time zone allocated in the “System Configuration” screen
10.	Time Zone	Displays the selected time zone according to which the date and time calculations are done for the respective UBR. The same is configured in the “System Configuration” screen
11.	System uptime	Displays the time duration since the respective UBR board is up and successfully running without any shutdown
12.	IPv4 Address	Displays the assigned IPv4 address of the UBR
13.	IPv4 Gateway	Displays the assigned IPv4 gateway address of the UBR
14.	IPv6 Address	Displays the IPv6 address, if assigned to the UBR or displays “Not connected” if no IPv6 address is assigned to the UBR
15.	IPv6 Default Gateway	Displays the IPv6 Default Gateway, if assigned to the UBR or displays “Not connected” if no IPv6 Default Gateway is assigned to the UBR
16.	Master MAC Address	Displays the MAC address of the master device
17.	Tx Power	Displays the power of wireless radio signal being transmitted over the link
18.	Backhaul Radio Channel	Displays the wireless radio channel being used for transmission

Callout	Name	Description
19.	MCS Index	Displays the MCS index
20.	RSSI per chain	Displays the RSSI value of connected chains or displays “Disconnected”

## 9 Logout

The user can click on the “logout” option to terminate the session as shown in the figure below:

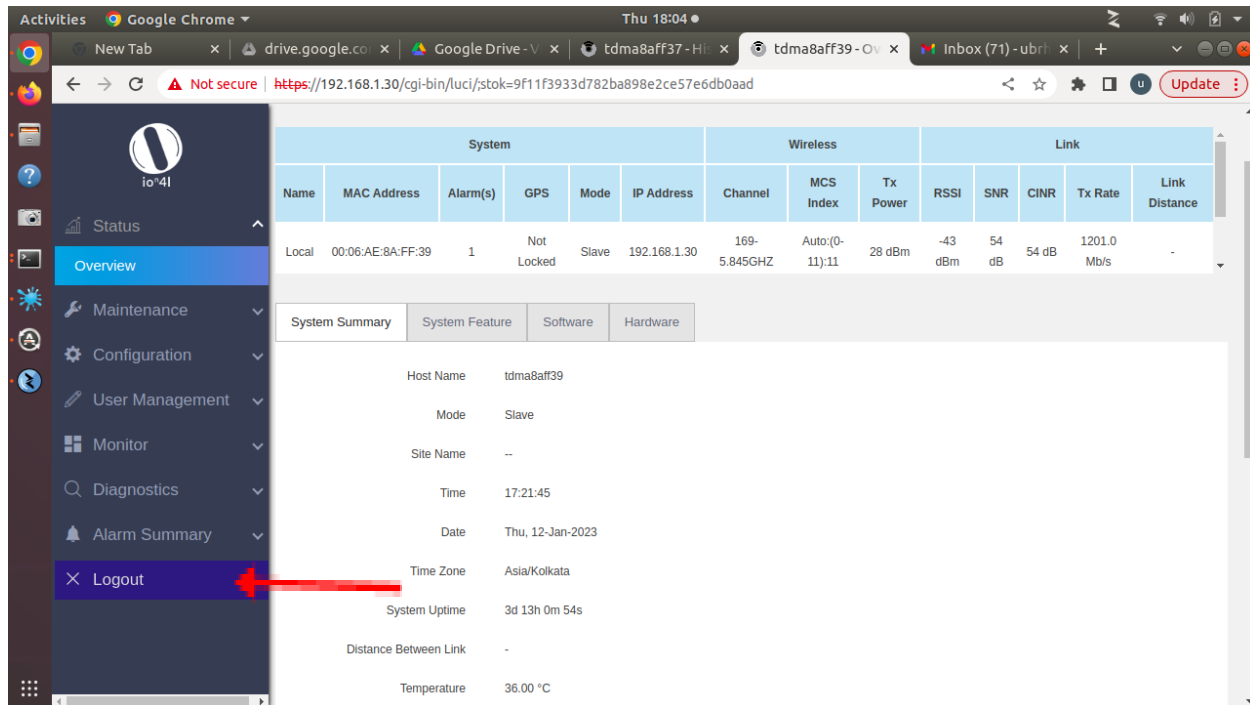


Figure 17: Basic overview of the UBR GUI with logout option

Once logged out the user will be presented with the login screen.

## 10 Use Cases

### A. Point-to-Multipoint Deployment

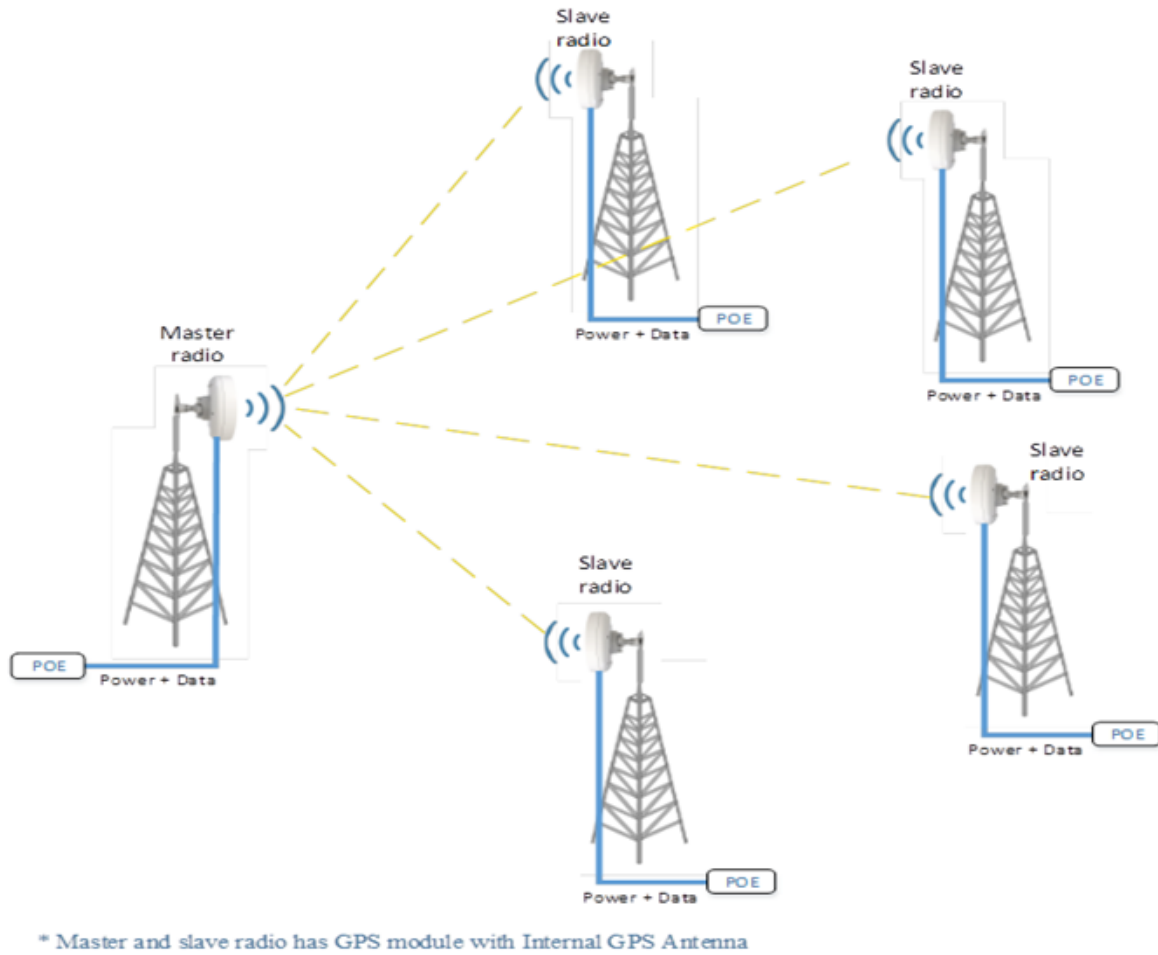


Figure 18: Use Case Diagram of Point-to-Multipoint Deployment

## B. Enterprise Grade Point-to-Point Solution

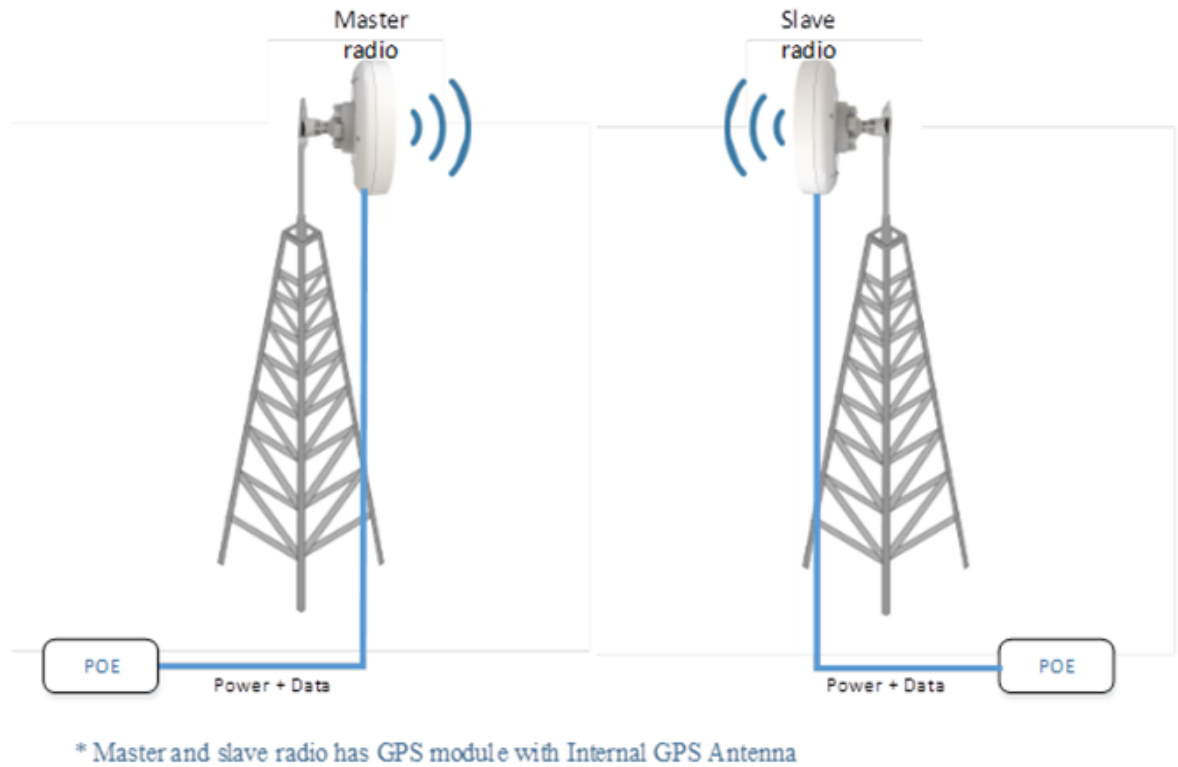


Figure 19: Use Case Diagram Point-to-Point Deployment