

165mm

90mm

FCC Warning Statement:



This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment must be installed and operated with a minimum distance of 15 cm between the radiator and user body.

HOW TO USE CORRECTLY



Centrally
Placed
✓



Plastic Case
Thickness 4mm
✓



Not Placed
Correctly
✗



Magnetic
Case
✗



Bulky Case
Thickness 4mm
✗




Metal Ring
Case
✗



Credit Card
Case
✗

DESKTOP WIRELESS CHARGER & PHONE HOLDER

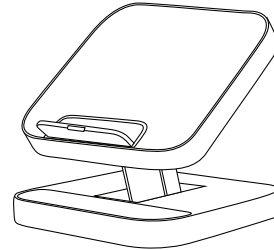

USER MANUAL

Inside page 1

Back


Front

165mm

90mm

Functions:

1. Wireless charging surface
2. Type-C input
3. Vertical standing recess
4. Horizontal standing flap

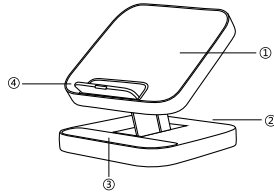

Product Specifications:

- Input: 9V/2A Max.
- Wireless Charging Output: 15W Max.

Instructions

The Flex Wireless Fast Charging Stand is a versatile device that offers convenient charging options for your phone. When closed, it can wirelessly charge your phone in a flat laying position. Additionally, it can be opened up to function as a stand, providing the flexibility of wireless charging in both vertical and horizontal positions.

- Use the supplied Type-C cable to plug the Wireless Charging Stand into a USB port on your PC, laptop or a USB mains adaptor. Use a 20W or more QC (Quick Charge) or PD (Power Delivery) mains adaptor to achieve optimum charging speed. Using a PC/laptop USB output may lead to slow charging, or not charging at all.
- Place your phone on the charging surface to start wireless charging. If the phone does not indicate that it is charging, adjust the position of the phone until the charging coil and power receiver in your phone are aligned.

To use Flex as a wireless charging stand lift the top half of the charger and position it on an angle.

- To charge in a vertical standing position, place the bottom edge of your phone in the vertical standing recess (3) and lean it against the wireless charging surface. Adjust the angle of the wireless charging surface until the phone indicates that it is aligned properly and charging wirelessly.
- To charge in a horizontal standing position, open up the horizontal standing flap (4) and place the bottom edge of your phone on the ledge, and lean it against the wireless charging surface. Adjust the position of your phone until the phone indicates that it is aligned properly and charging wirelessly.
- When charging is complete; remove the USB cable from the charging port.