

**Thank you** for your purchase!

Instructions made easy



Read instructions or watch  
easy-to-follow video.  
Scan code or visit  
[byjasco.com/474851](http://byjasco.com/474851)

*Exclusive deals*



For deals, to register  
your purchase and to  
tell us how we're  
doing, simply scan  
the code or visit  
[byjasco.com/deals](http://byjasco.com/deals)



Discover innovative lighting  
solutions at  
[www.byjasco.com/lighting](http://www.byjasco.com/lighting)



Like our product?  
Leave a review  
on your favorite  
retailer website  
or [amazon.com](http://amazon.com)



Having problems?  
Let us know how  
we can help.  
**1-800-654-8483, M-F.**

# Energizer®




**Wireless Switch**  
LED Ceiling Light

## Wireless Switch LED Ceiling Light

### MOUNT THE CEILING LIGHT

1. Remove the base of the ceiling light by rotating it counterclockwise. Use the provided screws and anchors to mount the base to the desired surface. Ensure it is firmly installed.
2. Insert 4 C batteries (not included) into the ceiling light, noting polarity.
3. Use the switch next to the batteries to set the brightness level to 100 or 200 lumens. 200 lumens will be a brighter option with less battery life. 100 lumens will be a less bright option but with longer battery life.
4. Attach the light to the mounted base by turning it clockwise until it clicks into place.

**NOTE:** Ensure the mounting surface is capable of supporting the light with batteries installed.

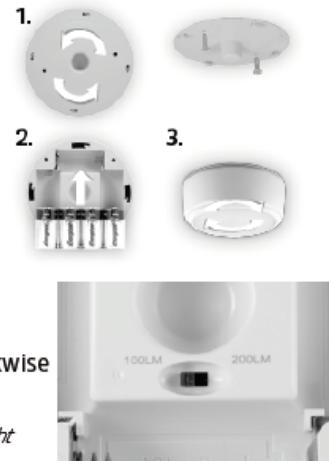

### MOUNT THE WALL SWITCH

1. Remove the back mounting plate from the wall switch by sliding the wall switch remote upwards.
2. Insert the included screws through the holes on the mounting plate to secure it to the wall. Do not overtighten.
3. Mount the wall switch onto the mounting plate by gently sliding it downward to secure it in place.

### WALL SWITCH OPERATION

1. Press up on the switch to turn the light on, press down to turn the light off.

**NOTE:** There is a 60 min. timeout feature that will turn the light off to conserve battery life. The wall-switch remote will control all Energizer Wireless Switch LED Ceiling Lights (47485) within a 50ft range.

### WALL SWITCH BATTERY REPLACEMENT

1. To replace the switch's battery, slide and remove the battery door.
2. Replace with one A23 battery, noting polarity.
3. Replace the battery door and ensure it is firmly closed.

### **FCC Warning**

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **Radiation Exposure Statement**

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

MADE IN CAMBODIA

©2025 Energizer. Energizer and certain graphic designs are trademarks of Energizer Brands, LLC and related subsidiaries and are used under license by Jasco Products Company, LLC.

Questions? Contact our U.S.-based Consumer Care at 1-800-654-8483, M-F.

90-day warranty. Visit [www.byjasco.com](http://www.byjasco.com) for warranty details.

PATENTS/PATENTS PENDING [WWW.BYJASCO.COM/PATENTS](http://WWW.BYJASCO.COM/PATENTS)

**WARNING**

- BATTERIES MAY LEAK HARMFUL LIQUIDS OR IGNITABLE MATERIALS OR EXPLODE CAUSING INJURY AND PRODUCT DAMAGE
- DO NOT MIX OLD AND NEW OR OTHER BATTERY TYPES
- REPLACE ALL BATTERIES AT THE SAME TIME
- REMOVE BATTERIES IF PRODUCT IS TO BE UNUSED FOR EXTENDED PERIODS OF TIME

47485 EnSp Manual v2  
12/9/24