

# User Manual



**THE  METI**

# Contents

<b>introduction</b> .....	01
<b>Before Set-Up</b> .....	02
Unboxing .....	02
Charging .....	02
Power On .....	02
<b>Initial Set-Up</b> .....	03
Region .....	03
WiFi .....	03
Windows™ Agreement .....	04
Security Pin .....	04
Link Device to Your Phone .....	05
Windows™ Assistant .....	05
Windows™ Privacy .....	05
<b>Interface</b> .....	06
Start Menu .....	06
Settings and Personalisation .....	07
Action Centre .....	08
<b>Windows™ Shortcuts</b> .....	09
Basic Commands .....	09
Settings Shortcuts .....	10
Desktop Shortcuts .....	10

# Introduction

Thank you for choosing to buy an THE YETI product. All products brought to you by THE YETI are manufactured to the highest standards of performance and safety. Before use, please read this manual carefully

It gives important instructions about safety, use and maintenance of your Device.

***Note: Please follow the instructions in this guide to ensure your device is properly set up. Incomplete or incorrect setup will affect the functionality of your device.***

# Befor Set-Up

## Unboxing

When you first get your device, you'll need to do a few things before turning on your device.

The first step to setting up any new Windows® device is to unbox the device and assess what items and equipment have been bundled with it.

Within the box, you will find a DC wall charger, an instruction manual, and the device itself. Make sure to locate the instruction manual and read through it so you can familiarize yourself with the device.

## Charging

While your device will already come with enough charge to be powered on right out of the box, we recommend you give it a full charge before first using it.

To charge your device, plug the included DC Charger into the wall charger.

Plug the other end into the Charging port on the device.

If you are unsure what cable is the charging cable, locate your user manual and read through the product overview page.

## Power On


Once you've fully charged the device, turn it on by holding down the "Power" button for around three seconds. Keep it pressed until the screen displays the THE YETI Logo.

# Initial Set-Up



## Region

After the Windows logo the "Let's start with region, is this correct?" screen is displayed. Select your country or region from the list and then click yes. Next the "Is this the right keyboard layout?" screen appears. Select which layout you wish to choose, and then click yes. On the next screen you will have the option to add a second keyboard layout, or you can skip to proceed with the set-up.

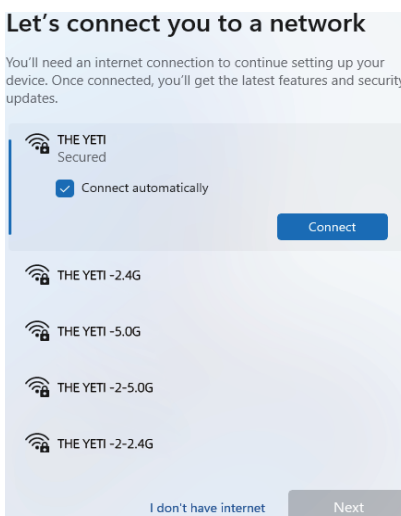

## WiFi


After selecting your region and keyboard layout, a list of Wi-Fi networks in range will be displayed on the screen. You will need to find your own Wi-Fi network on the page. If your network is not appearing, move closer to your router. Click the network you want to connect to. If the network is secured, you will be prompted to enter the password before you can connect. Use the on-screen keyboard that appears to enter the password. After you have entered your Wi-Fi password, Click "Continue" button to connect.

**NOTE: Certain parts of the set-up process require an internet connection. It is highly recommended that you connect to a Wi-Fi network before continuing the set-up.**

**NOTE: After the region and Wi-Fi set up there will be a few introductory screens that require no action.**

## Windows Agreement

The next step is to read through the information about the operating system and the license agreement. Read through this and then press Accept to continue.

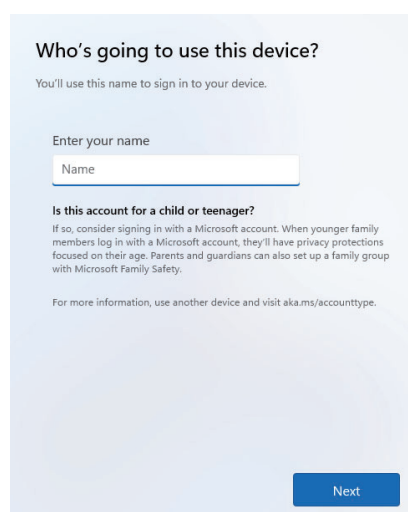

Who's going to use this device?

You'll use this name to sign in to your device.

Enter your name

**Is this account for a child or teenager?**  
If so, consider signing in with a Microsoft account. When younger family members log in with a Microsoft account, they'll have privacy protections focused on their age. Parents and guardians can also set up a family group with Microsoft Family Safety.

For more information, use another device and visit [aka.ms/accounttype](https://aka.ms/accounttype).

Next


## Windows Account

After setting up the at this point in the set-up you are given the option to sign into a pre-existing Windows account or to create a brand new one. To create a new one, select Create Account and the device will then ask you to enter your name. The next step is to enter your date of birth and gender. After this you will be shown a list of generated email addresses or you can type in your own. Once the email address is confirmed, you will need to choose a strong password. We recommend using a combination of capital letters, numbers and punctuation.

You are also given the option to add a phone number to the account. This is used for recovering your account in case you forget the password. This is highly recommended.

## Security Pin

After setting up the Windows account, you are given the opportunity to set up a Windows PIN. This allows a quick sign-in rather than typing in your Windows password every time.

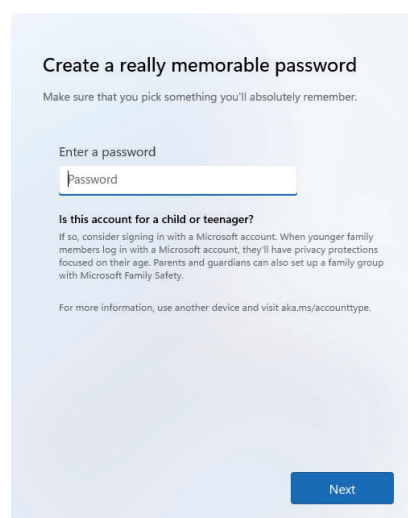

Create a really memorable password

Make sure that you pick something you'll absolutely remember.

Enter a password

**Is this account for a child or teenager?**  
If so, consider signing in with a Microsoft account. When younger family members log in with a Microsoft account, they'll have privacy protections focused on their age. Parents and guardians can also set up a family group with Microsoft Family Safety.


For more information, use another device and visit [aka.ms/accounttype](https://aka.ms/accounttype).

Next



## Link Device To Your Phone

After setting up your Windows account and security pin you can link your phone to the device. You type in your mobile number and an auto-generated text is sent to your phone.

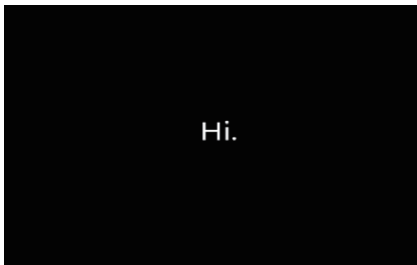

## Windows Assistant

Windows will also ask you to set up the Cortana personal assistant. This is not compulsory and will not have an adverse effect on the running of your device.

Setting up Cortana will allow the device to provide personalized experiences and relevant suggestion. Microsoft will collect information such as location, contacts and voice input. You can ask for help and advice between Cortana. You can edit what Cortana remembers and disable Cortana completely in the settings app.




## Windows Privacy

The final step of set-up is deciding what setting you want to send to Microsoft. Once you have selected which settings you wish to keep, select accept to proceed.

# Interface

## Start Menu


- **Account:** Click to switch to another account, lock the computer or sign out.
- **Live Tiles:** Click a tile to open an app.
- **Most Frequently Used apps:** List in the side panel of the most used apps on the device.
- **File Explorer:** Navigate through the files on your device.
- **Settings:** Shortcut to the settings app.
- **Power:** Short down or re-start your device.
- **Start Button:** Click here to open the start menu.

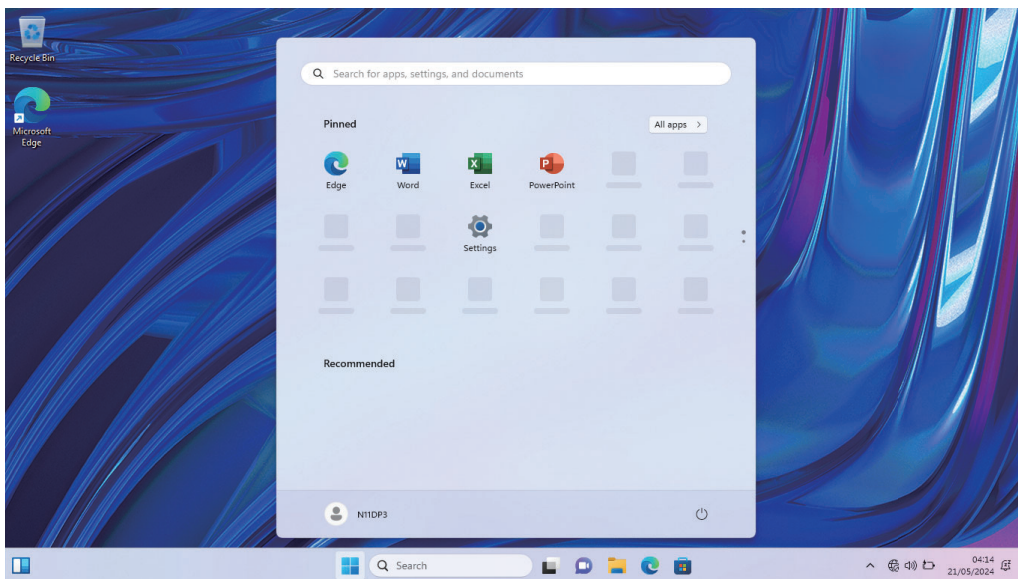

# Interface

## Settings and Personalisation

- **To Personalize your Device:** Click the Start button, select Settings from the Start menu, and click the Personalization category from the Settings app.
- **Change Background:** Choose built-in colors and pictures, or use your own. Select more than one picture to start a slide show.
- **Change Colors:** Change window color and transparency
- **Change Lock Screen:** Change the image that appears when the screen is locked.
- **Change Start:** Change what apps appear on the Start Menu.
- **Change Themes:** Change Windows's color scheme.

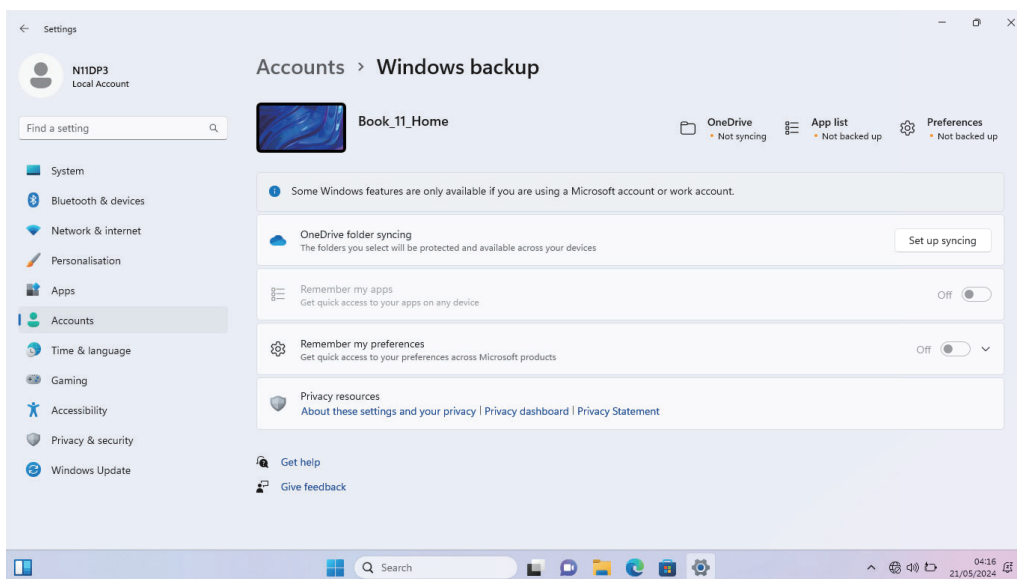


# Interface

## Action Centre

- **To Display Notifications:** Click the Notifications icon on the taskbar, or swipe in from the right side of the screen on a touchscreen, to open the notification Center.
- **Collapse Actions Center:** Click Collapse to collapse the actions down to only the top row. The top row can be customized in the Settings app, so you can control which four actions are available when the list is collapsed.

- **Action Centre**

- Night light
- Flight mode
- Battery Saver
- Bluetooth
- WiFi
- Brightness
- Accessibility
- Volume

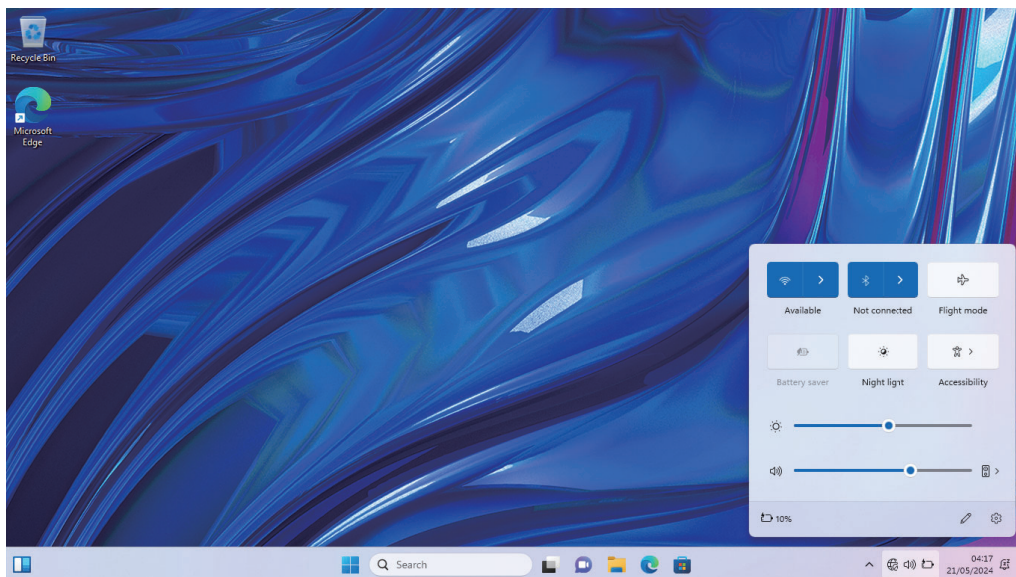

# Windows Shortcuts

## Basic Commands

Start Menu



Copy a Folder/File

CTRL + C

Cut a Folder/File

CTRL + X

Paste a Folder/File

CTRL + V

Chat




Search for APP



Actions Center



Task View

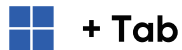

Close App

ALT + F4

Lock computer



Print

CTRL + P





File Explorer












Run dialogue box



## Settings Shortcuts

Open Settings	 + I
Devices pane	 + K
Display options for projecting	 + P
Quick Link menu	 + X

## Desktop shortcuts

Desktop	 + D
Maximize	 + ↑
Minimize/Restore	 + ↓
Switch between apps	ALT + TAB
Minimize all windows	 + M
Snap app to left	 + ←
Snap app to right	 + →
New Desktop	 + CTRL + D
Close Current Desktop	 + CTRL + F4
Switch Desktops	 + CTRL + Left / Right key

## FCC Requirement

changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and actions are available when the list is collapsed.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

## FCC Statement

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception,

which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction

Specific Absorption Rate (SAR) information:

This product meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health.

FCC RF Exposure Information and Statement The SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device type: R1 (FCC ID: 2BMGK-R1) was also tested against these values. The highest SAR value for accessories worn on the body is 0.37 W/kg. The device tested typical body wear operations with the back of the product 0cm from the body. To meet FCC RF exposure requirements, use accessories that maintain a separation distance of 0cm between the user's body and the back of the product. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.