

INSTRUCTION MANUAL

A representative version of the user's manual follows:

Let's go


let's get you up and running

Assemble & charge

1 cover off




2 microSD in




2 minutes 

3 SIM in



4 battery in



5 cover on



6 charge up



Caution: Please read the battery use and safety text in the *Safety, Regulatory & Legal* guide provided with your phone

Set up & go

Time varies 



Create or log into a MOTOBLUR account to get your contacts, email, messages, and status information, for all your accounts, all in one place, all the time. There's more in "Your MOTOBLUR account" on page 7. Registration is secure, and should only take a few minutes:

1 Turn on.

2 Select a language.


3 Register or log in.

Tip: Open your phone to type.

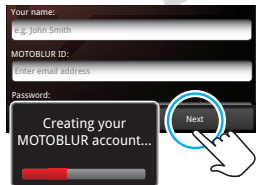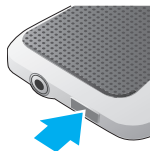

If you have not created a MOTOBLUR account, you'll need to register: Enter your name, your current email address (where MOTOBLUR can send account information), and a new MOTOBLUR account password.

4 Add your accounts to MOTOBLUR.



5 Import your SIM contacts.



To add an account, tap it. Then, enter the user name or email and password that you set up on that account.

Tip: For more, or to add accounts anytime, go to “Add accounts” on page 7.

After you sign in, your phone shows your home screen. Tap  **Contacts**, then press Menu  > **Settings** > **Import from SIM card**. Tap **OK** to confirm.

Turn it on & off

To turn on your phone, press Power  (on the right side).

To turn off your phone, press and hold Power , then tap **Power off** in the menu that opens.



Wi-Fi connect

2 minutes 

If you want to use a Wi-Fi network for even faster Internet access, press Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**. Tap **Wi-Fi** to search for and connect to wireless networks. There's more in “Wi-Fi” on page 39.

Cool content & more

Browse and download thousands of the coolest apps on the planet from Android. On top of that, you get a full HTML browser, so you can surf in style.

Download new apps with “Android Market™” on page 37. Your phone comes with a microSD memory card installed—you can load it up with photos, videos, and music from your computer using “USB drag & drop” on page 40.

Security

Your contacts are backed-up on MOTOBLUR, so don't worry. Even if you lose your phone, MOTOBLUR can help you find it or wipe it. And when you get your next MOTOBLUR product, your stored info makes it a snap to set up with just a username and password.

Of course it doesn't stop there. There are plenty of ways to protect your phone and your information, in “Security” on page 45.

Touchscreen & keys

a few essentials

Touch tips

Here are some tips on how to navigate around your phone.

Tap


To choose an icon or option, *Tap* it. Try it: In the home screen, tap

 **Contacts**.



Tap & hold


To open special options, *tap and hold* an icon or other item. Try it: In the home screen, tap  **Contacts**, then tap and hold a contact to open options.

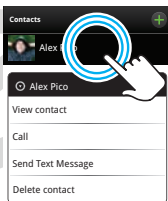

Drag

To scroll through a list or move slowly, *drag* across the touchscreen. Try it: In the home screen, tap  **Contacts**, then drag your **Contacts** list up or down.

Tip: When you drag or flick a list, a *scroll bar* appears on the right. Drag the scroll bar to move the list to a letter A - Z.

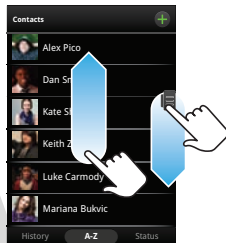

Flick

To scroll through a list or move quickly, *flick* across the touchscreen (drag quickly and release).

Tip: When you flick a long list, tap the screen to stop it from scrolling.

Flipside touch pad

Once you know how to tap, drag, and flick, you can do that on the back of your display, too! Open your phone, then flick and tap the square pad on the back of the display to move and select items.




Key tips

Menu, home, & back

Press Home  to close any menu or app and return to the home screen. Press and hold Home  to show the last few apps you used, then tap an app to open it. In the home screen, press Home  to open or close the main menu.


Press Menu  to open menu options, or Back  to go back.

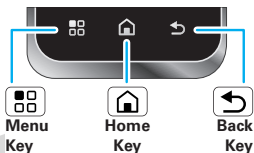

Sleep & wake up

To save your battery, prevent accidental taps, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing Power . To wake up the touchscreen, just press Power , Menu , Home , or Back , or open the phone.

To change how long your phone waits before the screen goes to sleep automatically, press Menu  > **Settings** > **Display & security** > **Screen timeout**.

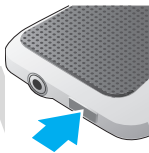

Tip: To make the screen lock when it goes to sleep, use “Screen lock” on page 46.

Power key menu

Press and hold Power  to open the power key menu, where you can turn off the phone (**Power off**), or turn off features (**Airplane mode**, **Bluetooth**, **Wi-Fi**, or **GPS**).

Adjust volume

Press the volume keys to change the ring volume (in the home screen), or the earpiece volume (during a call).



Spin the screen

The touchscreen can spin to stay right-side up when you rotate your phone:

Find it: Menu  > **Settings** > **Display & security** > **Orientation**

Home screen

quick access to the things you need most

Quick start: Home screen

The *home screen* gives you all your latest information in one place. It's what you see when you turn on the phone or press Home  from a menu. It's basically like this:



Use & change your home screen

Time varies 

On your home screen, *shortcuts* are icons that you open your favorite apps, Web bookmarks, contacts, mail labels, or music playlists. *Widgets* show you news, weather, messages, and other updates.

Click the home screen left or right to open other *panels* of shortcuts and widgets.

- To **open** something, tap it. Press Home  to return to the home screen.

To **change** a widget's settings, open it and then press Menu  > **Settings**.


You can find details about the settings for **Happenings** ("Add accounts" on page 7), **Messages** ("Set up messaging" on page 16), **Music** ("Music" on page 28), **Social Status** ("Update your status" on page 7), or **News** or **Weather** ("Set up widgets" on page 22).

- To **add** something or change your **wallpaper**, tap and hold an empty spot until you see the **Add to Home screen** menu.
You can add a folder to organize your shortcuts.
- To **move** or **delete** something, tap and hold it until you feel a vibration, then drag it to another spot, another panel, or the trash at the bottom of the screen.

Search

< 1 minute 

To search, use a Search widget (if you have one on your home screen), or open your phone and press Search .



Tip: In your main menu or **Contacts**, you can open your phone (or press and hold Menu  to open a display keypad), then type an entry name to find it.

Main menu

Quick start: Main menu

The main menu shows you all of your applications. To open it from the home screen, press Home . To close it, press Home  again.



Note: Your main menu will vary.

Tip: To find an app in the main menu, open your phone (or press and hold Menu  to open a display keypad), then type the app name.

Switching apps

< 1 minute 

Press and hold Home  to see the last few apps you used, then tap the app you want. Press Home  to close an app and return to the home screen.

Social networking

my life, your life

Your MOTOBLUR account

The first time you turned on your phone, you registered for a MOTOBLUR account that manages your messages, contacts, and more (“Set up & go” on page 1). You can log into this account from a computer to upload contacts, manage the account, get help, or even locate your phone: www.motorola.com/mymotoblur

What is MOTOBLUR?

Only MOTOBLUR synchs contacts, posts, feeds, messages, e-mails, photos and much more—from sources like Facebook, Twitter, MySpace, your work e-mail, Picasa, Photobucket—and automatically serves it up just the way you want it. No opening and closing apps and menus, it’s all front and center on your home screen and integrated throughout the entire phone so you can communicate anyway you like.

Update your status

2 minutes 

After you add a social networking account, you can update and see your current status in a **Social Status** widget on your home screen.

To update your status, just tap your **Social Status** widget and enter text. If you have more than one account, you can use the pull-down menu to limit which accounts are updated. If you don’t see a **Social Status** widget, flick your home screen left or right to check all panels.

To add a **Social Status** widget:

- 1 Tap and hold an empty spot on your home screen to open the **Choose widget** menu.
- 2 Tap **Social Status**. The widget appears in the empty spot, and will show your status the next time your phone updates from the network.

Add accounts

2 minutes 

Note: You can add your **Facebook**, **MySpace**, **Twitter**, or other accounts to your phone. If you don’t have accounts, you can visit their Web sites to set them up.

Find it: Menu  > **Settings** > **Accounts** > Menu  > **New account**

To sign into your account, use the user name or email and password that you set up on that account (the same as on your computer).

When you sign into social networking accounts, you’ll see your friends and contacts in your **Contacts** list, and

your status and updates can appear in **Social Status** and **Happenings** widgets.

Twitter and MySpace messages will always appear as “read” on your phone, but your phone notifies you when you receive a new message. MySpace marks your messages as “read” online.

For email accounts, see “Set up messaging” on page 16.

Tip: To download updates faster, use “Wi-Fi” on page 39.

View account updates & features

Time varies 

After you add a social networking account, you can see and respond to friends’ updates with the **Happenings** widget on your home screen. If you don’t see one, set one up in “Widgets” on page 22.

When you tap the **Happenings** widget to open an update, you can tap on the social network’s icon to open its Web site.

Note: Your network or other factors might affect the speed of widget updates.

Edit & delete accounts

2 minutes 

Find it: Menu  > **Settings**
> **Accounts**

Tap and hold an account, then tap **Open account** to edit it, or tap **Delete account** to remove it (along with its contacts and messages).


Calls

it's good to talk


Quick start: Calls

Dialing options

Find it:  **Dialer**

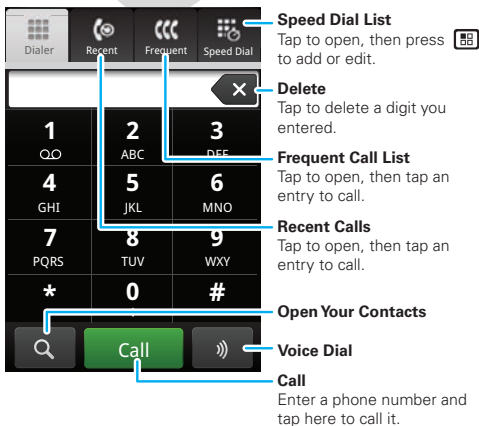

In-call options

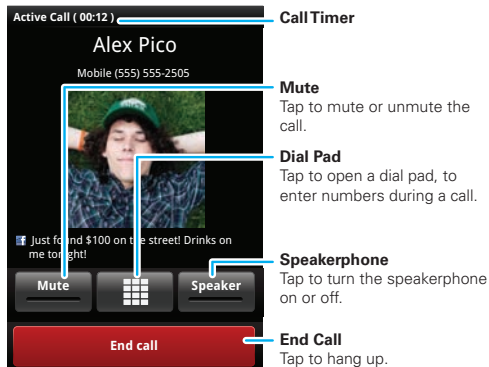

During a call, press Menu  to choose **Hold**, **New call**, or **Use Bluetooth**, or to wake up the touchscreen if it's dark.

Tip: You can press Home  or Back  to hide the active call display. To reopen it, tap  **Dialer**.

Make & answer calls

To make a call, tap  **Dialer**, enter a number, then tap **Call**.

< 1 minute 

Tip: To enter the international dialing code, tap and hold .

To answer a call, drag **Answer** to the right (when your phone is unlocked, **Answer** is just a tap button).



End calls

Tap **End call**.

Note: When you hold your phone to your ear, the display goes dark to avoid accidental taps. When you move your phone away from your ear, the display lights up again.

Tip: You can press Home  or Back  to hide the active call display. To reopen it, tap  **Dialer**.



Speed dial

Find it:  **Dialer** > **Spd Dial**

- To call a number, tap it.
- To add, edit, or clear entries, press Menu .

Voice dial

Find it:  **Dialer** > 

Say a number, or a name from your **Contacts**.



Handsfree

< 1 minute 

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

During a call:

- To use the speakerphone, tap **Speaker**.
- To use a Bluetooth® device, press Menu  > **Use Bluetooth**.

Mute & hold

< 1 minute 

During a call:

- To mute the current call, tap **Mute**.
- To put a call on hold, press Menu  > **Hold**.

Enter numbers during a call

< 1 minute 

To enter numbers during a call, tap  and then tap the dial pad.



Recent calls

< 1 minute 

Find it:  **Dialer** > **Recent**

- To call a number, tap it.
- To send a text message, create a contact, view a contact, add the call to speed dial, or other options, tap and hold an entry.

- To filter the list, tap the view name (like **All calls**) at the top.
- To clear the list, press Menu .

Frequent calls

< 1 minute 

Find it:  **Dialer** > **Frequent**

- To call a number, tap it.
- To send a text message, view a contact, add the call to speed dial, or other options, tap and hold an entry.

Conference calls

2 minutes 

To start a conference call, call the first number. After they answer, press Menu  > **New call** and call the next number. When the next number answers, press Menu  > **Join**.

Your phone number

1 minute 

Find it: Menu  > **Settings** > **About phone** > **Status** > **Phone number**

Your caller ID

1 minute 

To hide your number from the people you call, press Menu  > **Settings** > **Call settings** > **Additional call settings** > **Caller ID**.

Emergency calls

< 1 minute 

Note: Your service provider programs one or more emergency phone numbers (such as 911 or 112) that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Tap  **Dialer** (if your phone is locked, tap **Emergency Call**).
- 2 Enter the emergency number.
- 3 Tap **Call** to call the emergency number.

Note: Your mobile device can use AGPS satellite signals to help emergency services find you (see the important legal and safety information packaged with your phone).

Call forwarding & waiting

1 minute 

You can forward calls all the time, or only when your phone is busy, unanswered, or unreachable (not on the network):

Find it: Menu  > **Settings** > **Call settings** > **Call forwarding**

When you're on a call and a second call comes in, **Call waiting** lets you answer it by tapping **Answer**. You can

turn off **Call waiting**, to send second calls straight to your voicemail:

Find it: Menu  > **Settings** > **Call settings**
> **Additional call settings** > **Call waiting**

Restrict outgoing calls

1 minute 

To restrict your phone so that it can only dial a few numbers:

Find it: Menu  > **Settings** > **Call settings** > **Fixed dialing number**


- To turn fixed dialing on, tap **FDN disabled**.
- To add or delete the allowed numbers, tap **Manage FDN list**.

Contacts

contacts like you've never had before

Quick start: Contacts

Find it:  **Contacts**

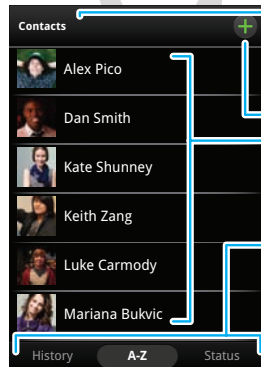

Group

Press Menu  to choose which group to show (like All, Favorites, or Facebook).

Create Contacts

Contacts List

Tap to view contact information. Tap & hold to edit, delete, and more.

Views

Tap a list view, or flick the display right or left to show:

History - recently used

A-Z - list without status

Status - list with status

Tip: To search the list, open your phone (or press and hold Menu  to open a display keypad), then type a name. When you flick or drag this list, a scroll bar appears on the right. Drag the scroll bar to move the list faster.

Import contacts from your SIM

Time varies 

Note: You might have already done this during “Set up & go” on page 1.

If you need to import the contacts from your SIM card, tap  **Contacts**, then press Menu  > **Settings** > **Import from SIM card**.



Call, text, or email contacts

Time varies 

Find it:  **Contacts**

For **Call**, **Send Text Message**, **Email**, **View contact**, or other options, tap and hold the contact.

View & use contacts

Time varies 

With a MOTOROLA **MOTUS** with MOTOBLUR, you'll know what everybody's up to and when. Every time you pick up a call, check a message, or look up a friend's contact info, sure, you'll see their name and number, but you'll see their social network status and smiling face, too.

Find it:  **Contacts**

- To filter the contacts by group (**All**, **Facebook**, and so on) tap the filter name at the top.

Tip: To change which account provides the pictures for your **Contacts**, from the home screen

press Menu  > **Settings** > **Accounts** > Menu  > **Picture Source**.

- To change the list view, tap **History** (recently used), **A-Z** (list without status), or **Status** (list with status) at the bottom.
- To find a contact, just type the name.

Tap a contact to open their details. To start a call or message, just tap their phone number or other info. You can tap **History**, **Info**, or **Happenings** at the bottom of the screen to see more.

Edit or delete contacts

2 minutes 

Find it:  **Contacts**

Tap the contact, then press Menu  > **Edit** or **Delete**. You can set a ringer, address, and other details that will be saved on your phone and your MOTOBLUR account.

Where are contacts edited or deleted? Your phone edits the contacts in its memory, and also updates your MOTOBLUR account. Your changes won't affect your SIM card.

Link contacts

2 minutes 

You might have two **Contacts** for the same person, maybe a Facebook friend who is also

stored on your SIM card, or one friend with two email addresses. To combine these two contacts:

Find it:  **Contacts**


Tap a contact to open it, then press Menu  > **Link contact** and tap the second entry. Your MOTOBLUR account remembers this connection.

Create contacts

2 minutes 

Find it:  **Contacts** > Menu  > **Add contact**

Open your phone to type the name and details.

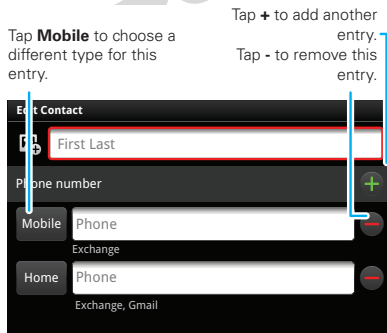

To see more details, flick up.

When you're finished, press Menu  > **Save**.

Where are contacts saved? Your phone saves new contacts in its memory, and also updates your MOTOBLUR account. So, if you get another MOTOBLUR phone, you can just log into MOTOBLUR to download your contacts. You can't save new contacts on your SIM card, but you can update your accounts: In **Contacts**, press Menu  > **Settings** to choose which accounts are updated with new contacts.

Synchronize contacts

< 1 minute 

When you change one of your **Contacts**, your phone automatically updates your MOTOBLUR account online. Also, your phone updates your **Contacts** and MOTOBLUR account whenever you change a friend in your social networking accounts.

So, you don't have to do anything to synchronize your **Contacts** with your other accounts! MOTOBLUR takes care of it for you.

My details

1 minute 

Find it:  **Contacts** > Menu  > **View my details**

To edit details, tap them.

Groups

2 minutes 

You can put your **Contacts** into groups that you create (like “friends,” “family,” or “work”). Then, you can find contacts faster by showing one group at a time.

To create a group in your **Contacts**, press Menu  > **Add group**. Enter a group name, then tap **Add member** to add members.


To show only one group in your **Contacts**, tap **Contacts** at the top of your screen and choose the group name.

Messaging

sometimes it's best 2 text, or IM, or email . . .

Quick start: Messaging

Find it:  **Messaging** > **Universal Inbox**

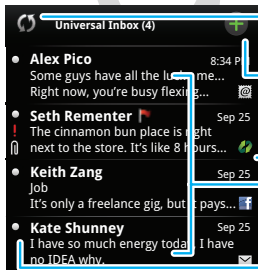

Check for Messages Now

Create Message

Tap to create a new message, and see a list of your drafts (indicated by the number).

Message Type

Message List

Tap to open a message. Tap & hold to move, delete, and more.

Message Status

Icons indicate a message:

-  unread
-  urgent
-  has attachments

Tip: To see more messages, flick or drag up.

Read & reply to messages

2 minutes 

Every text, email, friend-feed, wall post, and bulletin is automatically delivered to you, ready for your immediate reply with the keypad. The best part is you don't have to dig through any apps,

screens or menus—every message streams right to the phone, viewable exactly the way you want.

Find it:  **Messaging** > **Universal Inbox**

Note: **Universal Inbox** shows all of your messages together—text, email, and social networking messages. To show only one type of message, tap a message account type instead of **Universal Inbox**.

- To open a message and all of its replies, tap it.
- To respond to a message, just open it and enter your response in the text box at the bottom.

For email, tap  to show the text box.



- To open options, tap and hold a message.

Tip: Try the **Messages** widget in “Widgets” on page 22.

Create messages

2 minutes 

Find it:  **Messaging** > 

Choose a message type. Then, enter the recipient and message.

In text messages and emails, press Menu  for options like **Insert...** or **Attach Files**.



Send & receive attachments

2 minutes 

To send a file in a message, open a new message and press Menu  > **Insert...** or **Attach Files**.

When you receive a message with an attachment, open the message and tap the file name to download it. Then, tap the name again to open it. Some file formats can be converted to HTML for faster viewing, and your phone will show a button that says **Get HTML version**.

Tip: To send and receive large attachments faster, use a Wi-Fi connection, in “Wi-Fi” on page 39.

Set up messaging

Time varies 

To add email accounts, press Menu  > **Settings** > **Accounts** > Menu  > **New account**.

- **Corporate Sync** is for work email accounts on a Microsoft® Exchange Server. Enter details from your IT administrator.

Tip: You might need to enter your domain name with your user name (like *domain/username*)

Note: Some work accounts might require you to add a password lock to your phone, for security. To stop an account from showing the contacts you create on your phone, tap  **Contacts**,

press Menu  > **Settings**, then uncheck the account under **New contacts**.

- **Email** is for most personal email accounts. For account details, contact the account provider.

Note: While you are using a Wi-Fi network, you cannot access **Yahoo Mail** accounts. You can still use your browser to see these accounts at mail.yahoo.com.

To change your settings, press Home 
>  **Messaging** > Menu , then tap:

- **Manage accounts** to change your user name or password (or server settings, for email).
- **Edit Universal Inbox** to choose which accounts show messages in the **Universal Inbox**.
- **Messaging Settings** to set the notification for each account type (along with other preferences, for email).

To get Gmail™ in your Messages widget and **Universal Inbox**, you'll need to add it as an **Email** account: Tap **Messaging Settings** > **Add account** > **Email** and enter your Gmail™ details. If you added your **Google** account too, turn off its email sync to avoid duplicate email notices: Press Home 
> **Accounts**, tap your Google™ account, and tap the checkmark to turn off **Gmail**.

Tip: For social network accounts, see “Add accounts” on page 7.

Instant messages

Time varies 

To send and receive instant messages, you can use an instant messaging app or your browser.

- To download and use an instant messaging app, press Home  >  **Market** > **Applications** > **Communication**, then choose an app for your provider. Once you download the app, you'll see it in “Main menu” on page 6.
- If you don't see an app for your IM provider, you can use your Web browser. Press Home 
>  **Browser** > Menu  > **Settings**, then enter your provider's Web site and tap **Go**. Once you're there, follow the link to sign in.

Note: Your IM options will depend on your IM provider. To browse instant messaging apps from your computer, go to www.android.com/market.

Voicemail

1 minute 

When you have a new voicemail,  shows at the top of your screen. To hear the voicemail, tap  **Dialer**, then tap and hold .

If you need to change your voicemail number, in the home screen press Menu  > **Settings** > **Call settings** > **Voicemail**.

Text entry

think keyboard, now think smaller

Typing tips

To use the full keypad, open your phone:

To...	
Enter symbols chosen from a list	Press Symbols
Enter alternate characters in the corners of keys	Press Alternate
Enter several alternate characters, until you press Alternate again	Press Alternate twice
Enter one capital letter	Press Shift
Enter only capital letters, until you press Shift again	Press Shift twice
Select text (Scroll left/right), or skip pages (Scroll up/down)	Press Shift + Scroll
Cut selected text	Press Menu > X
Copy selected text	Press Menu > C
Paste cut or copied text	Press Menu > V

To...


Delete a character (hold to delete more)	Press Delete
Delete the current line	Press Alternate + Delete
Jump to the beginning/end of a line	Press Alternate + Scroll
Start a new line (email or social networking) or send the message (text messages)	Press Return

To change your text entry settings and see the dictionary of terms you've used, from the home screen, press Menu > **Settings** > **Locale & text**.

Touchscreen keypad

When your phone is closed, you can open a display keypad by tapping a text field, or pressing and

holding Menu . To close the keypad, press Back .

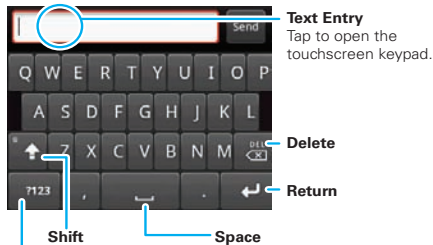


Symbols/Numbers

Tap to open a keypad for symbols and numbers.

To change your settings for this keypad, from the home screen, press Menu  > **Settings > Locale & text > Android keyboard.**

Format text in emails

When you create an email, you can format your message. To select text for formatting, press and hold Shift , then press Scroll  left or right.

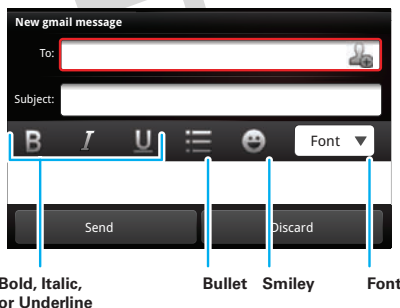

Text entry settings

When you use the touchscreen keypad, your phone suggests words from your dictionary and chosen language. Your phone also automatically enters apostrophes in some words, like "dont."

Find it: Menu  > **Settings > Locale & text**

- To edit your dictionary, tap **User dictionary.**

- To change the language and the style for your touchscreen keypad, tap **Select locale**.
- To change the sounds, corrections, and other settings for your touchscreen keypad, tap **Android keyboard**.
- To change the automatic correction settings for your full keypad, tap **Device keyboard**.

Tips & tricks

Things you can do

- Stop pocket dialing.** If you put your phone in your pocket, the touchscreen might get touched, and accidentally call people. To avoid this, press Power  to put the display to sleep. To wake it up, press Power  again. You can also set up “Security” on page 45.
- Go home.** Press Home . When you're in the home screen, pressing Home  opens the main menu.
- Call again.** Tap  **Dialer**, then tap the **Recent** or **Frequent** tabs.
- Do whatever again.** Press and hold Home  to show the last few apps you used.
- Do stuff on a plane.** Press and hold Power  > **Airplane mode**.
- Find stuff.** Press Search . To use your voice, press and hold Search .

- Find Bluetooth** stuff. Press and hold Power  > **Bluetooth**.
- Find Wi-Fi** stuff. Press and hold Power  > **Wi-Fi**.
- Let stuff **find you**. Press and hold Power  > **GPS**.
- Zoom in** on stuff. In a Web page, tap  to zoom in. It's great for tiny links you want to tap.
- Skip** stuff. When you're in a list like **Contacts**, you can press Scroll  to scroll up and down. To skip a page at a time, press Shift  > Scroll . To skip to the top or bottom of the list, press Alternate  > Scroll .

Battery tips

To help extend your battery life:

- Stop synchronizing Google™ app data: Press Menu  > **Settings** > **Google Synchronization** > **Background data**.
- Choose 2G networks: Press Menu  > **Settings** > **Wireless controls** > **Mobile networks** > **Select network** > **2G Only**

- Turn off GPS, Wi-Fi, and Bluetooth®: Press and hold Power  to open the Power key menu, then tap items to turn them on or off.
- Only check email once an hour: Tap  **Messaging** > Menu  > **Messaging settings** > **Email** > **Get new email** > **Every hour**
- Dim the display: Press Menu  > **Settings** > **Display & security** > **Brightness**

Personalize

add your personal touch

Widgets

Create widgets

1 minute 

- 1 Find an empty spot on your home screen where you want to add a widget. You can flick left or right to open other panels on your home screen.
- 2 Tap and hold the empty spot until you see the **Add to Home screen** menu.
- 3 Tap **Widgets**.
- 4 Tap the type of widget. If necessary, enter the widget settings.

Set up widgets

2 minutes 

You can customize some widgets. Tap a widget to open it, then press Menu :

- **Happenings:** Update your status, choose which accounts appear in this widget, or manage your accounts (the same as “Add accounts” on page 7).
- **Messages:** Change the widget name or choose how long it shows new messages. To add email accounts, “Set up messaging” on page 16.

- **Music:** Set this widget to an artist, album, song, playlist, or just press Menu  > **Party shuffle**. There’s more about “Music” on page 28.
- **News:** Change the widget name, choose how long it shows new stories, or choose a news source. To choose a source, tap , then choose preset **Bundles** or **Channels**, or choose **Custom** to enter a URL for a **Webpage** or an **RSS feed**.
- **Weather:** Change temperature units or add locations. To add locations, tap , enter a city, and tap **Search**. When you open the weather widget, flick left to see other locations you added.

Ringtones

2 minutes 

To personalize your ringtones:

Find it: Menu  > **Settings** > **Sound & ringtones** > **Phone ringtone** or **Notification ringtone**

To set your ringer and vibrate options:

Find it: Menu  > **Settings** > **Sound & ringtones** > **Ringer & Vibrate Modes**

Sounds

To...	
set volume for media and videos	Menu  > Settings > Sound & ringtones > Media volume
hear tones when you dial numbers	Menu  > Settings > Sound & ringtones > Audible touch tones
hear sounds when you select screen items	Menu  > Settings > Sound & ringtones > Audible selection

Display settings

To...	
set display brightness	Menu  > Settings > Display & security > Brightness
set orientation	Menu  > Settings > Display & security > Orientation
set animation	Menu  > Settings > Display & security > Animation

Quick launch shortcuts

2 minutes 

To use a quick launch shortcut, press Search  and the assigned key, like Search  and **B** to launch the browser.

Date & time

1 minute 

Set date, time, time zone, and formats:

Find it: Menu  > **Settings** > **Date & time**

Language & region

1 minute 

Set your menu language and region:

Find it: Menu  > **Settings** > **Locale & text** > **Select locale**

Photos & videos

see it, capture it, share it!


Photos

Take & share photos

Take that family photo, and post it online for everyone to see.

Find it: Press Camera 

2 minutes 

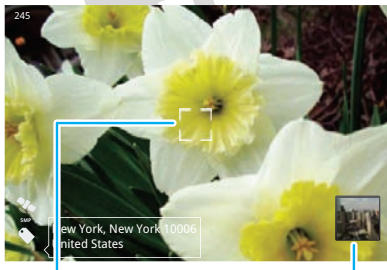

Autofocus Box

Tap the screen to show a thumbnail of your last photo.

Note: Photos are stored on your microSD memory card. **Picture Resolution** is 3MP, unless you change it.

To take the photo, lightly press Camera  halfway until the autofocus box turns green, then press all the way to take the photo.

Tap the viewfinder to see a thumbnail of the photo you've just taken (on the right). Tap the thumbnail, then:

- To **see** all your photos, tap **Gallery**.
- To **set** the photo as a wallpaper, contact photo, or social network profile photo, tap **Set as**.
- To **send** the photo in a message or post it online, tap **Share**. For more info on sharing your photos, see "Share your photo gallery" on page 25.
- To **delete** the photo and return to the viewfinder, tap **Delete**.

Photo options

In the viewfinder, press Menu  > **Settings** to open the camera menu:

options	
Store location in pictures	Save the details of where the photo was taken.
Picture Resolution	Set the resolution of your photo.

options

Color Effects

Choose your color settings, like **None**, **Negative**, or **B/W**.


Advanced settings

Set the **Picture Quality** of your photo, or choose your **White Balance** light settings, like **Auto**, **Daylight**, or **Cloudy**..

View your photos

1 minute 

Find it: Home  >  **Picture Gallery**

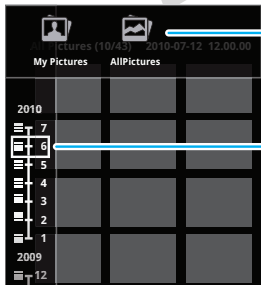

Categories

Tap at the top to open, then tap a category.

Picture Dates

Tap on the left to open the date list, then drag the dates to find pictures.

Play a slideshow

Press Home  >  **Picture Gallery**, tap a picture, then tap  to start a slideshow. To stop the slideshow, tap the display. To return to the gallery, press Back .

Share your photo gallery

Find it: Home  >  **Picture Gallery**

To send your photo in a message or post it online:

- 1 Tap and hold a photo, then tap **Share**.
- 2 Choose how you want to share—like **Email**, **MySpace**, **Social sharing** or **Text Messaging**.

Tip: With **Social sharing**, you can post a photo to more than one social network at the same time.

Manage your photos

2 minutes 

Find it: Home  >  **Picture Gallery**

Tap and hold a photo, then:

- To delete the photo, press Menu  > **Delete**.
- To set the photo as a contact picture, social network profile picture, or wallpaper, press Menu  > **Set as**.
- To open file details, press Menu  > **More** > **Picture Info**.

- To set your photo order list, press Menu  > **Settings** > **Picture Sort**.

Tip: To copy photos to/from a computer, go to “USB drag & drop” on page 40.

Edit your photos

2 minutes 

Find it: Home  >  **Picture Gallery** > *picture* > Menu  > **Edit**

To crop a photo, tap the crop tool, stretch and drag the crop square to the image you want, then tap the crop save icon.

Videos

Record & share videos

2 minutes 

Find it: Home  >  **Camcorder**



Tap the screen to show a thumbnail of your last recording.

Tip: To send your video in a message, set the video quality to **Low (for MMS messages)**: Press Menu  > **Settings** > **Select Video Quality**.

To record the video, press Camera . To stop the video recording, press Camera  again. Tap the viewfinder to see a thumbnail of the video you've just taken. Tap the thumbnail, then:


- To **see** all your videos, tap **Gallery**.
- To **play** the video, tap **Play**.

- To **send** the video in a message or post it online, tap **Share**. For more info on sharing your photos, see “Share your video gallery” on page 27.
- To **delete** the video, tap **Delete**.

Play your videos

Find it: Home  >  **Video Gallery**
> *video*

2 minutes 

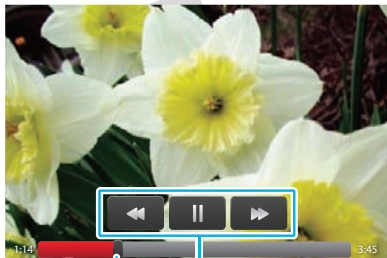

Progress Bar

Video Controls

Share your video gallery

Find it: Home  >  **Video Gallery**

To send your video in a message or post online:

- 1 Tap & hold a video, then tap **Share**.

2 minutes 

- 2 Choose how you want to share—like **MMS**, **Facebook** or **MySpace**.

Manage your videos

2 minutes 

Find it: Home  >  **Video Gallery**

To delete a video, tap and hold a video, then tap **Delete**.


Music

when music is what you need...

Quick start: Music


Tap, tap, play—instant music. Just open your music library, then select what you want to play.

Find it: Home  >  **Music**

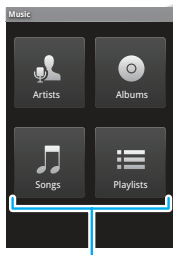

Categories

Tap a category, then tap a song or playlist.

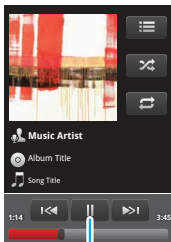

Music Controls

Tip: When a song is playing, you can add it to a playlist by pressing Menu  > **Add to playlist**.

Set up music

Things you need

To put music on your computer and then load it on your phone, you need a:

- Microsoft® Windows® PC, or Apple® Macintosh®.
- USB data cable, to connect your phone and computer.
- microSD memory card in your phone, to store music (up to 32 GB).

Tip: To make sure your memory card is installed, go to “Assemble & charge” on page 1. To see the available memory on your memory card, press Menu  > **Settings** > **SD card & phone storage**.

File formats you can play

Your phone can play MP3, M4A, AAC, ACC+, MIDI, WAV, and OGG Vorbis files.

Note: Your phone does not support DRM protected files.

Headphones you can use

Your phone has a 3.5mm headset jack for wired stereo headsets. You can go wireless with Bluetooth® stereo headphones or speakers (see “Bluetooth® wireless” on page 38).

Get music

Rip a CD

Time varies 

Not literally. If you're new to digital music transfer, this means transferring music from a music CD to your computer.

To rip a music CD on your computer, you can use Microsoft® Windows® Media Player. You can download Windows Media Player from www.microsoft.com.

- 1 On your computer, open Windows Media Player.
- 2 Insert a music CD into the computer's CD ROM drive.

Note: Make sure you change the format to MP3 in "Rip > Format > Rip Settings".

- 3 In the Windows Media Player window, click on the "Rip" tab.
- 4 Highlight the songs you want to import, and click "Start Rip".

The songs are imported to the Windows Media Player Library.

Transfer using Windows® Media Player

Time varies 

Transfer music files from a computer to your memory card.

Note: Copyright—do you have the right? Always follow the rules (see the important legal and safety information packaged with your phone).

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

Note: Your phone supports Microsoft® Windows® XP, Windows Vista®, and Apple® Macintosh®. Other operating systems may not be compatible.

- 2 Your phone shows a USB connection dialog. Tap **USB drive**. You can't use the files on your memory card while it is connected.
- 3 On your computer, open Windows Media Player.
- 4 On the "Sync" tab, select "More Options". Under "Device", select your phone.
- 5 Select "Properties", check the "Create folder hierarchy on device" box, and click "OK".
- 6 Drag your music files over to the "Sync List" and press "Start Sync".

Transfer using USB

Time varies 

Transfer music files from a computer to your memory card.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.

Note: Your phone supports Microsoft® Windows® XP, Windows Vista®, and Apple® Macintosh®. Other operating systems may not be compatible.

- 2 Your phone shows a USB connection dialog. Tap **USB drive**. You can't use the files on your memory card while it is connected.
- 3 Find "Removable Device" (your memory card) in the "My Computer" window.
- 4 Drag and drop your music to a folder on your memory card.

Tip: To help manage your music, create a "Music" folder on your memory card.

- 5 When you're done, use the "Safely Remove Hardware" feature to finish.


Play music

Music library

Open your music library, then select what you want to play.

Time varies 

Find it: Home  >  **Music**

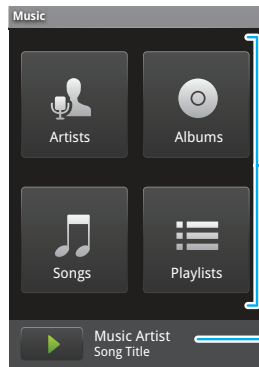


Categories
Tap to list songs or playlists.

Last Played
Tap to play again.

Your music is stored by artists, albums, songs, and playlists. Tap a category, then tap the song or playlist you want to play. Press Menu  > **Party shuffle** to randomly play all your songs, or tap **Search** to look for a song.

Music player

Just tap a song or playlist to get going.

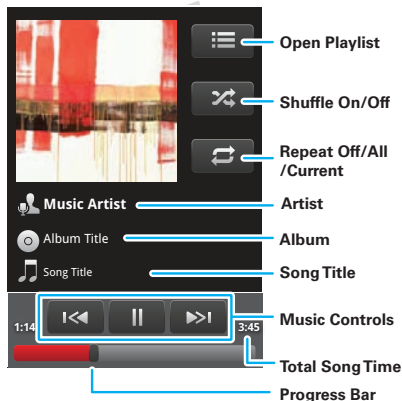

Music player controls

controls	
play/pause	Tap .
previous/next	Tap .
fast forward/rewind	Tap & hold .

controls

view playlist	Tap .
shuffle	Tap .
repeat	Tap .
volume	Press the side volume keys.
view library	Press Menu > Library .
turn shuffle on/off	Press Menu > Party shuffle .
add to playlist	Press Menu > Add to playlist .
use as ringtone	Press Menu > Use as ringtone .
delete	Press Menu > Delete .

Hide, wake, turn off

< 1 minute

Press Home to use another app.
Your music continues to play.

When you see in the status bar a song is playing, flick down to see details. Tap the song to return to the music controls.

To turn off your music tap .

Playlists

2 minutes 

To add a song from the music library to a playlist, tap and hold the song then tap **Add to playlist**. Choose an existing playlist, or tap **New** to create a new playlist.

To add a song to the playlist you're playing, press Menu  > **Add to playlist** in the music player.


To edit, delete and rename playlists, tap and hold the playlist, in the music library.

Web

you don't need a computer, surf the web with your phone

Quick start: Browser

Find it: Home  >  **Browser**

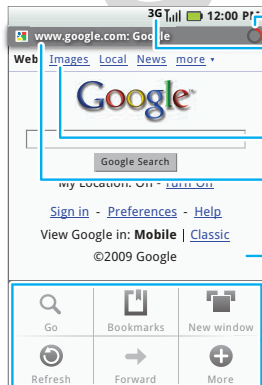

The page is loading.

Connection

Over the air:

Mobile Network: **G, E, 3G**

Wi-Fi: 

Links

Tap to open.

Web Address

To go to a URL, press

 > **Go**.

Drag or flick to scroll.

Press  to open a menu where you can open a Web page, your bookmarks, a new window, and more.

Note: If you can't connect, contact your service provider.

Connect

Time varies 

Your phone uses the mobile phone network (over the air) to automatically connect to the Web.


Note: Your service provider may charge to surf the Web or download data.

To use a wireless network, press Menu  > **Settings** > **Wireless controls**. Tap **Wi-Fi** to turn it on, then tap **Wi-Fi settings** to search for nearby wireless networks. Tap a network to connect. There's more in "Wi-Fi" on page 39.

Web touch tips


Zoom & magnify

In Web pages, when you scroll (drag or flick), zoom icons appear at the bottom of your screen.

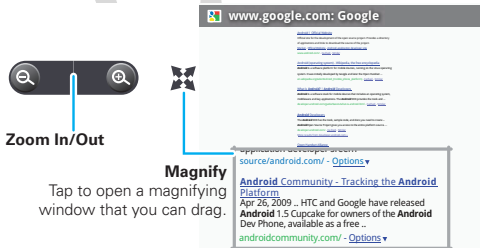

Select links

When you tap a link, your phone outlines it. If you tap and hold the link, your phone shows options, like **Open in new window** or **Bookmark link**.



Browser options

Press Menu  to see browser options:

options	
Go	Enter the Web address (URL) you want. Tip: Some sites are optimized for mobile phones, and they use an “m” in the URL instead of “www” (like m.youtube.com).
Search	Enter text to find.
Bookmarks	Shows a list of your bookmarks. Tap Add bookmark... to add the current page to your list.
New window	Opens a new window.
Refresh	Reloads the current page.
More	Shows browser options, like Find on page , Select text , Page info , Share page , Downloads , and Settings .

Download apps

Time varies 

Warning: Apps downloaded from the Web can be from unknown sources. To protect your

phone and personal data, only download apps from sources you trust, like “Android Market™” on page 37.

Note: All apps downloaded are stored in your phone memory.

To download apps:

- 1 If you want to download apps from any Web page, press Menu  > **Settings** > **Applications** > **Unknown sources**.
- 2 To launch the browser, press Home  >  **Browser**.
- 3 Find the app you want to download and tap the download link.

Manage your downloads

2 minutes 

To view files or applications you have downloaded, press Home  >  **Browser** >  > **More** > **Downloads**.

To clear your download history, tap **Clear list**. To cancel, tap **Cancel all downloads**.

YouTube™

go and create your own classic

Watch YouTube videos

Time varies ⌚

See popular video categories, like Featured, Most viewed, and Top rated. Tap a category, then tap the video to start playing it. To see more video categories, press Menu  > **Categories**.

Search for YouTube videos

2 minutes ⌚

Find it: Menu  > **Search**

Enter text, then tap **Search**. To clear your search history, press Menu  > **Settings** > **Clear search history**.


Google Maps™

where you are, where you're going

Quick start: Google Maps

Where am I? What's around here? Don't worry—let Google Maps help you explore your surroundings and find what you're looking for.

Find it: Home  >  **Google Maps**

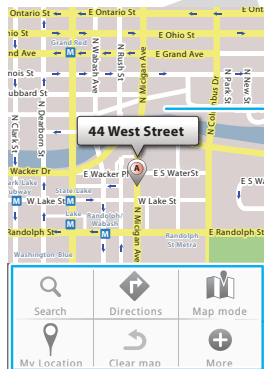

Map View

Drag or flick to scroll.
Tap to show zoom.

Press  to open a menu where you can open a Web page, your bookmarks, a new window, and more.

Google Maps opens by default in “Map mode.”

Latitude

where are your friends & family?

Join Latitude

2 minutes 

See where your friends and family are on Google Maps™. Plan to meet up, check that your parents got home safely, or just stay in touch.

Don't worry, your location is not shared unless you agree to it. You need to join Latitude, and then invite your friends to view your location or accept their invitations. When using Google Maps (in any mode except in Street View), press Menu  > **Latitude**. Read the privacy policy and if you agree with it, tap **Agree & share**.

Add & remove friends

2 minutes 

Find it: Home  >  **Google Maps** Menu  > **Latitude**

To add friends:

- 1 Press Menu  > **Add friends**.
- 2 Tap **Select from Contacts** or **Add via email address**, then tap a contact and **Add friends** > **OK**.

If your friends already use Latitude, they'll receive an email request and a notification. If they have not yet joined Latitude, they'll receive an email request that

invites them to sign in to Latitude with their Google account.

To remove friends:

- 1 Press Menu  > **Latitude** to show your friend's list, then tap a friend in your list.
- 2 Tap **Remove**.

Share location

1 minute 

When you receive a request to share location details you can choose to:

- **Accept and share back**—see your friend's location, and your friend can see yours.
- **Accept, but hide my location**—see your friend's location, but they can't see yours.
- **Don't accept**—location information is not shared between you and your friend.

Hide your location

1 minute 

You can hide your location. Press Menu  > **Latitude** to show your friend's list. Tap your contact name, then press Menu  > **Privacy** > **Hide your location**.

Turn off Latitude

< 1 minute 

Press Menu  > **Latitude** to show your friend's list. Tap Menu  > **Privacy** > **Turn off Latitude**.

Apps for all

get the app you want

Android Market™

get the app you want

About Android Market™

Find it: Home  >  **Market**

Get all the fun games and cool apps you want! Android Market provides access to applications developed by developers worldwide, so you can find the app you want. If you need help or have questions about Android Market, press Menu  > **Help**.

Browse & install apps

1 minute 

Scroll to and tap the app you want to install. Then, tap **Install** (if app is free) or **Buy**.

Manage & restore apps

1 minute 

Find it: Menu  > **Settings**
> **Applications** > **Manage applications**

Tap an app in the list, then tap **Uninstall** (for apps you downloaded), **Clear cache**, or other options.


To reinstall any downloaded items, press Home  >  **Market** > **My downloads**. All previously installed apps are listed and available for download.

Bluetooth® wireless

lose the wires and go wireless

Quick start: Bluetooth wireless

Find it: Menu  > **Settings** > **Wireless controls** > **Bluetooth settings**

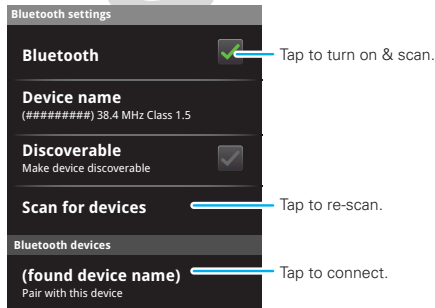

Turn Bluetooth power on or off

< 1 minute 

Find it: Press and hold Power  > **Bluetooth**

Note: To extend battery life, turn Bluetooth power off when not in use.

Connect new devices

2 minutes 

Note: This feature requires an optional accessory.

To connect with a new device, you need to pair with it. You only need to do this once for each device—to connect again, see “Reconnect devices” on page 39.

- 1 Make sure the device you are pairing with is in discoverable mode.

Note: Refer to the guide that came with the device for details.

- 2 Press Menu  > **Settings** > **Wireless controls** > **Bluetooth settings**.
- 3 Tap **Bluetooth** to turn on and scan. If Bluetooth is already on, tap **Scan for devices**.
- 4 Tap a device to connect.
- 5 If necessary, tap **OK**, or enter the device passkey (like **0000**) to connect to the device. When the device is connected, the Bluetooth indicator  appears in the status bar.

Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Reconnect devices

< 1 minute 

To automatically reconnect your phone with a paired device, simply turn on the device.

To manually reconnect your phone with a paired device, tap the device name in the **Bluetooth devices** list.

Disconnect devices

< 1 minute 

To automatically disconnect your phone from a paired device, simply turn off the device.

To manually disconnect your phone from a paired device, tap the device name in the devices list, then press Menu  > **Disconnect**.

Edit properties

1 minute 

Press Menu  > **Settings** > **Wireless controls** > **Bluetooth settings** > **Device name**. Enter a name and tap **OK**.

Wi-Fi


home, office, or hotspot

Quick start: Wi-Fi

Find it: Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**

Note: Your phone's Wi-Fi features and power levels are not allowed for outdoor operation in France. To avoid unlawful interference with radio signals, do not use the Wi-Fi features in France unless you are indoors.

Use a wireless network for fast Internet access and to download data.

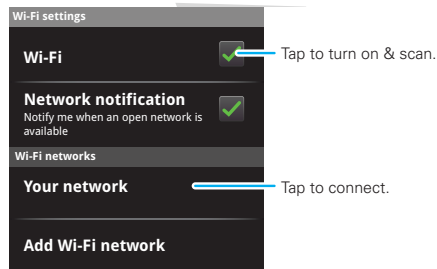

Turn Wi-Fi on or off

< 1 minute 

Find it: Press and hold Power 

> **Wi-Fi**

Note: To extend battery life, turn off Wi-Fi power when not in use.

Wi-Fi search & connect

2 minutes 

To find networks in your range:

- 1 Press Menu  > **Settings** > **Wireless controls** > **Wi-Fi settings**.
- 2 Tap **Wi-Fi** to turn on and scan. If Wi-Fi is already on, press Menu  > **Scan**. Your phone lists the networks it finds within range.

Tip: To see your phone's MAC address or other Wi-Fi details, press Menu  > **Advanced**.

- 3 Tap a network to connect.
- 4 If necessary, enter **Network SSID**, **Security**, and **Wireless password**, and tap **Connect**. When your phone is connected to the network, the wireless indicator  appears in the status bar.

Tip: When you are in range and Wi-Fi is on, you will automatically reconnect to available networks you've connected to before.

USB & memory card

connect your phone and computer, then drag & drop

USB drag & drop

Time varies 

Note: This feature requires an optional accessory.

You can transfer your pictures, videos, music, ringtones, and more, from your computer to your phone's memory card.

- 1 With a memory card inserted, and your phone showing the home screen, connect a Motorola micro USB data cable from your phone's micro USB port to a USB port on your computer. Your phone should show  in the status bar.



- Note:** Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.
- 2 Your phone shows a USB connection dialog. Tap **USB drive**. You can't use the files on your memory card while it is connected.
 - 3 On your computer, use the "My Computer" window to find "Removable Disk".
 - 4 Click on the "Removable Disk" icon to access the memory card.

- 5 Drag and drop your pictures, videos, music, ringtones, and more, to your phone folder. To help manage your files, you can create more folders in your phone folder.
- 6 When you're done, use the "Safely Remove Hardware" feature to finish.

Memory card

Note: You need the memory card installed for some features on your phone, like **Camera**.

Manage files

1 minute 

Find it: Home  >  **Quickoffice**
> **Memory card**

Tap a file or folder to open, tap and hold a file to **Delete** or **Share**.

To manage your folders and move stuff around use your USB connection, see "USB & memory card" on page 40.

Remove or format your memory card

2 minutes 

Before you remove or format your memory card you need to unmount it. Press Menu 
> **Settings** > **SD card & phone storage** > **Unmount SD card**.

To format your memory card, tap **Format SD card**.

Warning: All data on your memory card will be deleted.

Synchronize

keep up-to-date

Google™ data synchronization

2 minutes 

Find it: Menu  > **Settings** > **Google synchronization**

The Google apps on your phone give you access to the same personal information (emails, events, and contacts) that you have on a computer using Gmail™, Google Calendar™, and Contacts. It's easy to synchronize the Google apps information you want to keep up-to-date.

Select apps to synchronize

- 1 Tap **Background data** and **Auto-sync**.

Tip: To save battery power do not tap **Background data**.

- 2 Tap the apps you want to synchronize, like **Gmail**, **Calendar**, or **Contacts**.

Synchronize with Microsoft® Office Outlook

Time varies 

If you use Microsoft Office Outlook on your work computer, your phone can synchronize emails, events, and contacts with your Microsoft Exchange Server.

Find it: Menu  > **Settings** > **Accounts** > Menu  > **New account** > **Corporate Sync**

- 1 Enter your username (username@company.com), password, email address, and server details (server address is the same URL you use to access your company's email using the Web on your computer).

Note: Contact your business IT department for server details.

- 2 Tap **Next**.

Tools

stay on top of things

Alarm clock

Find it: Home  >  **Alarm Clock**


To turn on an alarm, tap the check box.

When an alarm sounds, tap **Dismiss** to turn it off or **Snooze** to delay.

To add an alarm, press Menu  > **Add alarm**, then enter alarm details.

To set a snooze period, tap the alarm, then press Menu  > **Snooze time**.

1 minute 

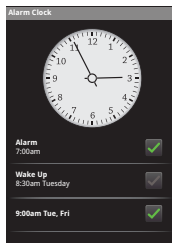


Calendar

Find it: Home  >  **Calendar**

Your calendar events can be viewed in different ways: Press Menu  > **Month**, **Agenda**, **Week**, or **Day**. When you highlight an event in the day and week views, more details appear.

The calendar on your phone can be synchronized with your Google Calendar™. Press Home  >  **CalendarSync** to manually sync your calendar.

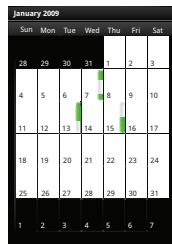

Add calendar events

2 minutes 

From any calendar view, press Menu  > **New event**. Enter event details and tap **Save**.

Manage calendar events

2 minutes 

To edit an event, press Menu  > **Edit event**. Edit event details, then when you're done, tap **Save**.

To delete an event, press Menu  > **Delete event**.

To go to today, press Menu  > **Today**.

Calculator

Find it: Home  >  **Calculator**

2 minutes 

Your calculator has two views: basic and advanced. To change your views, press Menu  > **Advanced panel** or **Basic panel**. To clear history, press Menu  > **Clear history**.

Quickoffice

Use Quickoffice to view recent documents and files on your memory card.

Find it: Home  >  **Quickoffice**

< 1 minute 

Management

stay in control

Wireless manager

Find it: Menu  > **Settings** > **Wireless controls**

Manage all your wireless connections: Wi-Fi, Bluetooth®, airplane mode, & mobile networks (“Network” on page 45).

Shortcut: Press and hold Power  to display the power menu—from here you can control Bluetooth, Wi-Fi and GPS as well as turn the phone off and set airplane mode.

Airplane mode

< 1 minute 

Use airplane mode to turn all your wireless connections off—useful when flying. Press Power  > **Airplane mode**.

Update my phone

Time varies 

To keep your phone current, software updates may be available. Press Menu  > **Settings** > **About phone** > **System updates** to see if your phone is up to date. If it isn't, tap **Update**.

Network

Time varies 

You should not need to change any network settings. Contact your service provider for help.

Press Menu  > **Settings** > **Wireless controls** > **Mobile networks** to show options for roaming networks, network selection, operator selection, and access point names.


Security

help keep your phone safe

Quick start: Security

Find it: Menu  > **Settings** > **Security & location**

You have lots of ways to keep your phone safe.

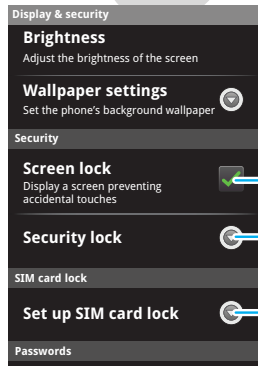

Tap to turn on.

Tap to set lock type, code, and timer.

Tap to set SIM card lock and change SIM PIN.

If you lose your phone, you can access your MOTOBLUR account www.motorola.com/mymotoblur (and remotely locate your phone, clear the data on your phone, and more).

Screen lock

2 minutes ⌚

Set your phone to display a lock screen, and prevent accidental key presses, press Menu  > **Settings** > **Security & location** > **Screen lock**. You can also set a security lock to prevent others from using your phone.

To set your security level, press Menu  > **Settings** > **Security & location** > **Security lock** > **Security lock type**:

- **None** - press Menu , then Menu  again to unlock.
- **Pattern lock** - press Menu , then draw a pattern to unlock.
- **Passcode lock** - press Menu , then enter a code to unlock.

Note: You can make emergency calls on a locked phone ("Emergency calls" on page 11). A locked phone still rings, **but you need to unlock it to answer**.


Lock pattern

2 minutes ⌚

To set the lock pattern, press Menu  > **Settings** > **Security & location** > **Security lock** > **Security lock type** > **Pattern lock**.

Follow the instructions to draw your lock pattern.

When prompted, draw the pattern to unlock the phone.

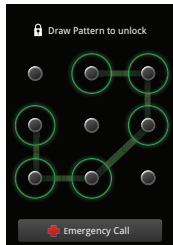

Passcode lock

2 minutes ⌚

To set the passcode, press Menu  > **Settings** > **Security & location** > **Security lock** > **Security lock type** > **Passcode lock**.

Enter a passcode, then tap **OK**. Enter the passcode again to confirm it, and tap **OK**.

When prompted, enter the passcode to unlock the phone.

Personalize your lock screen

2 minutes ⌚

To change your timeout, press Menu  > **Settings** > **Security & location** > **Screen timeout**. If you don't tap the screen or press any keys for this amount of time, the screen locks automatically. To unlock, see "Lock & unlock" on page 47.

To change your lock screen picture, press Menu 
> **Settings** > **Display & security** > **Wallpaper settings**.

Lock & unlock

< 1 minute 

To lock the screen/phone:

- Press Power .
- Let the screen time out (don't press anything).
- Switch the power off.

To unlock the screen/phone:

- Press Menu  or switch the phone on to display the lock screen.
- Press Menu  to unlock—if you've set a lock pattern or passcode, you'll be asked to enter it.

Forgot your pattern or passcode?

If you forget your pattern or passcode you will need to reset your phone to its initial factory settings, see “Reset” on page 47.

Lock your SIM

Enable SIM PIN

2 minutes 

To lock your SIM (the next time you power up the phone you will need to enter your SIM PIN), press Menu  > **Settings** > **Security & location**

> **Set up SIM card lock** > **Lock SIM card**. Enter your SIM PIN code.

Caution: If you enter an incorrect PIN code three times, your phone locks your SIM card and asks for your PIN unlock code, see “PUK code” on page 47.

Change SIM PIN

2 minutes 

To change your **SIM PIN**, press Menu  > **Settings** > **Security & location** > **Set up SIM card lock** > **Change SIM PIN**.

PUK code

To unlock your SIM PIN, you need to enter your PIN unlock code (PUK code) when prompted.

Note: Your PUK code is provided by your service provider.

Reset

2 minutes 

To reset your phone to factory settings and erase all the data on your phone, press Menu  > **Settings** > **SD card & phone storage** > **Factory data reset** > **Reset phone**.

Warning: All data on your phone will be deleted.

Lost, stolen, broken, cleared

Don't you just hate it when your life is on your phone and it all goes wrong. Lose it, break it, reset it, or even

worse - stolen! Relax, MOTOBLUR can help find your phone, clear it (if you need to) and best of all, restore all your stuff.

Track your phone

Time varies 

Access your MOTOBLUR account and remotely locate your phone.

- 1 Log into your MOTOBLUR account at: www.motorola.com/mymotoblur.
- 2 In the MOTOBLUR window, click on "Locate Device". Your phone's location is shown on a map.

Remote clear

Time varies 

Access your MOTOBLUR account and remotely clear the data on your phone.

- 1 Log into your MOTOBLUR account at: www.motorola.com/mymotoblur.
- 2 In the MOTOBLUR window, click "Wipe Device".
- 3 A warning notification is displayed, enter your MOTOBLUR password again.

Warning: All downloaded apps and user data will be deleted.

Restore your phone

If you lose your phone don't worry, your contacts are backed-up on MOTOBLUR.

When you get your next MOTOBLUR product, just log into your existing MOTOBLUR account on your phone to recover all your stuff automatically.

To recover your Android Market apps, see "Manage & restore apps" on page 37.

Troubleshooting

we're here to help

Crash recovery

In the unlikely event that your phone stops responding to taps and key presses, try a quick reset. Remove the back cover and battery ("Assemble & charge" on page 1), then replace and turn on your phone as usual.

Service & repairs

If you have questions or need assistance, go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-800-331-6456 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

Motorola, Inc.
Consumer Advocacy Office
600 N US Hwy 45
Libertyville, IL 60048

www.hellomoto.com

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. The Bluetooth trademarks are owned by their proprietor and used by Motorola, Inc. under license. Microsoft, Windows, Windows Me, and Windows Vista are registered trademarks of Microsoft Corporation in the United States and other countries. Macintosh is a registered trademark of Apple Computer, Inc. Google, YouTube, Picasa, Gmail, and the Google logo are trademarks of Google, Inc. **WiFi** is a Certification Mark of the Wireless Fidelity Alliance, Inc. All other product or service names are the property of their respective owners.
© 2009 Motorola, Inc. All rights reserved.

Caution: Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

Bluetooth ID: TBD

MOTOROLA **MOTUS** with MOTOBLUR (MB300)
U.S. patent Re. 34,976

Specific Absorption Rate Data

This model wireless phone meets the government's requirements for exposure to radio waves.

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.¹ Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 0.79 W/kg, and when worn on the body, as described in this user guide, is 0.62 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).²

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

FCC Notice to Users

The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is

encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Hearing Aid Compatibility with Mobile Phones

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has "Rated for Hearing Aids" printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user's hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.