


DA7

(영어 | 미국) 디오디오2

Car Multimedia System | User's Manual

 HYUNDAI



J9MS7-DA003

Kona

Thank you for purchasing this multimedia system.

This user's manual explains how to use the HYUNDAI multimedia system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precautions for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.

- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Read the following safety precautions for your safety

Before using the product, read the contents of this user's manual carefully and use this product safely.

※ The design and specifications of this product may change without prior notification for product and service improvement.

The actual images in the vehicle may differ from the illustrations.

For more accurate information about the vehicle, please refer to the catalogue.

※ Your system is not compatible with the system software for regions outside of the country of purchase.

※ This system contains open source software. To download the open source codes installed on this product developed under GPL, LGPL, Apache, and other open source licenses, please visit <http://en.mobis.co.kr/opensource/list.do>. All notified license content, including the source code, is available for download.

If you request the open source code of a software mounted on this product by sending an email to MOBIS_OSSrequest@mobilis.co.kr within 3 years of purchasing this product, you will receive it on a CDROM or another storage media at a minimal cost, such as the costs of the medium and delivery.

Notations used within this User's Manual

WARNING

- A WARNING indicates that a condition may result in harm, serious bodily injury or death if the warning is ignored.

CAUTION

- A CAUTION indicates that a condition may result in damage to your vehicle if the caution is ignored.

Information

- Information and tips that provide additional user convenience in using the product.

NOTICE

- Information on specific features that facilitate proper product use and functional understanding.
- Information on terminology used within this manual.

if equipped

- Indicates descriptions for optional features.

This guide covers all specifications, including all trim models and optional specifications. It may include descriptions for features that are not equipped in your vehicle.

HYUNDAI VEHICLE OWNER PRIVACY POLICY

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect use and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at:

<https://www.hyundaiusa.com/owner-privacy-policy.aspx>

If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Customer Care
P.O. Box 20850
Fountain Valley, CA 92728
800-633-5151
consumeraffairs@hmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English).

For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

Table of Contents

1. Basic

| | |
|--|------|
| Warnings and Cautions | 1-2 |
| Component Names and Functions | 1-4 |
| Head Unit | 1-4 |
| Steering Wheel Controls | 1-6 |
| Starting the System for the First Time | 1-8 |
| Turning the System On/Off | 1-8 |
| System Reset | 1-8 |
| Battery Warning Message | 1-9 |
| Restrictions on Features for Safety Measures | 1-9 |
| Home Screen | 1-10 |
| On-Screen Touch Controls | 1-12 |

2. Radio/Media

| | |
|--|------|
| FM/AM | 2-2 |
| USB | 2-4 |
| Before Playing a USB MP3 | 2-4 |
| Supported USB music specifications | 2-6 |
| USB Music | 2-7 |
| iPod | 2-10 |
| Using iPod Devices | 2-10 |
| iPod | 2-14 |
| AUX | 2-17 |
| Connecting an External Device | 2-17 |
| Bluetooth® Audio | 2-18 |

3. Bluetooth

| | |
|---|------|
| Before Using the Bluetooth® Handsfree | 3-2 |
| What is Bluetooth® Wireless Technology? | 3-2 |
| Precautions for Safe Driving | 3-2 |
| CAUTIONS upon Connecting Bluetooth® Phone | 3-3 |
| Bluetooth Connection | 3-4 |
| Pairing a New Device | 3-4 |
| Connecting Bluetooth Devices | 3-4 |
| Disconnecting Bluetooth Devices | 3-5 |
| Deleting Bluetooth Devices | 3-5 |
| Bluetooth Phone | 3-6 |
| Phone Status Icons | 3-6 |
| Dial | 3-7 |
| Accept/Reject Call | 3-7 |
| Using the Menu During a Phone Call | 3-8 |
| Call History | 3-9 |
| Contacts | 3-10 |
| Favorites | 3-11 |

| | |
|--------------------------------|------|
| Bluetooth Settings | 3-12 |
| Bluetooth Connection | 3-12 |
| Auto Connection Priority | 3-13 |
| Bluetooth Voice Prompts..... | 3-13 |
| Privacy Mode | 3-13 |
| Bluetooth System Info | 3-13 |
| Default Factory Settings | 3-13 |

4. Other Features

| | |
|------------------------------|-----|
| Camera..... | 4-2 |
| Steering-linked camera | 4-3 |
| Using Voice Memo | 4-4 |

5. Setup

| | |
|---------------------------------------|-----|
| Setting sounds | 5-2 |
| Setting the system sound | 5-2 |
| Setting the system screen..... | 5-3 |
| Setting the Home screen | 5-3 |
| Setting the screen saver..... | 5-4 |
| Setting the media player options..... | 5-4 |
| Setting Bluetooth | 5-5 |
| Setting the system environments..... | 5-6 |
| Setting the system language | 5-6 |
| Setting the time and date | 5-6 |
| Setting the keyboard | 5-7 |
| Setting advanced options | 5-7 |
| Viewing system information | 5-8 |
| Phone Projection Settings | 5-8 |

6. Appendix

| | |
|---|------|
| Product Specification..... | 6-2 |
| Troubleshooting..... | 6-3 |
| FAQ | 6-6 |
| About Pairing Mobile Phones | 6-6 |
| About Making/Answering Phone Calls | 6-7 |
| About <i>Bluetooth</i> ® Wireless Technology/Multimedia System Use Environment..... | 6-7 |
| Important Information | 6-11 |
| General Operation..... | 6-12 |
| FCC Warning..... | 6-13 |

Trademarks

- The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by HYUNDAI is under license.



A *Bluetooth*® Wireless Technology enabled cell phone is required to use *Bluetooth*® Wireless Technology. *Bluetooth*® Wireless Technology phone compatibility can be checked by visiting <https://www.hyundai-usa.com/bluetooth>.

- Google, Android, Android Auto, and Google Play are registered trademarks of Google LLC. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- Apple®, Apple CarPlay™, iPad®, iPad mini™, iPhone®, iPod®, iPod classic®, iPod nano®, iPod touch®, iTunes®, and Siri® are trademarks of Apple Inc. Distracted driving can result in a loss of vehicle control. Never use a handheld device or vehicle system that takes your focus away from safe vehicle operation.
- Other trademarks and trade names are those of their respective owners.

MEMO

part.1 Basic

Warnings and Cautions

Component Names and Functions

Starting the System for the First Time

Basic

⚠ Warnings

Park the vehicle before operating the device.

- Do not disassemble, assemble, or modify the Multimedia system. Such acts could result in accidents, fire, or electric shock.
- Heed caution not to spill water or introduce foreign objects into the device. Such acts could lead to smoke, fire, or product malfunction.
- If you use phone related functions while driving, you will find it difficult to concentrate on operating the vehicle and the current traffic conditions, so the possibility of an accident may increase. Please use phone related functions only when parked.
- Do not stop or park in parking-restricted areas to operate the product. Such acts could lead to traffic accidents.
- For most Audio and multimedia modes, the display will not operate when the vehicle is in motion. For your safety, first park the vehicle to watch or view the screen.(The screen will only operate when the parking brake is ON for manual transmission vehicles and when the parking brake is ON or the gearshift is in the P (PARK) position for automatic.)
- Some functions other than the one mentioned above cannot be used while driving. These functions operate only when the vehicle is parked.

Cautions

Turn on the car ignition before using this device. Do not operate the Multimedia system for long periods of time with the ignition turned off as such operations may lead to battery discharge.

Pay attention to traffic conditions while driving.

- Upon using the Multimedia system for more than 10 minutes with the car engine turned off, the following warning will be displayed. After 10 minutes, the warning will be displayed for 5 seconds every 1 minute.
- Do not subject the device to severe shock or impact. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch screen.
- When cleaning the device, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents(alcohol, benzene, thinners, etc.) as such materials may damage the device panel or cause color/quality deterioration. When experiencing product concerns, inquire with your place of purchase or service maintenance center.
- Prevent caustic solutions such as perfume and cosmetic oil from contacting the dashboard because they may cause damage or discoloration.

Component Names and Functions

Head Unit



| | Name | Description |
|---|---------------|---|
| 1 | RADIO | Selects FM/AM mode <ul style="list-style-type: none">• Each time this is pressed, the mode is changed in the following order: FM → AM → FM. |
| 2 | MEDIA | Selects MEDIA mode. <ul style="list-style-type: none">• If the media is not connected, MEDIA mode will not be activated. |
| 3 | SEEK TRACK | When the key is pressed quickly (less than 0.8 seconds), <ul style="list-style-type: none">• FM/AM mode: Plays the previous/next frequency.• MEDIA mode: Changes the track, file or title (except for AUX). When the key is pressed and held (over 0.8 seconds), <ul style="list-style-type: none">• FM/AM mode: Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.• MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth Audio and AUX). |



| | Name | Description |
|----|-----------|---|
| 4 | HOME | Moves to the Home Screen. |
| 5 | PHONE | Displays the Bluetooth phone mode. |
| 6 | ★ | <ul style="list-style-type: none"> Press to use a custom function. Press and hold to access the Custom Button settings screen. |
| 7 | SETUP | <ul style="list-style-type: none"> Press to access the settings screen. Press and hold to access the System Info screen. |
| 8 | ● PWR/VOL | <ul style="list-style-type: none"> When power is off, press to turn power on. When power is on, press and hold (over 0.8 seconds) to turn the power off. When power is on, press quickly (less than 0.8 seconds) to turn Audio off. Turn left/right to adjust the volume. |
| 9 | ● TUNE | <ul style="list-style-type: none"> FM/AM mode: Changes the frequency. MEDIA mode: Changes the track, file or title (except for Bluetooth Audio and AUX). |
| 10 | RESET | Resets the system settings. (Preset radio channels and other data will not be deleted) |

※ The actual image in the vehicle may differ from the illustration

Steering Wheel Controls



| Name | Description |
|--------------------|--|
| 3 MODE | <ul style="list-style-type: none"> Press to change the mode (radio, media, etc.). Press and hold to turn the radio/media function on or off. |
| 4 ^ ▼ | <p>When the key is pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> FM/AM mode: searches broadcast frequencies saved to Presets Media mode: changes the track, file or title (except for AUX) <p>When the key is pressed and held (over 0.8 seconds),</p> <ul style="list-style-type: none"> FM/AM mode: automatically searches broadcast frequencies Media mode: quickly looks up songs (except for Bluetooth Audio and AUX) |

| Name | Description |
|----------------------------|---|
| 1 📞 | For more details, refer to Phone Projection guide. |
| 2 VOL + VOL - | Use to adjust the volume of audio or call. |
| 3 🔇 | <ul style="list-style-type: none"> Mutes the audio. (Media will be paused in some media modes.) Mutes the microphone during a call. |



| Name | Description |
|------|---|
| 5 | <p>When the key is pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none"> • When pressed in the dial screen, makes a call • When pressed in the incoming call screen, answers the call • When pressed during call waiting, switches to waiting call (Call Waiting) <p>When the key is pressed and held (over 0.8 seconds),</p> <ul style="list-style-type: none"> • When pressed in Bluetooth® Hands-free, redials the last dialed call • When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private) • When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected) |
| 6 | <ul style="list-style-type: none"> • When pressed during a call, ends the phone call • When pressed in the incoming call screen, rejects the call |

※ The actual image in the vehicle may differ from the illustration.

Starting the System for the First Time

Turning the System On/Off

Press the engine start button or set the ignition key to On or ACC. Each time you turn on the system, a boot logo and safety warning will appear.



Pressing the power key on the head unit will display the safety guide.

NOTICE


- You cannot operate the system while it is booting up.

Pressing and holding the power key on the head unit will turn off the system.

Information

- After you have turned off the engine, the system will automatically turn off after a while or as soon as you open the driver's door. Depending on the vehicle model or specifications, the system may turn off as soon as you turn off the engine.
- If you turn off the system during a phone call using the Hands-free feature, then the call will automatically switch to your mobile phone.

System Reset

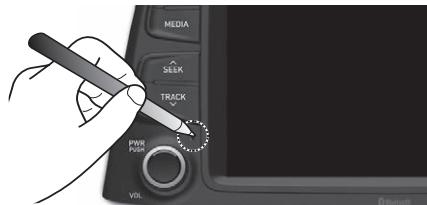

The System Reset function restores the system when it is not operating correctly. Press and hold the RESET key for a second or longer. (It is recommended that you press the RESET key using a tool, such as a pin or a clip.)

NOTICE

- Check the volume when turning on the system. Before turning on the system, adjust the volume to a reasonable level.

Battery Warning Message

Always use the system while the car engine is running. If you turn on the system while the engine is off, a battery warning message will appear. When the engine starts, the message will disappear.



NOTICE

- If you use the system for a long time with the engine off, the battery may become completely discharged.

Restrictions on Features for Safety Measures

Several features are limited while driving. The restriction screen will disappear when shifting gears into P or putting the parking brake on.

WARNING

- Blank Screen

- Refrain from use if the screen is blank or no sound can be heard as these signs may indicate product malfunction. Continued use in such conditions could lead to accidents (fires, electric shock).

WARNING

- Touching the Antenna During A Thunder Storm

- Do not touch the antenna during thunder or lightning as such acts may lead to lightning induced electric shock.

WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.

Home Screen

Controls Menu Configuration for the Home Screen

Tap the  icon on any screen to display the Home Screen below.



| Features | Description |
|-------------------------------------|--|
| 1 Radio/ Media Widget | <ul style="list-style-type: none">Shows brief information on the radio or media that is now playing.Tap the area to move to the mode that you are listening to. |
| 2 Phone Projection Widget | Shows any connected devices such as iPod and Bluetooth. |
| 3 All Menus | Shows all of the items in the system menu. |
| 4 My Menu | Add your favorite menus to have quick and easy access to them. |
| 5 Apps/Info | Moves to the Apps/Info screen. |
| 6 Setup | Moves to the Setup screen. |
| 7 System status icons | Status icons are not included in the screenshots in this guide, because their appearance may differ depending on the system status or mode. |

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.


| Icon | Description |
|---|---|
|  | Displayed when the audio is muted. |
|  | Displayed when connected to Bluetooth for handsfree. |
|  | Displayed when connected to Bluetooth for streaming audio. |
|  | Displayed when connected to Bluetooth for streaming audio and handsfree. |
|  | Downloading contacts or call history from a mobile phone connected via Bluetooth to the system. |
|  | Bluetooth call in progress |
|  | Displayed when the microphone of the Bluetooth phone is muted. |
|  | Voice memo recording |

Information

- Depending on vehicle models and specifications, some status icons may not be displayed.

Adding a Feature to My Menu

Select **My Menu** on the Home Screen to add the most frequently used menus, change the menu order, or delete menus.

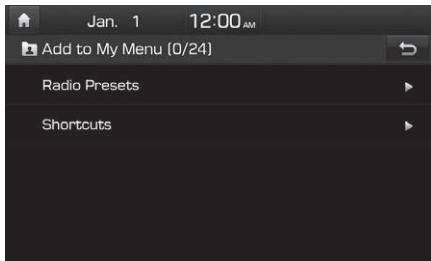

i Information

- Up to 24 menus can be added to My Menu.

⚠ WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe bodily injury, or death. The driver's primary responsibility is the safe and legal operation of the vehicle, and the use of any vehicle systems, including the touch screen and steering wheel controls, which take the driver's eyes, attention, and focus away from the safe operation of the vehicle, or which are not permissible by law, should never be used during the operation of the vehicle.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select


Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.


Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

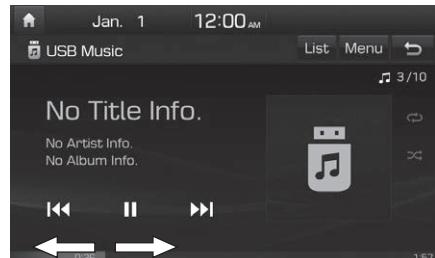

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

Flick (Quick Scrolling)

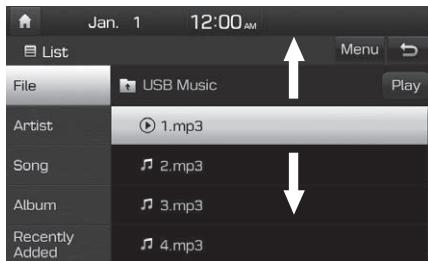


Quickly moves up and down in the list.

NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler.

Select and Hold

Selecting and holding the **◀◀** or **▶▶** button in the music player will rewind or fast forward the music.

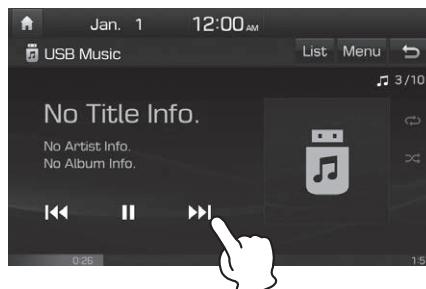

MEMO

part.2 Radio/Media

FM/AM

USB

iPod

AUX

Bluetooth® Audio

Radio/Media

FM/AM


You can access the radio player either by pressing the **RADIO** key or by selecting the Radio menu from **All Menus** on the Home Screen.



i Information

- If you press the **RADIO** key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

| Features | Description |
|-----------------------------|--|
| 1 Preset Frequencies | <ul style="list-style-type: none">The stored preset frequencies are displayed for user selection.After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.Flick the preset frequencies up/down to scroll quickly through presets. |
| 2 Frequency | Displays the current frequency. |
| 3 Menu | <ul style="list-style-type: none">Station List: Moves to the Station List.Delete Presets: Delete saved radio stations from the preset list.Sound Settings: Moves to the Sound Settings. |
| 4 Band | Changes to the desired band from among FM, AM. |
| 5 Info | Turns the Radio text information transmitted from the broadcasting station on and off. |
| 6 Scan | Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item. |

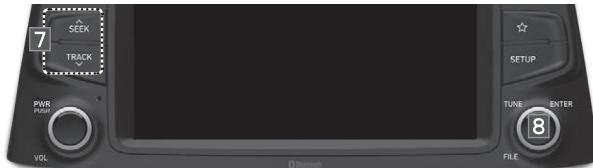

| Features | Description |
|---------------------|---|
| 7 SEEK/TRACK | <ul style="list-style-type: none">When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency.When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency. |
| 8 TUNE | Turn the  TUNE knob to manually seek available frequencies. |

USB

Before Playing a USB MP3

Connect the USB device after turning on the engine. The USB device may become damaged if it is already connected when the ignition is turned on.

- Files that are not standard format music files will not be played.
- For MP3/WMA/OGG files, only music files with compression rates between 8Kbps to 320Kbps can be played.
- Heed caution to static electricity when connecting/disconnecting external USB devices.
- Encoded MP3 Players will not be recognized when connected as an external device.
- When connecting an external USB device, the device may not properly recognize the USB is in some states.
- Only products formatted with byte/sectors under 64Kbyte will be recognized.
- USB devices, formatted to the FAT12, FAT16, or FAT32 file system are recommended. File systems other than FAT12, FAT16, FAT32, exFAT, and NTFS are not supported.
- Some USB devices may not be supported due to compatibility issues.
- Take caution so that the USB connector does not come in contact with body parts or objects.

- The device may not operate normally if MP3 Players, cellular phones, digital cameras, or other electronic devices (USB devices not recognized as portable disk drives) are connected with the device.
- Charging through the USB may not work for some mobile devices.
- The device may not support normal operation when using a USB memory type besides Metal Cover Type USB Memory.
- The device may not support normal operation when using formats such as HDD Type, CF, or SD Memory.
- When playing iPods, please use a dedicated iPod car cable.
- Normal operation cannot be guaranteed when other cables are being used.
- The device will not support files locked by DRM. (Digital Rights Management)
- USB memory sticks used by connecting an Adaptor (SD Type or CF Type) may not be properly recognized.
- Only use Plug type connector products, as shown in the figure below.
- To play USB MP3, the USB device must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.



Plug Type Connector

| Product Name | Manufacturer |
|--------------------|----------------|
| XTICK | LG |
| BMK | BMK Technology |
| SKY-DRV | Sky Digital |
| TRANSCEND JetFlash | Transcend |
| Sandisk Cruzer | SanDisk |
| Micro ZyRUS | ZyRUS |
| NEXTIK | Digiworks |

 **Information**

- Problems that occur through use of USB devices not listed within the above table are not covered by the product warranty.


Supported USB music specifications

| Name | Description |
|--|---|
| Audio File Specification | MPEG-1/2 layer3 ,OGG (Vorbis), FLAC, WAV, WMA (Standard/Professional) |
| Recommended Bit Rates and Sampling Frequency | <p>MPEG-1/2 layer3</p> <ul style="list-style-type: none">• 8 kbps to 320 kbps (CBR or VBR), to 48 kHz• ID3 Tag: Supports ID3v1.0 and ID3v1.1, ID3v2.3, ID3v2.4 ID3 tags <p>OGG(Vorbis): From Q1 to Q10, ~ 48 kHz</p> <p>FLAC: 8 bit/16 bit/24 bit, to 48 kHz</p> <p>WAV: 8/16 bit, to 48 kHz</p> <p>WMA</p> <ul style="list-style-type: none">• Standard (0x161): to support L3 Profile : to 385 kbps, to 48 kHz• Professional (0x162): to support M0b : to 192 kbps, to 48 kHz |
| Detailed Specifications | <p>Maximum directory layers: 20 layers</p> <p>Maximum length of folder name/file name: 255Bytes</p> <p>Supported characters for folder name/file name: Alphanumeric characters, Korean standard character set 2,350 characters, Simplified Chinese 4888 characters</p> <p>Maximum number of folders which can be stored onto one USB: 2000 folders (including ROOT)</p> <p>Maximum number of files which can be stored onto one USB: 8000</p> |

Information



- The sound quality of audio files that use bitrates exceeding 192 kbps cannot be guaranteed. When using files without fixed bit rates, some features (FF/REW features) may not operate properly.

USB Music

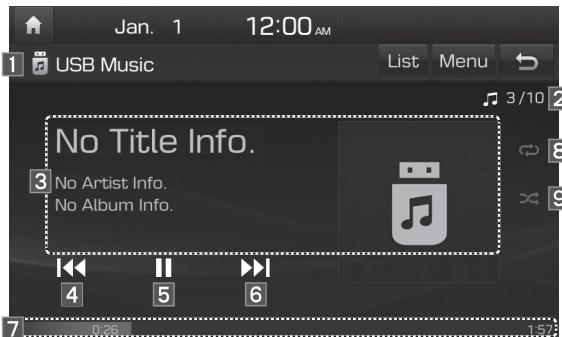

| Features | Description |
|--------------|---|
| 1 Mode | Displays the current operating mode. |
| 2 File Index | Current file number and total number of files. |
| 3 Song Info | Information about the song currently playing. Touch a song's artist or album information to access a list of songs by the artist or from the album playing. |

| Features | Description |
|-----------------|---|
| 4 Previous File | <ul style="list-style-type: none"> If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time) <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous file. If play time is over 3 seconds, play the current file from the beginning. If the button is selected (over 0.8 seconds) it rewinds the track. |
| 5 Play/Pause | Plays/pauses the current file. |
| 6 Next File | <ul style="list-style-type: none"> If the button is selected (less than 0.8 seconds): Moves to the next file. If the button is selected (over 0.8 seconds): It fast-forwards the track. |
| 7 Play Time | Playback time and playback position. |
| 8 Repeat | Used to change the repeat playback mode. |
| 9 Shuffle | Used to turn on or off the random playback mode. |

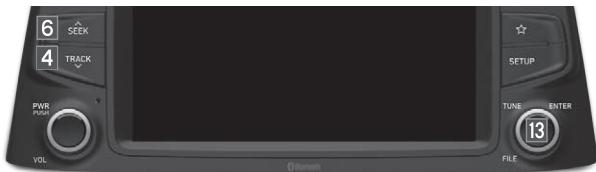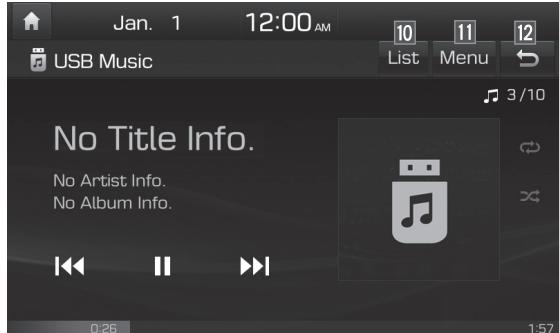

| Features | Description |
|-----------------------|---|
| 10 List | Moves to the list screen. |
| 11 Menu | <ul style="list-style-type: none"> • Hide Current File: a selected file can be deleted. Deleted file can be found in the "Hidden_" folder. <p>i This function is only supported when USB format is compatible with FAT16 or FAT32.</p> <ul style="list-style-type: none"> • Song for this artist: Move to the list of songs by the artist currently playing. • Song for this album: Move to the list of songs from the album currently playing. • Sound Settings: Moves to the Sound Settings. |
| 12 Back Button | Return to the previous level. |
| 13 TUNE | <p>Turn the TUNE knob to search a desired track. If the desired track is displayed, select the TUNE knob to play the track.</p> <p>i If you do not anything with the TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.</p> |

Information

- Depending on the amplifier specifications applied to your vehicle, the sound effect setting button may appear on the screen.



| Features | Description |
|-------------------------------------|---|
| 1 Upper Folder/Category Name | Move up to another folder/category. |
| 2 Current Song | Displays the current playing file name. |
| 3 Back Button | Return to the previous level. |
| 4 Play | Play all files in the selected folder or category. |
| 5 Menu | Now Playing: Return to the currently playing file if it is not visible on the current screen. |
| 6 Search Menu | Search songs by the list type. |
| 7 SEEK/TRACK | <ul style="list-style-type: none"> If the button is pressed (less than 0.8 seconds): Plays previous/next track If the button is pressed (more than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. |
| 8 TUNE | Turn the TUNE knob to move the focus to the previous/next list. If the desired track is displayed, press TUNE knob to play the track. |

iPod

Using iPod Devices

- iPod is a registered trademark of Apple Inc.
- iPod mode will not operate if the connected iPod cannot be recognized due to operation of unsupported versions that do not support related protocols, iPod abnormalities, or iPod device defects. Some iPods with unsupported communication protocols may not properly operate with the Multimedia system.
- For fifth generation iPod Nano devices, the iPod may not be recognized when the battery level is low. Please charge the iPod for use.
- Search/play orders shown within the iPod device may differ with the orders shown within the Multimedia system.
- If the iPod malfunctions due to an iPod device defect, reset the iPod and try again. (To learn more, refer to your iPod manual)
- If repeatedly connect and disconnect iPod/iPhone to the Multimedia system with USB cable in a short time, it may cause abnormal operation.
- The time for recognition of iPod/iPhone may vary depending on device type, firmware version and iOS version.
- For some iPod Touch and iPhone devices, connecting Bluetooth® while the iPod is operating may result in discontinued iPod sound. When such devices with Bluetooth® support are connected, this problem occurs as the sound source is changed from the Dock Connector (USB connector cable) to Bluetooth.
- To prevent this symptom, Bluetooth Audio function in the Multimedia system is limited if iPod/iPhone is connected to the system through both cable and Bluetooth. To listen to the iPod sound, use either iPod menu with USB connection or Bluetooth Audio with Bluetooth connection.
- To listen to the iPod sound, reconnect the USB cable or change the audio output settings in iPod/iPhone to Dock.
- In order to use the iPod while operating the keys, you must use a dedicated iPod cable. (the cable that is supplied when purchasing iPod/iPhone products)

※ During ACC ON state, connecting the iPod through the iPod cable (The cable that is supplied when purchasing iPod/iPhone product.) will charge the iPod through the head unit.

※ The use of genuine iPod cables supplied by Apple is recommended. (The use of other products may result in noise or abnormal operation.)

※ To play iPod music through cable connection, the iPod/USB cable must be connected to the USB port in the front multibox. The USB port in the center console storage (if equipped) is for charging only.

- When connecting with the iPod cable, make sure to fully insert the jack to prevent communication interference. If the iPod is connected to the vehicle while it is playing, a high pitch tone may sound for about 1 to 2 seconds immediately after connection. If possible, connect the iPod to the vehicle with the iPod stopped/paused.
- Within iPhones, streaming audio and iPod control may occasionally conflict. If problems persist, remove the iPhone and connect again.
- When connecting to iPod Nano/Classic, the HYUNDAI logo appears on the Apple device. For the iPod Nano 6 generation, however, the logo image does not appear since it is not supported. Also, all iPhone and iPod Touch products do not support this function.
- In Apple's iOS 6.0 version or later, Podcast and Audiobook media files are designed to be played with the Podcasts and iBooks applications specifically designed for Apple products. If the Apple device does not provide the Podcast and Audiobook lists, the playlist may not be displayed and played in the iPod mode.
- If the Apple Podcasts and iBooks apps are not installed on the Apple device, but the Apple device provides the Podcast and Audiobook lists, you can play files in other categories in iPod mode.
- The screen of multimedia system can be different when you run other music players (e.g. iHeartRadio) on your connected device.

- While using a connected iPhone/iPod Touch device, it may not operate normally if the user changed some functions in the device.
- When calling with an iPhone connection, song may stop playing due to an Apple device feature. If sound does not resume after the call is terminated, check the device status.
- If lots of songs have the same information, skipping may occur when previous/next song is executed due to an Apple device feature. Also problems may occur depending on device type or iOS version.
- If lots of songs have the same information, it may occur difference of playing songs between the Multimedia system and Apple device. Reset the device or delete the same songs in the Apple device using iTunes.
- If you control pause, repeat, shuffle, or seek songs when the play time is less than 3s before the song is finished playing, it may occur difference of playing song between the Multimedia system and Apple device. Access to iPod music from another mode or pause a song and then play a song again in Apple device.
- If the iPhone/iPod Touch supports Bluetooth, the Apple device will not be able to use the Bluetooth function if the device is connected through both the USB port and via Bluetooth. Disconnect the USB connection then use Bluetooth Audio.
- If iPod/iPhone connected to the Multimedia system through both USB and AUX. iPod/iPhone keeps output sound via AUX, thus it may occur sound will not output in iPod mode.
- If AUX cable connected to iPod/iPhone but not connect to the Multimedia system, it may occur sound will not output in iPod mode due to iPod/iPhone's feature.
- Disconnect AUX cable from iPod/iPhone first, then connect to the Multimedia system via USB. Or change settings to "Dock" in iPod/iPhone.
- If connect to the Multimedia system while podcast or iTunes music downloading to iPod/iPhone, it may occur some problems when you select song in the list. Reconnect iPod/iPhone to the Multimedia system when downloading is finished or the file deleted.
- If connect to the Multimedia system while sync, it may occur some problems. Try to use iPod/iPhone connection after sync complete. (To learn more, refer to your iPod manual)


- iPhone and iPod Touch devices are guaranteed to work normally on iOS 9.3.2 or below. However, they may not work normally on future iOS versions as their operations have not yet been tested.
- We recommend that your Apple device uses the latest firmware since some problems may occur due to an outdated firmware or other software related issues.

iPod



| Features | Description |
|---------------------|---|
| 1 Mode | Displays the current operating mode. |
| 2 Song Index | Current file number and total number of files. |
| 3 Song Info | Information about the song currently playing. Touch a song's artist or album information to access a list of songs by the artist or from the album playing. |

| Features | Description |
|------------------------|--|
| 4 Previous File | <ul style="list-style-type: none"> If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time). <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to previous file. If play time is over 3 seconds, play the current file from the beginning. If the button is selected (over 0.8 seconds) it rewinds the track. |
| 5 Play/Pause | Plays/pauses the current file. |
| 6 Next File | <ul style="list-style-type: none"> If the button is selected (less than 0.8 seconds): Moves to the next file. If the button is selected (over 0.8 seconds): It fast-forwards the track. |
| 7 Play Time | Playback time and playback position. |
| 8 Repeat | Used to change the repeat playback mode. (It all depends on the specification of your Apple device.) |
| 9 Shuffle | Used to turn on or off the random playback mode. (It all depends on the specification of your Apple device.) |


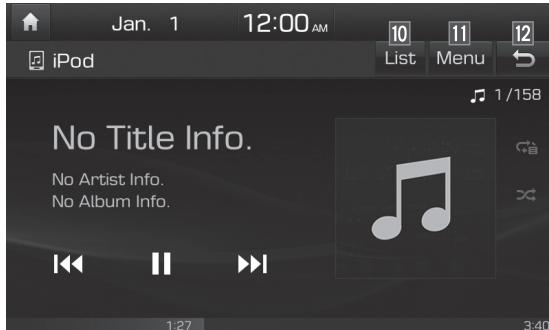


| Features | Description |
|----------------|--|
| 10 List | Moves to the list screen. |
| 11 Menu | Sound Settings: Moves to the Sound Settings. |
| 12 Back Button | Return to the previous level. |
| 13 TUNE | <p>Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track.</p> <p> If you do not anything with the TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.</p> |



Information

- Depending on the amplifier specifications applied to your vehicle, the sound effect setting button may appear on the screen.

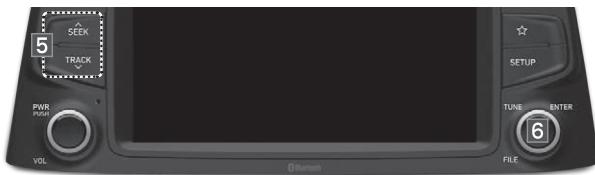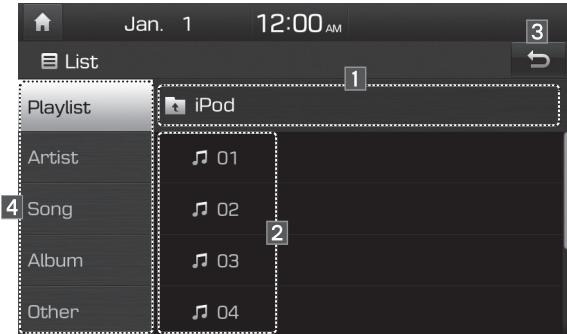


| Features | Description |
|---------------------------------------|--|
| 1 Upper Category/Category Name | Move up to another category. |
| 2 Category List | Displays the contents of selected category <i>i</i> If there are many items in the list, items are added in order and the scroll bar on the right is adjusted accordingly. |
| 3 Back Button | Return to the previous level. |
| 4 Search Menu | Search songs by the list type. |
| 5 SEEK/TRACK | <ul style="list-style-type: none"> If the button is pressed (less than 0.8 seconds): Plays previous/next track. If the button is pressed (more than 0.8 seconds): Moves to play screen, and then it will rewind or fast-forward the track. |
| 6 TUNE | Turn the TUNE knob to search a desired track. If the desired track is displayed, press the TUNE knob to play the track. If you do not anything with the knob for 5 seconds, the TUNE knob search will be terminated. |

AUX

Connecting an External Device

If an external device connector is connected with the AUX terminal, then AUX mode will automatically operate. Once the connector is disconnected, the previous mode will be restored.

- AUX mode can be used only when an external audio player has been connected.
- The AUX volume can also be controlled separately through the connected device.

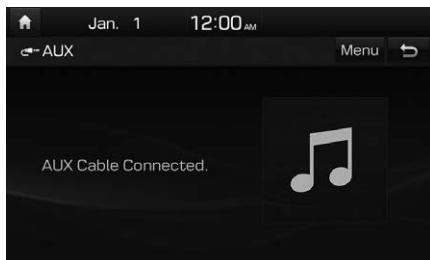

i Information

- Depending on the amplifier specifications applied to your vehicle, the sound effect setting button may appear on the screen.


NOTICE

- If only a cable is connected to the AUX without an external device, the mode will be changed to AUX, but noise may occur. When an external device is not being used, remove the connector jack.
- When the external device power is connected to the power jack, playing the external device may output noise. In such cases, disconnect the power connection before use.



※ The actual image in the vehicle may differ from the illustration.

Bluetooth® Audio

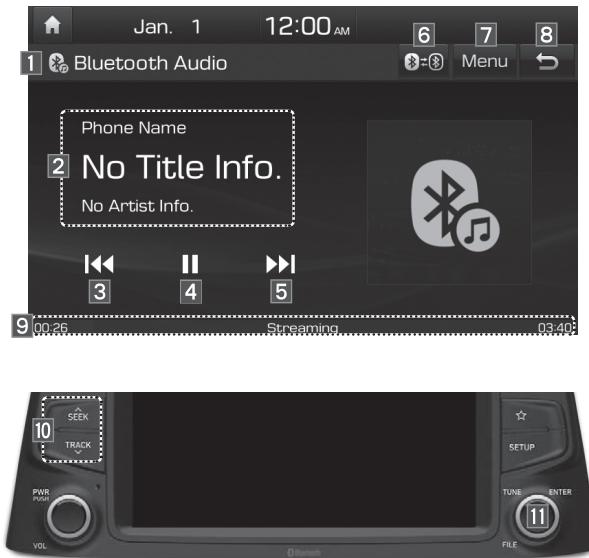

| Features | Description |
|------------------------|---|
| 1 Mode | Displays the current operating mode. |
| 2 Song Info | Information about the song currently playing. |
| 3 Previous File | <ul style="list-style-type: none"> If play time is less than 3 seconds, moves to the previous file. If play time is over 3 seconds, plays the current file from the beginning. <p><i>i</i> This function may differ depending on the model of mobile phone.</p> |
| 4 Play/Pause | Plays/Pauses Bluetooth Audio. |
| 5 Next File | Moves to the next file. |
| 6 Change Device | Search for and connect another Bluetooth device. |
| 7 Menu | <ul style="list-style-type: none"> Change Device: Search for and connect another Bluetooth device. Sound Settings: Moves to the Sound Settings. |
| 8 Back Button | Return to the previous level. |
| 9 Play Time | Playback time and playback position. |
| 10 SEEK/TRACK | Plays the previous/next file. |
| 11 TUNE | TUNE is not supported. |

Information

- Artist info and Title may not be supported by mobile phone.
- While in use of other functions after connecting your mobile phone through a USB cable, the Bluetooth audio is disabled.
- Depending on the connected Bluetooth device, mobile phone, or the music player you are using, playback controls may differ.
- Depending on the music player you are using, streaming may not be supported.
- Depending on the amplifier specifications applied to your vehicle, the sound effect setting button may appear on the screen.

MEMO

part.3 Bluetooth

Before Using the Bluetooth® Handsfree
Bluetooth Connection
Bluetooth Phone
Bluetooth Settings

Bluetooth

Before Using the Bluetooth® Handsfree

What is Bluetooth® Wireless Technology?

- Bluetooth® Wireless Technology refers to a short-distance wireless networking technology which uses a 2.45GHz frequency to connect various devices within a certain distance.
- Supported within PCs, external devices, Bluetooth® phones, PDAs, various electronic devices, and automotive environments, Bluetooth® Wireless Technology to be transmitted at high speeds without having to use a connector cable.
- Bluetooth® Handsfree refers to a device which allows the user to conveniently make phone calls with Bluetooth® mobile phones through the Multimedia system.

- The Bluetooth® Handsfree feature may not be supported in some mobile phones. For more information on mobile phone compatibility, visit the HYUNDAI website - HYUNDAI Motor America: <https://www.hyundaiusa.com/bluetooth>

⚠ WARNING

- Distracted Driving

- Focus on the road while driving. The driver's primary responsibility is in the safe and legal operation of the vehicle. Drivers should not use any hand held devices or other equipment or vehicle systems that distract the driver during vehicle operation.
- Do not stare at the multimedia screen for long periods of time while driving. Staring at the screen for prolonged periods of time can lead to traffic accidents and can result in personal injuries.

Precautions for Safe Driving

- Bluetooth® is a feature that enables drivers to make handsfree calls. Connecting the head unit with a Bluetooth® phone allows the user to conveniently make calls, receive calls, and manage the phonebook. Before using Bluetooth® Wireless Technology, carefully read the contents of this user's manual.
- Excessive use or operations while driving may lead to negligent driving practices and be the cause of accidents. Do not operate the device excessively while driving.
- Viewing the screen for prolonged periods of time is dangerous and may lead to accidents. When driving, view the screen only for short periods of time.

CAUTIONS upon Connecting Bluetooth® Phone

- Before connecting the head unit with the mobile phone, check to see that the mobile phone supports Bluetooth® features
- Even if the phone supports *Bluetooth®* Wireless Technology, the phone will not be found during device searches if the phone has been set to hidden state or the Bluetooth® power is turned off. Disable the hidden state or turn on the Bluetooth® power prior to searching/ connecting with the head unit.
- If Auto Connection is used, the Bluetooth® phone is automatically connected when the ignition is turned on, making it unnecessary to have to connect the phone with the head unit every time.
- If you do not want automatic connection with your Bluetooth® device, turn the Bluetooth® feature off of the Bluetooth® device.
- Park the vehicle when connecting the head unit with the mobile phone.
- Bluetooth® connection may become intermittently disconnected in some mobile phones. Follow these steps to try again.
 1. Turn the Bluetooth® function within the mobile phone OFF/ON and try again.
 2. Turn the mobile phone power OFF/ ON and try again.
 3. Completely remove the mobile phone battery, reboot, and then again.
 4. Reboot the Multimedia System and try again.
 5. Delete all paired devices from both of Phone and Head Unit sides and then try again
- The Handsfree call volume and quality may differ depending on the mobile phone.
- Pairing Bluetooth® devices and use of other Bluetooth® features are not supported when the vehicle is in motion. For safety, please first park your vehicle.
- If you continue having issue downloading your contacts to your vehicle, contact your mobile phone provider.

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired. Only one Bluetooth device can be connected at a time.

Pairing a New Device by Selecting Phone/Call

Press the **PHONE** key or  key in the steering wheel control. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Press the **SETUP** key. ► Select **Bluetooth**. ► Select **Bluetooth Connection**. ► Select **Add New**. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.



The default passkey is 0000.

The vehicle name above is an example. Check the actual information on the product.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


Connecting Devices by Selecting Phone/Call

Press the **PHONE** key or  key in the steering wheel control. ► Select the name of the device to connect. ► Connect Bluetooth.



Connecting Devices Through the Phone Settings

Press the **SETUP** key. ► Select **Bluetooth**. ► Select **Bluetooth Connection**. ► Select the name of the device to connect. ► Connect Bluetooth.

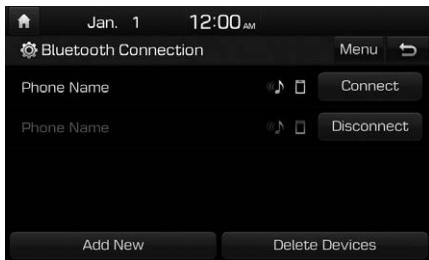

Disconnecting Bluetooth Devices

Disconnects Bluetooth devices that are connected.

Press the **SETUP** key. ► Select **Bluetooth**. ► Select **Bluetooth Connection**. ► Select the name of the device to disconnect.



Deleting Bluetooth Devices

Deletes the Bluetooth devices that you added. Note that deleting a Bluetooth device will delete all Call History and Contact Info downloaded along with it.

Press the **SETUP** key. ► Select **Bluetooth**. ► Select **Bluetooth Connection**. ► Select **Delete Devices**. ► Select the device name to delete. ► Select **Delete**.



Bluetooth Phone

Phone Status Icons


Shows the current phone status in the right top of the display.



| Icons | Description |
|-------|---|
| | You can use Bluetooth phones when a Bluetooth Hands-free connection is established. |
| | You can use Bluetooth audio features when a Bluetooth audio connection is established. |
| | You can use Bluetooth phones and audio features when both Bluetooth Hands-free and audio connections are established. |
| | Downloading contacts or call history from a mobile phone connected via Bluetooth to the system. |
| | Bluetooth call in progress |
| | Microphone muted. |

Dial

Select All Menus ► Phone ► 

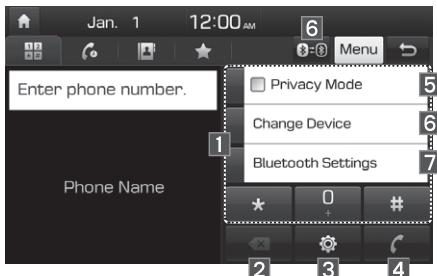

| Name | Description |
|-----------------|--|
| 1 Keypad | Use the keypad to enter the phone number that you want to call. Select and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone. |
| 2 Delete | Deletes the numbers that you entered. |

Accept/Reject Call



If there is an incoming call after you made a Bluetooth connection, a popup message will appear.

| Name | Description |
|-----------------------------|--|
| 3 Settings | Moves to a screen of Bluetooth Connection. |
| 4 Call | Makes a call after you dial a number and select  . If the number is listed in Dialed Calls, you can select the number and select  to automatically dial that number again. |
| 5 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 6 Change Device | Search for and connect another Bluetooth device. |
| 7 Bluetooth Settings | Customize the settings for Bluetooth. |

Information

- Some types of mobile phones may not support the Speed Dial function.

| Name | Description |
|-----------------------|---|
| 1 Accept | Answers the call. |
| 2 Reject | Ignores the call. |
| 3 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |

Information

- In some mobile phones, the caller's number may not be displayed, and the Reject feature may not be supported.

Using the Menu During a Phone Call



When making a call, you can use the following menu items.


| Name | Description |
|-------------------|---|
| 1 Private Mode | Switches a voice call from the car Hands-free to the mobile phone. |
| 2 End | Ends a call. |
| 3 Mute | Mutes the microphone during a call. |
| 4 Outgoing Volume | Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 - 5). |
| 5 Keypad | Moves to a screen for entering ARS numbers. |
| 6 Switch | Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call. |

Information

- If you set the microphone volume too high, the other party may have a difficulty understanding you due to noise or echoing, depending on their mobile phone and surroundings. Setting the volume to 30 or lower is recommended.
- If the caller's number is listed in Contacts, the caller's name will be displayed. Otherwise, only the number will be displayed. In some mobile phones, the phone number may not be displayed.
- In some Bluetooth devices, the Private Mode feature may not be supported.
- In some Bluetooth devices, the Switch feature may not be supported.
- During a phone call on a Bluetooth Hands-free, you cannot access other modes, such as Radio and Settings.
- Depending on handset types, the in-call volume the other party hears may differ. If the other party hears your voice too low or too loud, adjust the mic volume.

Call History

Select [All Menus] ► Phone ► [] .

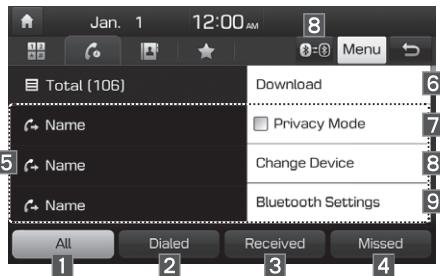

| Name | Description |
|----------------------|---|
| 1 All | Lists the all call history. |
| 2 Dialed | Lists the calls that you made. |
| 3 Received | Lists the calls that you have received. |
| 4 Missed | Lists the calls you missed. |
| 5 Call History | Displays all of your call history. Select from the list to dial the number. |
| 6 Download | Downloads the call history information from your mobile phone. |
| 7 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 8 Change Device | Search for and connect another Bluetooth device. |
| 9 Bluetooth Settings | Customize the settings for Bluetooth. |

i Information

- In some mobile phones, call records may not be added to your Call History.
- Calls from restricted ID's are not added to your Call History Information.
- Up to 50 calls can be added in each Dialed Calls/Received Calls/Missed Calls list.
- The durations of each dialed/received call are not displayed in your car's Call History list.
- While the call history download is in progress, the status bar displays an icon ([]).
- If the call history download is turned off on the Bluetooth device, the call history download will fail.
- Some devices require a device authentication for downloading your call history. If download fails, check if the Bluetooth Settings or display status are normal.
- Some devices do not support call history download. Check if your Bluetooth device supports download feature. For details regarding Bluetooth-supported devices and their functional compatibility, visit <https://www.hyundaiusa.com/bluetooth>.

Contacts

Select [All Menus] ► Phone ► []



| Name | Description |
|----------------------|---|
| 1 Contacts List | The list of Contacts. Select from the list to dial the number. |
| 2 Download | Downloads contacts from your mobile phone. |
| 3 Search | Searches Contacts. |
| 4 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 5 Change Device | Search for and connect another Bluetooth device. |
| 6 Bluetooth Settings | Customize the settings for Bluetooth. |

i Information


- Up to 5000 phone numbers can be downloaded from a single, paired Bluetooth device.
- You cannot edit or delete downloaded phone numbers from your car.
- Contacts can be viewed only when the Bluetooth device is connected.
- Even if the Bluetooth device is disconnected, the downloaded data will remain. (Note that deleting a paired phone will also delete all downloaded Contacts and Call History data)
- Downloaded phone numbers may be lost depending on the condition of the Multimedia system. Keep your important data in a safe place.
- Contacts from both the SIM card and your mobile phone are downloaded at the same time by default.
- Only supported contacts format can be downloaded and displayed from the Bluetooth device, contacts from some applications will not be included.

- The status bar displays a () while downloading contacts.
- The download will not be available if the contacts download function is turned off on your Bluetooth device.
- Some devices require a device authentication for downloading your contacts. If download fails, check your phone screen and confirm the download if necessary.
- Some devices do not support contacts download feature. Check if your Bluetooth device supports contacts download. For Bluetooth supporting devices details and compatibility, visit <https://www.hyundaiusa.com/bluetooth>.

Favorites

Select All Menus ► Phone ► .

- Touch **Add New** and select a contact from your contacts list.
 - If you have already added your favorites, on the favorites screen, touch **Menu** ► **Edit**.
 - To search for a contact by entering a name or phone number on your contacts list, touch **Menu** ► **Search**.

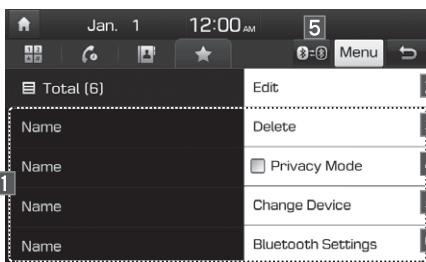

| Name | Description |
|-----------------------------|---|
| 1 Favorites | Lists the phone numbers saved as Favorites. Select from the list to dial the number. |
| 2 Edit | Add numbers or delete numbers to Favorites. |
| 3 Delete | Deletes numbers that you select from Favorites. |
| 4 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 5 Change Device | Search for and connect another Bluetooth device. |
| 6 Bluetooth Settings | Customize the settings for Bluetooth. |



i Information

- You can register up to 10 favorites for each device.
- When you connect a new mobile phone, your favorites set for the previous mobile phone will not be displayed, but they will remain in your system until you delete the previous phone from the device list.

Bluetooth Settings

Changes Bluetooth phone settings.

Press the **SETUP** key ► Select **Bluetooth**.

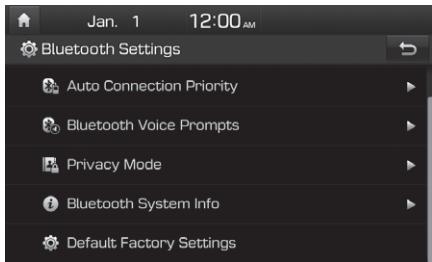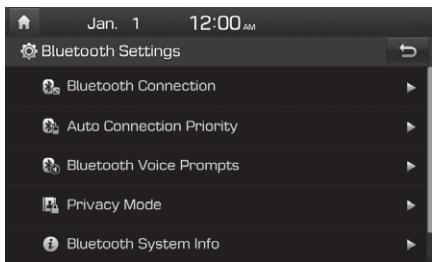

Bluetooth Connection

Press the **SETUP** key ► Select **Bluetooth**

► **Bluetooth Connection**



| Features | Description |
|--|---|
| 1 Paired Device List | Displays the paired Bluetooth device list. When selecting from the list, the device is connected or disconnected. |
| 2 Bluetooth Audio Connection Status | An icon appears when you make a Bluetooth Audio connection. |
| 3 Bluetooth Hands-Free Connection Status | An icon appears when you make a Bluetooth Hands-free connection. |
| 4 Add New | Register a new Bluetooth device. |
| 5 Delete Devices | Select and delete a paired device. |
| 6 Menu | Display the options list. <ul style="list-style-type: none">Help: View Bluetooth help. |

Information

- Some options will be displayed only when a mobile phone is connected to the system.
- Up to 5 Bluetooth devices can be paired.
- Only one Bluetooth device can be connected at a time.

- During a Bluetooth device connection, another device cannot be paired.
- When you delete a paired device, the Call History and Contacts stored in the head unit are also deleted.
- Bluetooth Hands-free and Bluetooth Audio functions are supported.
- Hands-free and audio-supported devices, such as a Bluetooth smartphone or audio, will function normally.
- When a Bluetooth device is connected, if the Bluetooth connection is unexpectedly disconnected, due to being out of communication range, the device powering off, or a Bluetooth communication error, the Bluetooth device automatically searches for and connects to nearby Bluetooth devices.
- If the system is not stable, due to a vehicle-Bluetooth device communication error, restore the Default Factory Settings.

Auto Connection Priority

Press the **SETUP** key ► Select **Bluetooth**
► **Auto Connection Priority**.

Set the priority of paired devices for your system to connect with automatically when it turns on.

Bluetooth Voice Prompts

Press the **SETUP** key ► Select **Bluetooth**
► Select **Bluetooth Voice Prompts**.

Set whether to hear voice prompts for events related to Bluetooth connections.

Privacy Mode

Press the **SETUP** key ► Select **Bluetooth**
► Select **Privacy Mode**.

Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed.

Bluetooth System Info

Press the **SETUP** key ► Select **Bluetooth**
► **Bluetooth System Info**.

View or edit your system's Bluetooth information.

Default Factory Settings

Press the **SETUP** key ► Select **Bluetooth**
► **Default Factory Settings**.

Delete all paired Bluetooth devices and reset your Bluetooth settings to default values. All data related to Bluetooth devices will also be deleted.

MEMO

part.4 Other Features

Camera
Using Voice Memo

Other Features

Camera

⚠ WARNING

When backing up, make sure to follow the guidelines below:

- Before entering your vehicle, always check the area behind your vehicle.
- Do not solely rely on the rear view camera when backing up. Always ensure that it is safe to back up by checking behind you and looking in the rearview mirrors.
- Always back up slowly and stop immediately if you suspect that a person, especially a child, might be behind you.

⚠ CAUTION

- The distance shown in the rear view screen may differ from the actual distance. For safety, be sure to visually check the rear, left, and right sides of your vehicle.
- The color of the parking guidelines displayed in the picture may differ from the actual screen.
- When booted up, blinking may occur when you switch to a UI screen.

💡 NOTICE

- The rear view screen remains active while you are backing up. When you move the transmission shift lever to any position other than the "R" (Reverse) position after backing up, the rear view screen will be deactivated and the system will display the previous screen automatically.
- As you steer your vehicle, the parking guides change accordingly to indicate your vehicle's path.



- Depending on vehicle models, the steering-interactive parking guides may not be supported.
- If an object comes too close to your vehicle as you are parking the vehicle, a warning beep will sound. To prevent an accident that might result if you do not hear the beep, you can set the system to decrease the volume level of any media playing automatically when you are parking the vehicle. On the Home screen, touch All Menus ▶ Setup ▶ Sound ▶ Priority ▶ Proximity Warning.

Steering-linked camera

When you put the transmission shift lever in the “R” (Reverse) position while the engine is running, the system screen will automatically display what is behind you.



Driving direction lines (yellow) 1 2

These lines show the directions of the vehicle according to the steering angle.

Neutral direction lines (blue) 3

These lines indicate your vehicle's expected path with the steering wheel in the neutral position. It can help you determine whether the vehicle is in the correct position in a parking space and prevent you from parking too close to the next vehicle.

Crash warning lines (red) 4

These lines are to prevent a collision.

Using Voice Memo

You can record voice memos using the microphone installed in your vehicle and play voice memos on your system.

On the Home screen, touch **All Menus** ► **Voice Memo**.



| Features | Description |
|------------------------------|--|
| 1 Menu | <ul style="list-style-type: none">• Delete: Delete voice memos.• Save to USB Device: Save voice memos to a USB storage device. <i>i</i> This option is available only for USB storage devices formatted in FAT16/32 formats.• Storage Info: View information on the storage space used for your voice memos. |
| 2 List | List of your voice memos. Touch a voice memo to play it. |
| 3 Record/Pause button | <ul style="list-style-type: none">• Touch  to start recording.• Touch  to pause recording. |
| 4 Stop button | <ul style="list-style-type: none">• Touch  to stop recording. The recorded memo is added to the voice memos list on the left of the screen. <i>i</i> You can also press the  button on the steering wheel. |

i Information

- Voice memo recording mutes the function in operation or pauses media playback.
- If you make or answer a call while recording a voice memo, the recording pauses. If an emergency call is connected, the recording will stop and the recorded voice memo will be saved automatically.

part.5 **Setup**

- Setting sounds
- Setting the system screen
- Setting the Home screen
- Setting the screen saver
- Setting the media player options
- Setting Bluetooth
- Setting the system environments
- Phone Projection Settings

Setting sounds

You can adjust/modify sound settings such as speaker volume or sound effects.

Setting the system sound

On the Home screen, touch **All Menus ▶ Setup ▶ Sound**.

NOTICE

- Depending on the model or specifications of your vehicle, available options may vary.
- Depending on the system or amplifier specifications in your vehicle, available options may vary.

| | |
|-----------------------------------|--|
| Position | Select where you would like sound to be concentrated in your vehicle. Touch a desired location on the seat image or use the arrow buttons to adjust. To center the sound in your vehicle, touch  . |
| Volume | Adjust the volume levels for various system features, including phone projection. |
| Tone | Adjust the tone and output level of each sound. |
| Priority | <ul style="list-style-type: none">• Proximity Warning: Set to give priority to the proximity warning feature and lower all other sounds when parking your vehicle.• Start-up Volume Limit: Set to automatically lower the system volume upon vehicle start-up, if the volume has been previously set to a high level. |
| Advanced (if equipped) | Adjust advanced sound options and apply various sound effects. Depending on your amplifier's specifications, available sound options and effects may vary. |
| Default | Reset your sound settings to default values. |

NOTICE

- To turn the touch sound on or off, touch **Beep** at the top of the sound settings screen.

Setting the system screen

You can change the settings for the screen display.

On the Home screen, touch **All Menus** ▶ **Setup** ▶ **Display**.

| | |
|---------------------|---|
| Mode | Set the screen brightness to be adjusted automatically to ambient lighting conditions, and also to keep the screen bright or dim. |
| Illumination | Set the levels of illumination for day and night. Select Default to initialize the settings. |
| Default | Reset your screen settings to default values. |

Setting the Home screen

You can change the menus displayed on the Home screen. Personalize the Home screen by adding your favorite menus.

- 1 On the Home screen, touch **All Menus** ▶ **Setup** ▶ **Home Screen**.
- 2 Find a desired menu from the list on the right and drag it to the location you want.
 - The existing menu moves to the list on the right and the new menu is added to its previous location.
 - Touch **Default** to reset your home screen settings to default values.



NOTICE

- Once you change the menus displayed on the Home screen, it may affect how to access or perform some functions. If you cannot find a function you want from the Home screen, touch **All Menus** to access or perform it.

Setting the screen saver

You can select a screen saver option after turning off your screen by pressing and holding the [PWR] button on the control panel.

- 1 On the Home screen, touch **All Menus ▶ Setup ▶ Screen Saver**.
- 2 Select a screen saver option.
 - **Digital**: The digital clock is displayed.
 - **Analog**: The analog clock is displayed.
 - **None**: No screen saver is displayed.

Setting the media player options

You can change the settings for the media player.

On the Home screen, touch **All Menus ▶ Setup ▶ Media**.

| | |
|-----------------------------------|---|
| Media Change Notifications | Set to briefly display media information at the top of the screen when not on the main media screen. If you change the media item by using any controls on the control panel or steering wheel, media information will appear regardless of this setting. |
| Repeat Folder | Set the media player to include all files in the subfolders when repeating a folder. |

Setting Bluetooth

You can modify Bluetooth connection settings.

On the Home screen, touch **All Menus ▶ Setup ▶ Bluetooth**.

| | |
|---------------------------------|--|
| Bluetooth Connection | Pair new Bluetooth devices to your system, or connect or disconnect a paired device. You can also delete paired devices. |
| Auto Connection Priority | Set the priority of paired devices for your system to connect with automatically when it turns on. |
| Bluetooth Voice Prompts | Set to enable or disable voice prompts for Bluetooth connections. |
| Privacy Mode | Activate privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |

| | |
|---------------------------------|--|
| Bluetooth System Info | View or edit your system's Bluetooth information. |
| Default Factory Settings | Delete all paired Bluetooth devices and reset your Bluetooth settings to default values. All data related to Bluetooth devices will also be deleted. |

NOTICE

- Some options are only displayed when a mobile phone is connected to your system.

Setting the system environments

You can customize system settings, such as the time and date, system language, and more.

Setting the system language

- 1 On the Home screen, touch **All Menus ▶ Setup ▶ Language**.
- 2 Select a language.

NOTICE

- This setting will not affect user data, such as MP3 file names.
- Depending on the system language, voice recognition may not be supported.

Setting the time and date

- 1 On the Home screen, touch **All Menus ▶ Setup ▶ Date/Time**.
- 2 Set the correct date and time using the arrow buttons located above/below the input fields.
 - Touch **24 Hours** to set the time in the 24 hour format.
 - Touch **Time Zone** to select your time zone.
 - Touch **Daylight Saving Time** to apply daylight saving time.

Setting the keyboard

You can customize your keyboard settings.

On the Home screen, touch **All Menus ▶ Setup ▶ Keyboard**.

Keyboard Type Select a default keyboard type for English.
- English

Default Keyboard Select a default character type for the keyboard.

NOTICE

- Your keyboard settings will be applied throughout the system when inputting text.

Setting advanced options

You can customize additional settings, such as button functions.

On the Home screen, touch **All Menus ▶ Setup ▶ Advanced**.

Custom Button Assign a function to the custom button [☆] on your control panel.

Steering Wheel MODE Button Switch between different radio/media functions when pressing the [MODE] button on your steering wheel.

Viewing system information

On the Home screen, touch **All Menus ▶ Setup ▶ System Info.**

| | |
|----------------|--|
| SW Info | View your system's version information or update it to the latest version. To update your system, visit your local dealership. |
| Storage | View your system's memory storage information. |
| Default | Reset your system settings to default values. All user data stored in the system will also be deleted. |

NOTICE

- Depending on data size, an update may take several minutes.
- Do not turn off the system or remove the storage device while the update is in progress. If the power supply is cut off or the storage device is removed from the system, it may corrupt the data or cause a system malfunction.
- When phone projection is active or an iPod is connected, you cannot reset the system settings. To reset the settings, remove the USB cable from your system.

Phone Projection Settings

For more details, refer to the Phone projection guide.

NOTICE

- When you select **Help**, the Quick Guide appears.
- When phone projection is active, you cannot change the phone projection settings. To change the settings, remove the USB cable from your system.

CAUTION

- Using an approved USB cable provided by your smartphone manufacturer is recommended. Using unapproved USB cables may cause a phone projection error or a system malfunction.

part.6 Appendix

Product Specification
Troubleshooting
FAQ

Appendix

Product Specification

TFT-LCD

| | |
|-------------------|---|
| Screen Size | 7 inch(152.4 x 91.44mm) |
| Resolution | 384,000 pixels (Resolution: 800 x 480) |
| Operating Method | TFT(Thin Film Transistor) Active Matrix |
| Viewing Angle | Left/Right, Top/Bottom: ALL 89° |
| Internal Lighting | LED |

Radio

| | |
|-------------------|--|
| Channels | FM: 87.5 MHz to 107.9 MHz(Step: 200 kHz) |
| | AM: 530 kHz to 1710 kHz(Step: 10 kHz) |
| Sensitivity | FM: Under 10dBuV/AM: Under 35dBu EMF |
| Distortion Factor | Within 2% |

Common

| | | | |
|-----------------------|--------------------------------|---------------------|---------------------------------|
| Power Supply | DC 14.4V | Operating Power | DC 9V to DC 16V |
| Dark Current | 1 mA or less | | |
| Operating Temperature | -20 to +70°C (-4 to +158°F) | Storage Temperature | -30 to +80°C (-22 to +176°F) |
| Dimensions | 178 x 140.2 x 59.2 mm | | |
| Current Consumption | 2.5A | Weight | 1.9 kg |

Bluetooth® Wireless Technology

| | | | |
|-------------------------|--|------------------------------------|-----|
| Frequency Range | 2400 to 2483.5 MHz | Supported Bluetooth® Specification | 3.0 |
| Supported Profile | Handsfree(1.6), A2DP(1.2), AVRCP(1.5), PBAP(1.1) | | |
| Bluetooth Power Class 2 | -6 to 4 dBm | | |
| Antenna power | 3 mW (maximum) | | |
| Number of Channels | 79 channels | | |

Troubleshooting

1. Errors which occur during the operation or installation of the device may be mistaken as a malfunction of the actual device.
2. If you are having problems with the device, try the suggestions listed below.
3. If the problems persist, contact your Hyundai dealer.

| Problem | Possible Cause |
|---|--|
| There are small red, blue, or green dots on the screen | <ul style="list-style-type: none">Because the LCD is manufactured with technology requiring high point density, a pixel or lighting deficiency may occur within 0.01% of total pixels |
| The sound or image is not working | <ul style="list-style-type: none">Has the Switch for the vehicle been turned to [ACC] or [ON]?Has the SYSTEM been turned OFF? |
| The screen is being displayed but sound is not working | <ul style="list-style-type: none">Has the volume been set to a low level?Has the volume been muted? |
| When the power is turned on, the corners of the screen are dark | <ul style="list-style-type: none">The display appearing somewhat dark after prolonged periods of use is normal with LCD panels. It is not a malfunctionIf the screen is very dark, contact your nearest Hyundai dealer for assistance |
| Sound is working from only one speaker | <ul style="list-style-type: none">Are the positions of Fader or Balance sound controls adjusted to only one side? |

| Problem | Possible Cause |
|------------------------------------|---|
| Sound does not work in AUX mode | <ul style="list-style-type: none">Are the audio connector jacks fully inserted into the AUX terminal? |
| The external device is not working | <ul style="list-style-type: none">Is the external device connected with a standard connector cable? |

Upon turning power on, the most recent mode screen is not displayed

Within modes that play files by reading external sources, such as USB, iPod, or Bluetooth® streaming mode, the most recently played mode screen prior to turning off power may not properly load

- If the corresponding device is not connected, the mode operated prior to the most recent mode will operate
- If the previous mode still cannot be properly played, the mode operated prior to that will operate

| Problem | Possible Cause | Countermeasure |
|----------------------------|----------------------------------|--|
| The power does not turn on | The fuse is disconnected | <ul style="list-style-type: none"> Replace with a suitable fuse If the fuse is disconnected again, please contact your point of purchase or Hyundai dealer |
| | Device is not properly connected | <ul style="list-style-type: none"> Check to see that the device has been properly connected |
| The system does not play | The vehicle battery is low | <ul style="list-style-type: none"> Charge the battery. If the problem persists, contact your point of purchase or Hyundai dealer |

| Problem | Possible Cause | Countermeasure |
|-------------------------------------|---|--|
| The image color/tone quality is low | The brightness, saturation, hue, and contrast levels are not set properly | <ul style="list-style-type: none"> Properly adjust the brightness, saturation, hue, and contrast levels through Display Setup |
| | The volume level is set to the lowest level | <ul style="list-style-type: none"> Adjust the volume level |
| | <ul style="list-style-type: none"> The connection is not proper The device is currently fast-forwarding, rewinding, scanning, or playing in slow mode | <ul style="list-style-type: none"> Check to see that the device has been properly connected The sound will not work when the device is fast-forwarding, rewinding, scanning, or playing in slow mode |
| The sound or image quality is low | Vibration is occurring from where the conversion switch has been installed | <ul style="list-style-type: none"> The sound may be short-circuited and the image distorted if the device vibrates |
| | Image color/tone quality is low | <ul style="list-style-type: none"> The device will return to normal once vibrations stop |

| Problem | Possible Cause | Countermeasure |
|-----------------------|--|---|
| The USB does not work | <ul style="list-style-type: none"> USB memory is damaged USB memory has been contaminated A separately purchased USB HUB is being used A USB extension cable is being used A USB which is not a Metal Cover Type USB Memory is being used An HDD type, CF, SD Memory is being used There are no music files which can be played | <ul style="list-style-type: none"> Please use the USB after formatting it. Remove any foreign substances on the contact surface of the USB memory and multimedia terminal Directly connect the USB memory with the multimedia terminal on the vehicle Directly connect the USB memory with the multimedia terminal on the vehicle Use standard USB Memory Use standard USB Memory Only MP3, WMA file formats are supported. Please use only the supported music file formats |

| Problem | Possible Cause | Countermeasure |
|--|--|---|
| | <ul style="list-style-type: none"> The iPod is not recognized even though it has been connected | <ul style="list-style-type: none"> Use iTunes to download and save MP3 files into the iPod Use iTunes to update the firmware version and reconnect the iPod with the device Reset the iPod and reconnect with the device |
| Bluetooth does not work or its limited functions are available | <ul style="list-style-type: none"> Bluetooth on your mobile phone is set to OFF The Bluetooth connection is not made | <ul style="list-style-type: none"> Set it to ON Make the connection active |

Information

- While operating the device, if an abnormality occurs that cannot be corrected with the above described measures, press the RESET key to reset the system.
- Press and hold the RESET key (more than 1 second). The device power will turn off and the system will reset.

FAQ

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?

A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with

SETUP ► Bluetooth ► Bluetooth System Info ► Passkey menu options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the  button on the screen or press the  key on the steering wheel control.

To reject the call, select the  button on the screen or press the  key on the steering wheel control.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (more than 0.8 seconds) the  key on the steering wheel control or select the  button at the bottom of the Phone screen to switch the call to your mobile phone.

About Bluetooth® Wireless Technology/ Multimedia System Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

Index

A

| | |
|---|------|
| About Bluetooth® Wireless Technology/Multimedia System Use Environment..... | 6-7 |
| About Making/Answering Phone Calls | 6-7 |
| About Pairing Mobile Phones | 6-6 |
| Accept/Reject Call | 3-7 |
| Auto Connection Priority | 3-13 |
| AUX | 2-17 |

B

| | |
|---|-----------|
| Battery Warning Message | 1-9 |
| Before Playing a USB MP3..... | 2-4 |
| Before Using the Bluetooth® Handsfree | 3-2 |
| Bluetooth® Audio | 2-18 |
| Bluetooth Connection | 3-4, 3-12 |
| Bluetooth Phone | 3-6 |
| Bluetooth Settings | 3-12 |
| Bluetooth System Info | 3-13 |
| Bluetooth Voice Prompts..... | 3-13 |

C

| | |
|---|------|
| Call History | 3-9 |
| Camera | 4-2 |
| CAUTIONS upon Connecting Bluetooth® Phone | 3-3 |
| Component Names and Functions ... | 1-4 |
| Connecting an External Device | 2-17 |
| Connecting Bluetooth Devices | 3-4 |
| Contacts | 3-10 |

D

| | |
|---------------------------------------|------|
| Default Factory Settings | 3-13 |
| Deleting Bluetooth Devices..... | 3-5 |
| Dial | 3-7 |
| Disconnecting Bluetooth Devices | 3-5 |

F

| | |
|-----------------|------|
| FAQ | 6-6 |
| Favorites | 3-11 |
| FM/AM | 2-2 |

H

| | |
|-------------------|------|
| Head Unit..... | 1-4 |
| Home Screen | 1-10 |

I

| | |
|------------|------------|
| iPod | 2-10, 2-14 |
|------------|------------|

O

| | |
|--------------------------------|------|
| On-Screen Touch Controls | 1-11 |
|--------------------------------|------|

P

| | |
|------------------------------------|------|
| Pairing a New Device | 3-4 |
| Phone Projection Settings | 5-8 |
| Phone Status Icons..... | 3-6 |
| Precautions for Safe Driving | 3-2 |
| Privacy Mode | 3-13 |
| Product Specification | 6-2 |

R

| | |
|---|-----|
| Restrictions on Features for Safety Measures | 1-9 |
|---|-----|

S

| | |
|---|-----|
| Setting advanced options | 5-7 |
| Setting Bluetooth | 5-5 |
| Setting sounds..... | 5-2 |
| Setting the Home screen | 5-3 |
| Setting the keyboard | 5-7 |
| Setting the media player options..... | 5-4 |
| Setting the screen saver | 5-4 |
| Setting the system environments | 5-6 |
| Setting the system language | 5-6 |
| Setting the system screen | 5-3 |
| Setting the system sound | 5-2 |
| Setting the time and date | 5-6 |
| Starting the System for the First Time | 1-8 |
| Steering-linked camera | 4-3 |
| Steering Wheel Controls..... | 1-6 |
| Supported USB music specifications... | 2-6 |
| System Reset | 1-8 |

T

| | |
|---------------------------------|-----|
| Troubleshooting | 6-3 |
| Turning the System On/Off | 1-8 |

U

| | |
|---------------------------------------|------|
| USB | 2-4 |
| USB Music | 2-7 |
| Using iPod Devices | 2-10 |
| Using the Menu During a Phone Call... | 3-8 |
| Using Voice Memo | 4-4 |

V

| | |
|----------------------------------|-----|
| Viewing system information | 5-8 |
|----------------------------------|-----|

W

| | |
|---|-----|
| Warnings and Cautions | 1-2 |
| What is <i>Bluetooth</i> ® Wireless Technology?..... | 3-2 |

Important Information

Before using your Multimedia system, read and follow all instructions and safety information provided in this end user manual (“User’s Guide”). Not following precautions found in this User’s Guide can lead to an accident or other serious consequences.

Keep User’s Guide in Vehicle

When kept in the vehicle, the User’s Guide will be a ready reference for you and other users unfamiliar with the Multimedia system. Please make certain that before using the system for the first time, all persons have access to the User’s Guide and read its instructions and safety information carefully.

Warning

Operating certain parts of this system while driving can distract your attention away from the road, and possibly cause an accident or other serious consequences. Do not change system settings or enter data non-verbally (using your hands) while driving. Stop the vehicle in a safe and legal manner before attempting these operations. This is important since setting up or changing some functions as you drive may distract your attention away from the road and removing your hands from the steering wheel may cause you to lose control of the vehicle.

General Operation

Prolonged Views of Screen

Do not access any function requiring a prolonged view of the screen while you are driving. Pull over in a safe and legal manner before attempting to access a function of the system requiring prolonged attention. Even occasional short scans to the screen may be hazardous if your attention has been diverted away from your driving task at a critical time.

Volume Setting

Do not raise the volume excessively. Keep the volume at a level where you can still hear outside traffic and emergency signals while driving. Driving while unable to hear these sounds could cause an accident.

Use of Speech Recognition Functions

Speech recognition software is inherently a statistical process which is subject to errors. It is your responsibility to monitor any speech recognition functions included in the system and address any errors.

FCC Warning

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with minimum 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter unless authorized to do so by the FCC.

MEMO

DA7

(영어 | 미국) 디오디오2



Kona

Car Multimedia System
Quick Reference Guide



J9MS7-DA003

Thank you for purchasing this multimedia system.

This user's manual explains how to use the HYUNDAI multimedia system.

Before using the product, read the contents of this user's manual carefully and use this product safely.

- The screens shown in this manual may differ with the actual screens of the product.
- The design and specification of this product may change without prior notification for product improvement.
- When transferring the vehicle to another individual, include this user's manual so that the next driver can continue its use.

Precautions for safe usage

- Driving while distracted can result in a loss of vehicle control, that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.
- Do not operate the multimedia system while driving.
- Do not disassemble, assemble, or modify the multimedia system.
- Do not watch the screen for prolonged periods of time while driving.
- Set the volume to a level which allows the driver to be aware of external conditions.
- Do not operate the multimedia system for prolonged periods of time with the vehicle ignition in ACC. Such operations may lead to battery discharge.
- Be cautious not to spill water or introduce foreign objects into the device.
- Do not cause severe shock to the device. Direct pressure onto the front side of the monitor may cause damage to the LCD or touch panel.
- In case of product malfunction, please contact your place of purchase or service center.
- When cleaning the touch screen, make sure to turn off the device and use a dry and smooth cloth. Never use tough materials, chemical cloths, or solvents (alcohol, ammonia, benzene, thinners, etc.) as such materials may damage the device panel or cause color and quality deterioration.

WARNING

- Driving while distracted can result in a loss of vehicle control that may lead to an accident, severe personal injury, and death. The driver's primary responsibility is in the safe and legal operation of a vehicle, and use of any handheld devices, other equipment, or vehicle systems which take the driver's eyes, attention and focus away from the safe operation of a vehicle or which are not permissible by law should never be used during operation of the vehicle.

Hyundai Vehicle Owner Privacy Policy

Your Hyundai vehicle may be equipped with technologies and services that use information collected, generated, recorded or stored by the vehicle. Hyundai has created a Vehicle Owner Privacy Policy to explain how these technologies and services collect use and share this information.

You may read our Vehicle Owner Privacy Policy on the Hyundaiusa.com website at: <https://www.hyundaiusa.com/owner-privacy-policy.aspx> If you would like to receive a hard copy of our Vehicle Owner Privacy Policy, please contact our Customer Connect Center at:

Hyundai Customer Care
P.O. Box 20850
Fountain Valley, CA 92728
800-633-5151
consumeraffairs@hmausa.com

Hyundai's Customer Connect Center representatives are available Monday through Friday, between the hours of 5:00 AM and 7:00 PM PST and Saturday and Sunday between 6:30 AM and 3:00 PM PST (English). For Customer Connect Center assistance in Spanish or Korean, representatives are available Monday through Friday between 6:30 AM and 3:00 PM PST.

Table of Contents

| | |
|-------------------------------------|----|
| Component Names and Functions | 3 |
| On-Screen Touch Controls | 7 |
| Home Screen | 8 |
| FM/AM | 10 |
| USB Music | 12 |
| Bluetooth | 14 |
| FAQ | 19 |

Component Names and Functions

Head Unit



| Name | | Description |
|------|---------------|---|
| 1 | RADIO | <p>Selects FM/AM mode</p> <ul style="list-style-type: none">• Each time this is pressed, the mode is changed in the following order: FM → AM → FM. |
| 2 | MEDIA | <p>Selects MEDIA mode.</p> <ul style="list-style-type: none">• If the media is not connected, MEDIA mode will not be activated. |
| 3 | SEEK TRACK | <p>When the key is pressed quickly (less than 0.8 seconds),</p> <ul style="list-style-type: none">• FM/AM mode: Plays the previous/next frequency.• MEDIA mode: Changes the track, file or title (except for AUX). <p>When the key is pressed and held (over 0.8 seconds),</p> <ul style="list-style-type: none">• FM/AM mode: Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency.• MEDIA mode: Rewinds or fast forwards the track or file (except for Bluetooth Audio and AUX). |
| 4 | HOME | Moves to the Home Screen. |
| 5 | PHONE | Displays the Bluetooth phone mode. |
| 6 | ★ | <ul style="list-style-type: none">• Press to use a custom function.• Press and hold to access the Custom Button settings screen. |
| 7 | SETUP | <ul style="list-style-type: none">• Press to access the settings screen.• Press and hold to access the System Info screen. |

Component Names and Functions



| Name | | Description |
|------|---------------|--|
| 8 | ● PWR/ VOL | <ul style="list-style-type: none">When power is off, press to turn power on.When power is on, press and hold (over 0.8 seconds) to turn the power off.When power is on, press quickly (less than 0.8 seconds) to turn Audio off.Turn left/right to adjust the volume. |
| 9 | ● TUNE | <ul style="list-style-type: none">FM/AM mode: Changes the frequency.MEDIA mode: Changes the track, file or title (except for Bluetooth Audio and AUX). |
| 10 | RESET | Resets the system settings. (Preset radio channels and other data will not be deleted) |

※ The actual image in the vehicle may differ from the illustration.

Steering Wheel Controls



| | Name | Description |
|---|----------------|--|
| 1 | | For more details, refer to Phone Projection guide. |
| 2 | VOL + VOL - | Use to adjust the volume of audio or call. |
| 3 | MODE | <ul style="list-style-type: none">Mutes the audio. (Media will be paused in some media modes.)Mutes the microphone during a call. |
| 4 | ^ v | When the key is pressed quickly (less than 0.8 seconds), <ul style="list-style-type: none">FM/AM mode: searches broadcast frequencies saved to PresetsMedia mode: changes the track, file or title (except for AUX) When the key is pressed and held (over 0.8 seconds), <ul style="list-style-type: none">FM/AM mode: automatically searches broadcast frequenciesMedia mode: quickly looks up songs (except for Bluetooth Audio and AUX) |

Component Names and Functions



| Name | Description |
|------|---|
| 5 |  When the key is pressed quickly (less than 0.8 seconds), <ul style="list-style-type: none">• When pressed in the dial screen, makes a call• When pressed in the incoming call screen, answers the call• When pressed during call waiting, switches to waiting call (Call Waiting) When the key is pressed and held (over 0.8 seconds), <ul style="list-style-type: none">• When pressed in Bluetooth® Hands-free, redials the last dialed call• When pressed during a Bluetooth® Hands-free call, switches call back to mobile phone (Private)• When pressed while calling on the mobile phone, switches call back to Bluetooth® Hands-free (operates only when Bluetooth® Hands-free is connected) |
| 6 |  When pressed during a call, ends the phone call When pressed in the incoming call screen, rejects the call |

※ The actual image in the vehicle may differ from the illustration.

On-Screen Touch Controls

Learn how to touch the screen to operate the system.

Select


Tap lightly on a menu or an item to select it.

NOTICE

- The system will not recognize your touch if you wear a glove or other non-conductive material. Touch the screen using your finger, an electrostatic touch-screen glove, or a stylus pen.


Drag & Drop

Select a menu or item you want, then drag and drop it to where you want to place it.

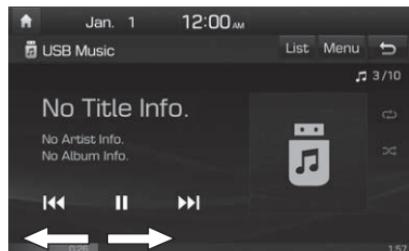

Drag or touch the slider along the play bar in the music screens to jump to the point that you want to play from.

Flick (Quick Scrolling)

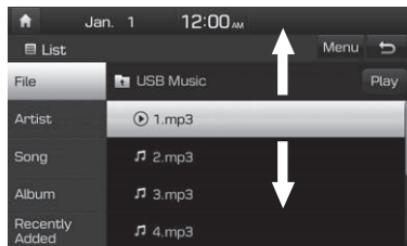

Quickly moves up and down in the list.

NOTICE

- Moving the list when there are many items will display a handler on the right of the display. You can easily move many items at a time with the handler.

Select and Hold

Selecting and holding the **◀◀** or **▶▶** button in the music player will rewind or fast forward the music.



Home Screen

Controls Menu Configuration for the Home Screen

Tap the  icon on any screen to display the Home Screen below.



| Features | Description |
|--|--|
| 1 Radio/ Media Widget | <ul style="list-style-type: none">Shows brief information on the radio or media that is now playing.Tap the area to move to the mode that you are listening to. |
| 2 Phone Projection Widget | Shows any connected devices such as iPod and Bluetooth. |
| 3 All Menus | Shows all of the items in the system menu. |
| 4 My Menu | Add your favorite menus to have quick and easy access to them. |
| 5 Apps/Info | Moves to the Apps/Info screen. |
| 6 Setup | Moves to the Setup screen. |
| 7 System status icons | Status icons are not included in the screenshots in this guide, because their appearance may differ depending on the system status or mode. |

Information Display on the Status Bar

Displays the date and time, along with the system status shown by the various icons to the right of the clock.

The icons in the following table indicate the various types of system status details and events.

| Icon | Description |
|---|--|
|  | Displayed when the audio is muted. |
|  | Displayed when connected to Bluetooth for handsfree. |
|  | Displayed when connected to Bluetooth for streaming audio. |
|  | Displayed when connected to Bluetooth for streaming audio and handsfree. |
|  | Downloading contacts or call history from a mobile phone connected via Bluetooth to the system |
|  | Bluetooth call in progress |
|  | Displayed when the microphone of the Bluetooth phone is muted. |
|  | Voice memo recording |

 Information

- Depending on vehicle models and specifications, some status icons may not be displayed.

FM/AM

You can access the radio player either by pressing the **RADIO** key or by selecting the Radio menu from **All Menus** on the Home Screen.



i Information


- If you press the **RADIO** key when power is off, the power will turn on and a radio broadcast will be tuned from the current mode.

| Features | Description |
|-----------------------------|--|
| 1 Preset Frequencies | <ul style="list-style-type: none">• The stored preset frequencies are displayed for user selection.• After selecting frequency, press and hold the preset button for more than 0.8 seconds. A beep sound will be heard and the frequency is to be stored in the selected preset button.• Flick the preset frequencies up/down to scroll quickly through presets. |
| 2 Frequency | Displays the current frequency. |
| 3 Menu | <ul style="list-style-type: none">• Station List: Moves to the Station List.• Delete Presets: Delete saved radio stations from the preset list.• Sound Settings: Moves to the Sound Settings. |
| 4 Band | Changes to the desired band from among FM, AM. |
| 5 Info | Turns the Radio text information transmitted from the broadcasting station on and off. |
| 6 Scan | Shortly plays the broadcasts for the frequencies with superior reception for 5 seconds per item. |





| Features | Description |
|---------------------|---|
| 7 SEEK/TRACK | <ul style="list-style-type: none">When the key is pressed quickly (less than 0.8 seconds): Seeks the previous/next frequency.When the key is pressed and held (over 0.8 seconds): Moves quickly through all of the frequencies. The moment that you release the button, the system seeks the next available frequency. |
| 8 TUNE | Turn the  TUNE knob to manually seek available frequencies. |

USB Music

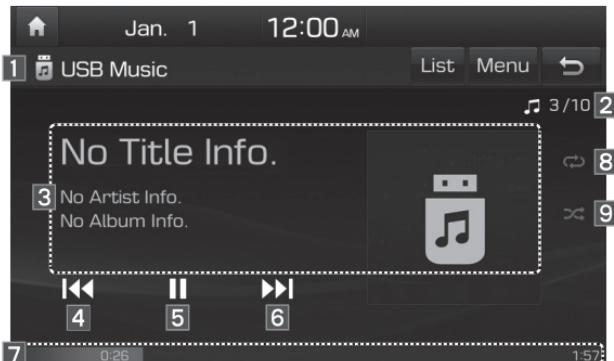

| Features | Description |
|-----------------|--|
| 1 Mode | Displays the current operating mode. |
| 2 File Index | Current file number and total number of files. |
| 3 Song Info | Information about the song currently playing. Touch a song's artist or album information to access a list of songs by the artist or from the album playing. |
| 4 Previous File | <ul style="list-style-type: none">If the button is selected (less than 0.8 seconds): Moves to the previous file or play the current file from the beginning (Depends on the play time).<ul style="list-style-type: none">If play time is less than 3 seconds, moves to previous file.If play time is over 3 seconds, play the current file from the beginning.If the button is selected (over 0.8 seconds) it rewinds the track. |
| 5 Play/Pause | Plays/pauses the current file. |
| 6 Next File | <ul style="list-style-type: none">If the button is selected (less than 0.8 seconds): Moves to the next file.If the button is selected (over 0.8 seconds): It fast-forwards the track. |
| 7 Play Time | Playback time and playback position. |
| 8 Repeat | Used to change the repeat playback mode. |
| 9 Shuffle | Used to turn on or off the random playback mode. |

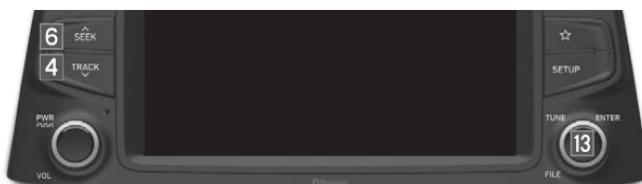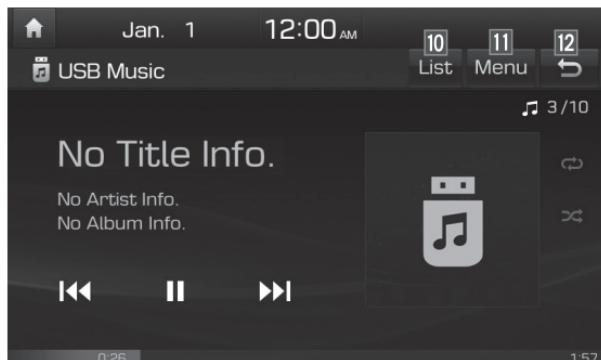

| Features | Description |
|-----------------------|---|
| 10 List | Moves to the list screen. |
| 11 Menu | <ul style="list-style-type: none"> Hide Current File: a selected file can be deleted. Deleted file can be found in the "Hidden_" folder. <i>i</i> This function is only supported when USB format is compatible with FAT16 or FAT32. <ul style="list-style-type: none"> Song for this artist: Move to the list of songs by the artist currently playing. Song for this album: Move to the list of songs from the album currently playing. Sound Settings: Moves to the Sound Settings. |
| 12 Back Button | Return to the previous level. |
| 13 TUNE | <p>Turn the  TUNE knob to search a desired track. If the desired track is displayed, select the  TUNE knob to play the track.</p> <p><i>i</i> If you do not anything with the  TUNE knob for 5 seconds of searching tracks, the track info for the current track is restored.</p> |

***i* Information**

- Depending on the amplifier specifications applied to your vehicle, the sound effect setting button may appear on the screen.

Bluetooth

Bluetooth Connection

Pairing a New Device

Before you can use the Bluetooth feature, you must first pair/connect your mobile phone to your car.

Up to 5 Bluetooth devices can be paired.

Only one Bluetooth device can be connected at a time.



The default passkey is 0000.

The vehicle name above is an example. Check the actual information on the product.

Pairing a New Device by Selecting Phone/Call

Press the **PHONE** key or  key on the steering wheel control. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

Pairing a New Device Through the Phone Settings

Press the **SETUP** key. ► Select **Bluetooth**. ► Select **Bluetooth Connection**. ► Select **Add New**. ► Pair your car after your mobile phone detects the Bluetooth device. ► Enter the passkey or accept the authorization popup. ► Connect Bluetooth.

Connecting Bluetooth Devices

Connects the Bluetooth devices that you add.


Connecting Devices by Selecting Phone/Call

Press the **PHONE** key or  key on the steering wheel control. ► Select the name of the device to connect. ► Connect Bluetooth.




Connecting Devices Through the Phone Settings

Press the **SETUP** key. ► Select **Bluetooth**. ► Select **Bluetooth Connection**. ► Select the name of the device to connect. ► Connect Bluetooth.

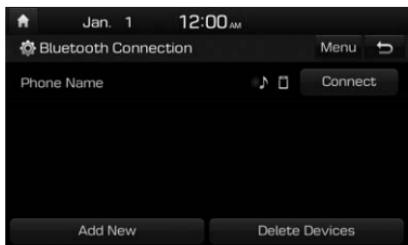

Dial

Select **All Menus** ► **Phone** ► **123**.

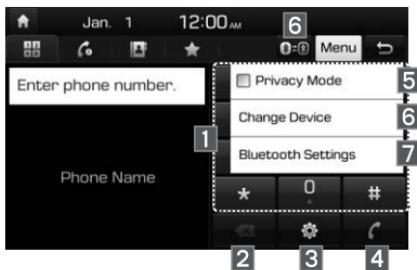

| Name | Description |
|-----------------------------|--|
| 1 Keypad | Use the keypad to enter the phone number that you want to call. Select and hold the last number of a speed dial to dial a number that you added to the Speed Dial list in the phone. |
| 2 Delete | Deletes the numbers that you entered. |
| 3 Settings | Moves to a screen of Bluetooth Connection. |
| 4 Call | Makes a call after you dial a number and select 1 . If the number is listed in Dialed Calls, you can select the number and select 1 to automatically dial that number again. |
| 5 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 6 Change Device | Search for and connect another Bluetooth device. |
| 7 Bluetooth Settings | Customize the settings for Bluetooth. |

Bluetooth

Using the Menu During a Phone Call



When making a call, you can use the following menu items.

| Name | Description |
|--------------------------|---|
| 1 Private Mode | Switches a voice call from the car Hands-free to the mobile phone. |
| 2 End | Ends a call. |
| 3 Mute | Mutes the microphone during a call. |
| 4 Outgoing Volume | Displays the Mic Volume settings. You can adjust the in-call volume that the other party hears (level 1 to 5). |
| 5 Keypad | Moves to a screen for entering ARS numbers. |
| 6 Switch | Switches to a call on hold, if any. You can also switch calls by selecting the number in the Information Display. The Switch function switches the current call to a waiting call in order to answer a new incoming call. |

Call History

Select **All Menus** ► **Phone** ► **6**.



| Name | Description |
|-----------------------------|---|
| 1 All | Lists the all call history. |
| 2 Dialed | Lists the calls that you made. |
| 3 Received | Lists the calls that you have received. |
| 4 Missed | Lists the calls you missed. |
| 5 Call History | Displays all of your call history. Select from the list to dial the number. |
| 6 Download | Downloads the call history information from your mobile phone. |
| 7 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 8 Change Device | Search for and connect another Bluetooth device. |
| 9 Bluetooth Settings | Customize the settings for Bluetooth. |

Bluetooth

Contacts

Select **All Menus** ► **Phone** ► **1**




| Name | Description |
|-----------------------------|---|
| 1 Contacts List | The list of Contacts. Select from the list to dial the number. |
| 2 Download | Downloads contacts from your mobile phone. |
| 3 Search | Searches Contacts. |
| 4 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 5 Change Device | Search for and connect another Bluetooth device. |
| 6 Bluetooth Settings | Customize the settings for Bluetooth. |

Favorites

Select **All Menus** ► **Phone** ► **2**

- Touch **Add New** and select a contact from your contacts list.
- If you have already added your favorites, on the favorites screen, touch **Menu** ► **Edit**.
- To search for a contact by entering a name or phone number on your contacts list, touch **Menu** ► **Search**.

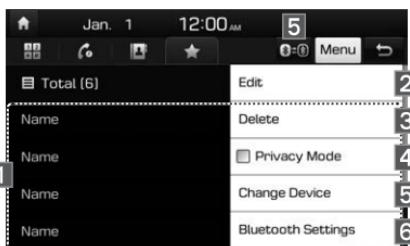

| Name | Description |
|-----------------------------|---|
| 1 Favorites | Lists the phone numbers saved as Favorites. Select from the list to dial the number. |
| 2 Edit | Add numbers or delete numbers to Favorites. |
| 3 Delete | Deletes numbers that you select from Favorites. |
| 4 Privacy Mode | Activate the privacy mode to protect your personal information. In the privacy mode, personal data will not be displayed. |
| 5 Change Device | Search for and connect another Bluetooth device. |
| 6 Bluetooth Settings | Customize the settings for Bluetooth. |

About Pairing Mobile Phones

Q I cannot pair my mobile phone. What is the cause?

A Check to see that the mobile phone supports Bluetooth® function. Verify if Bluetooth on the cell phone is set to OFF. If so, set it to ON. If the cell phone still can't be registered, try again after turning Bluetooth off and on, or delete the device registration on the multimedia system and cell phone and then register the cell phone again.

Q What is the difference between pairing a mobile phone and connecting a mobile phone?

A Pairing occurs through authenticating the head unit and mobile phone. Mobile phones paired to the head unit can be connected and disconnected until the paired mobile phone is deleted from the system. Bluetooth® Handsfree features, such as making/answering calls or managing contacts, are supported only in mobile phones connected with the head unit.

Q What is a Passkey?

A A passkey is the password used to authenticate the connection between the head unit and mobile phone. The passkey only needs to be entered once when pairing the mobile phone for the first time.

The initial passkey is 0000. You can change it with

SETUP ► **Bluetooth** ► **Bluetooth System Info** ► **Passkey** menu options.

About Making/Answering Phone Calls

Q How can I answer a call?

A When there is an incoming call, a notification pop-up will become displayed. To answer the incoming call, select the **Accept** button on the screen or press the  key on the steering wheel control. To reject the call, select the **Reject** button on the screen or press the  key on the steering wheel control.

Q What should I do if I am talking on the Handsfree but want to switch the call to the mobile phone?

A While on a call, press and hold (more than 0.8 seconds) the  key on the steering wheel control or select the  **Private Mode** button at the bottom of the Phone screen to switch the call to your mobile phone.

About **Bluetooth®** Wireless Technology/ Multimedia System Use Environment

Q What is the range of my wireless connection?

A The wireless connection can be used within 15 yards.

Q How many mobile phones can be paired?

A It is possible to pair up to five mobile phones.

Q Why is call quality sometimes poor?

A Check the reception sensitivity of the mobile phone when call quality becomes worsened. The call quality may deteriorate when the signal strength is low. Call quality may also worsen if metal objects, such as beverage cans, are placed near the mobile phone. Check to see if there are metal objects in the vicinity of the mobile phone. The call sound and quality may differ depending on the type of mobile phone.

MEMO

MEMO

MEMO

MEMO

DA7

(미국·캐나다) 디오디오2



C2MP7-DA000

Car Multimedia System

This manual applies to all HYUNDAI models and includes descriptions and explanations of optional as well as standard equipment. As a result, you may find material in this manual that does not apply to your specific vehicle.

What is Phone Projection?

You can securely access your smartphone while driving by using this feature. Various functions on your smartphone are displayed on the multimedia system so you can easily use them (finding directions, making a call, listening to music etc.).

With Phone Projection supported device connected, Phone Projection menu appears on the display. Available functions and operations may differ depending on the model.

For more information, visit the Phone Projection website.

- Android Auto: <http://support.google.com/androidauto/>
- Apple CarPlay: <http://www.apple.com/ios/carplay/>

Precautions

- Android Auto is a registered trademark of Google Inc.
- Apple CarPlay is a registered trademark of Apple Inc.
- Phone Projection will be unavailable if the phone OS is not the latest version or your phone is unable to be recognized due to a shutdown caused by a failure or defect in the device itself.
- Your phone may not be recognized if its battery is low. Charge your phone then try again.
- If your phone is shut down due to a defect in the device itself, reset your phone and try again.
- If you repeatedly connect and disconnect the USB cable on the device in a short period of time, your phone may malfunction. This can also cause a device failure.
- The device recognition time may differ depending on the device type and firm-ware/OS version.
- Using the USB cable that came with the phone is recommended. (Using a non-genuine product may cause noise or malfunction.)
- Normal operation is not guaranteed when you arbitrarily manipulate your phone while Phone Projection is active.
- Phone Projection may not operate normally due to mobile phone issues.
- Network charges may apply when using Phone Projection.
- You cannot run Apple CarPlay while making a call using Bluetooth.
- If the network signal strength is weak, some Phone Projection features may not work properly.

- The following problems may occur due to issues with your phone.

[Android Auto]

- Intermittent black screens appear when entering Android Auto.
- Unable to differentiate between phones that support Android Auto and those do not.
- Black screens appear in some areas of the screen due to phone or app errors.

[Apple CarPlay]

- Intermittent black screens appear when entering Apple CarPlay.
- Black screens appear in some areas of the screen due to app errors when navigating between screens in Apple CarPlay.
- Audio volume may not be adjusted depending on the status of the connected phone.

NOTICE

- If services do not work properly due to problems similar to the specified above, check your phone and if necessary, reconnect your phone after restarting.

CAUTION

- Use only applications that are compatible with phone projection. Using incompatible applications may cause problems for your system or smartphone.
- Only compatible applications will be displayed on the phone projection screen. You can also check compatible applications by visiting the following websites:
 - Apple CarPlay: <https://www.apple.com/ios/carplay>
 - Android Auto: <https://www.android.com/auto>

Using Phone Projection Features

1. With Android Auto, connect the USB cable provided by the mobile manufacturer. With Apple CarPlay, connect the USB cable provided by Apple.
2. On the Home or All Menus screen, select the  or  icon.



※ The actual Home screen in the vehicle may differ from the screen above.

3. You can use Phone Projection features, such as navigation, music and phone.

NOTICE

- Before connecting your mobile phone, check whether Phone Projection is set to ON in the Phone Projection Settings menu.
- After connecting the mobile phone, you must unlock your phone and accept the Disclaimers on your phone in order for Phone Projection to launch.
- The screens and features displayed on the multimedia system are subject to change depending on the policies of each company.

Android Auto

- Refer to the website below to view the list of countries that support Android Auto.
<https://www.android.com/auto/>
- Bluetooth media features will be disabled when Android Auto is activated. You cannot use Bluetooth Media features such as Bluetooth Audio. If you want to use such features, remove the USB cable before use.
- Android Auto mode does not support the feature that enables you to search for music files by controlling the  TUNE knob.
- If Android Auto is not activated even after a successful connection, check the following:
 - Phone Application status (Check if an error has occurred).
 - Check if Android Auto has been locked on your phone.
 - Check whether Android Auto is set to ON in the Phone Projection Settings menu.

Apple CarPlay

- To view the available features, such as Apple CarPlay, Siri, and Maps, or countries that support the features, please go to: <http://www.apple.com/ios/feature-availability/>
- When Apple CarPlay is activated, you cannot use Bluetooth. If you want to use Bluetooth Phone/Audio, remove the USB cable and connect to Bluetooth before using them.
- Apple CarPlay mode does not support the feature that enables you to search for music files by controlling the  TUNE knob.

- If Apple CarPlay is not activated even after a successful connection, check the following:
 - Check if Apple CarPlay is disabled in your iPhone's application settings.
 - Check whether Apple CarPlay is set to ON in the Phone Projection Settings menu.
- If Apple CarPlay does not work normally even after a reconnection has been made, visit the Apple website <http://www.apple.com/ios/carplay/>
- The screens and features displayed on the multimedia system are the same as what Apple originally provide. The screens and features are subject to change according to the policy of Apple Inc.

Using Steering Wheel Controls

Starting/Ending Voice Recognition



- When the key is pressed quickly (less than 0.8 seconds),
 - If Android Auto is connected, activates or ends Google voice recognition.
 - If Apple CarPlay is connected, activates or ends Apple CarPlay Siri recognition.
- When the key is pressed and held (over 0.8 seconds),
 - If Android Auto is connected, activates or ends Google voice recognition.
 - If Apple CarPlay is connected, activates Apple CarPlay Siri recognition.


Select mode [MODE]

Each time this is pressed, the mode is changed. Mode order is subject to change depending on the state of the Phone Projection connection and enabled features.

- ※ If the corresponding mode is disabled, the next mode will be enabled.
- ※ While running Phone Projection, you cannot operate features such as: USB, iPod, Bluetooth Audio

Phone Projection Settings


On the Settings screen, select Phone Projection icon.

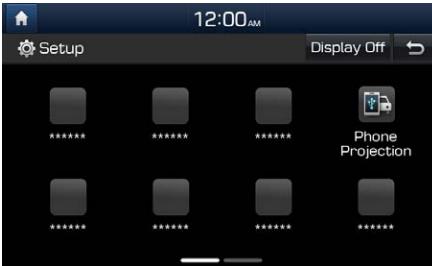

- ※ The actual Settings screen in the vehicle may differ from the screen above.

Information

- This setting is disabled when a device is connected to the vehicle's USB port.

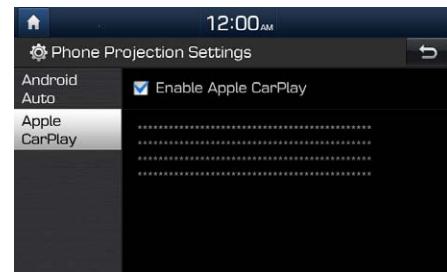

You can enable any Phone Projection feature that you would like to connect to or disable them in the Phone Projection Settings menu.

It is recommended you use a device installed with the latest OS version. Some multimedia system features may not be available while Phone Projection is active.

Système multimédia du véhicule

Ce guide s'applique à tous les modèles HYUNDAI et comprend des descriptions et des explications des équipements en option et de série. Il est par conséquent possible que vous trouviez dans ce guide des renseignements qui ne s'appliquent pas à votre véhicule spécifique.

Qu'est-ce que la Projection téléphonique ?

En utilisant cette fonction, vous pouvez accéder à votre smartphone tout en conduisant. Diverses fonctions de votre smartphone s'affichent sur le système multimédia pour faciliter leur utilisation (rechercher une direction, passer un appel, écouter de la musique, etc.).

Lorsqu'un appareil pris en charge par la Projection téléphonique est connecté, le menu Projection téléphonique s'affiche à l'écran. Les fonctions et opérations disponibles peuvent varier suivant le modèle utilisé.

Pour plus d'informations, visitez le site Web relatif à la Projection téléphonique.

- Android Auto: <http://support.google.com/androidauto/>
- Apple CarPlay: <http://www.apple.com/ios/carplay/>

Precautions

- Android Auto est une marque déposée de Google Inc.
- Apple CarPlay est une marque déposée d'Apple Inc.
- La Projection téléphonique n'est pas disponible si le système d'exploitation du téléphone n'est pas la dernière version en date ou si votre téléphone n'est pas reconnu en raison d'un arrêt causé par une défaillance ou un défaut de l'appareil.
- Il est possible que votre téléphone ne soit pas reconnu si sa batterie est faible. Rechargez votre téléphone et réessayez.
- Si votre téléphone est éteint en raison d'un défaut de l'appareil, réinitialisez-le et réessayez.
- Si vous branchez et débranchez à maintes reprises le câble USB de l'appareil dans un laps de temps réduit, votre téléphone peut présenter des dysfonctionnements. Cela peut également entraîner une défaillance de l'appareil.
- Le temps de reconnaissance de l'appareil peut varier selon le type d'appareil et la version du micrologiciel/système d'exploitation.
- Il est recommandé d'utiliser le câble USB fourni avec le téléphone. (L'utilisation d'un produit qui n'est pas d'origine peut entraîner un bruit abnormal ou un dysfonctionnement.)
- Le fonctionnement normal n'est pas garanti lorsque vous manipulez arbitrairement votre téléphone alors que la Projection téléphonique est active.
- La Projection téléphonique peut présenter des dysfonctionnements dus aux problèmes du téléphone mobile.
- Des frais de réseau peuvent s'appliquer lors de l'utilisation de la Projection téléphonique.
- Vous ne pouvez pas utiliser Apple CarPlay lors d'un appel passé en Bluetooth.
- Si la réception du signal du réseau n'est pas bonne, certaines fonctions de la Projection téléphonique peuvent ne pas fonctionner correctement.

- Les dysfonctionnements suivants peuvent survenir en raison de problèmes avec votre téléphone.

[Android Auto]

- Apparition d'écrans noirs par intermittence lors de l'activation d'Android Auto ou de.
- Impossible de faire la différence entre les téléphones compatibles avec Android Auto et les téléphones non compatibles.
- Des écrans noirs s'affichent dans certaines zones de l'affichage en raison d'erreurs d'application ou du téléphone.

[Apple CarPlay]

- Apparition d'écrans noirs par intermittence lors de l'activation d'Apple CarPlay.
- Des écrans noirs s'affichent dans certaines zones de l'écran en raison d'erreurs d'application lors de la navigation entre les écrans dans Apple CarPlay.
- Le volume audio peut ne pas être réglé en fonction de l'état du téléphone connecté.

REMARQUE

- Si les services ne fonctionnent pas correctement en raison de problèmes similaires à ceux mentionnés ci-dessus, vérifiez votre téléphone et, si nécessaire, reconnectez-le après l'avoir redémarré.

MISE EN GARDE

- Utilisez seulement des applications compatibles avec la projection du téléphone. L'utilisation d'applications non compatibles peut occasionner des problèmes pour le système ou votre téléphone intelligent.
- Seules les applications compatibles s'affichent sur l'écran de projection du téléphone. Pour vérifier les applications compatibles, vous pouvez aussi consulter les sites Web suivants :
 - Apple CarPlay: <https://www.apple.com/ios/carplay>
 - Android Auto: <https://www.android.com/auto>

Utilisation des fonctions de la Projection téléphonique

1. Pour Android Auto, connectez le câble USB fourni par le fabricant du téléphone mobile. Pour Apple CarPlay, connectez le câble USB fourni par Apple.
2. Dans l'écran d'accueil ou l'écran Tous les menus, sélectionnez l'icône  ou .



※ L'écran d'accueil réel du véhicule peut différer de l'écran présenté ci-dessus.

3. Vous pouvez utiliser les fonctions de la Projection téléphonique, comme la navigation, la musique et le téléphone.

REMARQUE

- Avant de connecter votre téléphone mobile, vérifiez que la Projection téléphonique est activée dans le menu Paramètres de la Projection téléphonique.
- Une fois le téléphone mobile connecté, vous devez le déverrouiller et accepter les avis de non-responsabilité sur l'appareil pour pouvoir lancer la Projection téléphonique.
- Les écrans et fonctions affichés sur le système multimédia sont sujets à modification en fonction de la politique de chaque entreprise.

Android Auto

- Reportez-vous au site Web ci-dessous pour voir la liste des pays qui prennent en charge Android Auto. <https://www.android.com/auto/>
- Les fonctions Média Bluetooth sont désactivées lors de l'activation d'Android Auto. Vous ne pouvez pas utiliser les fonctions Média Bluetooth, telles que Audio Bluetooth. Si vous souhaitez utiliser ces fonctions, débranchez le câble USB.
- Le mode Android Auto ne prend pas en charge la fonction vous permettant de rechercher des fichiers musicaux à l'aide du bouton  TUNE.
- Si Android Auto n'est pas activé, même après une connexion réussie, vérifiez les points suivants :
 - État des applications du téléphone (vérifiez la présence d'une erreur)
 - Vérifiez qu'Android Auto a été verrouillé sur votre téléphone
 - Vérifiez si Android Auto est activé dans le menu Paramètres de la Projection téléphonique

Apple CarPlay

- Pour consulter les fonctionnalités disponibles, telles que Apple CarPlay, Siri et Maps, ou les pays qui prennent en charge ces fonctionnalités, rendez-vous sur : <http://www.apple.com/ios/feature-availability/>
- Quand Apple CarPlay est activé, vous ne pouvez pas utiliser le Bluetooth. Si vous souhaitez utiliser la fonction Téléphone/ Audio Bluetooth, débranchez le câble USB et connectez-vous au Bluetooth avant de l'utiliser.
- Le mode Apple CarPlay ne prend pas en charge la fonction vous permettant de rechercher des fichiers musicaux à l'aide du bouton  TUNE.

- Si Apple CarPlay n'est pas activé, même après une connexion réussie, vérifiez les points suivants :
 - Vérifiez si Apple CarPlay est désactivé dans les paramètres d'application de votre iPhone
 - Vérifiez si Apple CarPlay est activé dans le menu Paramètres de la Projection téléphonique
- Si Apple CarPlay ne fonctionne pas normalement, même après une reconnexion, visitez le site Web d'Apple à l'adresse <http://www.apple.com/ios/carplay/>
- Les écrans et fonctions affichés sur le système multimédia sont les mêmes que ceux fournis par Apple à l'origine. Les écrans et fonctions sont sujets à modification selon la politique d'Apple Inc.

Utilisation des commandes au volant

Activation/désactivation de la reconnaissance vocale []

- Lorsque la touche est enfoncée brièvement (moins de 0,8 seconde),
 - Si Android Auto est connecté, active/désactive la reconnaissance vocale Google.
 - Si Apple CarPlay est connecté, active ou désactive la reconnaissance d'Apple CarPlay Siri.
- Lorsque la touche est enfoncée et maintenue (plus de 0,8 seconde),
 - Si Android Auto est connecté, active/désactive la reconnaissance vocale Google.
 - Si Apple CarPlay est connecté, active la reconnaissance d'Apple CarPlay Siri.

Sélection du mode [MODE]

Chaque pression sur ce bouton entraîne un changement du mode.

L'ordre des modes est sujet à modification en fonction de l'état de la connexion de la Projection téléphonique et des fonctions activées.

- ※ Si le mode correspondant est désactivé, le mode suivant est alors activé.
- ※ Lorsque la Projection téléphonique fonctionne, les fonctions suivantes ne sont pas disponibles : USB, iPod, Audio Bluetooth

Règlages de projection du téléphone

Dans l'écran Paramètres, sélectionnez l'icône **Projection du téléphone**.



- ※ L'écran Paramètres réel du véhicule peut différer de l'écran présenté ci-dessus.

Information

- Ce réglage est désactivé lorsqu'un appareil est connecté au port USB du véhicule.



Vous pouvez activer n'importe quelle fonction de la Projection téléphonique à laquelle vous souhaitez vous connecter ou la désactiver dans le menu Paramètres de la Projection téléphonique.

Il est recommandé d'utiliser un appareil disposant de la dernière version en date du système d'exploitation. Certaines fonctions du système multimédia peuvent être indisponibles lorsque la Projection téléphonique est activée.