User Manual

YF INTERNATIONAL LIMITED

Federal Communications Commission (FCC) Statement

You are cautioned that changes or modifications not expressly approved by the part responsible for compliance could void the user's authority to operate the equipment.

FCC- Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a communications. However, there is no guarantee that interference will not occur in particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Contents:

Safety and Regulatory Information

Basic Introduction

- 1. Overview
- 2. Accessory
 - 2.1 Charging by AC adapter
 - 2.2 Charging by Car Charger
 - 2.3 USB Cable usage
 - 2.4 Install the Car Mount System

Main function introduction


- 1. Starting up
- 2. Power saving
- 3. Main Functions
 - 3.1 Navigation
 - 3.2 Media
 - 3.2.1 Music
 - **3.2.2 Photo**
 - **3.2.3** Ebook
 - 3.2.4 Video
 - 3.3 Bluetooth
 - 3.3.1 Phone keypad
 - 3.3.2 Call Record
 - 3.3.3 Pair
 - 3.3.4 Dun Setting
 - 3.3.5 Attribute
 - 3.3.6 Pair Devices
 - 3.3.7 IE Explorer
 - 3.4 System setting
 - 3.4.1 Backlight
 - 3.4.2 System Info
 - 3.4.3 Language
 - **3.4.4 Power**
 - **3.4.5 Volume**
 - 3.4.6 Date Time

Precaution and Notice

- For GPS is operated and controlled under the sole responsibility of the Government of the United States of America, who are responsible for its availability and accuracy. Any changes in GPS availability and accuracy, or in environmental conditions, may impact the operation of your device. We can not accept any liability for the availability and accuracy of GPS.
- > The PND is used only as a navigation aid. It is not for precise measurement of direction, distance, location or topography. The user must follow all traffic signs and local regulations along the roads.
- ➤ GPS satellite signals cannot pass through solid materials (except glass). When you are inside a tunnel or building, GPS position is not available.
- A minimum of 4 GPS satellite signals are needed to determine current location. Signal reception can be affected by situations such as bad weather or wireless devices or dense overhead obstacles (e.g. tall buildings).
- ➤ When you get out of the car, do not leave your PND on the dashboard or subject to direct sunlight. The overheating of the battery may cause malfunctions and/or dangerous conditions.
- For your own safety, do not operate the controls of the PND while driving. Do not mount where the driver's field of vision is blocked

I Basic Introduction

1. Overview

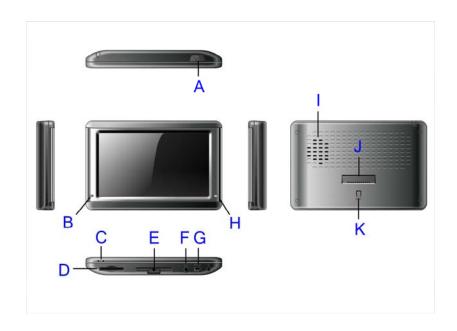



- A: Power Switch
- B: Light Sensor (Optional)
- C: MIC
- D: SD card
- E: Charger Jack
- F: Earphone Jack
- G: USB Connector
- H: Charger Indicator Light
- I: Speaker
- J: Cradle Connector
- K: Reset Key
- L: Charger Jack
- M: USB Connector
- N: AV-IN (Optional)

2. Accessory

2.1 Charging by AC adapter

Please use the AC adapter to charge the device for the first time. To maximize the life of the battery, the device must be full of charge for the first time.

Plug the adapter's DC port into the device's USB port on its right-side panel

Plug the adapter into the main supply socket.

The charging indicator will light. When the unit is fully charged, the red indicator will turn blue.

2.2 Charging by Car Charger

The car charger supplies power to your device when you are using the device in a car.

Caution: To protect your device against sudden surges in current, connect the car charger only after the car engine has been started. Connect one end of the car charger to the power connector of your device. Connect the other end to the cigarette lighter in the car to power and charge your device.

2.3 USB Cable usage

The USB cable is provided for system upgrades. This USB cable will work on the PC either with Microsoft Active Sync® or as a mass storage media. You can select the mode in the "System-Sys Info-USB" menu.

For upgrade and more information about Microsoft Active Sync, please visit Microsoft web.



2.4 Install the Car Mount System

Take off the protected film on the bottom of the suction. Then put the bracket onto a suitable location of your windscreen or side window, make sure the window or the suction or windscreen is clean and without water and some dirty things inside, fixing the stand on that position. Never place the stand where the driver's field of vision is blocked.

If the car's windshield is tinted with a reflective coating, an external antenna (optional) may be needed to route the roads. The external antenna is stick to the top of the car through a window. When closing the car window, be careful not to pinch the antenna cable (Cars with an anti-jam window design may automatically leave adequate space as needed.).

Install PND into the holder

Press 2 side button, pull left lightly and then take off the suction. If the bracket still doesn't detach from your windscreen, tug gently on the clear plastic tab at the edge of the suction mount, to break the vacuum seal.

II Main function introduction

1. Starting up

Tap " Power Switch " key then enter into the main function operation screen as below.



2. Power saving

Press the power button on the top side of your device to turn off your device, the device actually enters a suspend state and the system stops operation. Once you turn on the system again, it resumes.

3. Main Functions

Press the **POWER** button to turn on the GPS unit. The Main Menu screen will be displayed as below:



3.1 Navigation

Double tap the "Navigation" icon to start program.

Note: During navigation or other operations, quickly pressing the **MENU** button, "Main Menu" screen will be displayed.

3.2 Media

Tap the icon "Media" on the main menu and enter into following interface.




3.2.1 Music

1) Tap the icon "Music" on the media menu and enter into following interface.



2) Double tap your desired file and enter into the following interface.

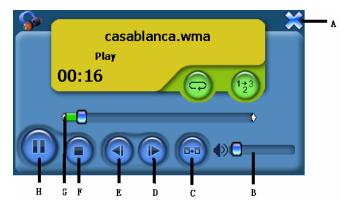

A: return to the Media menu

B: volume control

C: return to previous menu

D: next

E: previous

F: stop

G: speed bar

H: pause/play

3.2.2 Photo

1) Tap the "Photo" icon on the media menu and enter into the following interface.



2) Double tap the file on the screen and enter into the following interface.



A: return to the Media menu

B: next

C: return to previous menu

D: current picture name

E: Zoom in

F: Zoom out

G: full screen

H: rotate

Tips:

Tap FULL SCREEN button, it will display in full screen size.

When playing in full screen, double press the screen again, it will return to original playing size.

3.2.3 Ebook

1) Tap the "Ebook" icon on the media menu and enter into the following interface.



2) Double tap the file and enter into the following interface.



- A: Return to the Media menu
- **B**: Previous
- C: Next
- D: Return to previous menu
- E: Pages chose
- F: Current page/total pages
- G: Current file name

3.2.4 Video

1) Tap the icon "Video" on the media menu and enter the following interface.



2) Tap the file you desired and enter into the following interface.



- A: Return to the Media menu
- B: Pause/play
- C: Stop
- D: Speed up
- E: Volume control
- F: Full screen
- G: Return to previous menu
- H: Speed bar

Tips:

Tap NEXT button to recycle the movie.

Tap full screen button or double press the screen, it will play in full screen.

When playing in full screen, double press the screen again, it will return to original playing size.

3.3 Bluetooth

Tap the icon "Bluetooth" on the main menu and enter into the following interface.



3.3.1 Phone keypad


1) Tap the icon on the Bluetooth menu and enter into the following interface.



- A Return to the Bluetooth menu
- B Backspace
- C Pair and connect with the mobile you want
- D Call Record

3.3.2 Call Record

1) Tap the icon on the Bluetooth menu and enter into the following interface.

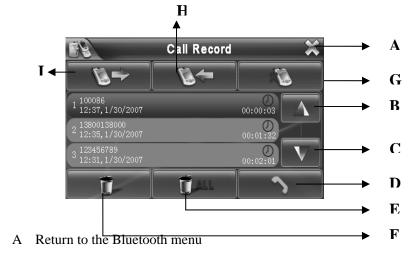

- B Previous
- C Next
- D Connect with the mobile you want
- E Delete all the call records
- F Delete the recorded number you chose
- G Hang up the number you dial
- H Incoming call record
- I Outgoing call record

3.3.3 Pair

Tap the icon on the Bluetooth menu and enter into the following interface.



3.3.4 Attribute

1) Tap the icon on the Bluetooth menu and enter into the following interface.



- A PIN Setting
- B Music Setting
- 2) Tap PIN Setting button and enter into the following interface.



3) Tap Music Setting button and enter into the following interface.



Then tap the icon you desired and choose the music file as the ring of incoming call.

3.3.5 Pair Devices

1) Tap the icon on the Bluetooth menu and enter into the following interface.



- B Next
- C Delete all the Devices information
- D Disconnect the Devices you chose
- E Connect the Devices you chose

3.4 System setting

Tap the icon "System" on the main menu and enter into the following interface.



3.4.1 Backlight

Tap the "Backlight" icon and enter into the following display.



- A. Tap "-" to weaken the backlight, and tap "+" to stronger the backlight.
- B. Under battery icon, tap "<" or ">" button to select the duration of auto power off the backlight.
- C. Under AC power icon, tap "<" or ">" to select the duration of auto power off the backlight when using AC adaptor.

3.4.2 System Info


Tap the "Sys Info" icon and enter into the following display.



A. Tap the icon "USB" to set the USB working mode.



B. Tap the icon "Calibration" to adjust the touch screen.

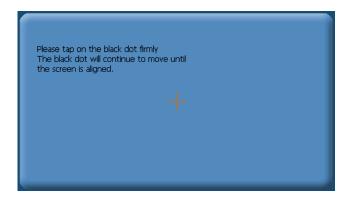

3.4.3 Language

A. Tap the icon "Language" and enter into the following interface:



3.4.4 Power

Tap the icon "Power" and enter into following interface:



3.4.5 Volume

A. Tap the icon "Volume" and enter into the following interface:



- B. Tap"-" or "+" to adjust volume of speaker.
- C. You can select "Enable sounds for taps" and "Use FM".
- D. Tap "<"or ">" icon to increase or decrease the emissive frequency of FM.


Fix the transmission frequency first. Turn on the car radio and tune the radio at the same frequency. Then you can hear the voice the navigation device coming from the car radio's loudspeaker.

3.4.6 Date Time

A. Tap the icon "Date Time" and enter into the following interface:



B. Tap "Date" icon and use "<" or ">" icon to adjust the date.

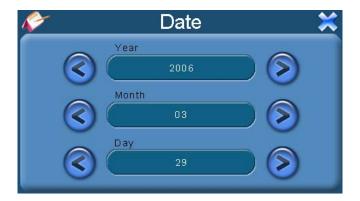

C. Tap "Time" icon and use "<" or ">" icon to adjust the time.



C. Tap "Time Zone" icon and use "<" or ">" icon to adjust the time zone.



This document is for guidance only and does not form part of any contract, and may be subject to change without notice.