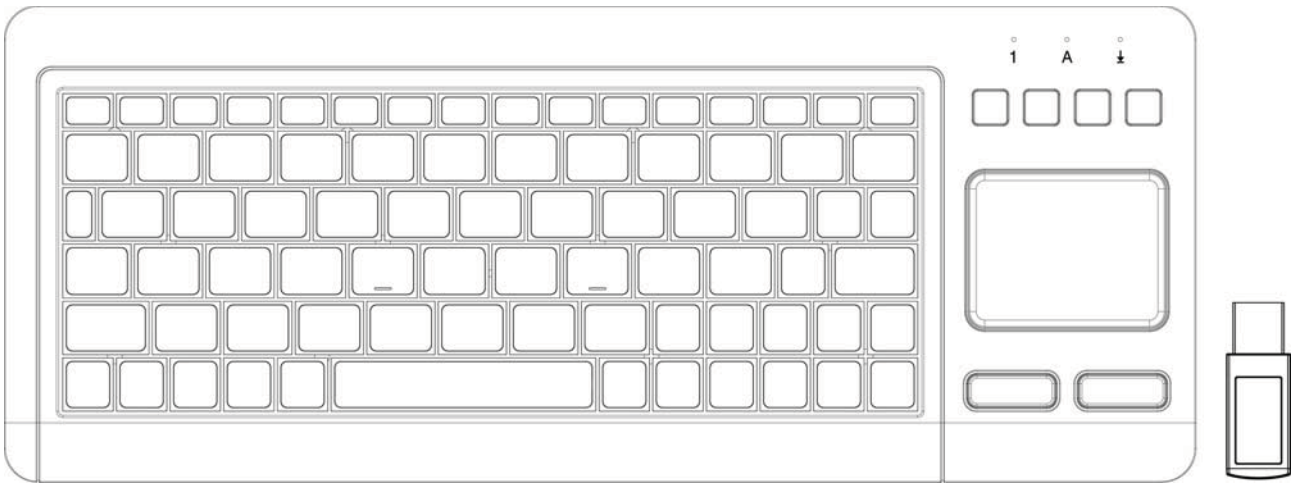




Model: S-KW425TG

Wireless Keyboard with touchpad

Installation & User's Guide



FCC Warning Statement

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.



2.4G Wireless Touchpad Keyboard

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

(1) this device may not cause harmful interference.

(2) this device must accept any interference received, including interference that may cause undesired operation.

Made in China

Version:A1 2013-11-16



1. Overview

- 2.4GHz Wireless Technology range up to 5-10M
- Mini keyboard with built-in high resolution touchpad
- Additional 4 web browsing and multimedia hot keys
- Click and Right Click buttons
- Exquisite mini USB receiver
- Plug and play with Windows 2000/ME/XP/NT/VISTA/7

2. Package contents

- Wireless Touchpad Keyboard
- USB Wireless Receiver
- AAA Battery
- User's Manual

3. System Requirements

- Windows 2000/ME/XP/NT/VISTA/7
- USB port

4. Specifications

Windows 2000/ME/XP/NT/VISTA/7 compatible

Interface:USB 2.0

Dimension: 280(L)×112 (w)×17 (H)mm

Weight: 280±20g

Peak force: 55±10g

Total Travel (mm): 2.0-2.5mm

Switch Life:5million Cycles

Accessory: 2 AAA batteries, USB Mini Receiver

RF receiver: 41.5x15x7.5mm

Operation Frequency: 2.402-2.480GHz

Transmission Distance: 5-10 meters (depend on user environment)

Hot keys: 4 hot keys,Touch pad, Click and right click keys

Operation temperature:0 to 50 degrees

Storage temperature:-20 to 70 degrees

FCC,CE and RoHS Approval

5. Installation





1. Insert the USB Receiver into an available USB port.
2. The Found New Hardware Wizard appears and the OS will install the driver automatically. No other steps are necessary.
3. Open the battery compartment located underneath the wireless keyboard and install the AAA battery. Turn on the power switch at the back of the keyboard. Note: Follow the polarity signs in the battery compartment to make sure the battery is installed correctly.
4. Please turn on the power switch.

You are now ready to begin using your wireless keyboard

If you don't want to use it, please turn off the power switch and unplug the dongle

Note: After 4 minutes non-operation, the keyboard will go to sleep mode. Please press any key to work up.

6. Multimedia keys:

Multimedia keys		Multimedia keys Description
	Play/Pause	Switches between Play and Pause of DVD/VCD/MP3/Audio media. Once Pause is pressed, pressing this button again resumes play.
	Mute	Mutes the computer's sound volume. Press it again to turn the system volume back on.
	V+	Increases the computer's sound volume. Hold down to increase volume more quickly.
	V-	Decreases the computer's sound volume. Hold down to decrease volume more quickly.

7. Mini keyboard mode

Table below shows the original keys combined with Fn (Fn + original key) of Mini-keyboard.








Function Key Usage:

Key Location	Status							
	Fn	Num Lock	Fn	Num Lock	Fn	Num Lock	Fn	Num Lock
	OFF	OFF	ON	OFF	OFF	ON	ON	ON
7	&7		Home		7		7	
8	*8		↑		8		8	
9	(9		PgUp		9		9	
0)0		*		*		0	
U	U		←		4		U	
I	I				5		I	



O	O	→	6	O
P	P	-	-	P
J	J	End	1	J
K	K	↓	2	K
L	L	PgDn	3	L
::	::	+	+	::
M	M	Ins	0	M
>.	>.	Del	.	>.
?/	?/	/	/	?/
Enter	Enter (L)	Enter(R)	Enter(R)	Enter(L)
F1/F11	F1	F11	F1	F11
F2/F12	F2	F12	F2	F12
F10/ ScrLock	F10	ScrLock	F10	ScrLock
↑ /PgUp	↑	Page Up	↑	Page Up
↓ /PgDn	↓	Page Down	↓	Page Down
← /Home	←	Home	←	Home
→ /End	→	End	→	End

8. Using Touchpad

Definition of Finger Gesture			
Touchpad Function	Mouse Function	Finger Gesture	Finger Action
Moving	Move cursor		Slide Finger
Click (Tap)	Left button click		Tap one finger
Middle button click	Middle button click		Tap 2 fingers
Right button click	Right button click		Tap 3 fingers
Double click	Left button double click		Double tap one finger
Drag	Drag		Tap and drag
Vertical, two fingers scroll	Middle button vertical scroll		Slide two fingers vertically

9. Disposal



If possible, dispose of the used appliance at a recycling centre. Do not dispose of the used appliance with the household waste.

10. Safety

- Never try to open or to repair this product yourself.
- Keep this appliance away from fluids, such as water.

11. Copyright

- Reproduction of this manual or any part of it is prohibited without permission from Sunday Electronics Technology co., Ltd.