





Instruction Manual

KB06006 Keyboard and Mouse Combo

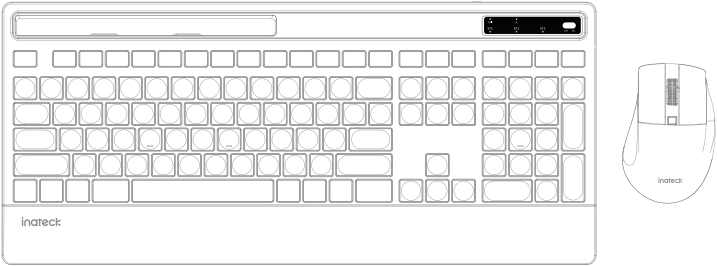

English

1.Precautions





- Optical technology ensures accurate detection of mouse movement on most surfaces. Do not use the mouse on any reflective, transparent, glass, or uneven surfaces.
- Use a dry, soft cloth to clean the product.
- Do not forcibly disassemble the product.
- Do not look directly at the light from the bottom of the mouse.
- Do not use the product in the rain, under sunlight, or near fire.
- Do not clean this product directly with water.

2.Device and System Requirements

- The device needs to support Bluetooth 5.0 and above;
- Multimedia features may not be fully functional in some operating systems.

Note: Windows is the default system.


3.Product Appearance

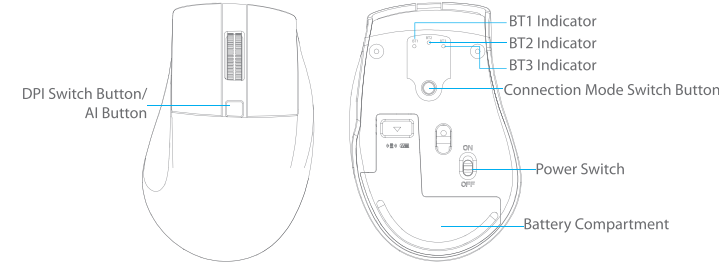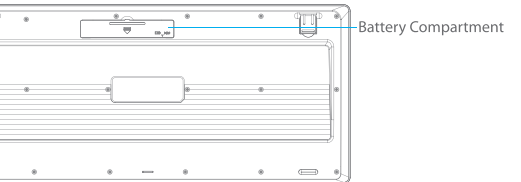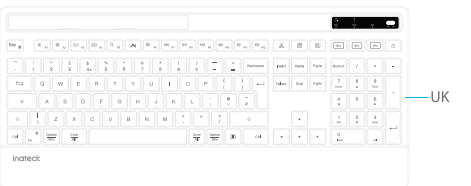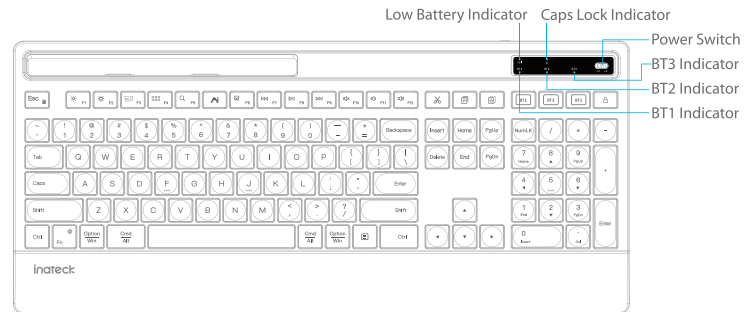

4. How to Use

Battery Installation

Open the battery compartment and install the batteries as indicated.

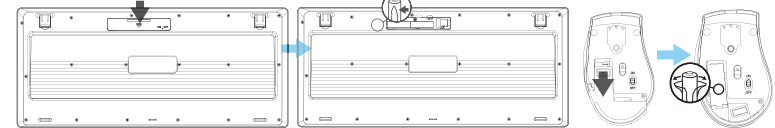


Note: The keyboard uses 2 AAA batteries, and the mouse uses 1 AA battery. When not using the mouse for an extended period or while carrying it, please switch it to the OFF position or remove the batteries.

Using in Bluetooth Mode

Toggle the switch on the keyboard to "ON" position to enter Bluetooth channel 1 broadcasting mode. You will see "Inateck KB06006-K" in the Bluetooth list on your device. Click to connect.



Toggle the switch on the mouse to the "ON" position to enter Bluetooth Channel 1 mode. You will see "Inateck KB06006-M" in the Bluetooth device list. Click to connect. If the connection is unsuccessful, you can press and hold the connection mode switch button to enter Bluetooth Channel 1 broadcasting mode. You can also press the connection mode switch button briefly to toggle between BT1 and BT2.

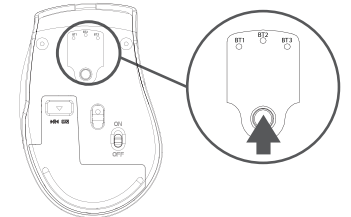

5.Shortcut Keys

	Brightness-		Brightness+		Switch Window
	Multitask Interface		Search		AI (Inateck Origin)
	Screenshot		Last Track		Play/Pause
	Next Track		Mute		Volume-
	Volume+		Cut		Copy
	Paste		Lock Screen		Switch Input Method

How to Use F1-F12

You may press + to enable/disable the lock. (The keyboard disables the lock by default.)

When the Fn Lock is enabled:

Pressing triggers the function owned by key.

Pressing + dims the screen brightness.

This method applies to all F keys (-).

When the Fn Lock is disabled (Default Status):

Pressing dims the screen brightness.

Pressing + triggers the function owned by key.

This method applies to all F keys (-).

Note: The following operations are only applicable to Windows.

AI Key Function Description

On Windows devices, the AI key can be used to wake up Inateck Origin, a software that supports AI translation, AI chat, and other functions. You can search for Inateck Origin on the Microsoft Store to download it.

Keyboard

Short press the AI key:

If no text is copied, it will activate AI chat;

If text is copied, it will activate AI translation.

Mouse

Long press the DPI Switch Button/AI Button:

If no text is copied, it will activate AI chat;

If text is copied, it will activate AI translation.

Multi-Device Input Bridging

If the mouse is connected to three different Windows devices via Bluetooth channels 1/2/3 (up to three devices) under the same local area network, you can enter Inateck Origin to enable the Multi-Device Input Bridging, allowing the transfer of documents, spreadsheets, images, and other files.

Note: The transfer speed is affected by the bandwidth of the local area network.

If the keyboard is connected to three different Windows devices via Bluetooth channels 1/2/3 (up to three devices) under the same local area network, you can press the BT1/BT2/BT3 key to switch between different Windows devices.

Description for Other Keys

	Short press to switch to BT1. Long press to pair in BT1.
	Short press to switch to BT2. Long press to pair in BT2.
	Short press to switch to BT3. Long press to pair in BT3.

6.LED Indicator

Keyboard

Indicator	Status	Meaning
Caps Lock Indicator	Solid	Caps Lock on
	Off	Caps Lock off
Low Battery Indicator	Blinking	Low battery
	Solid	Connected
BT1 Indicator	Blinking	Connecting
	Solid	Connected
BT2 Indicator	Blinking	Connecting
	Solid	Connected
BT3 Indicator	Blinking	Connecting
	Solid	Connected

Mouse

BT1 Indicator	Blinking	Connecting
	Off	Bluetooth connected or unconnected
BT2 Indicator	Blinking	Connecting
	Off	Bluetooth connected or unconnected
BT3 Indicator	Blinking	Connecting
	Off	Bluetooth connected or unconnected

Note: During use, if the indicator light on the bottom of the mouse is flashing, it indicates low battery.

7.Restore Factory Defaults

Hold + for 3 seconds and then all indicators will blink 3 times once the factory reset is completed.

8.Sleep Mode

After 30 minutes of inactivity, the keyboard/mouse will enter sleep mode. The connection can be rebuilt with a press of any key.

9.Product Specifications

Keyboard

Working Distance	Bluetooth: approximately 10m
Key Lifespan	10 million presses
Power	2 *AAA batteries
Frequency Range	2402MHz - 2480MHz
Operating Temperature	-10°C -55°C

Mouse

Working Distance	Bluetooth: approximately 10m
Key Lifespan	5 million presses
Power	1* AA battery
Frequency Range	2402MHz - 2480MHz
DPI	800-1200-1600-2000-2400
Operating Temperature	-10°C -55°C

10.Packing List

- KB06006 * 1
- User Manual * 1
- AA Battery * 1
- AAA Battery * 2

EU Declaration of Conformity

Inateck Co., Ltd. hereby declares that this device complies with the Directive 2014/53/EU .
A copy of the Declaration of Conformity can be accessed from <https://www.inateck.de/pages/inateck-euro-compliance>.



FCC Note

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the Users, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Note: The Grantee is not responsible for any changes or modifications not expressly approved by the party responsible for compliance. Such modifications could void the user's authority to operate the equipment.

The device has been evaluated to meet general RF exposure requirement.
This equipment complies with FCC's RF radiation exposure limits set forth for an uncontrolled environment. This device and its antenna(s) must not be co-located or conjunction with any other antenna or transmitter.

Battery Safety Warning:

This product contains a built-in rechargeable lithium battery. Please observe the following safety precautions: do not dismantle, hit, crush, or expose the battery to fire. If the battery experiences severe swelling, discontinue use immediately. Avoid placing the battery in high-temperature environments, and do not use it if it has been immersed in water. During transportation, do not mix the battery with metallic objects.

Batteriesicherheitshinweis:

Dieses Produkt enthält einen eingebauten wiederaufladbaren Lithium-Akku. Bitte beachten Sie die folgenden Sicherheitsvorkehrungen: Zerlegen Sie den Akku nicht, schlagen Sie ihn nicht, zerquetschen Sie ihn nicht und setzen Sie ihn nicht Feuer aus. Bei starkem Aufblähen des Akkus verwenden Sie ihn bitte sofort nicht mehr. Vermeiden Sie es, den Akku in heißen Umgebungen zu platzieren, und verwenden Sie ihn nicht, wenn er in Wasser getaucht wurde. Mischen Sie den Akku während des Transports nicht mit metallischen Gegenständen.

Deutsch


1.Vorsichtsmaßnahmen

1. Die optische Technologie gewährleistet eine genaue Erkennung der Mausbewegung auf den meisten Oberflächen. Verwenden Sie die Maus nicht auf reflektierenden, transparenten, gläsernen oder unebenen Oberflächen.
2. Verwenden Sie zur Reinigung des Produkts ein trockenes, weiches Tuch.
3. Nehmen Sie das Produkt nicht gewaltsam auseinander.
4. Schauen Sie nicht direkt in das Licht auf der Unterseite der Maus.
5. Verwenden Sie das Produkt nicht im Regen, unter Sonnenlicht oder in der Nähe von Feuer.
6. Reinigen Sie dieses Produkt nicht direkt mit Wasser.

2.Geräte- und Systemanforderungen

1. Das Gerät muss Bluetooth 5.0 oder höher unterstützen;
 2. Die Multimedia-Funktionen sind bei einigen Betriebssystemen möglicherweise nicht voll funktionsfähig.
- Hinweis: Windows ist das Standardsystem.


3.Produkt Erscheinungsbild

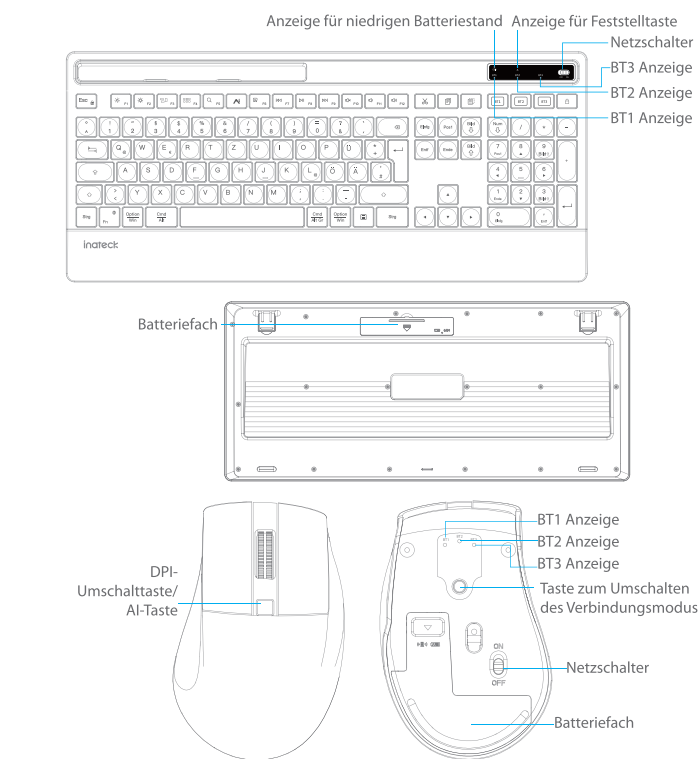

4. Nutzung


Einlegen der Batterien

Öffnen Sie das Batteriefach und legen Sie die Batterien wie angegeben ein.

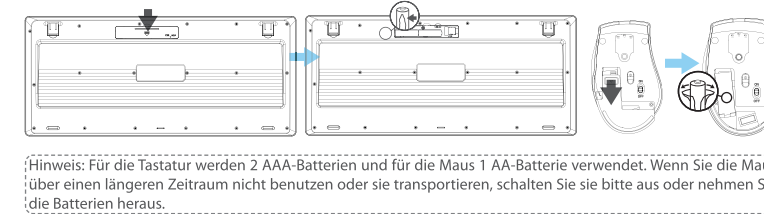

Verwendung im Bluetooth-Modus

Schieben Sie den Schalter an der Tastatur in die Position "ON", um in den Bluetooth-Kanal-1-Sendemodus zu gelangen. Sie sehen "Inateck KB06006-K" in der Bluetooth-Liste auf Ihrem Gerät. Klicken Sie zum Verbinden.

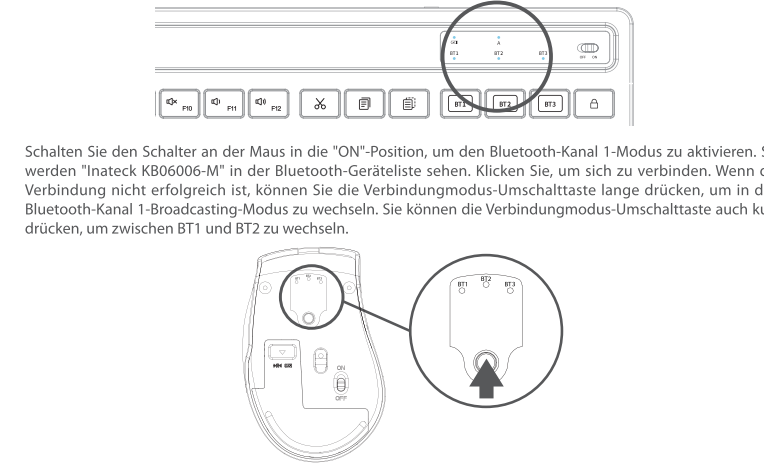

5.Funktionstasten der Tastatur

	Helligkeit-		Helligkeit+		Fenster wechseln
	Multitasking Oberfläche		Suche		AI (Inateck Origin)
	Screenshot machen		Letzter Titel		Wiedergabe/Pause
	Nächster Titel		Stumm		Lautstärke-
	Lautstärke+		Ausschneiden		Kopieren
	Einfügen		Sperren		Eingabemethode wechseln

So verwenden Sie F1-F12

Sie können + drücken, um die Tastensperre zu aktivieren/deaktivieren. (Die Tastatur deaktiviert die Tastensperre standardmäßig.)

Wenn die Fn-Sperre aktiviert ist:

Drücken von löst die Funktion der -Taste aus.

Drücken von + verringert die Bildschirmhelligkeit.

Diese Methode gilt für alle F-Tasten ().

Wenn die Fn-Sperre deaktiviert ist (Standardzustand):

Drücken von verringert die Bildschirmhelligkeit.

Drücken von + löst die Funktion der -Taste aus.

Diese Methode gilt für alle F-Tasten ().

Hinweis:Die folgenden Vorgänge sind nur für Windows anwendbar.

AI-Schlüsselfunktionsbeschreibung

Auf Windows-Geräten kann die AI-Taste verwendet werden, um Inateck Origin zu aktivieren – eine Software, die KI-Übersetzung, KI-Chat und weitere Funktionen unterstützt. Sie können Inateck Origin im Microsoft Store suchen und herunterladen.

Tastatur

Kurzes Drücken der AI-Taste:

Wenn kein Text kopiert wurde, wird der KI-Chat aktiviert.

Wenn Text kopiert wurde, wird die KI-Übersetzung aktiviert.

Maus

Langes Drücken der DPI-Umschalttaste/AI-Taste:

Wenn kein Text kopiert wurde, wird der KI-Chat aktiviert.

Wenn Text kopiert wurde, wird die KI-Übersetzung aktiviert.

Multi-Device Input Bridging

Wenn die Maus über die Bluetooth-Kanäle 1/2/3 mit drei verschiedenen Windows-Geräten (bis zu drei Geräte) im selben lokalen Netzwerk verbunden ist, können Sie Inateck Origin öffnen, um Multi-Device Input Bridging zu aktivieren. Dadurch können Dokumente, Tabellen, Bilder und andere Dateien zwischen den Geräten übertragen werden.

Hinweis: Die Übertragungsgeschwindigkeit wird durch die Bandbreite des lokalen Netzwerks beeinflusst.

Wenn die Tastatur über die Bluetooth-Kanäle 1/2/3 mit drei verschiedenen Windows-Geräten (bis zu drei Geräte) im selben lokalen Netzwerk verbunden ist, können Sie mit den BT1/BT2/BT3-Tasten zwischen den verschiedenen Windows-Geräten wechseln.

Beschreibung für andere Tasten

BT1	Kurzes Drücken, um zu BT1 zu wechseln. Langes Drücken zum Koppeln in BT1.
BT2	Kurzes Drücken, um zu BT2 zu wechseln. Langes Drücken zum Koppeln in BT2.
BT3	Kurzes Drücken, um zu BT3 zu wechseln. Langes Drücken zum Koppeln in BT3.

6.LED Anzeige

Tastatur

Anzeige	Status	Bedeutung
Anzeige Festelltaste	Dauerhaft an Aus	Feststelltaste Ein Feststelltaste Aus
Anzeige für niedrigen Batteriestand	Blinkend	Niedriger Batteriestand
BT1 Anzeige	Blinkend Dauerhaft an	Verbinden Verbunden
BT2 Anzeige	Blinkend Dauerhaft an	Verbinden Verbunden
BT3 Anzeige	Blinkend Dauerhaft an	Verbinden Verbunden

Maus

BT1 Anzeige	Blinkend Aus	Verbinden Bluetooth verbunden oder nicht verbunden
BT2 Anzeige	Blinkend Aus	Verbinden Bluetooth verbunden oder nicht verbunden
BT3 Anzeige	Blinkend Aus	Verbinden Bluetooth verbunden oder nicht verbunden

Hinweis: Wenn die Anzeigeleuchte an der Unterseite der Maus während des Gebrauchs blinkt, bedeutet dies, dass die Batterie schwach ist.

7.Werkseinstellungen wiederherstellen

Halten Sie + 3 Sekunden lang gedrückt, dann blinken alle Anzeigen 3 Mal, sobald das Zurücksetzen auf die Werkseinstellungen abgeschlossen ist.

8.Ruhemodus

Nach 30 Minuten Inaktivität wird die Tastatur/Maus in den Ruhezustand versetzt. Die Verbindung kann mit einem beliebigen Tastendruck wiederhergestellt werden.

9.Produktspezifikationen

Tastatur

Arbeitsabstand	Bluetooth: etwa 10m
Lebensdauer der Tasten	10 Millionen Betätigungen
Stromversorgung	2 * AAA Batterien
Frequenzbereich	2402MHz - 2480MHz
Betriebstemperatur	-10°C -55°C

Mouse

Arbeitsabstand	Bluetooth: etwa 10m
Lebensdauer der Tasten	5 Millionen Betätigungen
Stromversorgung	1* AA Batterie
Frequenzbereich	2402MHz - 2480MHz
DPI	800-1200-1600-2000-2400
Betriebstemperatur	-10°C -55°C

10.Lieferumfang

- KB06006 * 1
- Benutzerhandbuch * 1
- AA Batterie * 1
- AAA Batterie * 2

Service Center

Europe

F&M Technology GmbH
Tel: +49 341 5199 8410 (Working day 8 AM - 4 PM CET)
Fax: +49 341 5199 8413
Address: Fraunhoferstraße 7, 04178 Leipzig, Deutschland

North America

Inateck Technology Inc.
Tel: +1 (909) 698 7018 (Working day 9 AM - 5 PM PST)
Address: 2078 Francis St., Unit 14-02, Ontario, CA 91761, USA

日本

Inateck 株式会社
電話番号: +81 06 7500 3304
〒 547-0014 大阪府大阪市平野区長吉川辺 3 丁目 10 番 11 号

F&M Technology GmbH

For Product and Battery Fraunhoferstraße 7, 04178 Leipzig, Deutschland
EC REP Tel: +49 341 5199 8410
Email: service@inateck.com
Postal code: 04178

Inateck Technology (UK) Ltd.

95 High Street, Office B, Great Missenden, United Kingdom, HP16 0AL
Tel: +44 20 3239 9869

Manufacturer

Shenzhen Inateck Technology Co., Ltd.
Address: Suite 2507, Block 11 in Tian An Cloud Park, Bantian Street, Longgang District, Shenzhen, Guangdong, China
Email: product@licheng-tech.com
Postal code: 518129

说明书尺寸：折后 120*180mm

材质：100g 双胶纸

此页不做印刷