

Connecting your sensor is quick and easy

- 1 On your thermostat, select the **Menu** button in the top left corner
- 2 Select **Remote Sensors**
- 3 Click **Add Sensor** in the upper right hand corner
- 4 Follow the step-by-step instructions



INK COLORS



ALL OTHER COLORS: CMYK

Fold

PLACING YOUR SENSORS

You can position your sensor one of three ways:

- Mount on the wall using the enclosed hardware.
- Assemble the enclosed stand by sliding the sensor onto the base and snapping into place
- Simply place the sensor on a flat surface such as a table or shelf

Tip:

Make sure not to place in an area that receives direct sunlight or near a vent, doors and drafty windows. If wall mounting, try to avoid the exterior walls of your home.



Fold

Fold

CONTROLLING YOUR SENSORS

After installing your sensors, by default, there will be a checkmark next to each sensor and the thermostat in the mobile app. This means that your temperature settings will heat and cool to an average reading across all selected devices.


To prioritize the temperature and humidity of a certain room or sensor, ensure only the sensors you want to prioritize are selected in the mobile app.

READING YOUR SENSORS

The temperature and humidity shown on the top of your mobile app screen will display the balanced reading across all selected devices in your home.

Fold

Fold

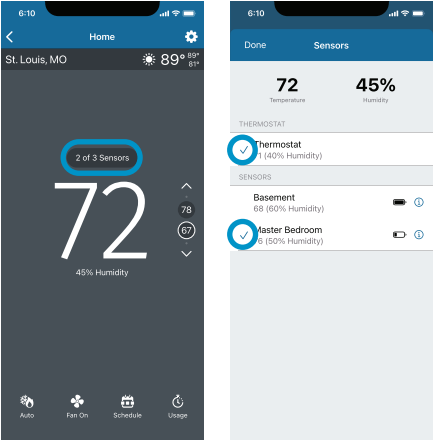

We're here to help
Visit sensihelp.com

The Sensi logo is a trademark and service mark of Emerson Electric Co. ©2022

Fold

Fold

FCC REGULATIONS

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. Changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF EXPOSURE

This device complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The antenna(s) used for this transmitter must not be co-located or operating in conjunction with any other antenna or transmitter and must be installed to provide a separation distance of at least 20cm from all persons. The FCC grant can be found under the Display Grant section of <http://www.fcc.gov/oet/fccid> after searching on FCC ID: 2A4JN-RS01-SG5468

IC NOTICE

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device. This Class B digital apparatus complies with Canadian ICES-003. IC ID: 28229-RS01SG5468

Fold

Connecter votre capteur est rapid et facile

- 1 Sur votre thermostat, sélectionnez le **bouton de menu** dans le coin supérieur gauche
- 2 Sélectionnez **remote sensors**
- 3 Cliquez sur **add sensor** dans le coin supérieur droit
- 4 Suivez les instructions étape par étape



INK COLORS



ALL OTHER COLORS: CMYK

POSITIONNEMENT DES CAPTEURS

- Vous pouvez positionner votre capteur de trois manières :
- Installez les capteurs au mur en utilisant le matériel inclus.
 - Assemblez le support ci-joint en faisant glisser le capteur sur la base et en l'enclenchant en place.
 - Placez simplement le capteur sur une surface plane, telle qu'une table ou une tablette.

Conseil :
Évitez de placer le capteur dans un endroit directement exposé aux rayons du soleil ou près d'un éven, d'une porte ou d'une fenêtre où il y a un courant d'air. Pour une installation murale, évitez autant que possible les murs extérieurs de votre résidence.




CONTRÔLE DES CAPTEURS

Après avoir installé vos capteurs, par défaut, il y aura une coche à côté de chaque capteur et du thermostat dans l'application mobile. Cela signifie que vos paramètres de température chaufferont et refroidiront à une lecture moyenne sur tous les appareils sélectionnés.

Pour définir une priorité à la température et au taux d'humidité d'une pièce ou d'un capteur en particulier, sélectionnez uniquement les capteurs à prioriser à partir de l'application mobile.

LECTURE DES CAPTEURS

La température et le taux d'humidité affichés dans le haut de l'écran de l'application mobile indique la température équilibrée pour tous les appareils sélectionnés dans votre résidence.

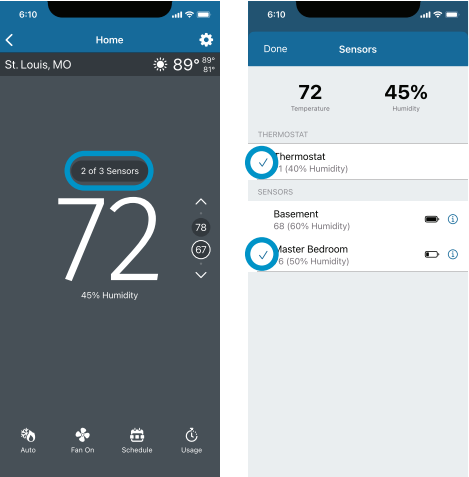

AVIS D'INDUSTRIE CANADA

Cet appareil respecte les normes CNR d'Industrie Canada sur l'exemption de licence. Son fonctionnement est soumis aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage; (2) l'appareil doit accepter tout brouillage radio électrique, même si le brouillage est susceptible de compromettre le fonctionnement de l'appareil.

Cet appareil numérique de classe B est conforme à la norme canadienne ICES-003

IC ID: 28229-RS01SG5468

IC RADIATION EXPOSURE STATEMENT

This device complies with IC radiation exposure limits set forth for an uncontrolled environment. In order to avoid the possibility of exceeding the IC radio frequency exposure limits, human proximity to the antenna shall not be less than 20cm during normal operation.

Cet appareil est conforme aux limites d'exposition aux rayonnements de la norme d'Industrie Canada définies pour un environnement non contrôlé. Afin d'éviter la possibilité de dépasser les limites d'exposition aux fréquences radio de la norme d'Industrie Canada, la proximité humaine à l'antenne ne doit pas être inférieure à 20 cm (8 pouces) pendant le fonctionnement normal.

Nous sommes là pour vous aider
Visitez [sensihelp.com](#)

Le logo Sensi est une marque commerciale et une marque de service d'Emerson Electric Co. ©2022 0037-7871003