

Get started

Quick Guide

Insert SIM card

1. Power off the mobile phone and remove the rear cover and battery.
2. The phone is a DUAL SIM mobile phone allowing you to use two badly class networks.
3. Finally insert the SIM card into the slot.



3. Finally insert the battery and replace the rear cover of the mobile phone.

Insert memory card

1. Power off the mobile phone and remove the rear cover and battery.
2. Insert the Micro SD card into the slot.
3. Finally insert the battery and replace the rear cover of the mobile phone.



3. Finally insert the battery and replace the rear cover of the mobile phone.

Charge the Battery or Connect to a computer

You can charge your battery using the charger or connect the USB cable (supplied with the phone) to the computer.

Note: Please use the specific battery, otherwise it may cause explosion.



Keys and parts

Quick Guide


The smart phone supports SD Card and please you mark the keys to experience on Camera, Video recording, FM radio, Music and Sound records. Let you install various APPs, games, and more (support APK format) by downloading from Play Store.



Lock and Unlock the Screen

Quick Guide

Press power button to enter Sleep mode and meanwhile the screen will be locked, press power button again to wake up and then drag the lock to the right side to unlock.

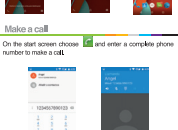

Maintenance & Safety

Quick Guide

Please read and observe the following information for safe and proper use of your phone and to prevent damage. Also, keep the user guide in an accessible place at all the times after reading it.

1. After sales service: For more information, please refer to the Warranty Card provided in the sales package box.
2. Charger and Adapter Safety: Charge and adapter use designed for indoor use only.
 - Please use the specific battery, otherwise it will cause explosion.
 - Please dispose of your battery properly.
 - Do not disassemble or puncture the battery.
 - Recharge the battery after long periods of non-use to maintain battery life.
 - Battery life will vary due to usage patterns and environmental conditions.
 - The indication function of the battery cuts the power of the phone when its operation is in an abnormal status. In this case, remove the battery from the phone, remove L, and turn the phone on.
3. General Notice: Using a damaged battery or storing a battery in your mouth may cause serious injury.
 - Do not use items containing magnetic components such as credit card, phone card, bank book, or subway ticket near your phone.

The magnetism of the phone may damage the data stored in the magnetic disk.

- Using your phone for long period of time may reduce call quality due to heat generated during use.
- When the phone is not used for a long period, store in a safe place with the power cord unplugged.
- Using the phone in proximity to receiving equipment (U.S. TV or Radio) may cause interference to the phone.
- Do not remove your phone wires. If this happens, remove the battery and take it to an Authorized Service Center.
- Do not wear your phone.
- The data saved in your phone might be deleted due to unstable use, repair of the phone, or upgrade of the software.
- Please backup your important phone numbers, (ring tones, text messages, voice messages, photos, and videos could also be deleted). The manufacturer is not liable for damage due to the loss of data.
- Do not turn your phone on or off when the phone is close to your eyes.

WARNING
FCC RF Exposure Information and Statement: This product has been tested and found to comply with the FCC RF exposure limits for a mobile phone. The higher SAR value measured under the specified testing conditions is for use of the head in 20 W and when worn next to the body in 1.6 W/kg. The user should follow the instructions on the back of the handset for use of full SAR values and other applicable SAR and specific absorption rate (SAR) information. The user should not use the handset for extended periods of time. The device complies with part 15 of the FCC Rules, Operation is subject to the following two conditions: (1) This device may cause harmful interference, and (2) the device must accept any interference received, including interference that may cause undesired operation. Any changes to this information are hereby declared to be the responsibility of the manufacturer. It is the user's responsibility to ensure the equipment is used in accordance with the user's authority to operate the equipment. Note: The equipment has been tested and found to comply with the FCC's Class B digital device, conducted part 15 of the FCC Rules. There are no required to provide reasonable protection against harmful interference in a residential installation. The equipment generates uses and can radiate radio frequency energy and it may cause interference with other nearby electronic equipment. It is the user's responsibility to take the necessary steps to prevent the interference from occurring. The equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following steps: 1) Reorient or relocate the receiving antenna. 2) Increase the separation between the equipment and receiver. 3) Connect the equipment to an outlet on a circuit different from that to which the receiver is connected. 4) Consult the dealer or an experienced radio/TV technician for help. See Download Full User Manual for more information and SUPPORT menu. See Section 1 for product serial and enter the model name SAC 20190101. See Download Full User Manual.

Comenzar

Quick Guide

Insertar tarjeta SIM

1. Apagar el teléfono, remover la tapa y la batería.
 2. Insertar la tarjeta SIM en el espacio destinado para ella.
 3. Finalmente insertar la batería y la tapa del teléfono.
- Note: Favor utilizar solo la batería específica, de otra forma, podría ocasionar una explosión.



3. Finalmente insertar la batería y colocar la tapa del teléfono.

Insertar tarjeta de memoria

1. Apagar el teléfono, remover la tapa y la batería.
 2. Insertar la tarjeta Micro SD en el espacio destinado para ella.
 3. Finalmente insertar la batería y la tapa del teléfono.
- Note: Favor utilizar solo la batería específica, de otra forma, podría ocasionar una explosión.



Cargar la Batería o Conectar a un computador

Se puede cargar la batería usando el cargador o conectado al cable USB (suministrado con este teléfono) al computador.

Note: Favor utilizar solo la batería específica, de otra forma, podría ocasionar una explosión.



Teclas y partes

Quick Guide

El teléfono inteligente soporta tarjeta SD y le brinda una mejor experiencia cuando usa sus diferentes funciones como la cámara, la grabadora de video, la radio FM, reproductor de música y grabadora de sonido. Le permite instalar diversas aplicaciones, juegos, y más (soporta formato APK) descargados desde Play Store.



Bloquear y Desbloquear la Pantalla

Presionar el botón de encendido para entrar en el modo de Suspensión. La pantalla será bloqueada, presionar el botón de encendido nuevamente para activar de nuevo el teléfono y arrastrar el cerrojo hacia el lado derecho para desbloquearlo.



Mantenimiento y Seguridad

Quick Guide

Por favor lea detenidamente la siguiente información para su seguridad y uso adecuado de su teléfono y prevenir daños. Por favor guarde esta guía en un lugar accesible luego de haberla leído.

1. Servicio Post Venta: Refiérase a la tarjeta de Garantía en la Caja.
2. Cargador y adaptador: El cargador y el adaptador, están diseñados solo para uso en interiores.
 - No use cargador solamente la batería suministrada, de lo contrario la unidad podría explotar.
 - Favor desmontar la batería apropiadamente.
 - No desarmar ni hacer cortocircuito de la batería.
 - Mantener limpia la conexión mediante la batería.
 - Recargar la batería luego de un largo periodo sin haberla usado para mantener la vida de la batería.
 - El tiempo de vida de la batería puede variar de acuerdo al entorno y al uso.
 - La función auto-protección de la batería apaga el teléfono cuando su operación está en un estado anormal. En este caso, quite la batería del teléfono, recárgala y encienda el teléfono.
3. Información y cuidado de la batería:
 - Favor desmontar la batería apropiadamente.
 - No desarmar ni hacer cortocircuito de la batería.
 - Mantener limpia la conexión mediante la batería.
 - Recargar la batería luego de un largo periodo sin haberla usado para mantener la vida de la batería.
 - El tiempo de vida de la batería puede variar de acuerdo al entorno y al uso.
 - La función auto-protección de la batería apaga el teléfono cuando su operación está en un estado anormal. En este caso, quite la batería del teléfono, recárgala y encienda el teléfono.

Atención General

- Use únicamente en mal estado o colocar la batería en su boca puede causar daños serenos.
- No coloque su teléfono cerca de otros aparatos u objetos con componentes magnéticos como la son tarjetas de crédito, tarjetas telefónicas, tarjetas de subestaciones, etc. El magnetismo podría dañar los datos almacenados en el teléfono.
- Hacer contacto prolongado por teléfono puede reducir la calidad de la llamada y producir ruido.
- User el teléfono cerca de aparatos receptores de onda puede causar interferencias como por ejemplo la TV y la Radio.
- No sumergir su teléfono en agua. En caso que esto ocurra, por favor retire la batería y llevar su teléfono a un centro de servicio autorizado.
- Los datos almacenados en su teléfono pueden ser formados si el equipo requiere de alguna reparación o actualización de Software. Por favor haga un respaldo de su teléfono antes de entregárselo a un centro de servicio autorizado o bien antes de hacer una actualización de software. El fabricante no será responsable por la pérdida de información en los teléfonos.
- No puede ir en agua su teléfono cuando está en contacto cerca de su ojo.
- Cuando el teléfono no puede ser usado por un largo periodo de tiempo, guardarlo/deshabilitado en un lugar seguro.
- No prestar el teléfono.
- Este dispositivo cumple con la sección 15 de las normas FCC. La operación está sujeta a las siguientes dos condiciones:
 - (1) Este dispositivo no puede causar interferencia dañina, y

(2) Si este dispositivo debe aceptar cualquier interferencia recibida, inclusive las interferencias que pueden provocar un funcionamiento no deseado o cambios o modificaciones no aprobadas expresamente por la parte responsable del cumplimiento, pueden evitar la Autoridad del Usuario para operar el equipo.

COMUNICATE

Twitter Facebook YouTube Instagram

CALL CENTER

VENEZUELA
0 800 100 9221
COLOMBIA
BOGOTÁ 432 02 02 al 95
Línea Gratuita - 01 8000 0200

servicio@sendtelmobile.com

sendtel

FLARE LITE
Guía Rápida

www.sendtelmobile.com

sendtel

FLARE LITE
Quick Guide

www.sendtelmobile.com