IMPORTANT

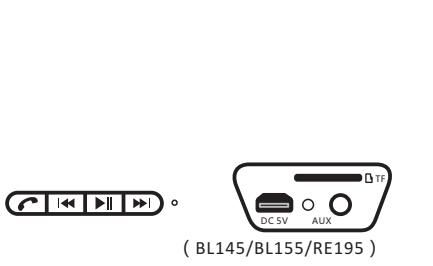### Safety

Important Safety Instructions

- Heed all warnings.
- Do not use this apparatus near water.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.
- Only use attachments/ accessories specified by the manufacturer.
- Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.
- Devices shall not be exposed to dripping or splashing.
- Do not place any sources of danger on the device (e.g. liquid filled objects, lighted candles).

Bluetooth 📞 💳 📻 HiFi

User Manual

Brand name:goldhorse

Model name:BL145

FCC ID:2ACATBL145

Bluetooth
Speaker

Warning

Never remove the casing of this apparatus.
Never place this apparatus on other electrical equipment.

Your Bluetooth Speaker

Power supply

1. The speaker can operate on built-in rechargeable battery.
2. To recharge the built-in battery
3. Connect micro USB socket with PC through supplied USB cable.
4. The power indicator (red) turns on.
5. The power indicator (red) tures off when it's fully charged.

Play

Play from a Bluetooth device
Note:
The effective operation range between the speaker and your Bluetooth device is approximately 10 meters (30 feet)

Bluetooth Mode:

1. Turn on speaker, the indicator light is flashing (when power on, the blue light is on, when waiting pairing, the blue light is flashing fast, after paired, the blue light is flashing slowly.
2. Turn on bluetooth function of device (i.e. Phone, Computer or Tablet PC...)
3. Search and select bluetooth speaker , i.e. "99E-XXXX" to pair. You will hear "paired" from bluetooth speaker. For some devices, you need to input password "0000" to pair.
4. Playing music and it is outputted from bluetooth speaker
5. Turn off the speaker if you don't use it.

FM radio mode

1. press"Ⓜ"(if no this key) long press"😊"and into the radio mode.
2. press"😊"enter the automatic search, the bluetooth loudspeaker will be automatically stored the FM radio which had already searched, after searching the radio, it Will play the first TV show which had already stored.
3. press"|◀◀/▶▶|", you can choose up and down of the storage station.
4. press"Ⓜ"(if no this key) long press"😊"return to the bluetooth mode.
（before searching and receiving, must insert the line of LINE IN to the AUX interface for antenna, if no the AUX connector, do the antenna with USB cable）

（BL145/BL155/RE195）

Specification:
Note: product specification can be changed without notify.

Rated Output Power	3W RMS
DC power input	USB 5V 500MAH
Built-in Li-ion battery	3.7V 600MAH
Battery working time	>4 Hours
Bluetooth specification	V2.1+EDR
Advanced features	Echo and noise elimination
Range	10 meters (No obstacle)

Tip
You can speak to the MIC to get the best speakerphone performance.

TF CARD:

1. Insert TF card, bluetooth speaker will switch to TF card mode by default.
2. Bluetooth speaker will play the musics of TF card automatically. Support formats include: WMA/MP3/WAV.
3. Push " +/− " button to control the sound volume.
4. Push "|◀◀/▶▶|" button to choose song to play.

Q&A:
Please don't try to repair the product by yourself.
No Power:
Please recharge the bluetooth speaker.
No Sound:
Please adjust the sound volume of your bluetooth device.
Please make sure you bluetooth device is in the effective range.
Please check the selected audio source is correct.
Speaker No sound:
Please reboot the bluetooth speaker.