

Bolt 5G

User Guide
Manual de Usuario

UNNECTO.COM

unnecto

I. Cautions on mobile phone use

1.1 Interference

All phones may be interfered, which affect phone calls.

1.2 Reasonable use

Use only in the normal position. Do not touch the antenna area unnecessarily.

1.3 Qualified maintenance service

Only qualified personnel may install or repair this product.

1.4 Water-resistance

Your device is non water-resistant. Keep it dry.


1.5 Emergency calls

Ensure the phone is switched on and in service. Enter the emergency number and press the Dialer icon.

2 Precautions for use of battery

2.1 Do not dispose of batteries near or in a fire to avoid dangers.

2.2 Do not dispose of batteries in the garbage. Dispose of batteries to assigned battery recycling center.

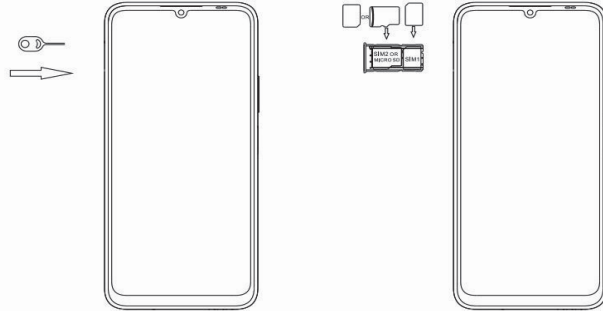


2.2 Long press Home screen, and then you can Modify Wallpaper; or enter Launcher and long press and hold an application till the screen vibrates, and then loosen your hold finger.




2.4 Android™ and computer connection

If you connect your phone to PC via USB, you can find the USB options, choose This Device file Transfer option, you can see your phone memory in PC, this is same function like USB storage.

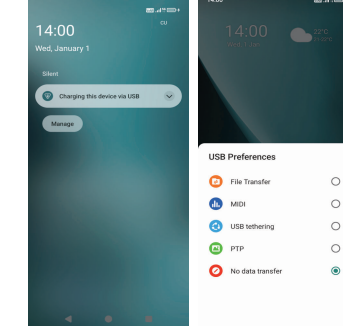

6. Answering phone calls and rejection

When there is an incoming call, you can drag the icon up or down to answer or hang up it directly.

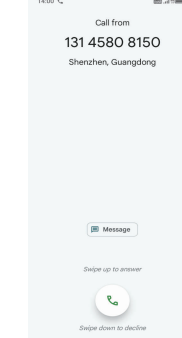

9. Browser the Web

9.1 Set up Internet/Data connection

Enter Settings > More..., scroll down to find out Mobile network, and then enter "Access Points Names, choose the desired Wi-Fi account."

9.2 Switch on Data connection or Wi-Fi

To browse the web, you need to switch on Data connection. If there is Wi-Fi around, you can switch on Wi-Fi to use it browse the web.

10. Enjoy music

When you copy music to your SD card, the Music player searches the card for music files and builds a catalog of your music, based on information about each file that is stored in the file itself.

14.3 Bluetooth

Settings> Connected devices> Pair new device
Open Bluetooth, connect to other phone, you can share something like music, photos, movies etc to other people.

15. Federal Communication Commission Interference Statement

FCC ID: 2ADR3UB501

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

3 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

3.2 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overcharged when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen display "Battery is full", thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display "Battery is full". During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging.


Caution: Charge the phone in a well ventilated place in which the temperature is between -10℃ to +55℃. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

Long press the widget or icon, after the phone vibrates, select delete or uninstall (select delete for widget, select uninstall for APP).



3. Switch to Recently Used Application


Press menu key.

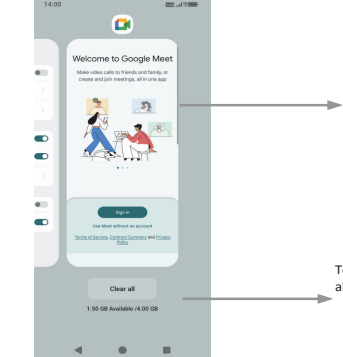

7. Add a contact

Touch to enter contact

Touch to add a new contact

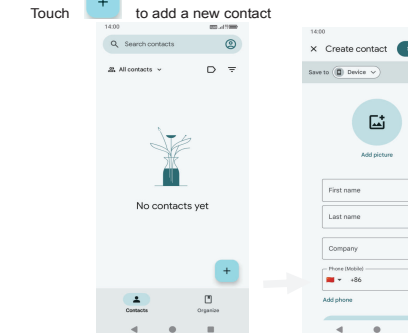


Click here to add new contact and in this page press menu key to enter menu view, setting, etc.

11. Download applications on Google Play


11.1 Add Google Account

11.2 Enter Google Play and download apps

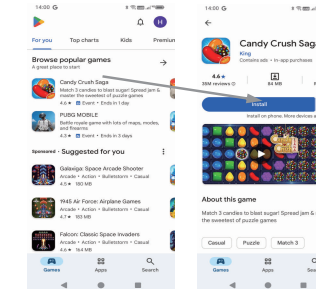

14.3 Security

Click Settings > Security & privacy > Device unlock > Screen lock. There are four screen lock ways for you to choose: Swipe, Pattern, PIN, Password.

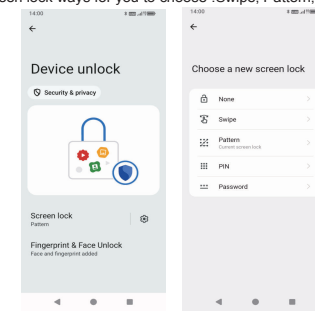

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (50mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.

To maintain compliance with radio frequency exposure guidelines and limits, keep the smartphone at least 5mm away from your body. When you carry the smartphone on your body, use only accessories equipped with an integrated belt clip that are supplied or approved by the manufacturer. If you use a body-worn accessory not supplied by the manufacturer, verify that the accessory does not contain metal and keep the smartphone at least 5mm from your body.

Google,Android,Google Play,YouTube and other marks are trademarks of Google LLC.

BOLT 5G

User Guide

1

3 Cautions for children

Keep your device out the reach of children in case of accidental injury caused by incorrect use of the device as toys.

3.2 Charge the battery

During charging, the battery indicator on the phone is a thunder icon. If the device is switched off during charging, there will still be a charging indication on the screen that shows the phone is being charged. If the device is overcharged when the battery is low, the charging icon might take some time to appear.

When the battery indicator on the screen display "Battery is full", thunder icon will disappear, which means the completion of charging. If the phone is switched off during charging, the screen will display "Battery is full". During charging, the battery, the device and the charger will get hot. This is normal.

Unplug the charger from the AC electrical outlet and disconnect the wiring between the phone and the charger after charging.


Caution: Charge the phone in a well ventilated place in which the temperature is between -10℃ to +55℃. Use the charger provided by the manufacturer only. The use of unconfirmed charger may lead to dangers and violate the manufacturer's warranty clause. If the temperature is too high or too low during charging, the device will automatically send a warning and stop charging to avoid damage to the battery or any danger.

Long press the widget or icon, after the phone vibrates, select delete or uninstall (select delete for widget, select uninstall for APP).



3. Switch to Recently Used Application


Press menu key.

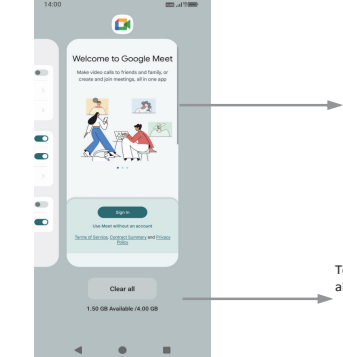

7. Add a contact

Touch to enter contact

Touch to add a new contact

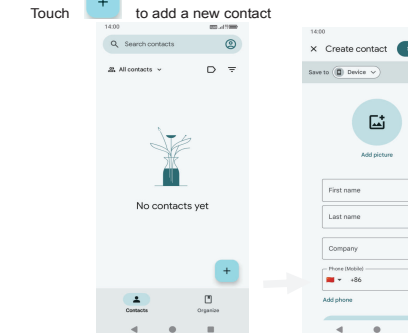


Click here to add new contact and in this page press menu key to enter menu view, setting, etc.

11. Download applications on Google Play


11.1 Add Google Account

11.2 Enter Google Play and download apps

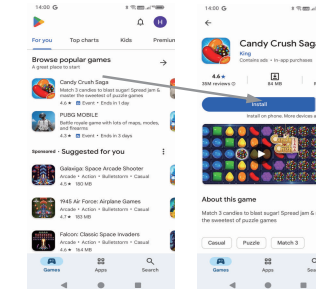

14.3 Security

Click Settings > Security & privacy > Device unlock > Screen lock. There are four screen lock ways for you to choose: Swipe, Pattern, PIN, Password.

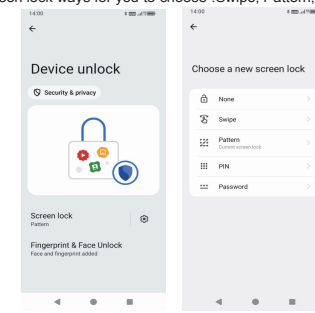

Radiation Exposure Statement:

This device meets the government's requirements for exposure to radio waves. This device is designed and manufactured not to exceed the emission limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission of the U.S. Government.

The exposure standard for wireless device employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC is 1.6W/kg. Tests for SAR are conducted using standard operating positions (50mm) accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands.


To maintain compliance with radio frequency exposure guidelines and limits, keep the smartphone at least 5mm away from your body. When you carry the smartphone on your body, use only accessories equipped with an integrated belt clip that are supplied or approved by the manufacturer. If you use a body-worn accessory not supplied by the manufacturer, verify that the accessory does not contain metal and keep the smartphone at least 5mm from your body.

Google,Android,Google Play,YouTube and other marks are trademarks of Google LLC.

Contents

1. CAUTIONS ON MOBILE PHONE USE.....	4
1.1 INTERFERENCE.....	4
1.2 REASONABLE USE.....	4
1.3 QUALIFIED MAINTENANCE SERVICE.....	4
1.4 WATER-RESISTANCE.....	4
1.5 EMERGENCY CALLS.....	4
2 PRECAUTIONS FOR USE OF BATTERY.....	4
3 CAUTIONS FOR CHILDREN.....	5
II. KEYS AND PARTS.....	6
III. START TO USE.....	7
3.1 TO INSERT SIM CARD(S).....	7
3.2 CHARGE THE BATTERY.....	9
IV. BASIC FUNCTIONS.....	10
1. LOCK AND UNLOCK THE SCREEN.....	10
2. MAKE IT YOURS.....	11
3. SWITCH TO RECENTLY USED APPLICATION.....	17
4. MAKE A CALL.....	18
5. CALL LOG.....	19

II. Keys and parts

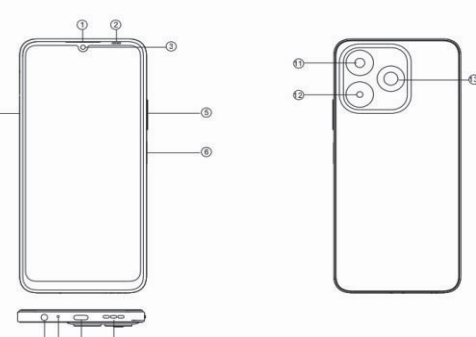


IV. Basic functions

1. Lock and unlock the screen

Press power button to enter Sleep mode and meanwhile the screen will be locked; press power button again to wake up and then swipe up for unlock.




Swipe up and enter to application list.

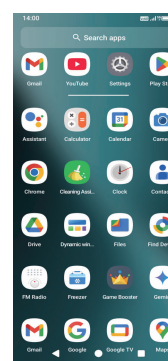

4. Make a call


Click and enter a complete phone number to make a call. Your phone supports smart search.

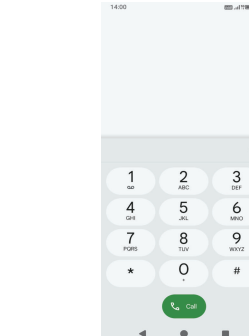

Swipe to right to view Call history and Contacts.

8. Send and Receive message(s)

Touch enter to messaging, touch "Start chat".

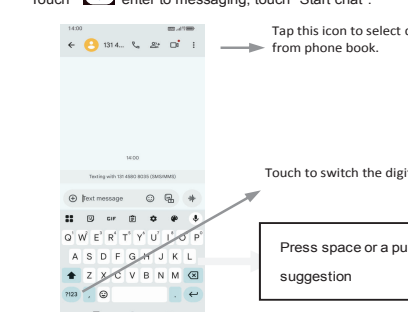

Touch this icon to select desired contact from phone book.


Touch to switch the digital input and symbols

Press space or a punctuation mark to enter the highlighted suggestion

When you are composing a new text message, you can select text for cutting or copying. The selected text is highlighted in blue


12. Manage Applications

Enter Settings > Apps. You can see app info.

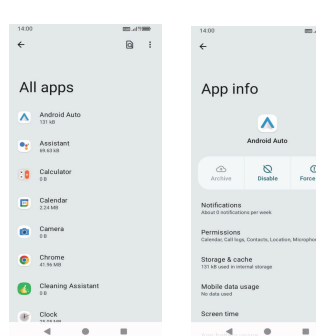

14.4 Face ID

Click Settings > Security & privacy > Device unlock > Fingerprint & Face Unlock > Face Unlock. Follow the prompts after completing the face recording, you can use the face unlock function.

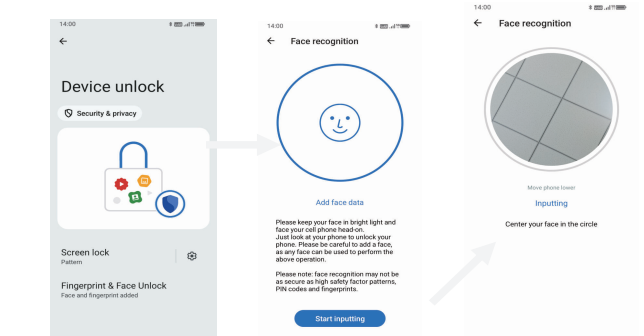

6. ANSWERING PHONE CALLS AND REJECTION.....

7. ADD A CONTACT.....	21
8. SEND AND RECEIVE MESSAGE(S).....	22
9. BROWSER THE WEB.....	24
10. ENJOY MUSIC.....	24
11. DOWNLOAD APPLICATIONS ON GOOGLE PLAY.....	25
12. MANAGE APPLICATIONS.....	26
13. APPLICATIONS & UTILITIES.....	27
14. SETTINGS.....	27
15. FEDERAL COMMUNICATION COMMISSION INTERFERENCE STATEMENT.....	32

III. Start to use

3.1 To Insert SIM card(S):


Insert the SIM card correctly in the card slot(s) (See figure below), suggest switch off the phone when you insert SIM card.

Insert the Micro SD card into the slot with the correct direction (See figure below), suggest switch off the phone when you insert Micro SD.


Note: Use only compatible memory cards with this device. Incompatible memory cards may damage the card or the device and corrupt the data stored in the card.

2. Make it yours


2.1 Home screen: It is your starting point to access all the features on your phone. It displays application icons, widgets, shortcuts, and other features. Long press home screen and Modify Wallpaper.

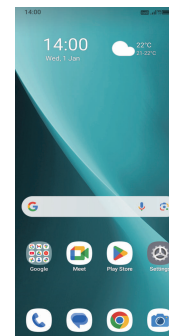

2.3 Notification Bar: At the top of the screen, the Status Bar displays the time, status, and notifications. If there is a new message, missed call or something in the notification bar, you can drag it down to open notification panel and click the desired one to have a view. When you finished, you can close it by dragging the panel up or pressing "Back".

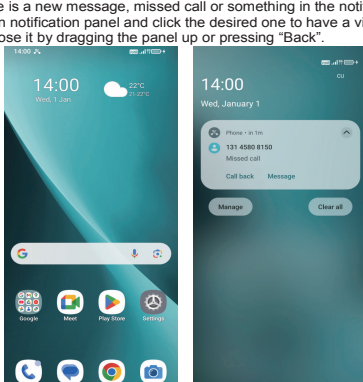


5. Call log

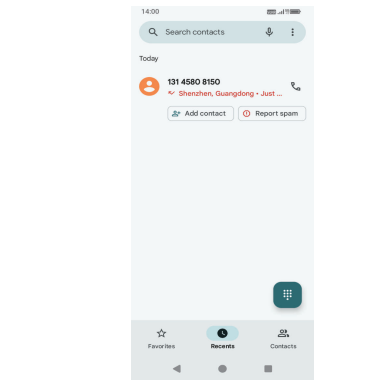

Press the number, you can view the contact details, send a message or call back.

Tap to add "Attach" including Pictures, Videos, Audios, etc to send MMS/SMS

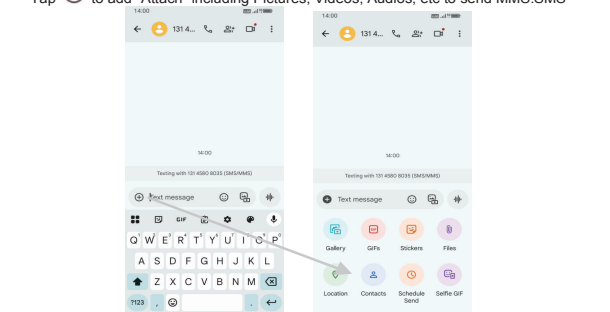

When a new message comes, you can read by dragging notification panel and click the message, or entering Message to read it directly.

Long press one of the all message threads, you can delete it".


13. APPLICATIONS & UTILITIES

For your entertainment purpose, your device is provided with several interesting games, applications and utilities, such as Gmail, Email, Google Play. Before accessing the applications, please turn on the data connection or connect to wifi.

14. Settings


14.1 Wi-Fi

Open Wi-Fi, search nearby Wi-Fi and connect it, then you can use Internet or download apps for free.

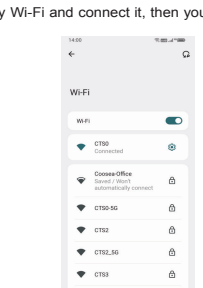


14.5 Fingerprint

Click Settings > Security & privacy > Device unlock > Fingerprint & Face Unlock > Fingerprint. Follow the prompts after completing the fingerprint recording, you can use the fingerprint unlock function.

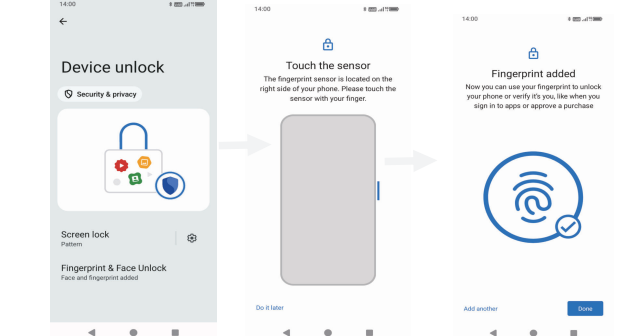

COPY YOUR OLD PHONE TO YOUR NEW BOLT 5G

To start the copying process of your old phone to your Unnecto Bolt 5G device, we recommend to select the Wireless transfer method. If you want to copy by USB cable, you will need to get an additional adapter (USB A to USB C).



(1) Images for illustration purposes only. Accessory not included.

Bolt 5G

User Guide
Manual de Usuario

UNNECTO.COM

unnecto

1. Precaución en el uso del teléfono móvil

1.1 Interferencia
Todos los teléfonos pueden ser interferidos, lo que afecta las llamadas telefónicas.

1.2 Uso Razonable

Usar únicamente el teléfono móvil en una posición normal. No tocar el área de la antena necesariamente.

1.3 Servicio de mantenimiento cualificado

Solamente el personal autorizado/calificado puede instalar o reparar este producto.

1.4 Resistencia al agua

Su dispositivo móvil no es resistente al agua. Manténgalo seco.


1.5 Llamadas de Emergencia

Asegúrese de que el teléfono esté encendido y en Servicio. Ingrese el número de emergencia y presione el icono de Marcar.

2 Precauciones para el uso de la batería

2.1 No deseches las baterías cerca del fuego para evitar peligros.


2.2 No deseches las baterías en la basura. Deseche las baterías en el centro de reciclado asignado.

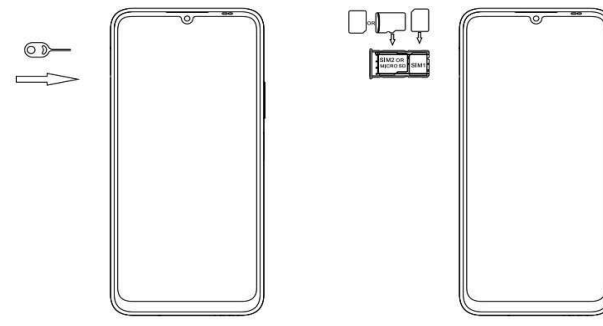

2.2 Pulse por algún tiempo la pantalla de inicio y después tú puedes modificar el Papel Tapiz o entrar a los ajustes y mantenga presionada una aplicación hasta que el teléfono vibre y después deje de presionar, podrá ver una serie de opciones.




2.4 Conexión Android™ y ordenador
Si conecta su teléfono a la PC a través de USB, puede encontrar las opciones de USB, elija la opción Este dispositivo - Transferencia de archivos, puede ver la memoria de su teléfono en la PC, esta es la misma función que el almacenamiento USB.

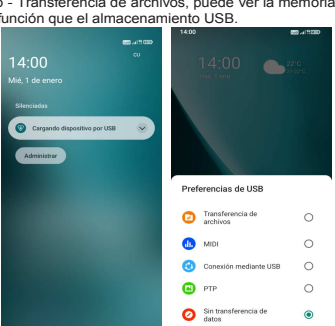

6. Contestar y rechazar llamadas del Teléfono

Cuando hay una llamada entrante, puede arrastrar el icono hacia arriba o hacia abajo para responder o colgarlo directamente.

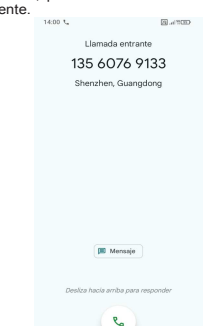

9. Configurar la conexión a internet/datos

Ingrese a Ajustes > Mas, desplácese hacia abajo para averiguar Red móvil y luego ingrese "Nombres de puntos de acceso", elija la cuenta WAP deseada.

9.2 Activar la conexión de datos o Wi-Fi

Para navegar por la web, debe activar la conexión de datos. Si hay Wi-Fi alrededor, puede activar el Wi-Fi para usarlo navegando por la web.


10. Disfruta de la música

Al copiar música en la tarjeta SD, el reproductor de música busca archivos de música en la tarjeta y crea un catálogo de tu música, basado en la información sobre cada archivo que está almacenado en el propio archivo.



14.2 Bluetooth

Ajustes> Dispositivos conectados> Emparejar un nuevo dispositivo
Abra Bluetooth, conéctese a otro teléfono, puede compartir algo como música, fotos, películas, etc. con otras personas.

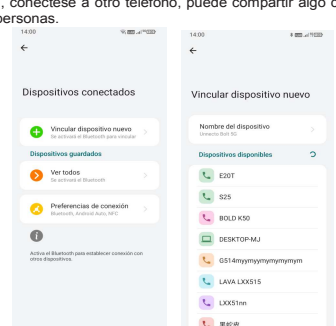

15. Declaración de Interferencia de la Comisión Federal de Comunicaciones

FCC ID: 2AD3UB501

Este dispositivo cumple con la Parte 15 de las Reglas de la FCC. El funcionamiento está sujeto a las dos condiciones siguientes: (1) Este dispositivo no puede causar interferencias dañinas y (2) este dispositivo debe aceptar cualquier interferencia recibida, incluidas las interferencias que puedan causar un funcionamiento no deseado.

Este equipo ha sido probado y cumple con los límites para un dispositivo digital de Clase B, de conformidad con la Parte 15 de las Reglas de la FCC. Estos límites están diseñados para proporcionar una protección razonable contra interferencias dañinas en una instalación residencial. Este equipo genera, utiliza y puede irradiar energía de radiofrecuencia y, si no se instala y utiliza de acuerdo con las instrucciones, puede causar interferencias dañinas en las comunicaciones por radio. Sin embargo, no hay garantía de que no se produzcan interferencias en una instalación en particular. Si este equipo causa interferencias dañinas en la recepción de radio o televisión, lo cual se puede determinar apagando y encendiendo el equipo, se recomienda al usuario que intente corregir la interferencia mediante una de las siguientes medidas:

- Reorientar o reubicar la antena receptora.
- Aumentar la separación entre el equipo y el receptor.
- Conecte el equipo a una toma de corriente en un circuito diferente al que está conectado el receptor.
- Consulte al distribuidor o a un técnico experimentado en radio/TV para obtener ayuda.

FCC Precaución: Cualquier cambio o modificación que no esté expresamente aprobado por la parte responsable del cumplimiento podría anular la autoridad del usuario para operar este equipo.

3 Precauciones para los niños


Guarda tu teléfono lejos del alcance de los niños, en caso de lesiones accidentales por el uso incorrecto del dispositivo como juguetes.

3.2 Cargar la batería

Durante la carga, el indicador de batería del teléfono es un icono de trueno. Si el dispositivo está apagado durante la carga, todavía habrá una indicación de carga en la pantalla que muestra que el teléfono se está cargando. Si el dispositivo se utiliza en exceso cuando la batería está baja, es posible que el icono de carga tarde algún tiempo en aparecer. Cuando el indicador de batería en la pantalla muestre "La batería está llena", el icono del trueno desaparecerá, lo que significa que se completó la carga. Si el teléfono se apaga durante la carga, la pantalla mostrará "La batería está llena". Durante la carga, la batería, el dispositivo y el cargador se calentarán. Esto es normal.


Desconecte el cargador de la toma de corriente de CA y desconecte el cableado entre el teléfono y el cargador después de cargarlo.
Precauciones: Cargue el teléfono en un lugar bien ventilado en el que la temperatura esté entre 10 °C y +35 °C. Utilice únicamente el cargador proporcionado por el fabricante. El uso de un cargador no confirmado puede provocar peligros y violar la cláusula de garantía del fabricante. Si la temperatura es demasiado alta o bajo durante la carga, el dispositivo enviará automáticamente una advertencia y detendrá la carga para evitar daños a la batería o cualquier peligro.

Mantenga presionado el widget o el icono, después de que el teléfono vibre, seleccione eliminar o desinstalar (seleccione eliminar para el widget, seleccione desinstalar para la aplicación)

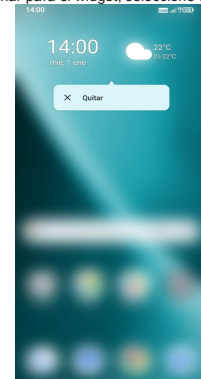


3. Cambiar a la aplicación usada recientemente

Presiona la Tecla de Menú.

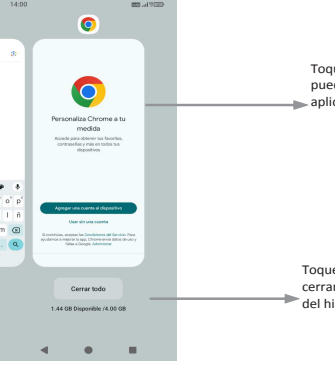

7. Añadir un contacto

Presiona para ingresar a los contactos.

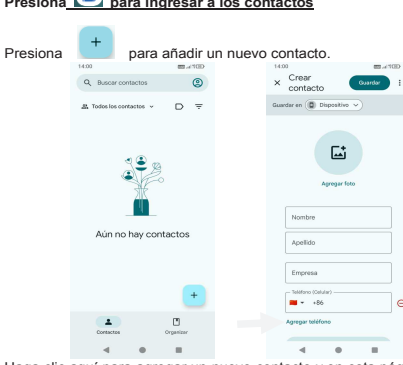


Haga clic aquí para agregar un nuevo contacto y en esta página presione la tecla de menú para ingresar a la vista del menú, configuración, etc.

11. Descargar aplicaciones en Google Play

11.1 Agregar cuenta Google


11.2 Entra Google Play y descarga aplicaciones

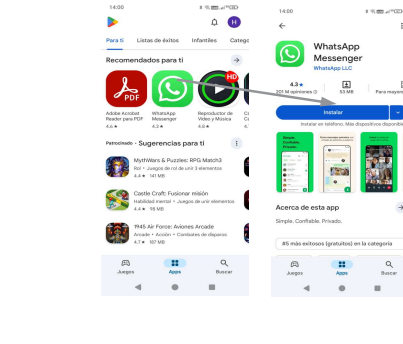

14.3 Seguridad

Haga clic en Configuración -Seguridad y privacidad -Desbloqueo del dispositivo -Bloqueo de pantalla.

Hay cuatro formas de bloqueo de pantalla para que elijas: Deslizar, Patrón, PIN, Contraseña.

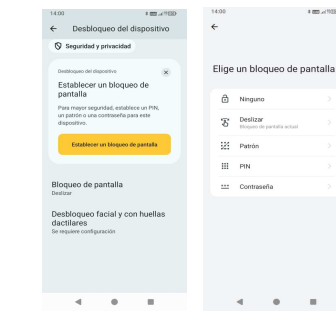

Declaración de exposición a la radiación:

Este dispositivo cumple con los requisitos del gobierno para la exposición a las ondas de radio. Este dispositivo está diseñado y fabricado para no exceder los límites de emisión para la exposición a la energía de radiofrecuencia (RF) establecidos por la Comisión Federal de Comunicaciones del Gobierno de los EE. UU.


El estándar de exposición para dispositivos inalámbricos emplea una unidad de medida conocida como Tasa de Absorción Específica, o SAR. El límite de SAR establecido por la FCC es de 1.6 W/kg. Las pruebas de SAR se llevan a cabo utilizando posiciones de funcionamiento estándar (5 mm) aceptadas por la FCC con el dispositivo transmitiendo a su nivel de potencia certificado más alto en todas las bandas de frecuencia probadas. Para cumplir con las pautas y límites de exposición a radiofrecuencia, mantenga el teléfono inteligente al menos a 5 mm de distancia de su cuerpo. Cuando lleve el teléfono inteligente en su cuerpo, use solo accesorios equipados con un clip de cinturón integrado que estén suministrados o aprobados por el fabricante. Si utiliza un accesorio corporal no suministrado por el fabricante, verifique que el accesorio no contenga metal y mantenga el teléfono inteligente al menos a 5 mm de su cuerpo.

Google,Android,Google Play,YouTube y otras marcas son marcas comerciales de Google LLC.

Contenido

1. PRECAUCIÓN EN EL USO DEL TELÉFONO MÓVIL	4
1.1 INTERFERENCIA	4
1.2 USO RAZONABLE	4
1.3 SERVICIO DE MANTENIMIENTO CUALIFICADO	4
1.4 RESISTENCIA AL AGUA	4
1.5 LLAMADAS DE EMERGENCIA	4
2 PRECAUCIONES PARA EL USO DE BATERÍA	4
3 PRECAUCIONES PARA LOS NIÑOS	5
II. CLAVES Y PARTES	6
III. EMPEZAR A USAR	7
3.1 PARA INSERTAR LA(S) SIM CARD(S)	7
3.2 CARGAR LA BATERÍA	9
IV. FUNCIONES BÁSICAS	10
1. BLOQUEAR Y DESBLOQUEAR LA PANTALLA	10
2. HAZLO TUYO	11
3. CAMBIAR A LA APLICACIÓN USADA RECIENTEMENTE	17
4. HAZ UNA LLAMADA	18
5. REGISTRO DE LLAMADAS	19

II. Claves y Partes

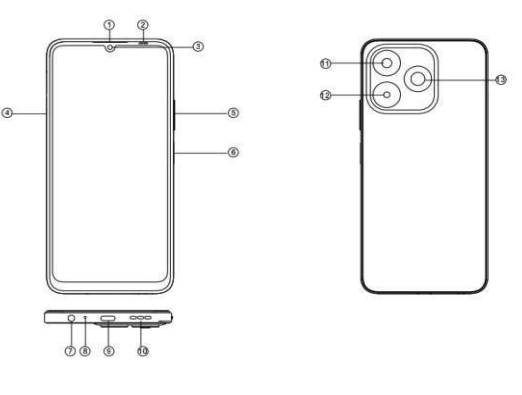


IV. Funciones Básicas

1. Bloquear y desbloquear la pantalla

Presione el botón de encendido para ingresar al modo de suspensión y, mientras tanto, la pantalla se bloqueará. Presione el botón de encendido nuevamente para encender la pantalla y luego deslice el dedo hacia arriba para desbloquear.




Desliza el dedo hacia arriba e ingresa a la lista de aplicaciones.

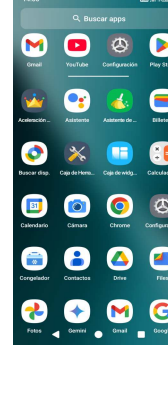

4. Haz una llamada


Presiona e ingrese un número de teléfono completo para realizar una llamada. Tu teléfono es compatible con la búsqueda inteligente

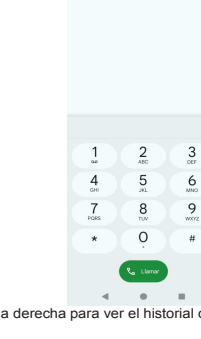

Desliza el dedo hacia la derecha para ver el historial de llamadas y los contactos.

8. Enviar y Recibir mensajes(s)


Presiona ingrese a mensajería, toque "Iniciar chat".

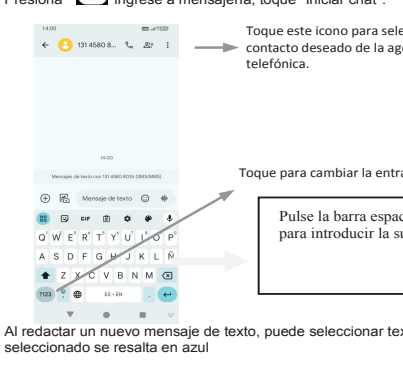

Al redactar un nuevo mensaje de texto, puede seleccionar texto para cortarlo o copiarlo. El texto seleccionado se resalta en azul.


12. Manejo de Aplicaciones

Ingrese a Ajustes > Aplicaciones. Tu puedes ver la información de aplicaciones.

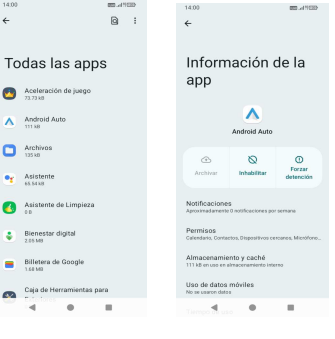

14.4 Identificación facial

Haga clic en Configuración -Seguridad y privacidad -Desbloqueo del dispositivo -Desbloqueo facial y de huellas dactilares-Desbloqueo facial, siga las instrucciones, después de completar la grabación facial, puede usar la función de desbloqueo facial.

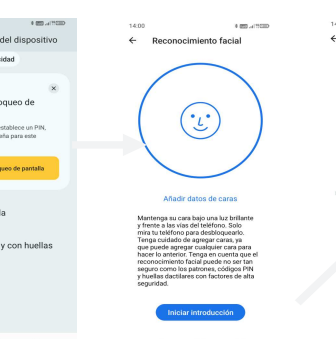

6. CONTESTAR Y RECHAZAR LLAMADAS DEL TELÉFONO

7. AÑADIR UN CONTACTO	21
8. ENVIAR Y RECIBIR MENSAJES(S)	21
9. CONFIGURAR LA CONEXIÓN A INTERNET/DATOS	23
10. DISFRUTA DE LA MÚSICA	24
11. DESCARGAR APLICACIONES EN GOOGLE PLAY	25
12. MANEJO DE APLICACIONES	26
13. APLICACIONES Y UTILIDADES	27
14. AJUSTES	27
15. DECLARACIÓN DE INTERFERENCIA DE LA COMISIÓN FEDERAL DE COMUNICACIONES	32


III. Empezar a usar

3.1 Para insertar la(s) SIM card(s)


Inserte la tarjeta SIM correctamente en la ranura(s) (Vea la siguiente figura continuación). Sugierimos apagar el teléfono cuando tu insertes la tarjeta SIM. Insertar la tarjeta Micro SD dentro de la ranura en dirección correcta Vea la siguiente figura a continuación), sugierimos apagar el teléfono cuando tu insertes la tarjeta Micro SD.
Nota: Usar únicamente tarjetas de memoria que sean compatibles con este dispositivo. Las tarjetas de memoria incompatibles pueden dañar la tarjeta o el dispositivo y corromper los datos almacenados en la tarjeta.

2. Hazlo tuyo


2.1 Pantalla de inicio: Es tu punto de partida para acceder a todas las funciones de tu teléfono. Muestra iconos de aplicaciones, widgets, accesos directos y otras funciones. Mantenga presionada la pantalla de inicio y Modificar fondo de pantalla.

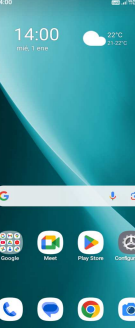

2.3 Barra de notificaciones: En la parte superior de la pantalla, la barra de estado muestra la hora, el estado y las notificaciones. Si hay un nuevo mensaje, una llamada perdida o algo en la barra de notificaciones, puede arrastrarlo hacia abajo para abrir el panel de notificaciones y hacer clic en el deseado para tener una vista. Cuando hayas terminado, puedes cerrarlo arrastrando el panel hacia arriba o pulsando "Zurück".

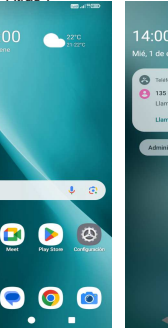

5. Registro de llamadas

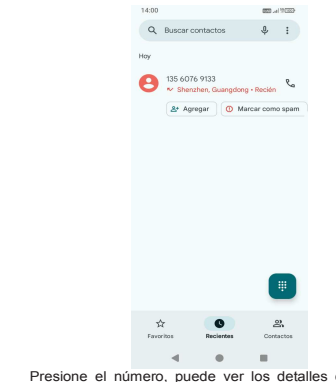

Presione el número si desea ver los detalles, enviar un mensaje o devolver la llamada, hay tres opciones para usted.

13. APLICACIONES Y UTILIDADES


Para su propósito de entretenimiento, su dispositivo está provisto de varios juegos, aplicaciones y utilidades interesantes, como Gmail, correo electrónico, Google Play. Antes de acceder a las aplicaciones, encienda la conexión de datos o conéctese a wifi.



Cuando llega un nuevo mensaje, puede leerlo arrastrando el panel de notificaciones y haciendo clic en el mensaje, o ingresando Mensaje para leerlo directamente. Mantenga presionado uno de todos los tipos de mensajes, puede eliminarlo". 9. Browser the Web


14.1 Wi-Fi

Abra Wi-Fi, busque casi Wi-Fi y conéctelo, luego puede usar Internet o descargar aplicaciones de forma gratuita.

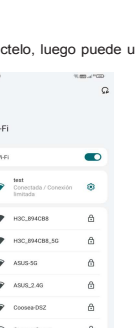


14.5 Huellas

Haga clic en Configuración -Seguridad y privacidad -Desbloqueo del dispositivo -Desbloqueo de huellas dactilares y rostros-Huella dactilar, siga las indicaciones, después de completar el registro de huellas dactilares, puede usar la función de desbloqueo de huellas dactilares.

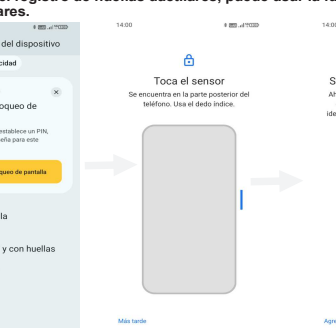

COPIA TU ANTIGUO TELÉFONO A TU NUEVO BOLT 5G

Para iniciar el proceso de copia de tu antiguo teléfono a tu nuevo Unnecto Bolt 5G recomendamos que puedas emplear el método de copia de forma inalámbrica. En caso que requieras utilizar la copia con el cable USB, necesitarás utilizar un adaptador adicional (USB -A a USB-C).



(1) Imágenes con fines ilustrativos. Este accesorio no está incluido.