

项目名称：

S26A

包装物料名称：

说明书

设计师：

张姗

文件版本：

V1.0

材质及工艺要求：

105g 哑光双面铜版纸

骑马钉

颜色要求：

Pantone Cool Gary 10 C

Pantone 1505 C

尺寸要求：

展开：1144×210mm

成型：143×210mm

其他备注信息：



外观工艺要求图案、字体完整、清晰；打印区域排版仅做参考，各工厂根据实际区域大小可以调整，调整后请发给小米审核确认，并签样。

所有量产文件以签样为准。


注意：因说明书语言种类较多，分成多个文件保存，此 PDF 只有英文，后面要接多语部分。

此页内容无多语翻译

Packing List

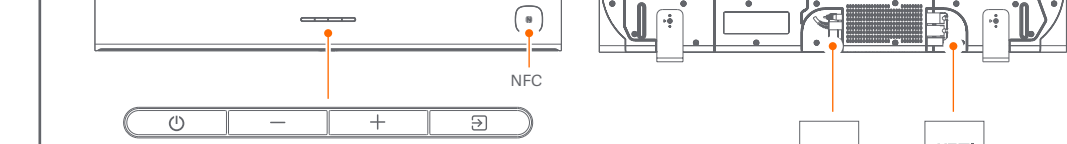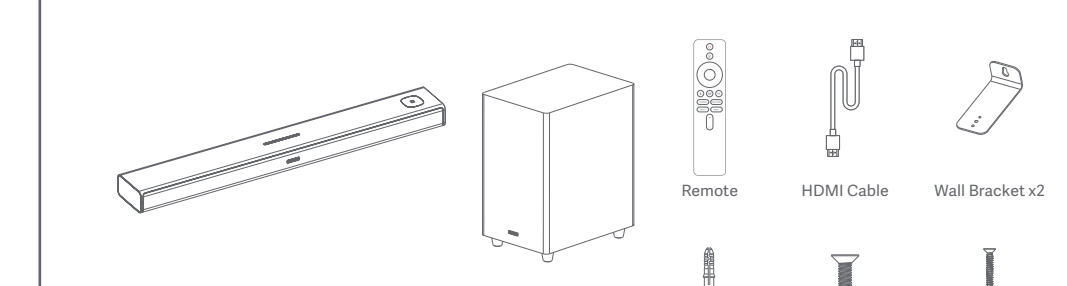

Hanger Mount Installation

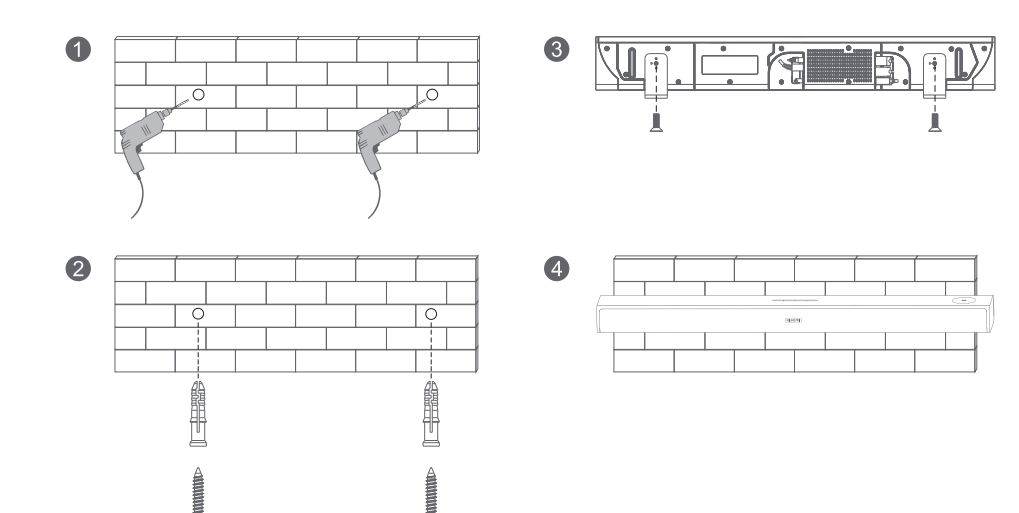


- 1. Drill holes at the width of 6mm.
- 2. Push the pins approximately 10mm into the holes, and then secure the wall-hanging screws (1), (2), (3) and (4).
- 3. Hang the phone on the wall-hanging screws (1), (2), (3) and (4).
- 4. Hang the phone on the wall-hanging screws (1), (2), (3) and (4).

CAUTION

1. Do not use the device in areas for outdoor use.
2. Do not use the device in areas for outdoor use.
3. Do not use the device in areas for outdoor use.
4. Do not use the device in areas for outdoor use.
5. Do not use the device in areas for outdoor use.
6. Do not use the device in areas for outdoor use.
7. Do not use the device in areas for outdoor use.
8. Do not use the device in areas for outdoor use.
9. Do not use the device in areas for outdoor use.
10. Do not use the device in areas for outdoor use.

Remote function

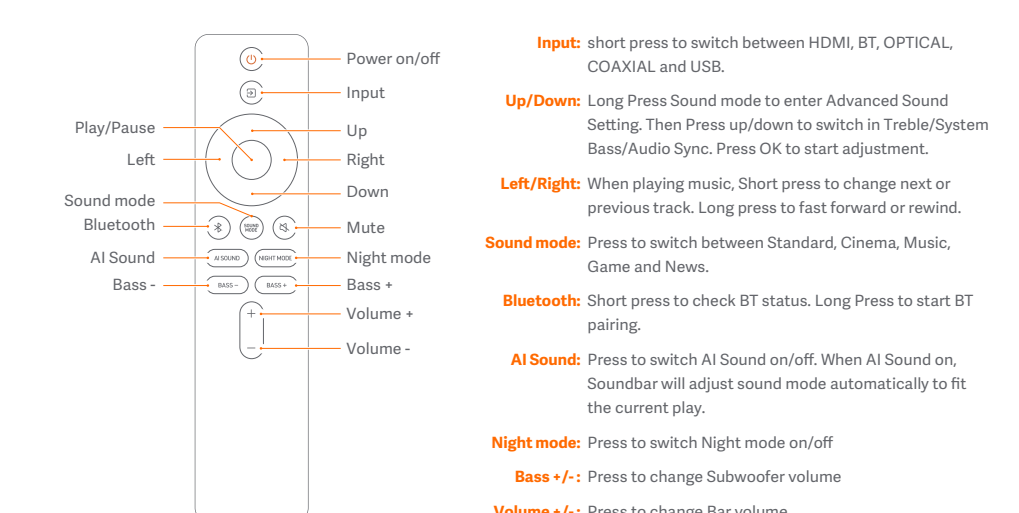

Other Function

NFC

Bar and Subwoofer Connection

Specification

SAFETY INFORMATION

SAFETY WARNINGS

- 1. Read the instructions carefully before using the device.
- 2. Do not use the device in areas for outdoor use.
- 3. Do not use the device in areas for outdoor use.
- 4. Do not use the device in areas for outdoor use.
- 5. Do not use the device in areas for outdoor use.
- 6. Do not use the device in areas for outdoor use.
- 7. Do not use the device in areas for outdoor use.
- 8. Do not use the device in areas for outdoor use.
- 9. Do not use the device in areas for outdoor use.
- 10. Do not use the device in areas for outdoor use.

Important Safety Instructions

WARNING

CAUTION

NOTE

REMARKS

ATTENTION

CAUTION

MODEL: S26A

SAFETY INFORMATION

- 1. Read the instructions carefully before using the device.
- 2. Do not use the device in areas for outdoor use.
- 3. Do not use the device in areas for outdoor use.
- 4. Do not use the device in areas for outdoor use.
- 5. Do not use the device in areas for outdoor use.
- 6. Do not use the device in areas for outdoor use.
- 7. Do not use the device in areas for outdoor use.
- 8. Do not use the device in areas for outdoor use.
- 9. Do not use the device in areas for outdoor use.
- 10. Do not use the device in areas for outdoor use.

Important Safety Instructions

WARNING

CAUTION


NOTE

REMARKS

ATTENTION

CAUTION

Fonctionnement à distance

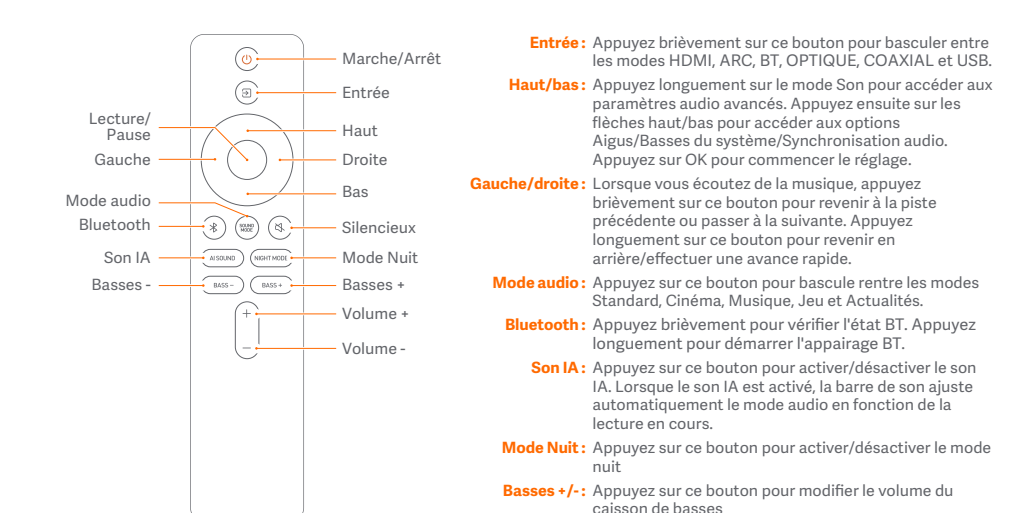

Autres fonctionnalités

NFC

Connexion de la barre et du caisson de basses

Spécifications

INFORMATIONS DE SÉCURITÉ

Consignes de sécurité importantes

- 1. Lire attentivement les instructions avant d'utiliser l'appareil.
- 2. Ne pas utiliser l'appareil dans des zones extérieures.
- 3. Ne pas utiliser l'appareil dans des zones extérieures.
- 4. Ne pas utiliser l'appareil dans des zones extérieures.
- 5. Ne pas utiliser l'appareil dans des zones extérieures.
- 6. Ne pas utiliser l'appareil dans des zones extérieures.
- 7. Ne pas utiliser l'appareil dans des zones extérieures.
- 8. Ne pas utiliser l'appareil dans des zones extérieures.
- 9. Ne pas utiliser l'appareil dans des zones extérieures.
- 10. Ne pas utiliser l'appareil dans des zones extérieures.

Consignes de sécurité importantes

ATTENTION

CAUTION

NOTE

REMARKS

ATTENTION

CAUTION

MODEL: S26A

INFORMATIONS DE SÉCURITÉ

- 1. Lire attentivement les instructions avant d'utiliser l'appareil.
- 2. Ne pas utiliser l'appareil dans des zones extérieures.
- 3. Ne pas utiliser l'appareil dans des zones extérieures.
- 4. Ne pas utiliser l'appareil dans des zones extérieures.
- 5. Ne pas utiliser l'appareil dans des zones extérieures.
- 6. Ne pas utiliser l'appareil dans des zones extérieures.
- 7. Ne pas utiliser l'appareil dans des zones extérieures.
- 8. Ne pas utiliser l'appareil dans des zones extérieures.
- 9. Ne pas utiliser l'appareil dans des zones extérieures.
- 10. Ne pas utiliser l'appareil dans des zones extérieures.

Consignes de sécurité importantes

ATTENTION

CAUTION

NOTE

REMARKS

ATTENTION

CAUTION

物料号

可使用二维码

也可使用条码

由供应商自行更新

封底

拉美西语

中文繁体

保修卡信息

封面

1144.00 毫米

143.00 毫米

210.00 毫米