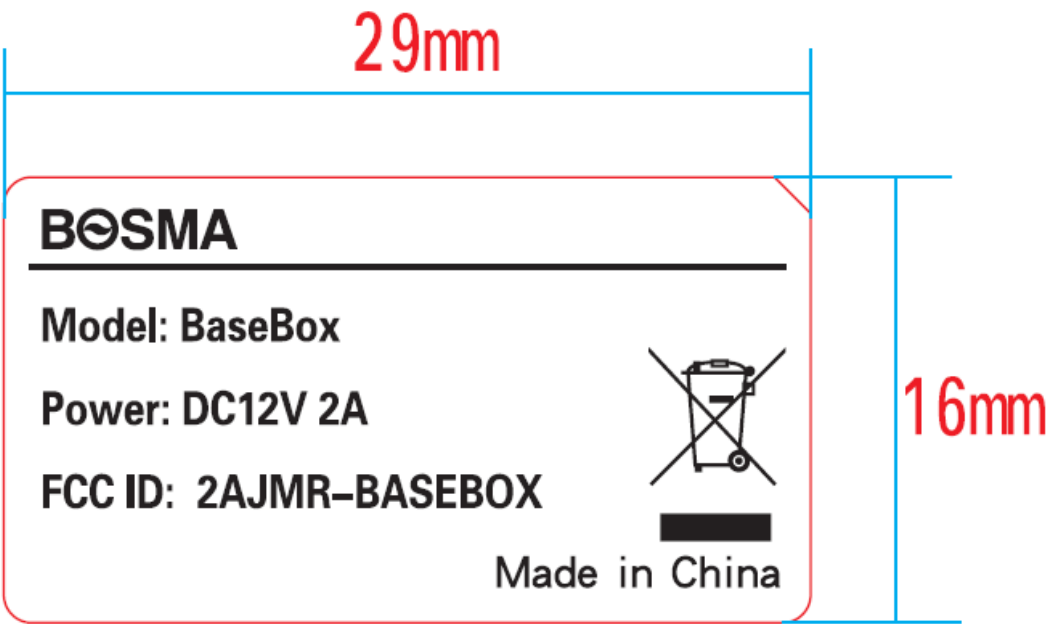Label and label location for BaseBox

label

label location

Label location