


160x212x50mm CMYK+PANTONE 7540 C

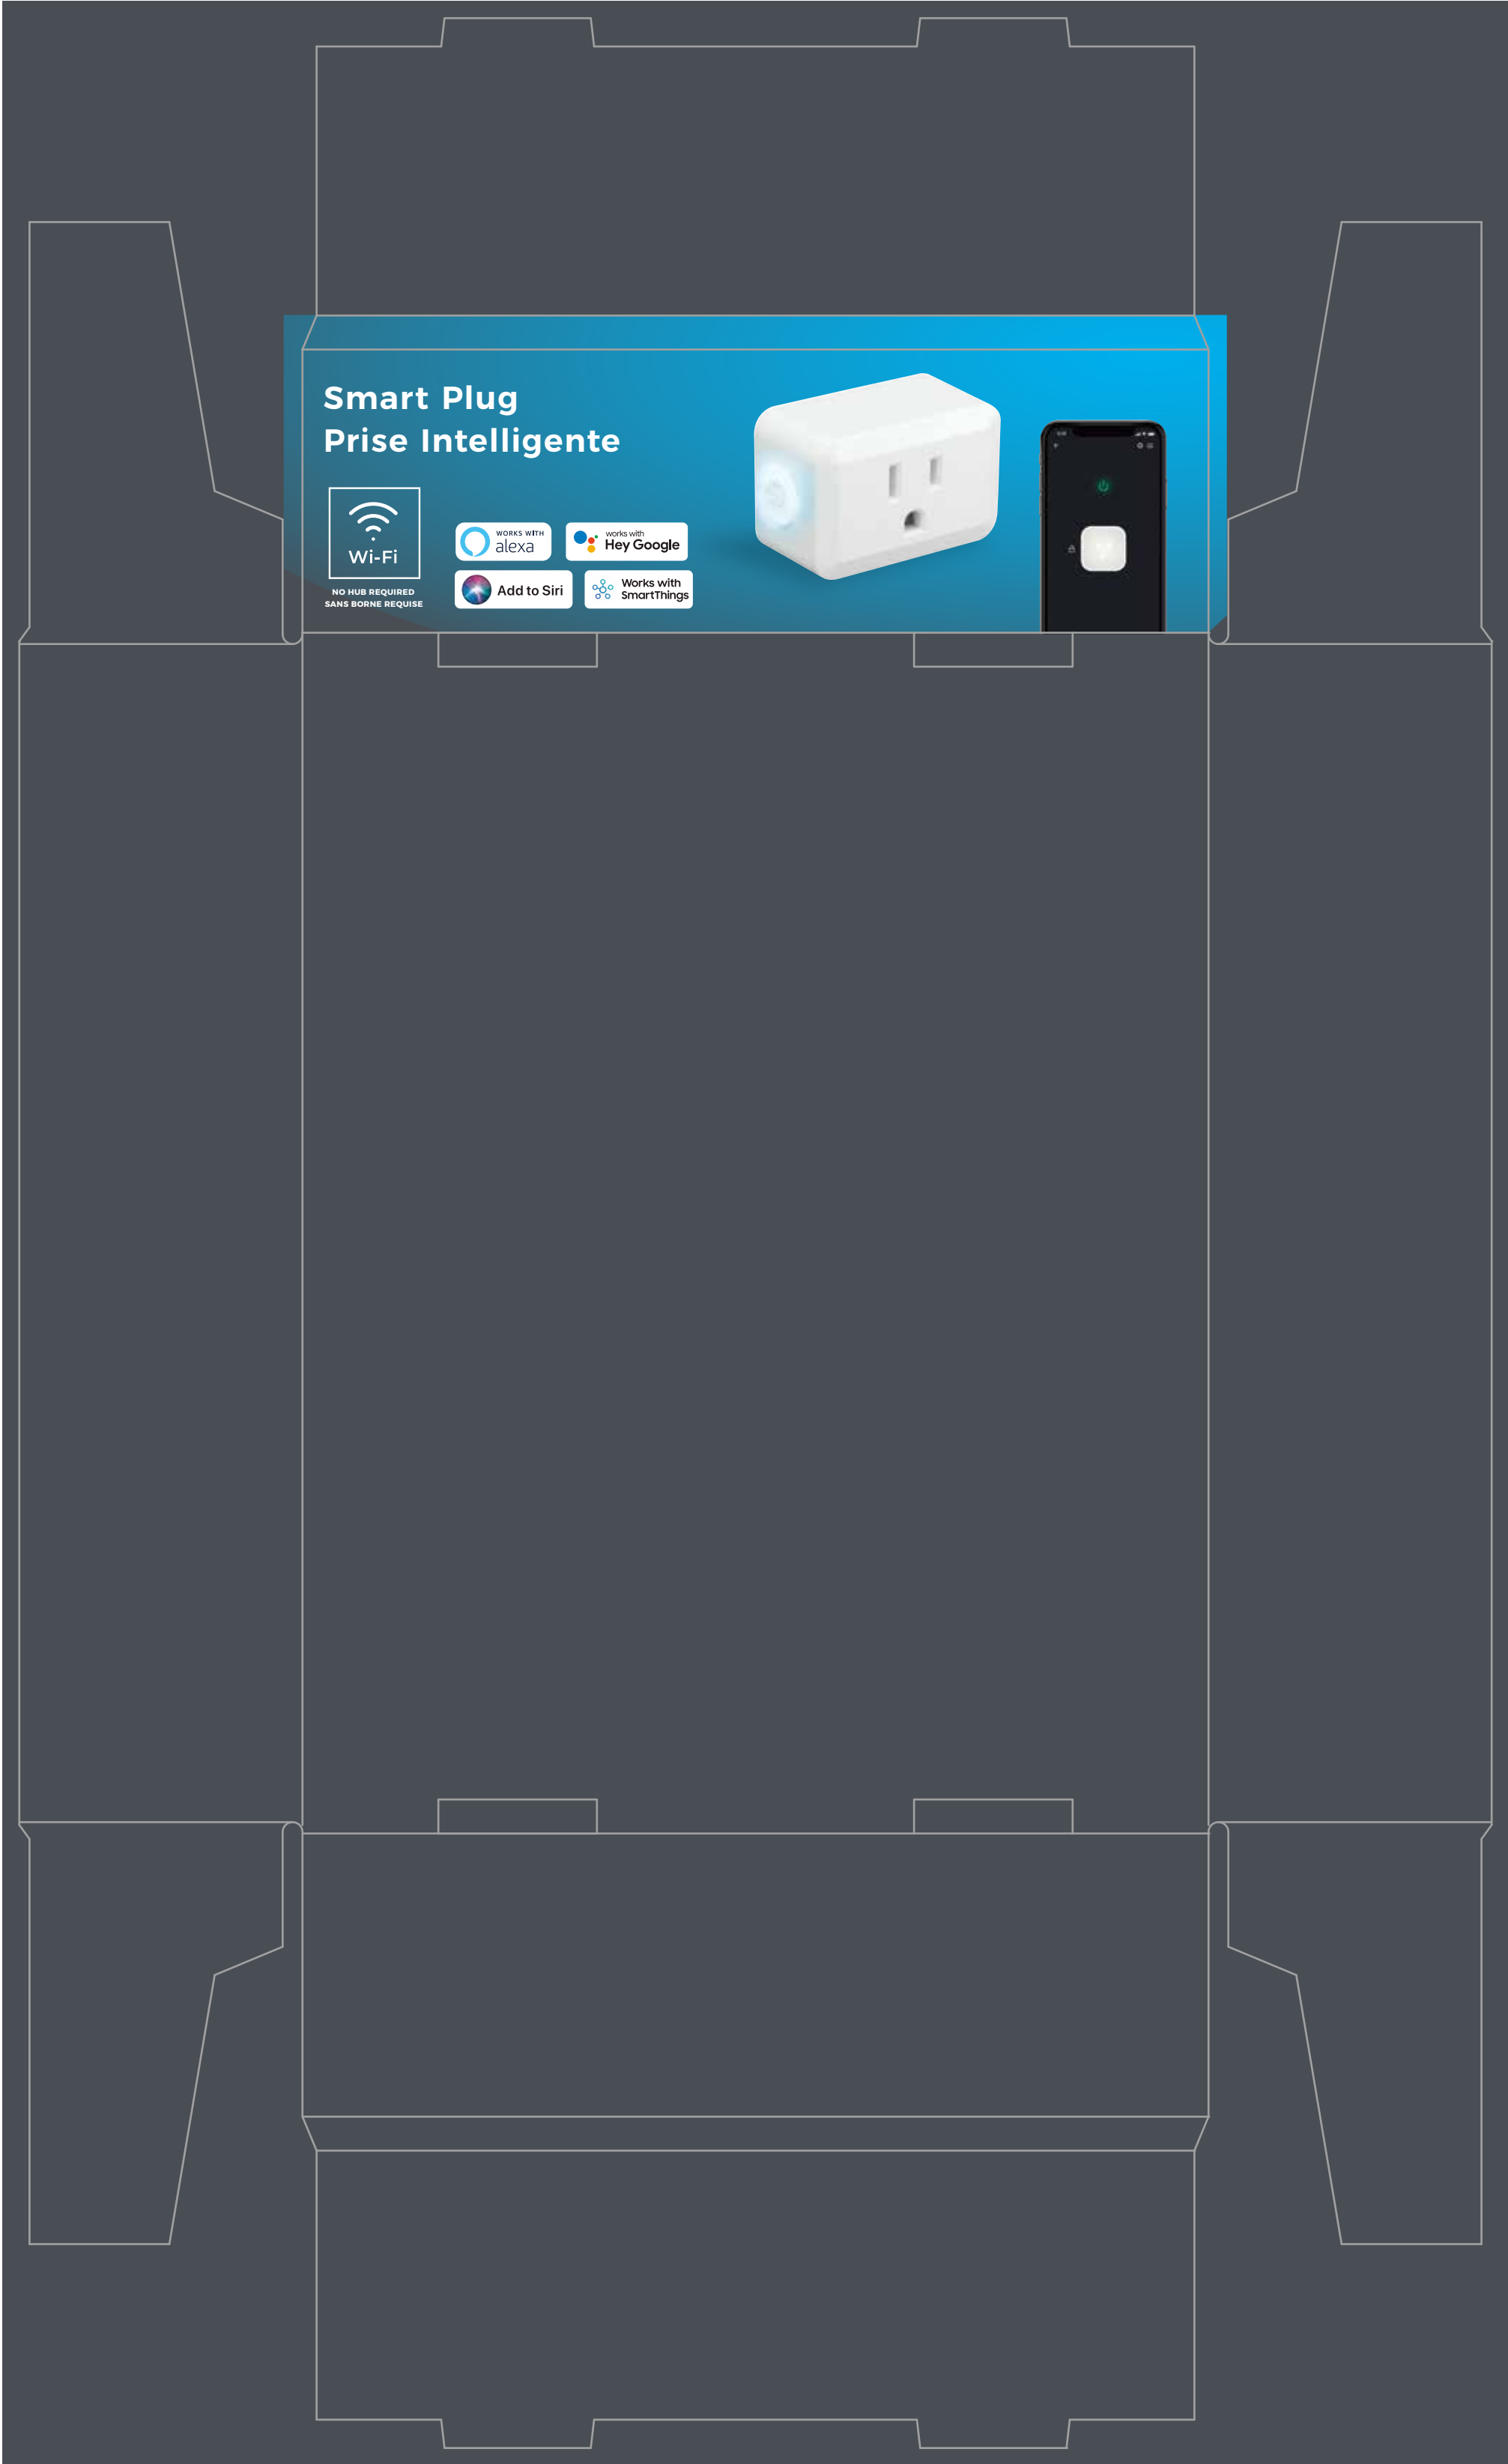

CMYK

65x90mm



QUICK START GUIDE

Welcome aboard!



1 Get started

- Download the **GLOBE SUITE™** app from the App Store or Google Play to your mobile device.
- Launch the **GLOBE SUITE™** app.
- To register, enter your mobile phone number or email address. Create a password, then login to the app.
- OR**
- Login if you already have an account.



2 Verify your network

- Verify your network and ensure your mobile device is connected to a 2.4 GHz Wi-Fi channel.
- Consult your router documentation for detailed instructions on how to change wireless settings.
- Once your devices have been successfully paired, you can switch back to mixed mode or use a cellular data network to control your smart products.



3 Add a device

- Insert your smart power adapter.
- Select the "+" symbol on the top right-hand corner.
- Select your product type and follow the instructions within the app.
- If the connection fails, try using AP mode.**

3b Add a device: AP mode

- On the "add a device page" select AP mode on the top right-hand corner and follow the instructions within the app.
- You're good to go!



4 Setup voice assistance

- Instructions in the **GLOBE SUITE™** app: Select "Profile", select "Integration", choose your voice assistant, and follow instructions.

Did you know?

Most modern routers are dual band meaning they support both 2.4 GHz and 5 GHz channels.

The most common wireless options are:

- Mixed:** The router will broadcast both 2.4 GHz and 5 GHz simultaneously under the same SSID. The device will choose which to connect to based on multiple variables (range, distance to router, etc.).
- 2.4 GHz:** Broadcast only on this channel.
- 5 GHz:** Broadcast only on this channel.
- Dual 2.4 and 5 GHz using Separate SSIDs:** Router will broadcast both channels and user manually decides which to connect to.

Have a question? WE CAN HELP!

www.globe-electric.com/smart

smartsupport@globe-electric.com

Visit the FAQ page in the app

Check us out on YouTube



SC001 1116

Globe Electric Company
©2020, Smart Start Guide 09-110-00



GUIDE DE DÉMARRAGE RAPIDE

Bienvenue à bord!



1 Pour commencer

- Téléchargez l'application **GLOBE SUITE™** sur un appareil mobile à partir de l'App Store ou de Google Play.
- Lancez l'application **GLOBE SUITE™**.
- Entrez votre numéro de téléphone cellulaire ou votre adresse courriel pour s'inscrire. Créer un mot de passe et se connecter à l'application.
- OU**
- Se connecter à l'application avec un compte existant.



2 Vérification du réseau

- Vérifier le réseau Wi-Fi et s'assurer que l'appareil mobile est connecté à un canal sur la bande 2.4 GHz.
- Consulter la documentation qui accompagne le routeur pour des instructions détaillées sur la façon de modifier les paramètres sans fil.
- Une fois que vos appareils ont bien été couplés, vous pouvez revenir en mode mixte ou utiliser un réseau de données cellulaires pour contrôler vos appareils intelligents.



3 Ajoutez un appareil

- Insérez votre adaptateur d'alimentation.
- Sélectionnez le symbole "+" dans le coin supérieur droit.
- Choisissez votre type de produit et suivez les instructions dans l'appli.
- Si la connexion ne marche pas, essayer mode AP.**

3b Ajoutez un appareil: mode AP

- Sur la page de «Ajoutez un appareil» sélectionner mode AP en haut à droite et suivez les instructions dans l'appli.
- Vous êtes prêts à commencer!



4 Configurez votre assistant vocal

- Les instructions dans l'application **GLOBE SUITE™**: Sélectionnez «Profil», sélectionnez «Intégration», choisissez votre assistant vocal et suivez les instructions.

Le saviez-vous?

La plupart des routeurs modernes sont bidbandes, ce qui signifie qu'ils peuvent diffuser à la fois aux fréquences 2.4 GHz et 5 GHz.

Voici les options de réseau sans fil les plus courantes :

- Mixte :** Le routeur diffuse simultanément aux fréquences 2.4 GHz et 5 GHz sous le même identifiant SSID. L'appareil choisit la fréquence à utiliser en fonction de diverses variables (encombrement du réseau, distance du routeur, etc.).
- 2.4 GHz :** Le routeur diffuse uniquement à cette fréquence.
- 5 GHz :** Le routeur diffuse uniquement à cette fréquence.
- Dual 2.4 et 5 GHz pour des SSIDs séparés :** Le routeur diffuse aux deux fréquences et l'utilisateur décide manuellement de la fréquence à utiliser.

Des questions? NOUS POUVONS VOUS AIDER!

www.globe-electric.com/smart

smartsupport@globe-electric.com

Consultez la FAQ dans l'application

Suivez-nous sur YouTube



16210002-0001