


User Manual

Multifunctional Speaker

Model: S68

English	1-3
Deutsch	4-5
日本語	6-7
Français	8-9
한국어	10-11
Español	12-13
Italiano	14-15
Português	16-17
العربية	18-19

Control Panel Function Description

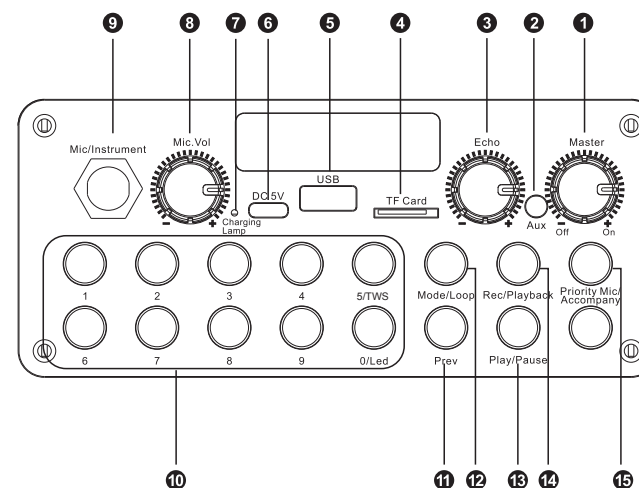

P1

- 1.MASTER:**The knob controls the power on/off of the speaker and adjusts the main volume. Twist the knob to the extreme right to turn on the speaker, and to the extreme left to turn it off. After turning on, twisting the knob to the right increases the volume, and vice versa decreases the volume.
- 2.AUX**
- 3.ECHO:**Adjust the microphone reverb volume.
- 4.TF Card Port**
- 5.USB Port**
- 6.Charging Input:**DC 5V=1A
- 7.Charging Lamp:**The red light is on when charging. The light goes off when fully charged.
- 8.MIC.VOL:**Adjust the microphone volume level.
- 9.MIC/Instrument:**6.5mm wired microphone jack.
- 10.Number key:** Press the "0-9" number keys to quickly select the song you want, if you want to play the 3rd song, press the number 3 first .The display shows "0003", and the third song is played after 3 seconds; To play the 12th song, press the number button 1 first, and then press the number key 2 (you must have this song in the folder to select it!). After that, the 12th song will be played, and the other songs you want will be selected similar (Note: It only works when playing music from USB and TF.).
- 11.PREV:**Short press for previous song,Long press for fast rewind.
- 12.MODE/LOOP:**Short press can switch different modes: Wireless mode, TF card mode, USB mode, and AUX mode. Long press can switch between single-track loop and all-track loop. The default mode is all-track loop playback.
- 13.PLAY/PAUSE:**Short press to pause/continue playback.
- 14.REC/REPLAY:**When it is confirmed that a USB drive or TF card is inserted, long press to play recorded audio files, short press to start recording, and short press again to play the current recording. (Recording requires either a wired microphone to be connected or the wireless microphone to be turned on. After finishing the recording, remember to turn off the microphone before exiting the recording mode.)
- 15.MIC Priority/Accompany:**Short press to turn the microphone's priority function on or off, and long press to turn the music accompaniment on or off.

P2

Wireless playback

- Turn on the power button or repeatedly press the MODE button to enter Wireless mode.
 - Open Wireless on your phone and search for 'S68', then click to connect. After a successful connection, open the music app on your phone and click to play.
- Note: Please make sure to turn up the phone volume to an appropriate level.

Music Playback

- Insert an SD card or USB drive, or repeatedly press the MODE button to enter music mode to play MP3 songs from the SD card or USB drive.
- Press the Play/Pause button can pause or continue playback, press the 'Prev/Next' button can switch songs, and turn the volume knob to adjust the volume level.

AUDIO INPUT

- Use the appropriate audio cable to connect to the audio output device, turn on the device, and play at a suitable volume.
- Insert the audio cable into the Aux input of this device or repeatedly press the MODE button to enter audio input mode for playback.

Microphone Function

Insert an appropriate microphone into this device and turn on the microphone to use it. Press the Echo button or Mic.Vol button can turn the microphone's echo function on or off. The howling sound produced when the microphone is close to or facing the device's speaker is normal. When using the microphone, try to avoid and keep it away from the speaker. When not in use, please turn off or unplug the microphone to avoid affecting playback.

Lighting Function

Long press the number key '0' can switch the lighting modes.

P3

<p>1.MASTER: Der Knopf steuert das Ein-/Ausschalten des Lautsprechers und passt die Hauptlautstärke an. Drehen Sie den Knopf ganz nach rechts, um den Lautsprecher einzuschalten, und ganz nach links, um ihn auszuschalten. Nach dem Einschalten erhöht das Rechtsdrehen des Knopfes die Lautstärke und umgekehrt.</p> <p>2.AUX</p> <p>3.ECHO: Stellen Sie das Mikrofon-Nachhallvolumen ein.</p> <p>4.TF-Kartenanschluss</p> <p>5.USB-Anschluss</p> <p>6.Ladeeingang: DC 5V=1A</p> <p>7.Ladeleuchte: Die rote Lampe leuchtet beim Laden. Das Licht erlischt, wenn der Akku vollständig geladen ist.</p> <p>8.MIC.VOL: Stellen Sie die Mikrofonlautstärke ein.</p> <p>9.Mikrofon/Instrument: 6,5 mm Kabelmikrofonbuchse.</p> <p>10.Zahlentaste: Drücken Sie die Zifferntasten "0-9", um schnell den gewünschten Song auszuwählen. Wenn Sie den 3. Song spielen möchten, drücken Sie zuerst die Nummer 3. Das Display zeigt "0003" an, und der dritte Song wird nach 3 Sekunden gespielt. Um den 12. Song zu spielen, drücken Sie zuerst die Nummertaste 1 und dann die Nummertaste 2 (Sie müssen diesen Song im Ordner haben, um ihn auszuwählen!). Danach wird der 12. Song gespielt, und die anderen gewünschten Songs werden ähnlich ausgewählt (Hinweis: Es funktioniert nur beim Abspielen von Musik von USB und TF.).</p> <p>11.PREV: Kurzer Druck für vorherigen Song, langer Druck für schnellen Rücklauf.</p> <p>12.MODE/LOOP: Kurzer Druck kann verschiedene Modi umschalten: Wireless-Modus, TF-Karten-Modus, USB-Modus und AUX-Modus. Langer Druck kann zwischen Einzelschleife und Alle-Schleifen umschalten. Der Standardmodus ist die Wiedergabe im Alle-Schleifen-Modus.</p> <p>13.PLAY/PAUSE: Kurzer Druck zum Pausieren/Fortsetzen der Wiedergabe.</p> <p>14.REC/REPLAY: Wenn bestätigt wird, dass ein USB-Laufwerk oder eine TF-Karte eingelegt ist, langer Druck, um aufgenommene Audiodateien abzuspielen, kurzer Druck, um die Aufnahme zu starten, und erneuter kurzer Druck, um die aktuelle Aufnahme abzuspielen. (Für die Aufnahme ist entweder ein angeschlossenes Kabelmikrofon oder ein eingeschaltetes drahtloses Mikrofon erforderlich. Nach Beendigung der Aufnahme nicht vergessen, das Mikrofon auszuschalten, bevor der Aufnahmestatus verlassen wird.)</p> <p>15.MIC Priority/Accompany: Kurzer Druck, um die Prioritätsfunktion des Mikrofons ein- oder auszuschalten, und langer Druck, um die Musikbegleitung ein- oder auszuschalten.</p>	<p>Wireless-Wiedergabe</p> <p>1.Schalten Sie den Netzschalter ein oder drücken Sie wiederholt die MODE-Taste, um in den Wireless-Modus zu gelangen.</p> <p>2.Öffnen Sie Wireless auf Ihrem Telefon und suchen Sie nach 'S68', dann klicken Sie, um eine Verbindung herzustellen. Nach einer erfolgreichen Verbindung öffnen Sie die Musik-App auf Ihrem Telefon und klicken Sie, um abzuspielen.</p> <p>Hinweis: Bitte stellen Sie sicher, dass Sie die Lautstärke Ihres Telefons auf ein angemessenes Niveau erhöhen.</p> <p>Musikwiedergabe</p> <p>1.Stecken Sie eine SD-Karte oder einen USB-Stick ein, oder drücken Sie wiederholt die MODE-Taste, um in den Musikmodus zu gelangen und MP3-Songs von der SD-Karte oder dem USB-Stick abzuspielen.</p> <p>2.Drücken Sie die Wiedergabe/Pause-Taste, um die Wiedergabe anzuhalten oder fortzusetzen, drücken Sie die ‚Prev/Next‘-Taste, um Lieder zu wechseln, und drehen Sie den Lautstärkeregler, um die Lautstärke anzupassen.</p> <p>AUDIOEINGANG</p> <p>1.Verwenden Sie das passende Audiokabel, um es mit dem Audioausgabegerät zu verbinden, schalten Sie das Gerät ein und spielen Sie es in einer geeigneten Lautstärke ab.</p> <p>2.Stecken Sie das Audiokabel in den Aux-Eingang dieses Geräts oder drücken Sie wiederholt die MODE-Taste, um in den Audioeingangsmodus zur Wiedergabe zu gelangen.</p> <p>Mikrofonfunktion</p> <p>Stecken Sie ein passendes Mikrofon in dieses Gerät und schalten Sie das Mikrofon ein, um es zu verwenden. Drücken Sie die Echo-Taste oder die Mic.Vol-Taste, um die Echofunktion des Mikrofons ein- oder auszuschalten. Das Heulgeräusch, das entsteht, wenn das Mikrofon nahe am oder gegenüber dem Lautsprecher des Geräts ist, ist normal. Wenn Sie das Mikrofon verwenden, versuchen Sie, es vom Lautsprecher fernzuhalten. Wenn es nicht in Gebrauch ist, schalten Sie bitte das Mikrofon aus oder ziehen Sie es ab, um die Wiedergabe nicht zu beeinträchtigen.</p> <p>Beleuchtungsfunktion</p> <p>Ein langer Druck auf die Zahlentaste ‚0‘ kann die Beleuchtungsmodi wechseln.</p>
P4	P5

FCC Caution.

(1)§ 15.19 Labelling requirements.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

§ 15.21 Changes or modification warning

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

§ 15.105 Information to the user.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

According to §15.247(e)(i) and §1.1307(b)(1), systems operating under the provisions of this section shall be operated in a manner that ensures that the public is not exposed to radio frequency energy level in excess of the Commission's guidelines.