Follow these steps to install and enjoy your HandshoeMouse. This mouse allows you to work both right - or left handed.

HandshoeMouse
the only mouse that fits like a glove

RIGHT-HAND VIEW	LEFT-HAND VIEW
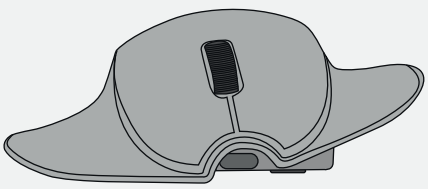	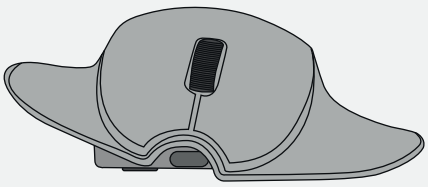

INSTALLATION AND CHARGING INSTRUCTIONS

The HandshoeMouse can be operated wireless via Bluetooth or wired using USB. To establish communication between the mouse and PC/Laptop, follow these instructions:

CHECK THE CONTENTS OF THE BOX

- HandshoeMouse Shift
- USB A-C (charger) cable
- Protective pouch

1.

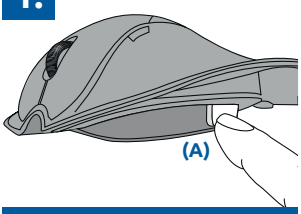

Select orientation by pressing the left-right button (A)

2.

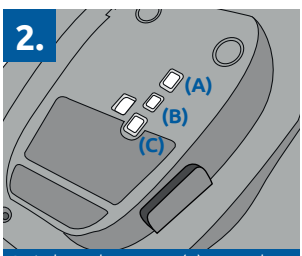

Switch on the mouse (A) Press the Bluetooth button for 5 seconds (B) Select button priority with the L/R switch (C)

3.

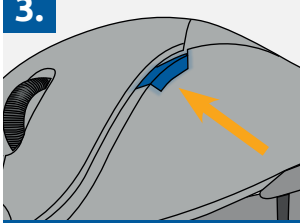

A LED light will start flashing blue

4.

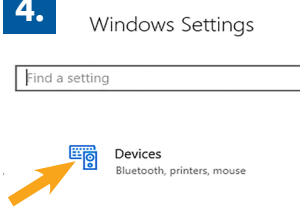

Go to Microsoft settings, select Bluetooth & other devices

5.

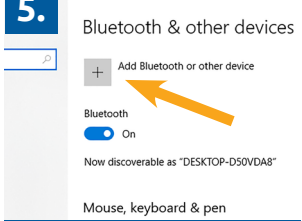

Add Bluetooth or other device

6.

Choose Bluetooth, Mice, keyboards, pens etc. and select HSMshift

A

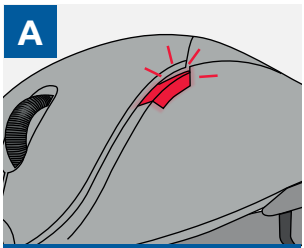

When the LED starts flashing red: Recharge!

B

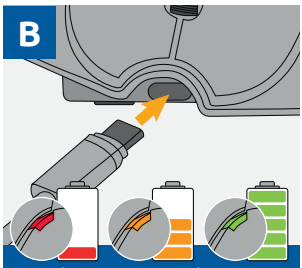

To recharge, connect the USB cable

IF THE CURSOR DOES NOT MOVE FOLLOW THIS PROCEDURE:

1. Connect the mouse to the computer with the USB cable, to charge the mouse battery.
2. After charging for several hours, disconnect the USB cable from the mouse. Switch on the mouse.
3. When the mouse shows a blue light, follow the pairing procedure described above.
4. If the problem persists visit:

https://handshoemouse.com/faq

or contact:

support@handshoemouse.com

FOR WIRED OPERATION, JUST PLUG IN THE USB CABLE AND YOUR MOUSE WILL BE READY TO USE.

Once your mouse is connected to your PC / laptop, you can start using it. To work in comfort, set the cursor speed to medium.

INSTRUCTIONS FOR OPTIMAL COMFORT

To experience maximum comfort and prevent muscle strain in neck and shoulders: ensure that hand and arm are relaxed and fully supported.

The HandshoeMouse Shift gives you maximum flexibility.
It allows you to shift from right to left handed use,
reducing muscle strain whenever necessary.
By means of the shift function you can select the orientation
that suits you best.

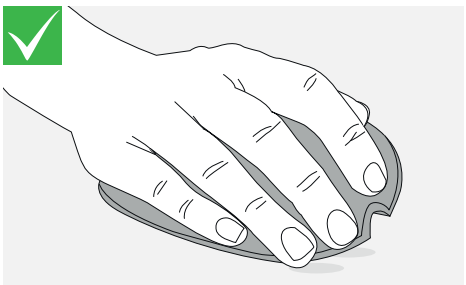

Finger tips may just very lightly touch the desktop

As a rule, a HandshoeMouse should be moved from the forearm, not from the shoulder. To operate within minute areas on the screen, one may, of course, move from the wrist

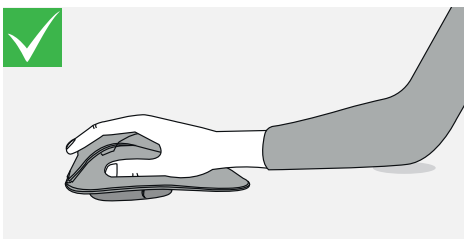

Sit in a relaxed position, place your hand on the mouse and your forearm on the desk.

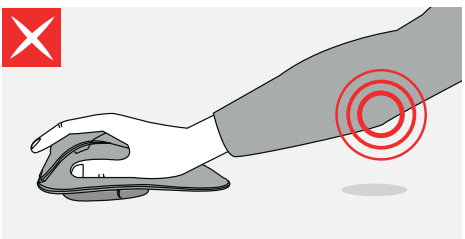

Do not lift your elbow

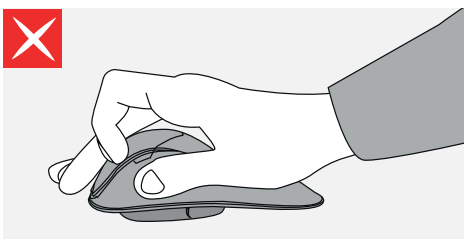

Relax your fingers

Too large

Too small

For further information and images on 'Do's and Don'ts' have a look at 'TIPS' on the HandshoeMouse site.

https://handshoemouse.com/tips

If your cursor speed is too high, this may result in unnecessary muscle tension as you try to control the cursor movement. Therefore, we advise you to set your cursor speed to medium.

Set your cursor (pointer) speed to medium, (under Microsoft):

1. select 'Settings'
2. select 'Devices'
3. click 'Mouse'
4. click 'Additional mouse options'
5. select 'Pointer Options'
6. under Motion, set your pointer speed

If you follow the above instructions, you will certainly experience the advantages of the ergonomic design of the HandshoeMouse.

3 YEAR WARRANTY

For more information refer to Hippus NV.

https://handshoemouse.com/faq

IC FC CE