Date: 19 06 2025 Product: SP-0769	SKU:		ZEEVA INT LTD

SP-0769 IM
Size: 258(w) x 200(h) mm

Jellyfish Jammin' Speaker

Instruction Manual

Thank you for purchasing the Jellyfish Jammin' Speaker.
This manual provides more information about this Bluetooth speaker, please read the instructions before using.

Product Overview

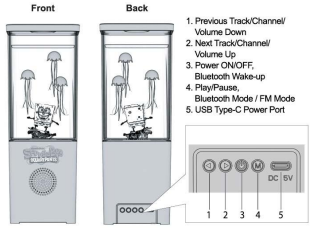

1. Previous Track/Channel/ Volume Down
2. Next Track/Channel/ Volume Up
3. Power ON/OFF, Bluetooth Wake-up
4. Play/Pause, Bluetooth Mode / FM Mode
5. USB Type-C Power Port

Package Contents

1(One) Jellyfish Jammin' Speaker
1(One) USB Type-C Power Cable
1(One) Instruction Manual

Specification

Driver Diameter: 52 mm
Impedance: 4 Ohms
Power Supply: 5V/1A
Bluetooth Range: 32 Feet
Bluetooth Version: 5.3
FM Radio Mode
USB Type-C Power Cable Included

USB Type-C Power Cable rating 5V/1A Max.

⚠ **CAUTION:** The USB Type-C power cable included with this item is intended for use with this product. Only use the included USB Type-C power cable to operate this product.

Installation

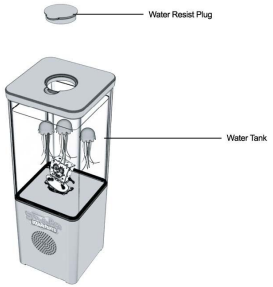

1 .Remove the Water Resist Plug
2. Fill up the water tank with distilled water to 80% full.
   (It is recommended to use distilled or filtered water, instead of tap water.)
   (mixed with 2% dish soap will increase the smoothness of the jellyfish movement)
3. Install the Water Resist Plug, dry the surface of the speaker.
4. Run the speaker for 3-5 minutes to release the air bubbles from the water pump. (refer to "Power On/Off" section)
5. Change water occasionally when dirty.

Note:
Do not immerse the speaker in water.
Completely dry the speaker's surface before plug-in the USB Power Cable.
Do not operate the speaker when there is any water leakage.
Do not turn over the speaker, handle it in vertical position only.
Bubbles in the Jellyfish may blocking the movement. If happened, please try to squeeze out the bubbles.

Power On/Off

Power on
Connect the Jellyfish Jammin' Speaker to a 5V/1A USB Adapter (not included) with supplied USB Type-C Power Cable.
Long press ON/OFF Button for 3 second for "ON".

Power off
Long press 3 second for "OFF".

Bluetooth Speaker Mode

Play/Pause: Short press the "M" Button once.
Next Track: Short press the ">" Button
Previous Track: Short press the "<" Button
Volume Up: Long press the ">" Button
Volume Down: Long press the "<" Button

Note: The Bluetooth function will go to sleep mode when it was not connect for 5 minutes.
Short press the ON/OFF button once will wake-up the Bluetooth function.

FM Radio Mode

Switch to FM Radio Mode: Short press the "M" Button once.
Short press the "M" Button again will back to Bluetooth Speaker mode.
Auto Scan: Long press the "M" Button.
Next Channel: Short press the ">" Button
Previous Channel: Short press the "<" Button
Volume Up: Long press the ">" Button
Volume Down: Long press the "<" Button
Mute/Unmute: Short press the ON/OFF Button

Pair Bluetooth Speaker With Your Mobile Device

1. Keep the distance between your Bluetooth speaker and mobile phone (or other Bluetooth devices) within 32 Feet.
2. Power on the Bluetooth speaker.
3. Activate the Bluetooth function on your phone within range and select " **SP-0769 SPK** " from the list shown.
4. You will hear a beep sound when pairing is successful.

Reconnect Bluetooth Speaker to Your Mobile Device

When powered on, the Bluetooth speaker will automatically connect with the last successfully paired device.

True Wireless Stereo (TWS) Mode

NOTE:
Please purchase two pieces of Jellyfish Jammin' Speaker to perform TWS Mode.
TWS mode is not supported in FM Radio mode.

1. Turn On both Bluetooth speakers.
2. Disconnect both Bluetooth speakers from any Bluetooth device.
3. Keep both Bluetooth speakers side by side.
4. Double press the "M" Button on ONE of the Bluetooth speakers. And then it will have an alert sound.
5. The Bluetooth speaker will connect with the other Bluetooth speaker in few seconds. When successfully connected, both Bluetooth speakers will have another alert sound.
6. Now you can follow the "Pair Bluetooth speaker with your mobile device" to pair with the mobile device.
7. To disable the TWS mode, power off and on both Bluetooth speakers. Or, double press the "M" Button on ONE of the Bluetooth speakers. They will have an alert sound and then disconnected.

FAQ

- **If the Bluetooth speaker cannot be paired with your device, please try the following:**
  Ensure that your speaker is in pairing mode or reconnection mode.
  Ensure that Bluetooth search function of your mobile device is activated.
- **If the Bluetooth speaker cannot be powered on:**
  Ensure that the power adapter is connected securely and the outlet works.

⚠ Safety Instructions

-The input voltage to the product is DC 5V 1A.
-In order to operate the product in safe manner and reliable conditions, please only adopt certified appropriate charger/ adapter for operating the product.
-Switch off the product after use.
-Please note that we won't take any responsibility for any wrong operation (eg. Voltage higher than 5V) as this may result in severe injury or loss of property, and we cannot control the operating process during the time the user using this product.

FCC STATEMENT
1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference.
(2) This device must accept any interference received, including interference that may cause undesired operation.
2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

RF warning statement:
The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by 1616 Holdings, Inc. is under license. Other trademarks and trade names are those of their respective owners.

FCC ID: 2ADM5-SP-0769

Item# SP-0769-SPONGEBOB

NICK.COM/SPONGEBOB

© 2025 Viacom International Inc. All Rights Reserved.
Nickelodeon, SpongeBob SquarePants and all related titles, logos and characters are trademarks of Viacom International Inc.
SpongeBob SquarePants created by Stephen Hillenburg.

Distributed by 1616 Holdings, Inc.
701 Market Street, Suite 200
Philadelphia, PA 19106

Made in China

Keep all relevant information for future reference

Approval:	Date: