W216 H186mm Black ink.

For Your Safety

Warning

● When using the product, be careful not to disturb other people around you.● Do not use in areas where it is dangerous and you are unable to hear ambient noise around you. Pay careful attention when using while performing work that requires your full attention.● When using the product, pay careful attention to traffic conditions, pedestrian traffic, and so on; follow all road traffic laws and regulations (hereinafter referred to as "traffic laws") while using the product. There is the possibility of causing a traffic accident when using the product.● There may be cases where wearing headsets while operating an automobile, bicycle, or motorcycle is regulated by local traffic laws. Please contact your local municipality before using.● When using the product, check to make sure the product itself is firmly in place in order to prevent the Earbud from coming off.● In the unlikely event that the Earbud comes off and remains in your ear, do not forcibly remove it; seek medical advice and follow the instructions of medical staff.● Pay careful attention not to turn the volume up too high on connected equipment. Exposure to loud sounds for extended periods of time has the risk of damaging ears and causing hearing loss. Before using, carefully check the volume before placing against the ear.● This product uses a rechargeable battery. A new battery will charge up to its full capacity only after first being fully charged and fully depleted 2~3 times. Do not leave a fully charged battery connected to the charger. Overcharging will shorten the life of the battery.● Keep the battery in a place with a temperature range of 0-45℃. Placing in a location outside that temperature range—an extremely hot or cold location (for example, somewhere in direct sunlight or inside a car during summer or winter)—may result in the following: leakage, overheating, rupture, discharge, and the shortening of the battery's lifespan. Do not use, leave, or store the battery in a location that is hot or cold. Failure to follow these instructions may lead to any of the following: may cause fires or chemical burns; strong physical impacts; electrically charged materials contacting the battery electrodes; overcharging and over-discharging through use of rapid chargers and so on; handling incorrectly. Damaged batteries may generate heat and have the danger of exploding.● Because the product battery was not designed to be replaced with other batteries, removing the product battery and replacing with other batteries is prohibited. Removing and replacing the battery is dangerous and has the risk of damaging the product.● When disposing of the battery, please follow local laws and regulations. Recycle as much as possible; do not dispose of the battery in your normal household waste; do not burn. There is a risk of explosion.● This product contains small parts and cords that may become stuck in the throat and cause suffocation. Please store out of reach of children. If children use the product, there is the possibility it could cause serious injury or death.● Do not submit the product body to strong impacts. Strong impacts may cause damage or product failure.● Do not use if the product is damaged or broken. We assume no responsibility if the product is used in a damaged or broken state.● We assume no responsibility in the case of any accident that occurs if the product is used in a way that does not follow the provided safety precautions, or is used in a way that deviates from the intended use or laws and regulations, such as traffic laws, provided in the safety precautions.

Caution

● The intended use of the product is, in conjunction with our smartphone application, for group calls in the context of sports, including skiing, snowboarding, cycling, fishing, and so on. This product has been developed and designed to be used with our smartphone application. We do not offer support related to how to use our smartphone application on smartphones other than those specified. We ask for your understanding.● Do not place near heating equipment, in dusty or hot areas, in direct sunlight, or where the product may come in contact with water. Doing so may cause the product to break.● To clean dirt from the exterior of the BONX earpiece, wipe with a soft towel. For particularly stubborn stains, wipe with a cloth moistened with a mild detergent. Paint thinner, benzine, and alcohol will damage the surface finish; do not use them.● Operating within the frequency band used by this product are industrial, scientific, and medical equipment, factory production lines, and so on, where private radio stations for mobile identification are used (radio stations requiring licenses), as well as low-power radio stations (radio stations that do not require licenses). Before using the product,confirm that these types of radio stations are not operating nearby. In the unlikely event of radio interference between the product and these types of radio stations, refrain from using the product and address the issue promptly, such as by changing locations. This product is a wireless device featuring a sophisticated built-in 2.4GHz band data communication system. The modulation system uses FH-SS.● The Bluetooth product name and logo are registered trademarks of Bluetooth® SIG, Inc.,BONX Inc. uses all of these based on a license.● The App Store is a service trademark of Apple Inc.● iPhone is a trademark of Apple Inc., registered in the US and other countries.● Android™ is a trademark of Google Inc.● BONX® and the BONX® logo,the BONX BOOST™ logo are trademark registered in Japan, and registrations pending in the United States and other countries by BONX Inc.● All brands described in the instruction manual are protected property of their respective owners.● Designs, specifications and what is described in this manual are subject to change without prior notice.

Warranty Regulations

1. Within the warranty period set by BONX Inc. (calculated from the product purchase date), as long as the failure of this product occurred while being used appropriately (used according to safety precautions and the correct intended use), the product will be repaired or replaced free of charge.

Warranty Range

2. The following are not covered by the warranty.(1) If you do not submit the warranty and the broken product,(2) If you do not submit proof of purchase (receipt, delivery slip, etc) showing the purchase date issued by the retailer or online store,(3) If the warranty is proven to have been forged or altered,(4) If the product has been altered, taken apart, or damaged by repairs carried out by a third party not specified by BONX Inc. or the customer,(5) If the product is used in violation of the safety precautions or intended purpose of use, or if the product is connected to equipment other than that specified by BONX Inc., or if incorporated and used in such equipment resulting in damage or product failure.,(6) If the product receives shock or is dropped and damaged while in transit after purchase,(7) If the product breaks due to external factors such as earthquakes, fires, lightning, wind and flood damage, other natural disasters, pollution, or voltage abnormalities,(8) If other reasons are found that violate free repairs or product replacement.3. The warranty for this product covers only products purchased in Japan and the United States. As for other countries, please refer to the product support page on our website which lists the latest information regarding warranties.

Repairs / Replace

4. To request repairs, send the warranty card and proof of purchase date (receipt, delivery slip, etc) together with the product to our office.
5. The customer is responsible for any shipping fees incurred when shipping to our office. Also, we assume no responsibility if the product is damaged or lost while in transit.6. The address for sending in your product for repairs will vary depending on what country you purchased the product in. Please refer to our support page and contact us for details.

Disclaimer

7. For product failures, unless there is intent or gross negligence by BONX Inc., liability for damages, such as our defaulting on debt or illegal actions, will be the upper limit of the purchase price of this product.8. We will assume no responsibilities for consequential, incidental, indirect, and mental damages, lost profits, or compensation for data loss caused by the failure of the product.9. The warranty card will not be reissued. Keep it somewhere safe and secure.

- Federal Communications Commission Part15 -

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
– Reorient or relocate the receiving antenna.
– Increase the separation between the equipment and receiver.
– Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
– Consult the dealer or an experienced radio/TV technician for help.

This device and its antenna(s) must not be co-located or operation in conjunction with any other antenna or transmitter.
Radiation Exposure Statement
The device has been evaluated to meet general RF exposure requirement. in portable exposure condition without restriction.

00000000 LI-ion

When you no longer need to use this product, be sure to dispose of it in accordance with the local ordinances and laws of your area.

BONX

BONX

BONX BOOST

QUICK START GUIDE
PRODUCT WARRANTY CARD

マニュアル／表

STEP
01
アプリのダウンロード
Download app

ビジネス向けアプリについて
ビジネスシーンでご利用されるお客様は別途サービスの契約が必要となります。
詳細はお問ジクウからご確認ください。

bonx.co.jp

STEP
02
電源をONにする
Power On

充電ケースからBOOST本体を取り出すと自動で電源が入ります
※初回同期時は電源ONに自動でペアリングモードに入ります
Power turns on automatically when removed from the case.

STEP
03
スマートフォンとBluetooth®接続
Connect via Bluetooth®

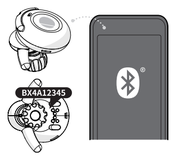

Bluetooth®の設定画面でBOOSTのシリアルナンバー(BX4***)を選択**
※シリアルナンバーはイヤホンの裏側に刻印されています
Select your device's serial number on Bluetooth® setting

STEP
04
グループトークをはじめよう
Begin group-talk via the BONX app

サービスサイト　オンラインマニュアル

通常の通話や音楽も楽しめます
詳しい機能については上記ウェブリンクから確認できます
Regular voice call and music are also available
Find more functions of the app here.

安全上の注意

警告

● ご使用の際は、周囲の人の迷惑にならないようにご注意ください。● 周囲の音が聞こえないと危険な場所では使用しないでください。集中力を必要とする作業を行っているときに使用する際は、十分に注意をしてください。● ご使用の際には、交通状況や人の往来など周囲の状況に十分注意し、道路交通法や各所等の交通法規（以下、「交通法規」といいます）を守って使用してください。交通事故の原因となる恐れがあります。● 自動車、自転車、オートバイの運転中のヘッドセットの使用は、地域の法令等の交通法規で規制されている場合があります。お住まいの地域の自治体に確認ください。● 使用時には、イヤーキャップはずれないよう、製品本体にしっかりと取り付けられていることを確認してください。● 万一、イヤーキャップはずれて耳の中に残った場合は、無理に取り出さず医師の診察を受け、医師の指示に従ってください。● 接続された機器の音量をよけすぎないように注意ください。耳を刺激するような大きな音量で長時間続けて聞くと、耳を傷め聴覚に障害を生ずる恐れがあります。耳に当てて使用する前には、音量を確認のうえご使用ください。● お使いの製品には充電式バッテリーが使用されています。新しいバッテリーは、完全充電と安全放電を2～3回繰り返されてから完全容量が最大になります。フル充電されたバッテリーを充電器に接続したままにしないでください。過充電はバッテリーの寿命を短くします。● 長期間連続をされていると過度になり充電が不能になる場合がございます。定期的に通電をしていただけますようお願い致します。● バッテリーは、0℃～45℃の場所においてください。夏場や車内に放置され温度が範囲から外れた、温度の極端に高い、あるいは低い場所（例えば、直射日光の強い場所や炎天下の車内など）においたべと、漏液、発熱、破裂、放電し、またバッテリーの寿命が短くなったり、安全充電されていても製品が一時的に動作しなくなる現象が為あります。● 本製品に使用されているバッテリーは、過度に強い衝撃を与えたり、バッテリーの電極に通電材料を接触させたり、急激充電器等を用いることにより過充電させたり、過放電等をする等、間違って取り扱うと火災や化学火傷を引き起こす可能性が存在します。損傷したバッテリーは熱を発行することで、爆発する危険があります。● 本製品のバッテリーの他のバッテリーに交換して使用することを禁止とした構造となっていないため、本製品のバッテリーを取り外したり、交換することは禁じられています。バッテリーを取り外したり、交換することは危険で、製品を破損する恐れがあります。● バッテリーを廃棄する際は地域の条例等の法令に従ってください。できるだけリサイクルをふかけ、バッテリーを家庭ごみとして捨てたり、燃やさないでください。爆発の恐れがあります。● 本製品は、堅に扱ぎったり変品したりする恐れがあるかさな部品やコードが含まれています。お子様の手の届かないところに保管してください。お子様が触ったり使用したりすると、死亡や重傷の原因となる恐れがあります。● 製品本体に過度に強い衝撃を与えないでください。故障、破損の原因となります。● 製品が故障、破損した時は使用しないでください。故障、または破損した状態で製品を使用した場合、当社は一切の責任を負いかねます。● 「安全上の注意」に書かれている内容を守らず、または「安全上の注意」に書かれている使用目的や交通法規等の法令を逸脱して本製品を使用され、何らかの事故が生じた場合、当社では一切の責任を負いかねます。

注意事項

● 本製品の使用目的は、弊社開発のスマートフォン用アプリケーションと連携して、スキー・スノーボードなどのスポーツシーン、または小売店舗におけるスタッフ間のやり取りなどの業務シーンなどの場面におけるグループ通話を行うものです。当なてを本製品は、弊社開発のスマートフォン用アプリケーションと同時に使用する前提で開発・設計されています。弊社指定のスマートフォンにおける別社開発のスマートフォンアプリケーション以外での使用方法については、弊社ではサポートしておりません。予めご了承ください。● 電子機器などに、高温や湿ごりの多い場所、直接日光にあたる場所、水のかける場所には置かないでください。故障の原因となります。● BONXヘッドセットの本体の汚れは、柔らかい布で拭き取ってください。汚れがひどいときは、薄めた中性洗剤でしめらせた布で拭いてください。シンナー、ベンジン、アルコールなどは表面の仕上げを痛めますので、絶対に使わないでください。● 本製品の使用周波数帯では、産業・科学・医療機器等他、工場の製造ライン等で使用されている移動体識別用の無線局免許（免許を要する無線局）及び特定小電力無線局（免許を要しない無線局）が運用されています。本製品を使用する前に近くでこれらの無線局が運用されていないことをご確認ください。万一、本製品からこれらの無線局に対して電波干渉の事例が発生した場合には、使用を控えると、場所を変えるなど速やかに対処してください。本製品は2.4GHz帯高度セキュリティ通信システムが内蔵されている無線設備です。変調方式はFH-SSを使用しています。● Bluetooth の製品名およびロゴマークは、Bluetooth® SIG,Inc. の登録商標です。株式会社 BONX はすべてのこれら商標をライセンスをもとに使用しています。● App Store は Apple Inc. のサービス商標です。● iPhone は、米国および他国で登録された Apple Inc. の商標です。● Android™は Google Inc. の商標です。● Google Play および Google Play ロゴは、Google LLC の商標です。● BONX®、BONX BOOST™およびBONX® ロゴマークは、株式会社 BONX の登録商標です。● 本マニュアルに記載されている全てのブランドは、保護されたそれぞれの所有者に帰属します。● 本製品のデザインや仕様、及びマニュアルに記載されている内容は予告無く変更になることがあります。

保証規定

1. 弊社が定める保証期間（本製品ご購入日から起算されます）内に、適切な使用環境（安全上の注意にかかれた内容ないし使用目的での使用）で発生した本製品の故障に限り、無償で本製品を修理または交換いたします。

無償保証範囲

2. 以下の場合には、保証対象外となります。（1）保証書及び故障した本製品をご提出いただけない場合、（2）販売店や EC サイトなどで発行される、ご購入日が確認できる証明書（レシート・納品書など）などをご提示いただけない場合、（3）保証書に改竄・改変などが認められた場合、（4）弊社および弊社が指定する機関以外の第三者などによりご自身による改造、分解、修理により故障した場合、（5）安全上の注意に記載されている内容や使用目的に反おりない使用方法、または弊社が定める機器以外に接続、または組み込んで使用した、故障または故障した場合、（6）本製品を購入いただいた後の輸送中に発生した衝撃、落下等により故障した場合、（7）地震、火災、落雷、風水害、その他の天変地異、公害、異常電圧などの外的要因により故障した場合、（8）その他、無償修理または交換が認められない理由が発見された場合。
3. 本製品の無償保証対象は、日本および米国内で購入された製品に限ります。その他の地域での保証状況につきましては、補償の情報を本保証書に記載されている製品ウポートページでご確認ください。

修理・交換

4. 修理のご依頼は、本保証書、ご購入日が確認できる証明書（レシート・納品書など）をご準備の上、弊社サポートまでお問い合わせください。
5. 弊社までご送付いただく場合の送料はお客様のご負担となります。尚、弊社は運送中の製品の破損、紛失については一切の責任を負いかねます。
6. 修理のご依頼をされる際の送付先は、お客様のご購入国によって異なります。詳細につきましては、弊社サポートまでお問い合わせください。

免責事項

7. 本製品の故障について、弊社に故意または重大な過失がある場合を除き、弊社の債務不履行および不法行為等の損害賠償責任は本製品の購入代金を上限とさせていただきます。
8. 本製品の故障に起因する派生的、付随的、間接的および精神的損害、逸失利益、ならびにデータ損害の補償等につきましては、弊社は一切責任を負いかねます。
9. 本保証書は再発行いたしませんので、大切に保管してください。

切り取り

製品保証書	
製品名　：BONX BOOST 型番　：BX4 保証期間　：ご購入から 1 年間 修理・交換時の製品のご送付先については、弊社 HP をご確認ください。 Please refer to our website for the return address when sending in products for repair or exchange https://bonx.co/ja/contact/	お名前 /Name
	ご住所 /Address
	電話番号 /TEL. No.
	メールアドレス /E-mail
	販売店 /Retailer
	購入日 /Purchased date

マニュアル／裏

2021.12.14 v4-2