What's in the Box?

Woobo Mini Toy

User manual which you are reading from

Stickers

How to Change Batteries

1. Open the velcro flap located at the top of the head between the ears and take out the hardware unit from the outer fur coat.

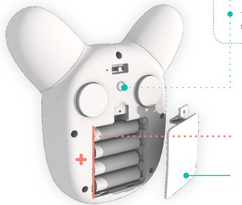

Power Button

- The power button is located between the play and next buttons, long press 3 seconds.
- To turn Woobo Mini off, long press the same button for 3 seconds.

2. Open the cover location at the back side of the hardware unit and replace the four AA batteries from the battery compartment.
3. Make sure the positive ends are pointing the correct direction.
4. Put the battery compartment cover back on.

Pairing with Parent App

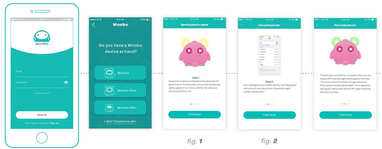

fig. 1 fig. 2

1. Download Woobo Parent App on mobile.
2. Create an account on the app, activate the account through email.
3. Follow the steps to finish set up on both the toy and app:

fig. 1 Press both buttons on the back of the device at the same time for five seconds until you see the flashing yellow signals. If not, check whether the battery is placed correctly or not.

fig. 2 Go to settings on your mobile device, click "Bluetooth" and connect your device with a Bluetooth signal named **"Woobo Mini"**.

The pairing is successfully completed when you see Woobo Mini's two ear lights flashing green and hear **"You are now connected to Woobo Mini, go ahead and finish setup in Woobo Parent App!"**. If not, please try pairing your device with Woobo Mini again following the previous steps.

fig. 3 fig. 4

fig. 3 Your mobile device will send the wireless network information to Woobo Mini through Bluetooth so that Woobo Mini can connect to your wireless service.

Select your wifi network, enter your network password.

fig. 4 Woobo Mini is successfully connected to your Wi-Fi service when you hear **"Woobo Mini is ready. Let's play!"**. If not, please try again following the previous steps.

fig. 5 Set-up/customize the device and it's ready to go!

NOTE: If you want to pair Woobo Mini to a new account after you finish pairing, go to the menu and click the setting option on the toy, and select "pair with new account".



Done!

fig. 5

Multiple Woobos

- You can use one parent app account to pair with multiple Woobos. But you cannot pair one Woobo to multiple parent app accounts.

1. Register an account and finish set up on your first Woobo.
2. Turn on your second or third Woobo, follow on-screen set up, and proceed to get 8-digit verification code.
3. Open your Woobo Parent App, make sure you are logged into the account you have already registered.

In the hamburger menu:

4. Select CHANGE DEVICE and then Manage Device , then click the + Add Device to add a new device.
5. You may also pair with any other Woobo products, such as Woobo Mini or Plus, in the parent app. To do so, follow the same steps.

★ Now you can switch between Woobos by clicking the name in hamburger menu.

How to use:

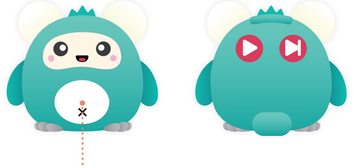

Speech (Tummy) Button

- Press Woobo Mini's tummy until its ears light up blue.
- While Woobo Mini is listening, speak and release when you are finished talking.
- If Woobo Mini's ears flash red it means Woobo Mini did not hear you properly. Try again with clearer and louder voice.

Play Button

- Click once to play song or story.
- While content is playing Woobo Mini's ears will light up in rainbow colors.
- Click again to stop playing.

Skip Button

- Click once to play the next song or story.

Volume Setting

Open the velcro flap located at the top of the head between the ears to access the volume control.

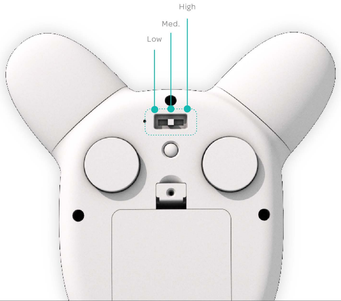

How to Play with Woobo Mini

1. Press Woobo Mini's tummy until you hear a "squeeze" sound, woobo's ears will light up blue to to show that Woobo is listening.
2. Start talking and release to stop recording. Green light will turn on to show that Woobo has successfully recorded your speech.

NOTE: Woobo Mini can listen to voice command from up to 2 feet (61cm) distance.

WARNING: If you have epilepsy or have seizures or other reactions to flashing lights or patterns, please be careful and consult a doctor.

Things to ask Mini:

Play a song please!

Why is sky blue?

How old are you?

Quick Troubleshoot

- If Woobo Mini becomes unresponsive or does not perform as expected. Please replace the batteries and restart Woobo Mini again.

1. Force shutdown by holding the power button for 3 seconds until the screen turns dark.
2. Turn on Woobo Mini again by holding the power button for 3 seconds.
3. If Woobo Mini still doesn't perform properly, you can restore to factory settings. Open the velcro flap located at the top of the head between the ears. Take out the hardware unit from the outer fur coat. Find the hole in the back and use a wire or paper clip to insert and pull out to restore factory settings.
4. If Woobo Mini is still not working, please reach customer service at: **support@woobo.io**

   Customer Service House of Operation:
   Monday - Friday 10:00AM - 7:00 PM EST

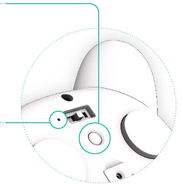

WARRANTY: your purchase comes with a 3-month limited warranty in the US. The warranty covers against manufacturing defects. It does not cover abuse, alteration, theft, loss, unauthorized and/or unreasonable use, or normal "wear and tear." During the warranty period, Woobo will make sole determination of a defect. If Woobo determines a defect, Woobo, at its sole discretion, will repair or replace the defective part or product with a comparable part. This does not affect your statutory rights. For full details, safety updates, or support, send us an email at support@woobo.io.

Care

- Protect the environment by not disposing of this product with household waste (2012/19/EU). Check your local authority for recycling advice and facilities.
- It's quite harmful for Woobos to get wet and they should avoid it to keep safe, conditions that are too hot (like a hot car), being hit, or dropped may result in damage.
- Woobo is built tough, though with no user serviceable parts.
- Cover hand washable, leave hardware away from water.
- Minor shedding is normal.

Battery Safety Information

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Rechargeable batteries are only to be charged under adult supervision.
- Dispose of batteries safely.
- Do not dispose of this product in a fire. The batteries inside may explode or leak.
- Do not attempt to use or replace batteries if Woobo shows signs of leakage or corrosion.

Woobo Inc.™
198 River Street,
Cambridge, MA 02139
United States of America

Woobo and Woobo logo are trademarks of Woobo Inc.
Apple, the Apple logo, iPhone, iPad, and iPod are trademarks of Apple Inc., registered in the U.S. and other countries.
App Store is a service mark of Apple Inc.
Google Play and Android are trademarks of Google Inc.

FOR MORE INFORMATION, PLEASE ALSO VISIT:
http://www.woobo.io/faq/

MODEL NUMBER: WOOBO MINI
FCC ID: ZANIX-0003

PRINTED IN CHINA

Privacy Policy

- Woobo is not always listening. You have to click on Woobo Mini's belly to talk and activate speech recognition.
- Parental consent is required to set up a parent account and connect with Woobo Mini.
- When the microphone is active, voice data is collected so Woobo Mini can understand and respond to you in conversation. These recordings are only used in accordance with Woobo Mini's Privacy Policy.
- All recorded conversations can be deleted upon a parent's request.
- There is no advertising content within Woobo Mini.
- Your children's conversations are not used to advertise to your child.

Additional Information

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

RADIATION EXPOSURE STATEMENT: This equipment complies with FCC radiation exposure limits 1.6W/Kg set forth for an uncontrolled environment and it also complies with Part15 of FCC RF Rules.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

Woobo Mini User Manual