发行文件

140 mm

215 mm

Bobtot

Quick Setup Guide
KW58

5.1 CHANNEL HOME THEATER SYSTEM
Wireless Rear Satellite Speakers

Scan the QR code to access how-to videos, the user's manual, and other important information you may need to get the most of your item

P1

Like our product?
Share your experience with our customers on your page!

Having troubels?
Contact us: **service@bobtot.net**

What's in the box

*Subwoofer	1PC
*Wired Center & FL & FR Satellite Speakers	3PCS
*Wireless Connection SL & SR Satellite Speakers	2PCS
*RCA Video Audio Cables	1PC
*TV ARC Cable	1PC
*Optical Audio Cable	1PC
*Remote Control	1PC
*FM Antenna Cable	1PC
*User Manual	1PC
*Mounting Brackets and Srews	1SET

IMPORTANT SAFETY INSTRUCTIONS

CAUTION
RISK OF ELECTRIC SHOCK DO NOT OPEN

TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE AMPLIFIER PLATE. NO USER SERVICEABLE PARTS INSIDE. WE RECOMMEND TAKING THE UNIT TO A QUALIFIED SERVICE TECHNICIAN FOR ANY REPAIRS.

Read the following safety instructions before operating your home theater system.
- Do not place these speakers on an unstable surface. The speaker may fall over, causing serious injury to a child or adult and serious damage to the unit.
- Do not use these speakers near water or expose them to rain or moisture.
- The speakers should be situated away from heat sources such as radiators. heat registers, stoves, or other devices that produce heat.
- To reduce the risk of electric shock or component damage, unplugged the power before moving your speakers or connecting other components to your device.
- Clean only with a soft dry cloth. Unplug the main unit from the wall outlet before cleaning.

CAUTION: Always use a power outlet that is properly grounded.

2

P2

BEST PLACEMENT FOR 5.1 Home Theater System

1. Most people place the subwoofer in the front of the room, near the sound input source,for ease of connection. But since bass frequencies are omnidirectional the subwoofer canbe placed anywhere. Try placing it near a wall or a corner for increased bass.
2. The center channel speaker should be place directly in front of the listening position,above or below the sound input source. If possible, tilt it as necessary to direct the soundto ear level.
3. Mount the front speakers on the wall, directly to the left and right of the center channelspeaker. Angle them towards the listening postion. Preferably, the tweeters should be atear level.
4. Mount the satellite speakers on the wall, slightly behind the listening position, about1 to 2 feet above ear level. If side placement isn't possible place them to the rear of thelistening position and angle them forward.

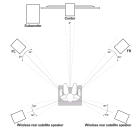

SET UP CENTER & FL & FR SATELLITE SPEAKERS

Place speakers in the ideal position,using the built-in electric cableto connet the center & front satellite speakers to the "**CEN & FL & FR**"of the Audio Output RCA socket on the subwoofer unit.

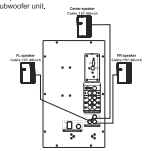

3

P3

SET UP REAR WIRLESS SATELLITE SPEAKERS

Rear satellite speakers (SL and SR) with a wireless connection that you could place in any corner within 32 feet from the subwoofer.

1:Plug the SL and SR speakers into the power.
2:Turn on the SL and SR speakers one by one **within 1-2 seconds**. The indicator light on the back panel is solid blue when pairing successfully.
3:Rear wireless speakers are only for **5.1 mode** not for 2.1 mode.

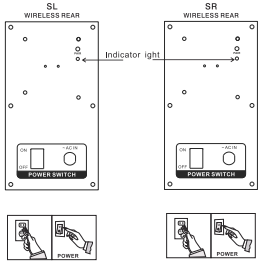

4

P4

SYSTEM CONNECTION DIAGRAM

Verify that your device can be used to input sound from audio/video for other external sound source devices, and ensure your device have an available jack to match the appropriate port on the subwoofer.

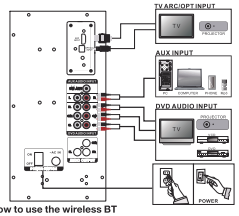

How to use the wireless BT

1. Make sure the subwoofer and 5 satellite speakers are connected correctly and are powered "**ON**" status.
2. Press the " **ST.BY** " button before selecting the mode.
3. Press the "**INPUT**" button to switch mode to" **BT** "status, which is showing in the LED display of the subwoofer.
4. Search BT device with name" **Bobtot KW58** "
5. Connect the BT

Note: If your BT device is below 2.0 version, input password " 0000 " when connecting.



5

P5

FRONT PANEL OF SUBWOOFER

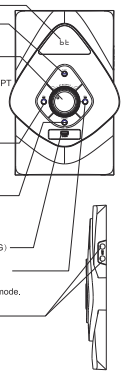

6

P6

BACK PANEL OF SUBWOOFER

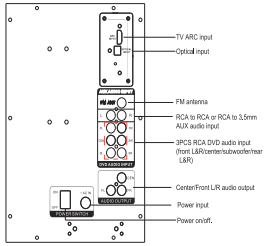

MOUNTING INSTRUCTIONS

Before you begin please make sure you have the proper tools and necessary accessories. For this installation you will need the following items:
- mounting brackets and screws (included)
- wall hooks (optical, not included)
- speaker cable (built-in, included)
- drill (not included)
- phillips screw driver (not included)



7

P9

REMOTE CONTROL FUNCTIONS

⏻ : Power/Standby

MUTE: Press "MUTE" to mute all output.

BT: Press "BT" to use BT input mode. The LED Display will blink while searching for a BT device, pair with "**Bobtot KW58**" in your mobile device BT menu.

ARC/OPT/DVD/AUX/USB/FM:
Press the corresponding mode on the remote control to enter direct**y.**

5.1/2.1: Switch from 2.1 and 5.1 surround mode**.**

SLEEP:-/+: Set the sleep time.

SAVE: Press "SAVE" to save FM channels for memory.

TUNE+/-: Tuning the FM channels

|◀◀: In BT/USB mode, press to play the previous song.
CH-: In FM mode, press to go to the previous radio station channel.

▶|| : Short Press to play/pause in BT/USB mode.
AUTO: Long press to search for the FM channels automatically/ stop to search for the FM channels in FM mode

▶▶|: In BT/USB mode, press to play the previous song.
CH+: In FM mode, press to go to the next radio station channel.

FRONT: Press "FRONT" to select the front speakers, the output level can be adjusted by using the " VOL-/+ " buttons.

CENT: Press "CENT" to select the center speakers, the output level can be adjusted by using the " VOL-/+ " buttons.

REAR: Press "SURR" to select the rear satellite speakers, the output level can be adjusted by using the " VOL-/+ " buttons.

SUBWOOFER: Press "SUB" to select the subwoofer, the output level can be adjusted by using the " VOL-/+ " buttons.

VOL+/-: Adjust the main volume.

MIC+/-: Adjust the volume of microphone when plugging in the microphone.BT/USB mode (mpinecrophone), press to adjust EQ (1/2/3/4/5-left (POP,ROCK,JAZZ, CLASSIC, COUNTRY)

ECHO+/-: Adjust the reverb when plugging in the microphone. If not plug in the microphone, press "ECHO+/-" to adjust the LED display brightness showing in the front of subwoofer.

0-9 NUMBER: In USB mode , press the number buttons to select the desired track. In FM mode, press the number buttons to select the desired radio station.

REPEAT: Press to single loop (music)/repeat all songs/random playback in BT/USB mode.

RESET: Press to default state.

NOTE:
1. Turn on the unit, please press the "Power" button before selecting the input mode.
2. If the remote control does not work, please replace the batteries and try again.

8

P10

Connect your TV

1. Plug the **TV ARC / Optical / Coaxial cable** into the audio input on the back of the subwoofer, the other port plugs into the socket of your TV.
2. Make sure the 5 satellite speakers have been plugged into the audio output of the subwoofer and are in the " **Power On** "status.
3. Press the " **ST. BY** " button on the subwoofer or press " ⏻ " on the remote to start this system.
4. Press the " **INPUT** " button on the subwoofer to switch mode " **ARC/OPT/COA** ", which is showing in the LED display of the subwoofer, or press the " **ARC/OPT/COA** "button on the remote.
5. TV Setting- Sound output - select your mode to " **TV ARC / Optical / Coaxial** "
6. TV Setting- Expert Setting - Digital Output Audio Format Setting to " **PCM** ".

Note:
1.For optical connections, please make sure the protective caps at the ends of the optical cable are removed before plugging it in.
2.The coaxial cable is not included.

Other System Connection

1. For 5.1 surround sound, insert audio cables from your device into the corresponding DVD speaker sockets at the back of subwoofer. (FL/FR, CEN/SW,SL/SR input)
2. For dimensional sound, you can insert the audio cable connected to the AUX port of your device into the back of subwoofer, or insert a USB flash drive into the USB socket at the front of the subwoofer, or insert an SD/MMC card into SD input at the front of subwoofer.
3. For clear, stronger FM signal, insert white antenna cord into FM Antenna socket at the back of subwoofer. Press" **FM** "on the remote control to enter FM mode, and then press " **AUTO/ ▶||** " to search the stations automatically and will save the FM station automatically.
4. In FM mode, semi - automatic station - searching, press " **TUNE+/-** "to select a station you like.
5. Support microphone, only plug into the MIC 1 & 2 input and play it. Press " **MIC+/-** " on the remote to control the mic volume. Press " **ECHO+/-**" on the remote to adjust the ECHO.

9

P11

How to use FM radio by Antenna

1. Plug the white Antenna cable into the back of the subwoofer.
2. Make sure the subwoofer and 5 satellite speakers are connected correctly and are powered "**ON**" status.
3. Press the " **ST.BY** " button before selecting the mode.
4. Press the "**INPUT**" button to switch mode to" **FM** "status, showing in the LED display of the subwoofer.
5. Long press the "**AUTO**" button about 3seconds, it will be automatically searching for radio stations.
6. Press the "**TUNE+/TUNE-**"button to search for a station you like. Press the "**CH-/CH+**"button to select the broadcast channel you like. Press the "**SAVE**" button, it saves the radio channel, and you can see " **good** " shows in the subwoofer display.

Microphone for Karaoke

KW58 home theater systems support wireless or wired microphone by 1 or 2 mics jack together.

1. Wireless microphone: plug the mic receiver into the mic jack of the subwoofer.
2. Wired microphone: plug in and play it.
3. Control the mic volume: press the " **MIC+/ MIC-** " button by remote.
4. Control the mic echo effect: press the " **ECHO+/ ECHO-** " button by remote.

SPECIFICATIONS

Input voltage: AC 100~240V~50/60Hz

Hom frequency response: 20Hz-20KHz

System impedance: 6.5°: 8 Ohm / 3°driver: 4 Ohm

Signal to noise ratio:≥70dB

Subwoofer dimensions: W221 xH330 x D316mm

Center satellite speaker dimensions:W104xH180xD102mm

Front L/R satellite speaker dimensions: W104xH180xD102mm

Rear L/R satellite speaker dimensions: W104xH180xD102mm

Cable length:Front L/R:157.48inch, Center: 157.48inch

Net weight: 20.67lb(9.1 Kg)

10

P12

Certification

FCC Warning

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:
(1) This device may not cause harmful interference, and
(2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device,pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.
This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.

-Increase the separation between the equipment and receiver.

-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

-Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment.
This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

11

P13

Need Help ?

Customer Care Guide

At our company, we strive to provide exceptional customer care to every one of our clients. We believe that building strong relationships with our customers is essential to the success of our business. To help us achieve this goal, we have put together the following customer care guide.

Time

We understand that our customers' time is valuable, so we will respond to any inquiries within 24 hours.

Feedback

We know that our customers are the heart of our business so we value your feedback. We encourage you to share your thoughts and ideas with us.

Solutions

If our customers encounter any issues, we will try our best to find a quick and efficient solution that meets your needs.
Here at Bobtot, we take customer care very seriously. Our customers are our first priority, and we are committed to providing the highest quality service. If you have any questions or concerns, please don't hesitate to reach out to us. We will be happy to assist you:
Call or Message: **+1（888）572-1718**
Email: **service@bobtot.net**

bobtot.net

© BOBTOT // Features and specifications are subject to change and or improvement without notice.

P14

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本

发行文件

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本

发行文件

说明：尺寸：140x215mm
材质：128G铜版纸 四色双面印刷 8张装订本