Product User Manual

Model: MZL-D01

Tips

Please carefully read these instructions before use and keep them for f uture reference
When using this device, basic safety precautions should always be take n
Before connecting the device to the main power supply, check if the vo ltage displayed on the nameplate matches the local voltage
- Keep devices and adapters out of reach of children

Keep equipment and adapters away from high temperatures and preve nt collisions to avoid damage
- Keep the equipment free of dust, lint, etc
- Keep equipment away from heat sources, direct sunlight, water, and any other liquids

This device is not a toy
This device is suitable for use at the age of 8 and above. People who ar e not familiar with this device are not allowed to use it alone. They nee d to be supervised and guided by someone who is familiar with this dev ice
- Children should be supervised to ensure that they do not use this de vice as a toy

Do not immerse the device in water or any other liquid
Do not operate this device with wet hands
Do not leave this device unattended during use
If the device is exposed to water, moisture, or any other liquid, do not c ontinue to use it to prevent electric shock, explosion, and injury to you rself and the device
Do not unplug the device from the main power supply by pulling the p ower cord. Turn off the power and manually unplug the plug
Do not use this device for purposes other than labeling
Do not move this device while in use
Do not put foreign objects into any openings of this device
Do not store this device in direct sunlight or high humidity environmen ts
Except for the supplied accessories, no other accessories shall be u sed
- Do not play music at high volume, as it may damage hearing an d equipment

After use, before cleaning, and during maintenance, the power plu g must be unplugged
This machine is only for household use and should not be used fo r commercial purposes
The device must be placed on a flat and stable heat-resistant surfac e
Children without adult supervision are not allowed to clean, use, a nd maintain
Only adapters provided with this device or with identical parametr s can be used
Warning: Stay away from flammable materials

packing list

After opening the product packaging, please carefully check the follo wing items before use:
1. MZL-D01 desktop player * 1
2. Product User Manual * 1
3. Record fluff pad * 1
4. Recorder black belt * 1
5. Power adapter * 1

Product Introduction

Music player function: second speed adjustment: 33 ⅓, 45, rpm/sin ging arm with lifting lever function/singing arm automatic stop fu nction
Head configuration: Dynamic magnetic head model AT3600L
Bluetooth input: Bluetooth connection playback
Drive method: belt transmission system
Built-in speaker: Built-in (4 speakers) full frequency dynamic spea ker with clear and transparent sound
Signal output: RCA output jack - Connect to external speaker syste m
Audio input: AUX IN 3.5mm interface record player can be used a s a sound source for mobile phones/computers through audio cabl e connection
Audio output: 3.5mm ear amplifier interface, can use wired headp hones, or use audio connection cable to connect external audio eq uipment

Better understanding of product structure

1. Dust cover
2. Hinge hinge
3. Singing arm lifting rod
4. Singing arm
5. Ear amplifier audio input interface
6. Function mode switching
7. ON/OFF - Volume adjustment
8. Phonograph
9.45 RPM Large Hole Recording Adapter
10. Turntable
11. Power interface
12. Singing and Playing
13. AUX audio input interface
14. RCA audio output interface

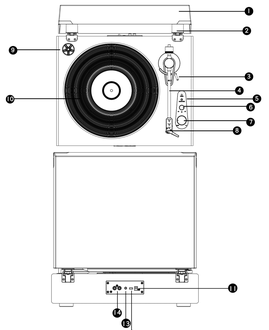

instruction

Remove the phonograph from the packaging box
Store or handle packaging boxes in a safe manner
Find a flat and stable surface to install your record player

Start assembling the machine

1. First, place the turntable on the center shaft of the machine
2. Then press the belt onto the motor shaft



1.1

1.2

Usage of phonograph

Play a record
1. Put your Phonograph record on the turntable of the phonograph, an d set the phonograph speed to match the record speed (33 1/45 RPM).
2. Open the locking buckle of the singing arm, remove the singing ar m, and gently move it to the desired position above the record.
When the singing arm moves towards the turntable, the turntable begi ns to automatically rotate, gently lowering the stylus onto the record t o start playing.
3. After playing, put the singing arm back to its original position and t he turntable will automatically stop rotating.
4. Turn on the automatic stop function, and when the record ends play ing, it will automatically stop rotating.
If the automatic stop function is turned off, the disc will continue to ro tate even after the record is played.
Note: If your album has a large aperture of 45rpm, you must use a 45r pm converter.

Bluetooth usage method

1. Turn on the switch and Bluetooth will automatically turn on.
2. Ensure that devices (tablets, phones, computers) that have Bluetoot h enabled have Bluetooth turned on.
Go to Bluetooth settings and check and connect Bluetooth pairing nam e 'Vintage Turntable'
3. Manually switch to Bluetooth mode with "Di dong" prompt tone and LED
The blue light flashes, the player starts working, you can hear the sou nd, and the Bluetooth device is ready to pair,
Connect ODI on the Bluetooth device, and the prompt tone will remi nd you that the Bluetooth device has successfully connected after pairi ng is completed

Using the LINE IN function

1. Audio jack LINE IN playback mode: The knob function switch mode is manually switched to LINE IN mode, and the prompt tone is "Di don g".
2. Prompt tone and LED purple light, play device jack LINE IN, and the n the sound will be transmitted from another playback device
Lose to our player. Insert the audio cable into the LINE IN jack and th e player will play.

Using RCA function

RCA output jack/connection to speakers: Use an audio cable to connec t external speakers (active speakers only)
And the RCA OUT jack on the rear panel of the player, and then the so und will be transmitted from the turntable to the external powered spe akers.



Precautions for maintenance

When opening or closing the dust cover, handle it gently and hold the center or both sides
2. Do not touch the tip of the stylus with your fingers to avoid hitting t he edge of the turntable or record
3. Regularly clean the needle tip of the stylus - only use a soft brush to wipe "from back to front"
4. If needle cleaning solution must be used, please use it with caution
5. Gently wipe the dust cover and the surface of the rotary table with a soft cloth, using only a small amount of mild cleaning agent to clean
6. Do not apply irritating chemicals or solvents to any part of the recor d player

improving performance

When opening or closing the dust cover, grasp its center or sides and h andle it gently.
Do not touch the stylus with your fingers to avoid it touching the edge of the disc or record.
Regularly clean the stylus with a soft brush.
If it is necessary to use stylus cleaning solution, please use it as little a s possible.
Gently wipe the dust cover and player body with a soft cloth.
When picking up and playing a record, keep your hands clean and hol d the edge of the record.
Touching the surface of a record can cause a decrease in playback qua lity.
When not in use, store the record in a protective case.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

RF warning for Portable device: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.