SETUP INSTRUCTIONS
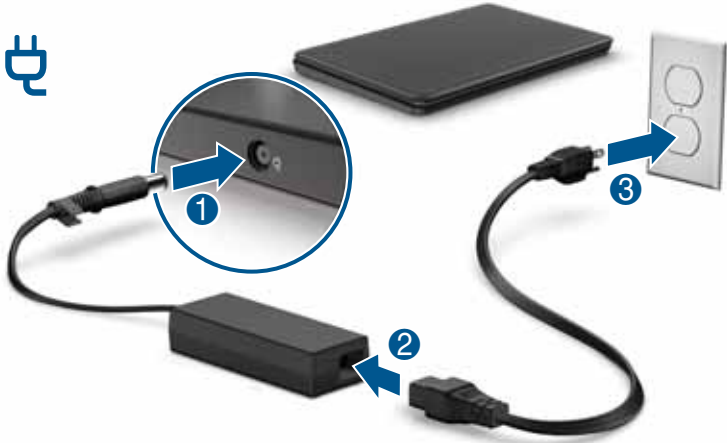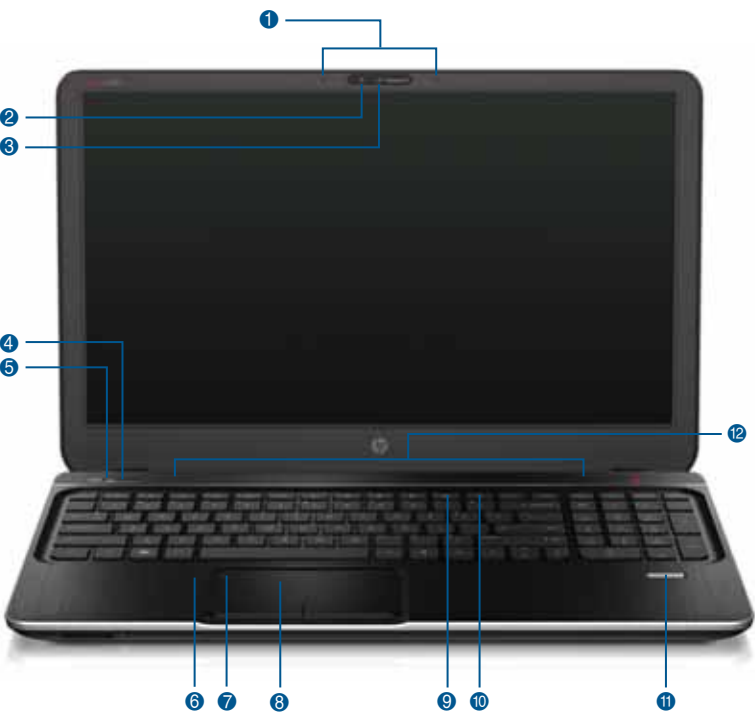
Quick Setup

1

2 🔋

3 🔌

4 ⏻

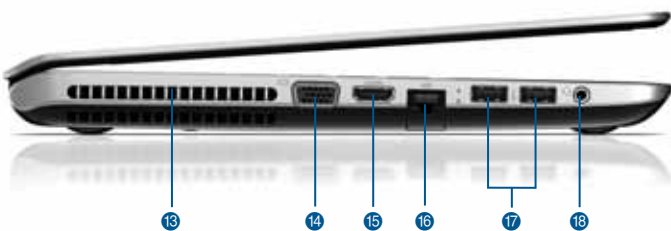## Quick Tour

① Internal microphone (2)
② Webcam light
③ HP TrueVision HD Webcam
⏻ ④ Power button
⑤ Power light
⑥ TouchPad light
⑦ TouchPad on/off button
⑧ TouchPad
⑨ Mute key/Mute light
⑩ Wireless key/Wireless light
⑪ Fingerprint reader
⑫ Speakers (2)

⑬ Vent
⑭ External monitor port
⑮ HDMI port
⑯ RJ-45 (network) jack
⑰ USB ports (2)
⑱ Audio-out (headphone) jack/
   Audio-in (microphone) jack
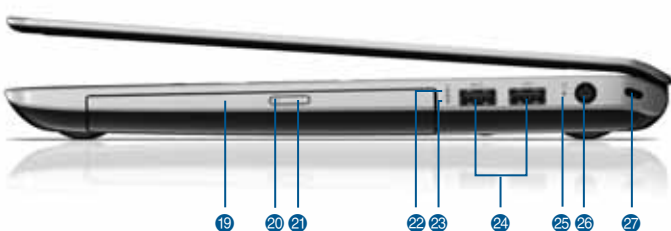
⑲ Optical drive
⑳ Optical drive light
㉑ Optical drive eject button
㉒ Power light
㉓ Hard drive light
㉔ USB ports (2)
㉕ AC adapter light
🔌 ㉖ Power connector
㉗ Security cable slot

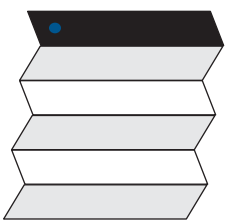Based on usability testing, the icon has been moved next to the power connector label.

㉘ Digital Media Slot

📝 **NOTE:** Computer color, features, and accessories may vary.
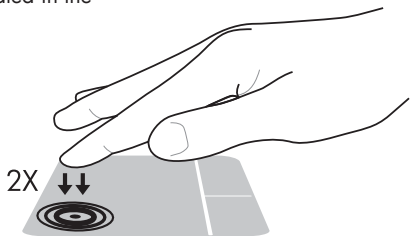
Replace this box with PI statement as per spec.

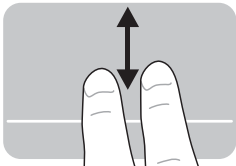683557-001

TouchPad Features

Turn the TouchPad off and on

Quickly double-tap the TouchPad on/off button located in the upper-left corner of the TouchPad.
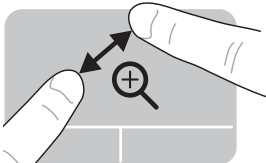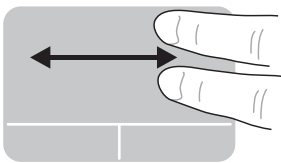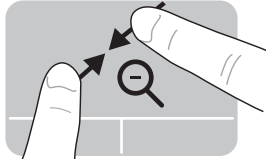
2X

Use touch gestures

TouchPad gestures make it easy and fun to work with images or pages of text. With a light touch, use 2 fingers on the TouchPad simultaneously to activate these gestures.

Scroll

Pinch/Zoom

NOTE: Some software programs do not support gestures.

More Features

Go wireless

Wireless features provide the most flexibility and convenience for staying connected to your family, friends, work, and the Internet.

To connect to a wireless network:

1. Click the network icon in the notification area.
2. Select your network from the list of available networks.
3. Enter the security key, if required.

For more information about wireless networks, see your user guides.

Locate your user guides

- On Windows® models, click **Start**, click **Help and Support**, and then click **User Guides**.
- On Linux models, double-click the **HP Documents** icon on the desktop.
- Refer to the *User Guides* disc included with some models.

NOTE: You do not need to connect to the Internet to access Help and Support and the user guides.

Locate system information

Depending on your computer model, a service label is either affixed to the bottom of the computer or is located inside the battery bay or beneath the service door.

If you're using Windows®, briefly press the **fn+esc** key combination to display the System Information screen, which provides the product name and serial number of your computer, as well as information about the memory, processor, BIOS, and keyboard.

Software terms

By installing, copying, downloading, or otherwise using any software product preinstalled on this computer, you agree to be bound by the terms of the HP End User License Agreement (EULA). If you do not accept these license terms, your sole remedy is to return the entire unused product (hardware and software) within 14 days for a refund subject to the refund policy of your place of purchase.

For any further information or to request a full refund of the computer, please contact your local point of sale (the seller).

Limited Warranty

You can find the expressly provided HP Limited Warranty applicable to your product located with the user guides on your computer and/or on the CD/DVD provided in the box. In some countries/regions, HP may provide a printed HP Limited Warranty in the box. For some countries/regions where the warranty is not provided in printed format, you may request a printed copy from http://www.hp.com/go/orderdocuments or write to:

North America:
Hewlett-Packard, MS POD, 11311 Chinden Blvd., Boise, ID 83714, USA

Europe, Middle East, Africa:
Hewlett-Packard, POD, Via G. Di Vittorio, 9, 20063, Cernusco s/Naviglio (MI), Italy

Asia Pacific:
Hewlett-Packard, POD, P.O. Box 200, Alexandra Post Office, Singapore 911507

When you request a printed copy of your warranty, please include your product number, warranty period (found on your service label), name, and postal address.

IMPORTANT: Do NOT return your HP product to the addresses above. For U.S. support, go to http://www.hp.com/go/contactHP. For worldwide support, go to http://welcome.hp.com/country/us/en/wwcontact_us.html.

WARNING: To reduce the risk of electric shock or damage to your equipment:
- Plug the power cord into an AC outlet that is easily accessible at all times.
- Disconnect power from the computer by unplugging the power cord from the AC outlet (not by unplugging the power cord from the computer).
- If your power cord has a 3-pin attachment plug, plug the cord into a grounded (earthed) 3-pin outlet. Do not disable the power cord grounding pin, for example, by attaching a 2-pin adapter. The grounding pin is an important safety feature.

For more safety and regulatory information, and for battery disposal information, refer to the *Regulatory, Safety and Environmental Notices* provided with your user guides. To locate the user guides for your computer, refer to the "Locate your user guides" section of this poster.

WARNING: To reduce the possibility of heat-related injuries or of overheating the computer, do not place the computer directly on your lap or obstruct the computer air vents. Use the computer only on a hard, flat surface. Do not allow another hard surface, such as an adjoining optional printer, or a soft surface, such as pillows or rugs or clothing, to block airflow. Also, do not allow the AC adapter to contact the skin or a soft surface, such as pillows or rugs or clothing, during operation. The computer and the AC adapter comply with the user-accessible surface temperature limits defined by the International Standard for Safety of Information Technology Equipment (IEC 60950).

WARNING: To reduce the risk of serious injury, read the *Safety & Comfort Guide* provided with your user guides. It describes proper workstation setup, and proper posture, health, and work habits for computer users. The *Safety & Comfort Guide* also provides important electrical and mechanical safety information. The *Safety & Comfort Guide* is also available on the Web at http://www.hp.com/ergo.