RCG Holdings Limited

FCC ID VV8-RCGI9CRW

-Operational description-

Name of each part

Front

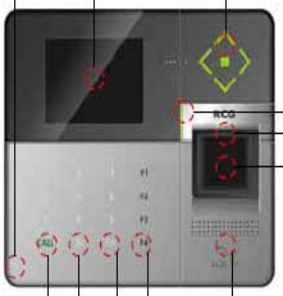

- Microphone
  Used when connected to interphone.
- Color LCD
  Displays terminal status (T&A mode, notice, etc.) and current time.
- Navigation key
  ▼ : Move down in Admin menu or view detailed T&A function key
  ▲ : Move up in Admin menu or hide detailed T&A function key
  ► : Show the next setting value in Admin menu or input a dot (.) when entering IP address
  ◄ : Show the previous setting value in Admin menu or delete a numeric when entering user ID or PIN
  OK : Confirm the selected setting or initiate a fingerprint scanning manually.
- LED
  Blue LED is turned on with power supplied and flickers when waiting for fingerprint scanning.
- Speaker
  Outputs various sound effects, music, and voices.
- Fingerprint sensor
  Place a finger here to scan fingerprint.
- Numeric key 0~9
  Used to enter user ID or PIN.
- Function key
  Used to input a T&A event and initiate fingerprint scanning.
- ESC key
  Used to enter Admin menu from initial display or return to the previous menu from Admin menu.
- CALL key
  When connected to interphone, press this button to ring the interphone.
- RF card reading part (RF model only)
  Place RF card here to read