


bandedge

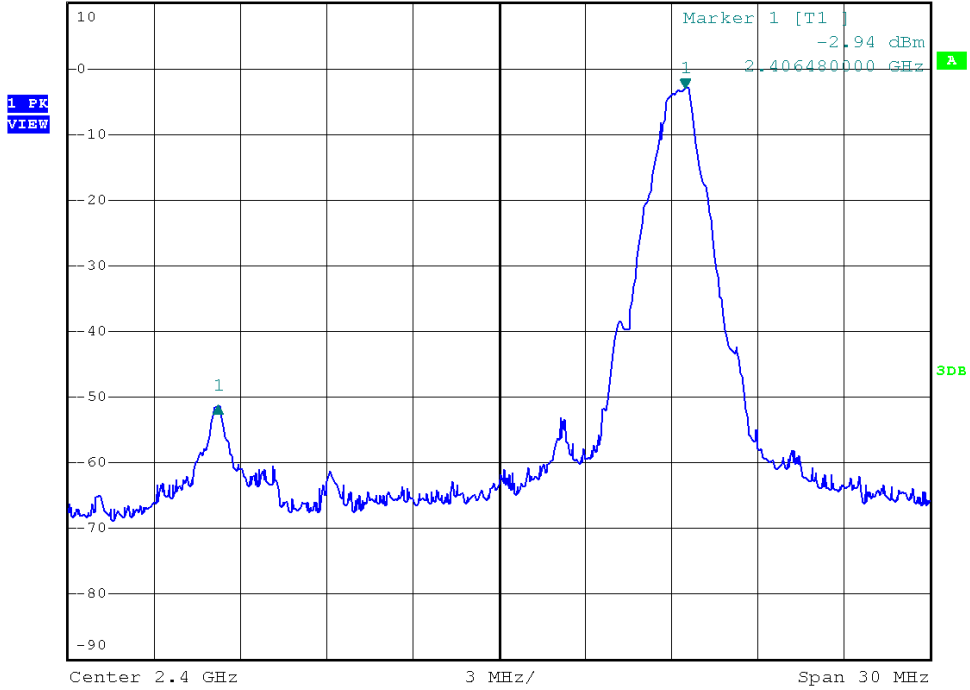

*RBW 300 kHz Delta 1 [T1]
*VBW 1 MHz -48.24 dB
Ref 10 dBm *Att 20 dB SWT 2.5 ms -16.260000000 MHz



*RBW 300 kHz Delta 1 [T1]
*VBW 1 MHz -48.65 dB
Ref 10 dBm *Att 20 dB SWT 2.5 ms 15.780000000 MHz

