





# nexTouch™ Keypad Access Exit Trim Lock Touchscreen and Push Button Installation and Programming Instructions

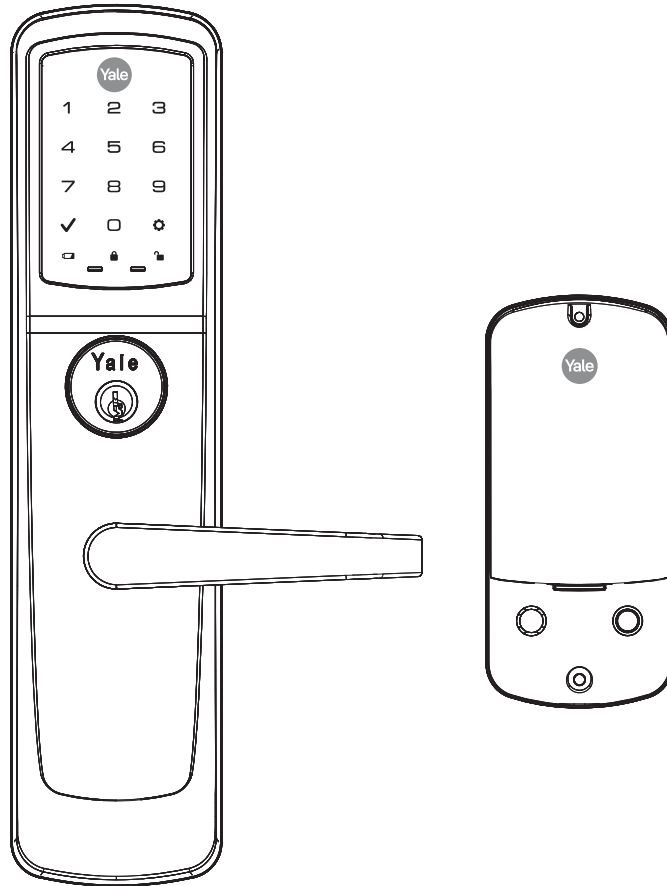

## WARNING

This product can expose you to lead which is known to the state of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65warnings.ca.gov](http://www.P65warnings.ca.gov).




08/2018

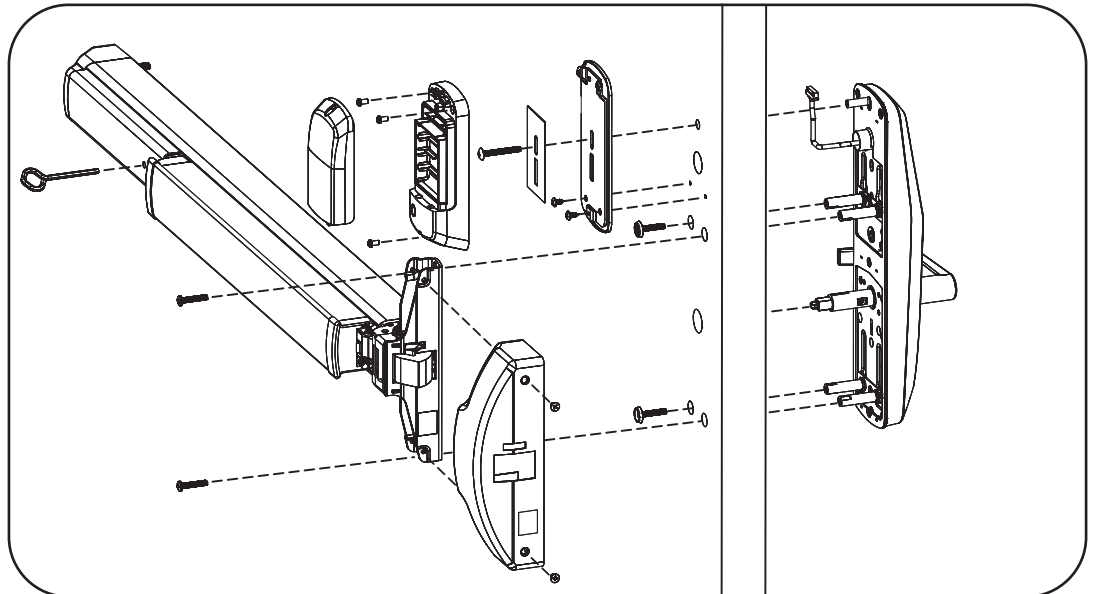

Retrofitting or modifying this product may impact fire rating, safety features and warranty.  
Consult with code specifications to ensure compliance with all codes and ratings.



# Before You Begin

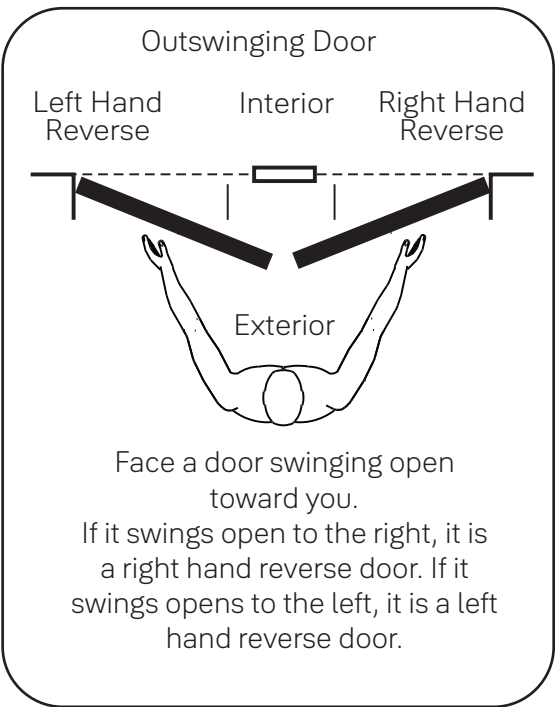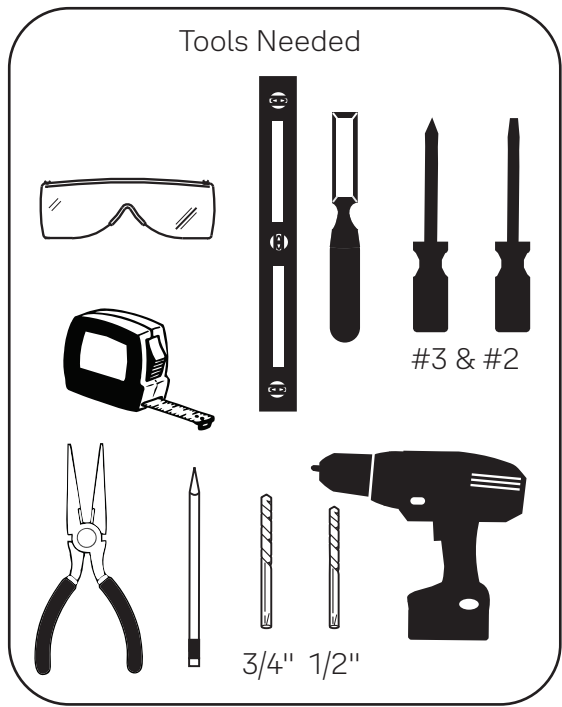
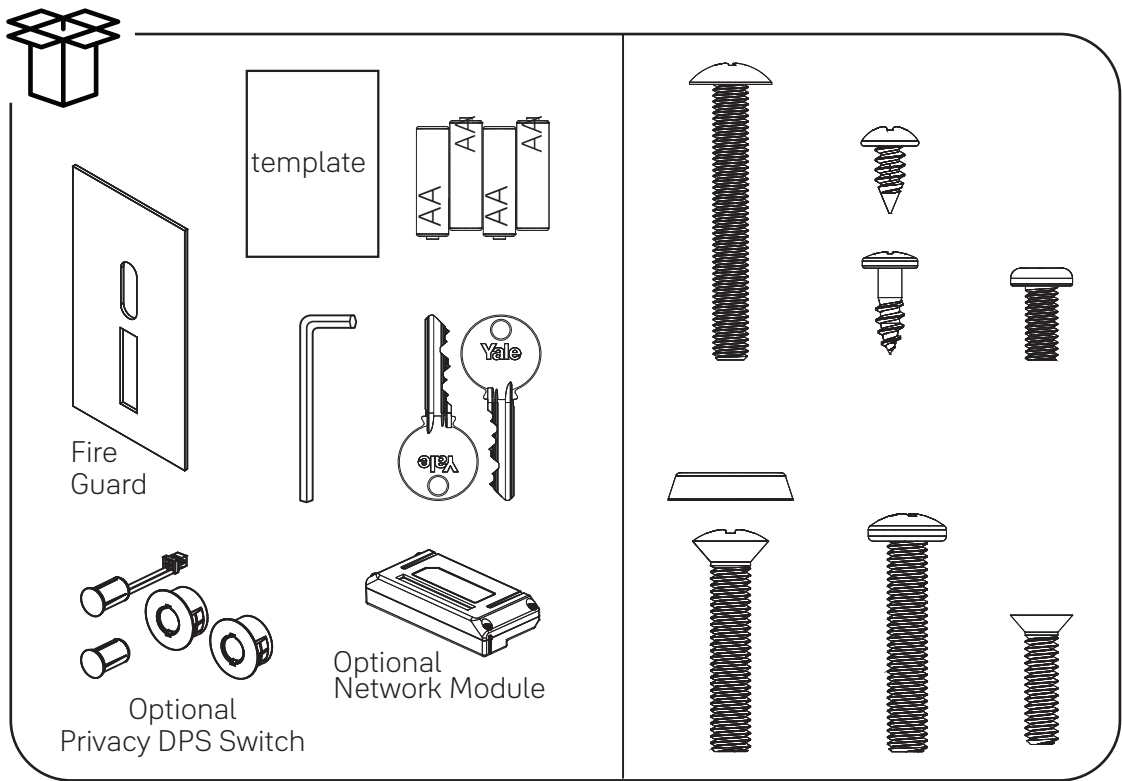


# 0 optional

## Door Position Switch Option

### Privacy DPS Switch

With Door Position Switch installed and door closed, all keypad functions can be disabled by Privacy Button.

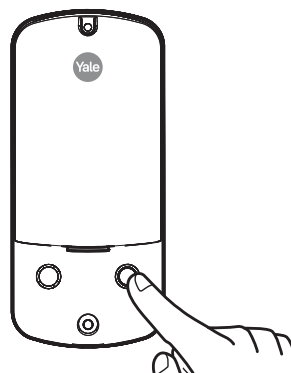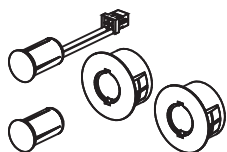

# 1 Tools

## Prepare Door




DPS Option  
for Privacy Function

Wood Door:  
3/8" Dia. Thru to  
Hole in Door Face

\*Metal Door:  
3/4" Dia. Thru to  
Hole in Door Face





**\*Metal Door Installations**  
Supplied plastic collar  
MUST be installed for DPS  
to function properly.

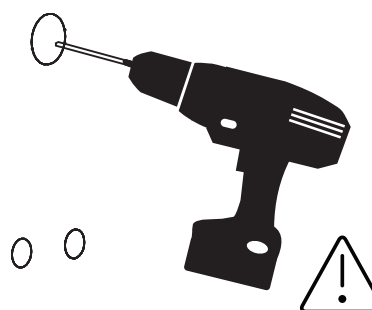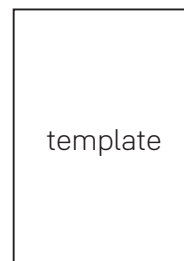

Drill holes 1/2 way thru  
door then complete  
from other side to  
prevent splitting.

# 2


## Install Cylinder

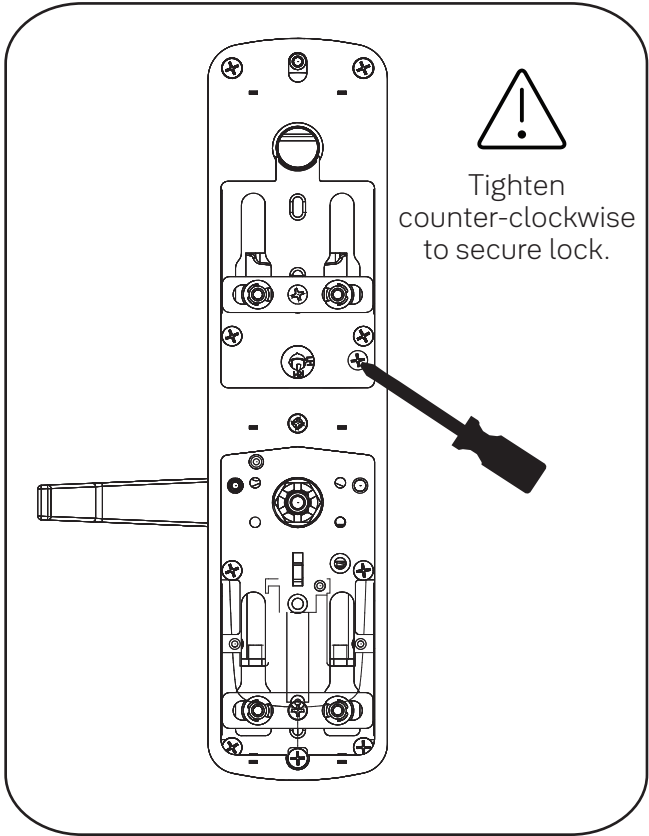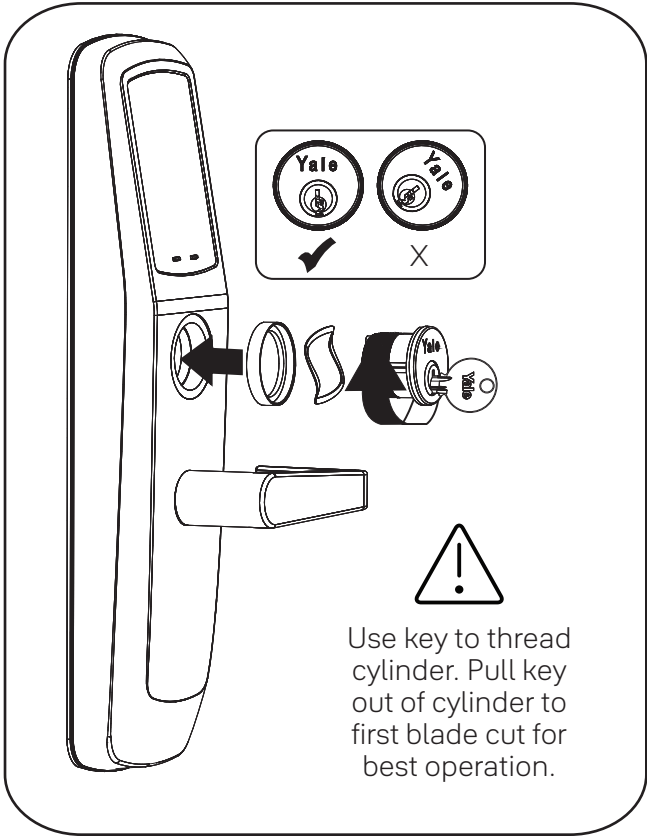

If using cylinder other than 1-1/8", a new collar must be used that is sized appropriately for cylinder length.


# ✓

## Test Cylinder

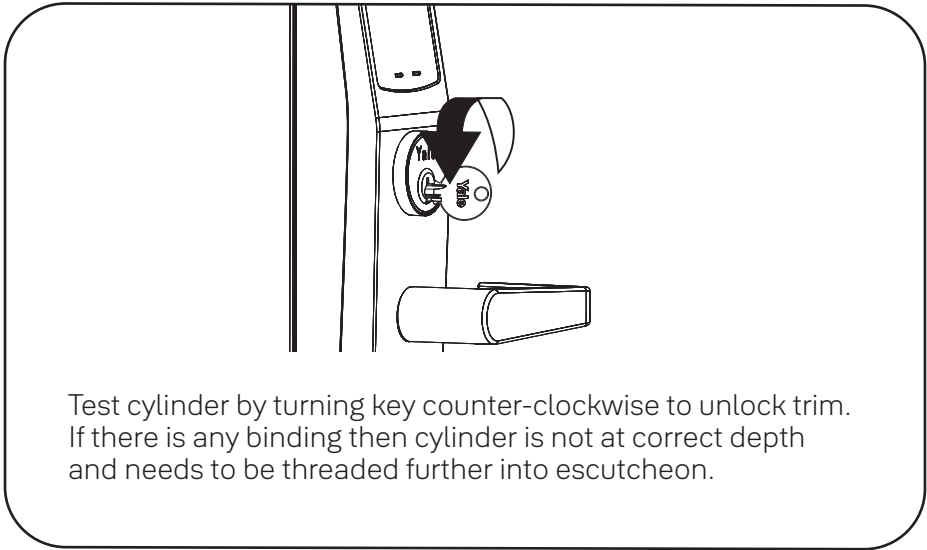


# 3






## Change Hand of Trim (if necessary)

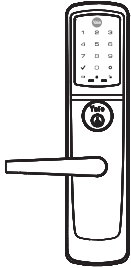

Left Hand Reverse

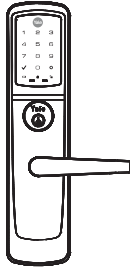


Right Hand Reverse

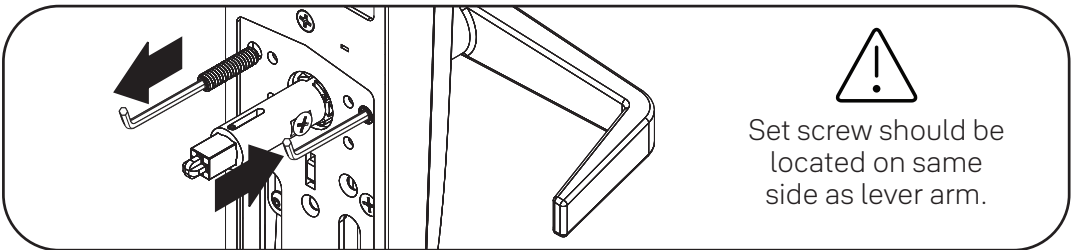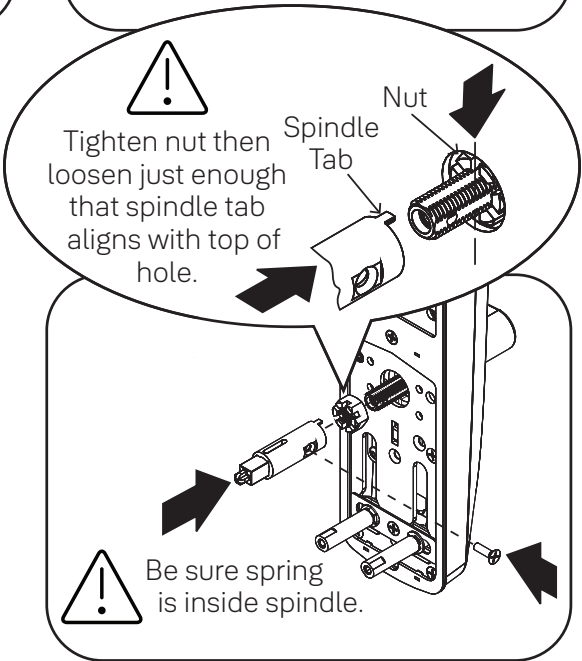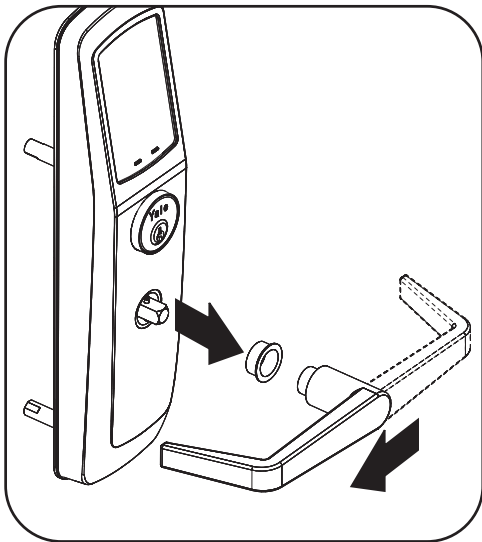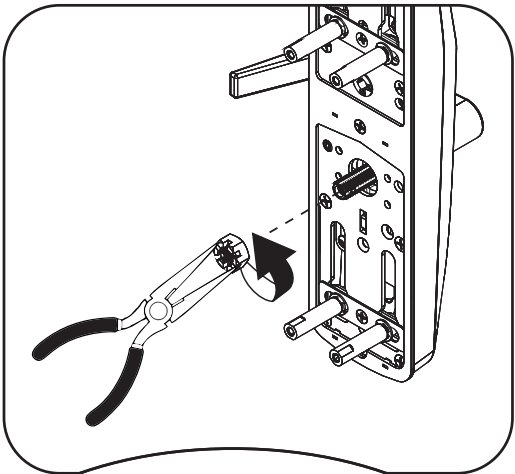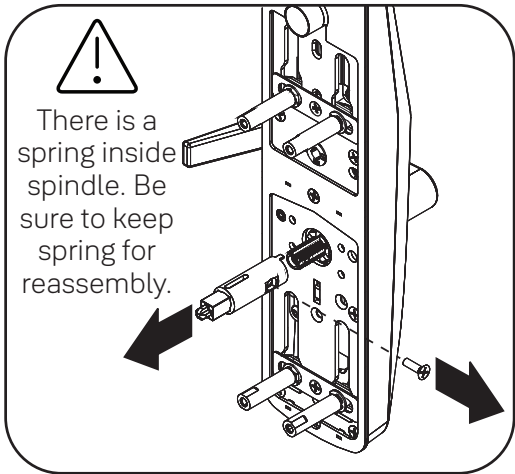





## Install Outside Trim Assembly

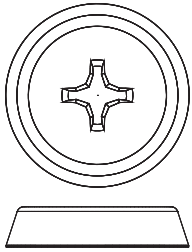

#10-32 x 1" OHPMS




x2

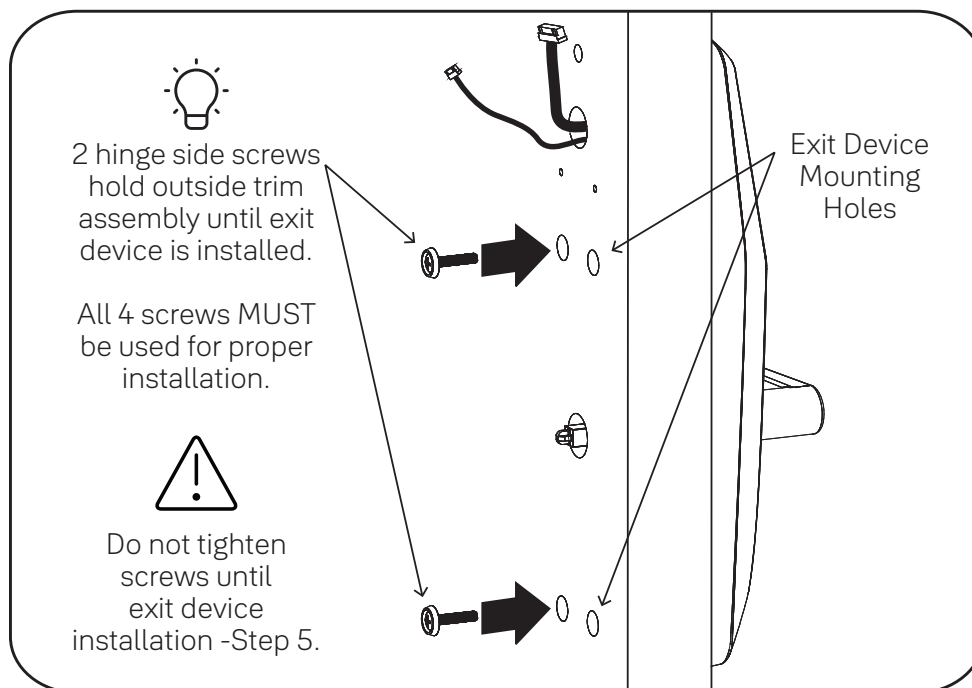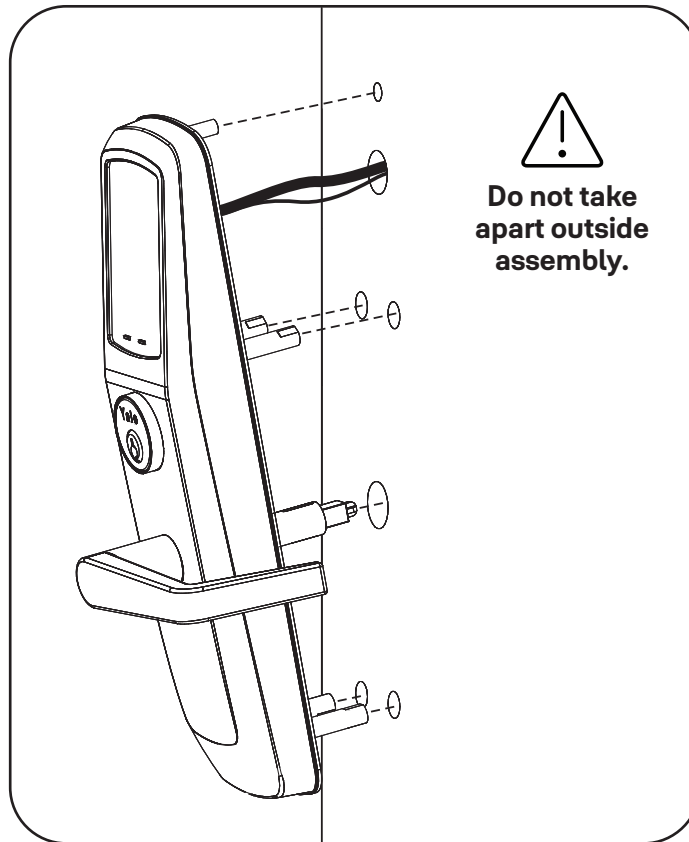

# 5



## Install Exit Device

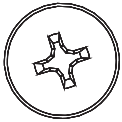

#10-32 x 1" PHMS



x2

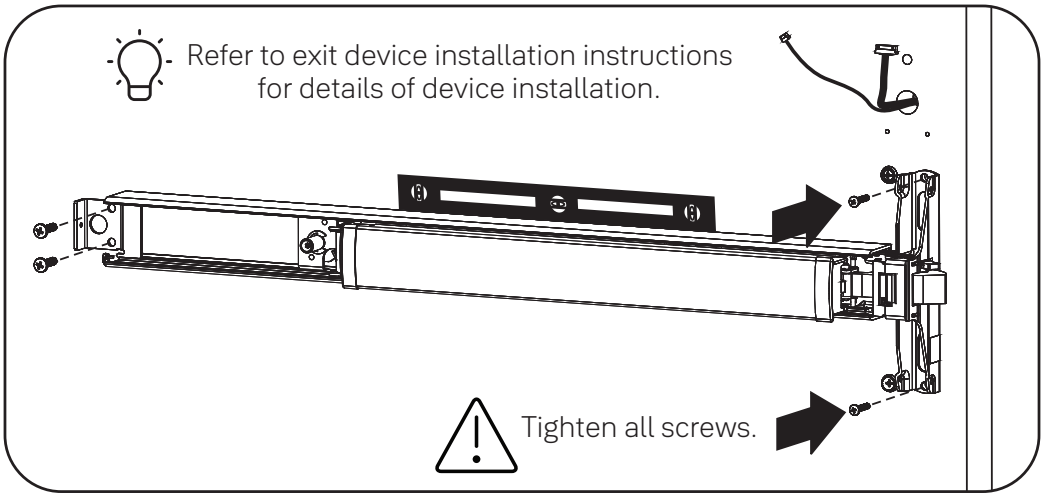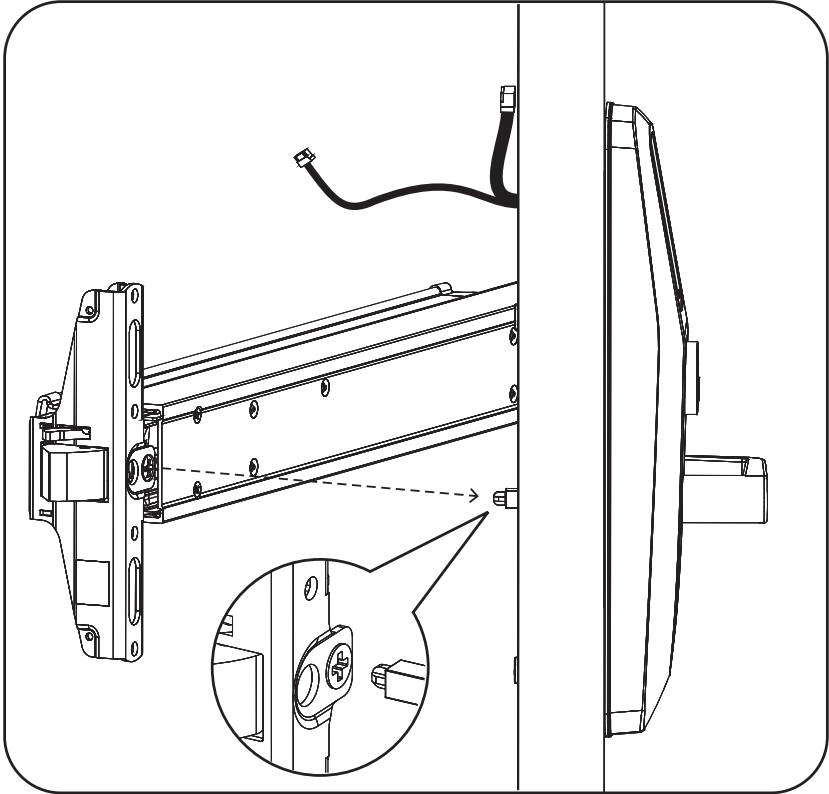

## Test Mechanical Lock Function by Key, Lever and Keypad

# 6

## Install Strike and Optional DPS



#10-24 PFHMS



**x3**


DPS Option  
for Privacy Function

\*Metal Frame:  
3/4" Dia. x 1"

See Instructions with DPS Kit



\*Supplied plastic collar **MUST**  
be installed for DPS to  
function properly.

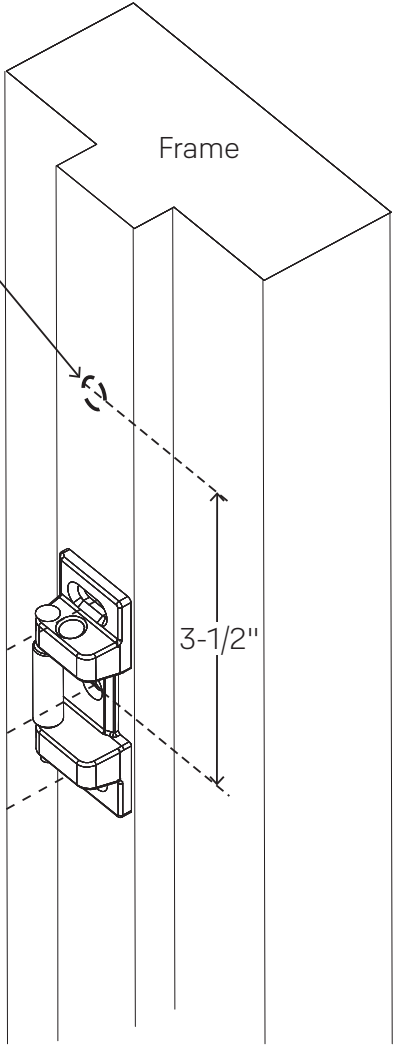

Strike must be centered with exit device bolt. For  
proper engagement, door should remain latched  
and not rattle when pushed, pulled or shaken in/out.







Refer to exit device installation instructions  
for details of strike installation.




# 7

## Install Inside Mounting Plate

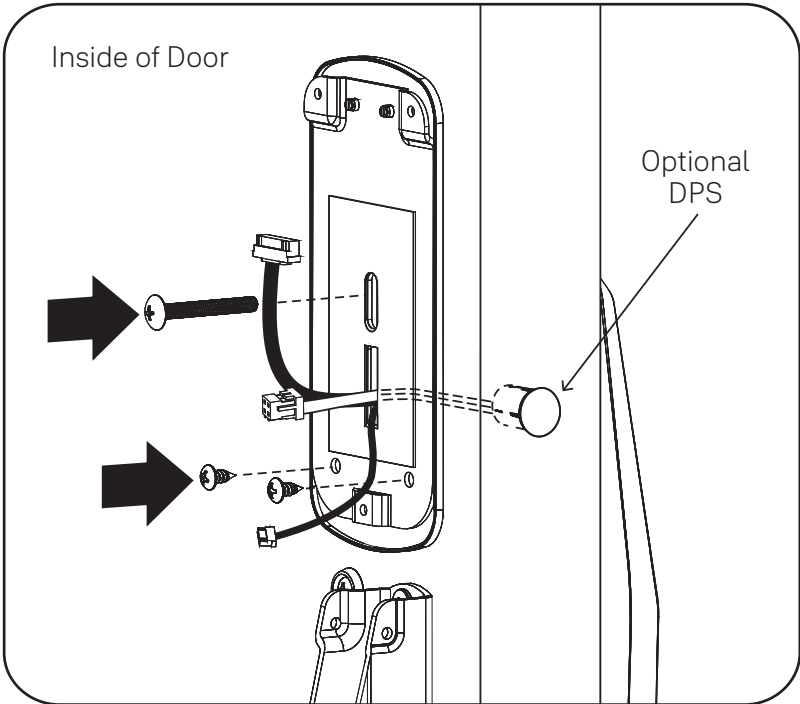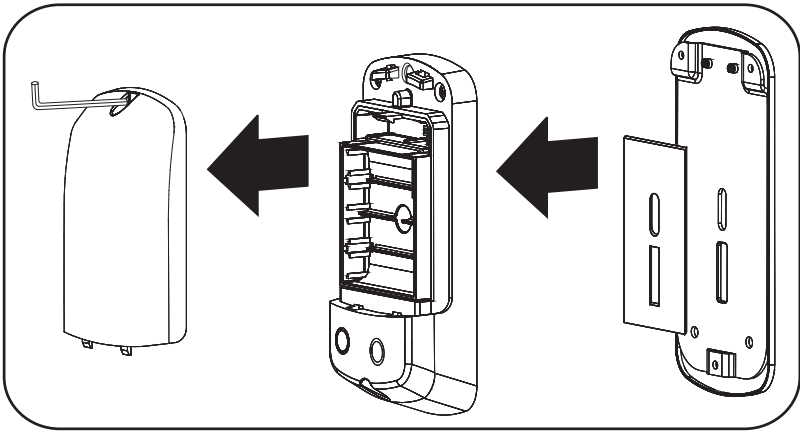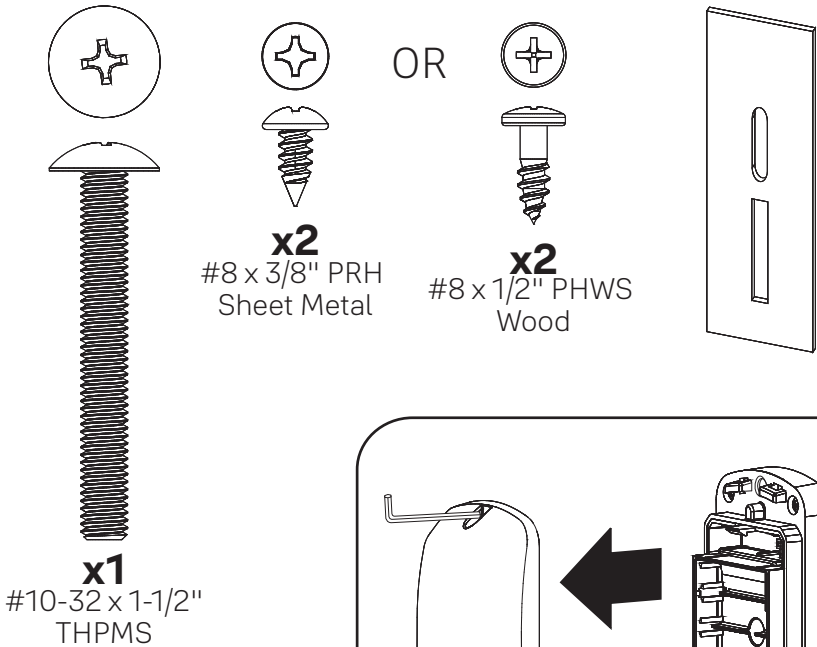

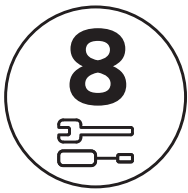

## Attach Cables to Inside Lock

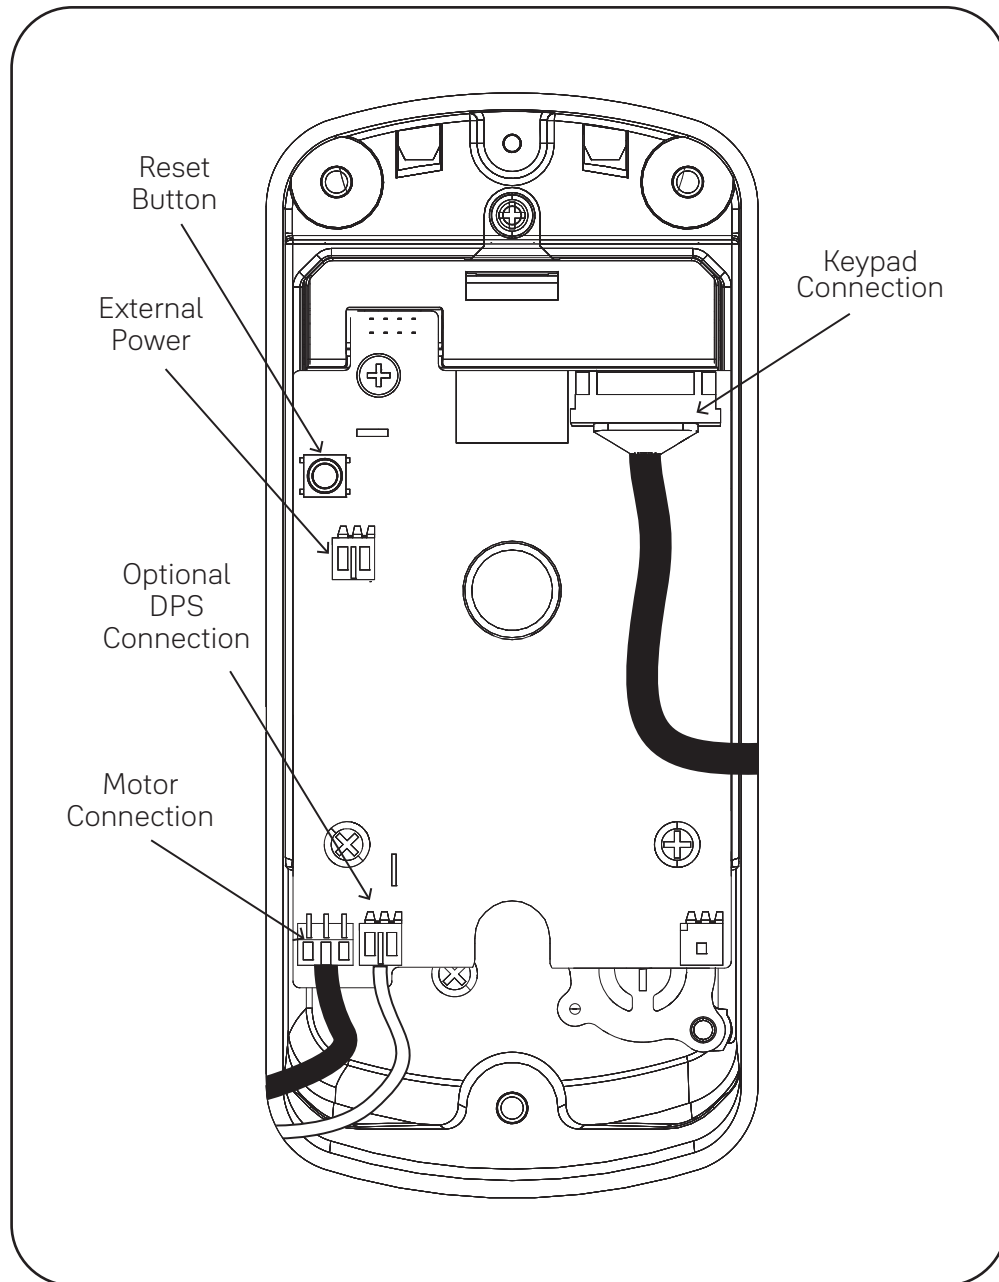




## Install Inside Lock



#8-32 x 5/16" PHMS



**x3**

