




070753J

RBW 3 MHz Delta 1 [T1]
*VBW 3 MHz 0.02 dB
Ref -20 dBm Att 10 dB SWT 200 ms 100.000000 ms

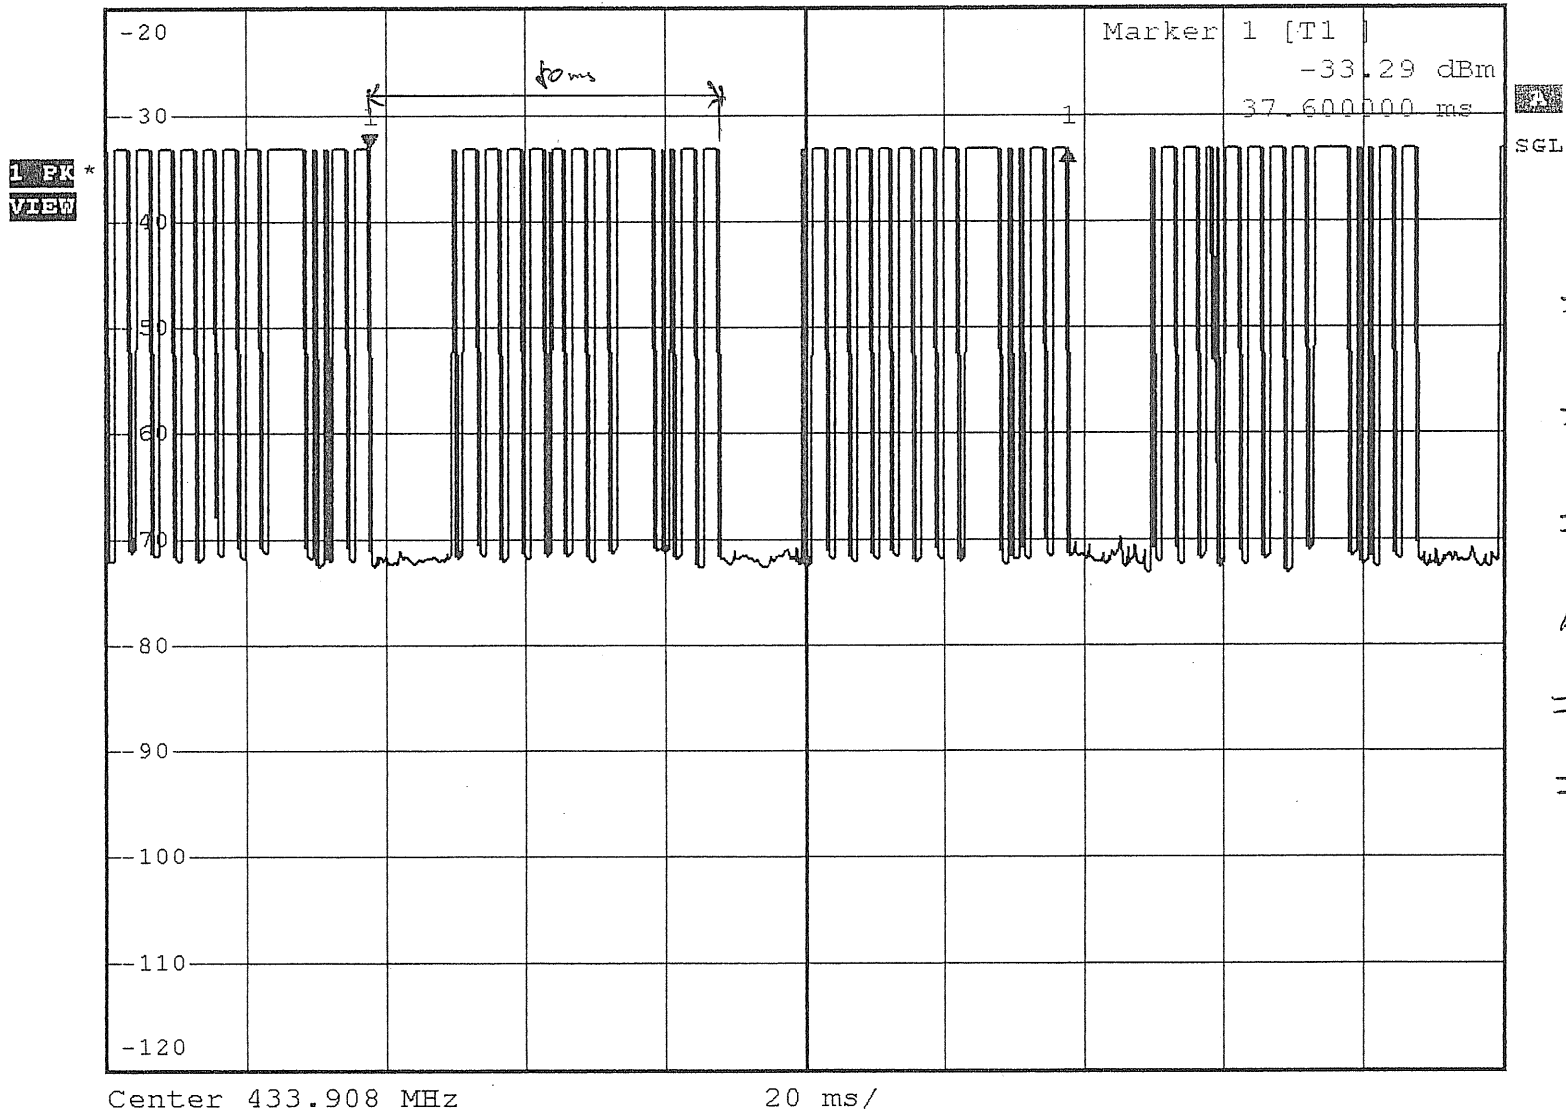

Duty Cycle
$$= \frac{12(1.2) + 13(0.4)}{50}$$
$$= \frac{14.4 + 5.2}{50}$$
$$= 0.4$$

Average Factor
$$= 20 \log 0.4$$
$$= -7.4 \text{ dB}$$

0707535



RBW 3 MHz


*VBW 3 MHz

SWT 50 ms

Ref -20 dBm

Att 10 dB

1 PK *
CLRWR

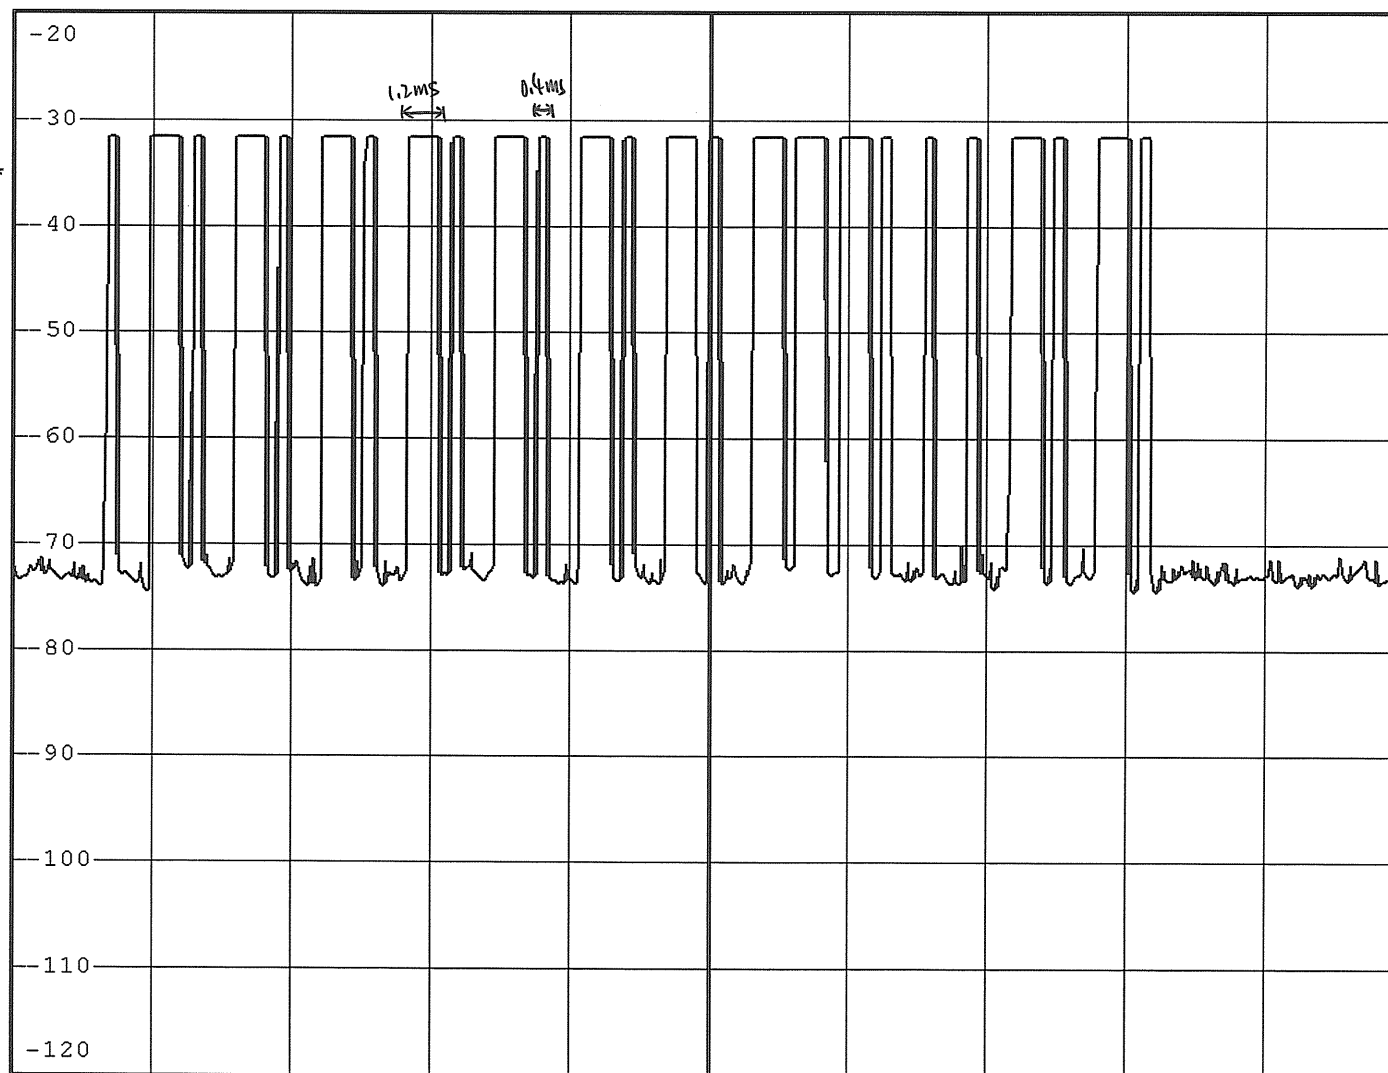

Center 433.986 MHz

5 ms/

070753J




RBW 3 MHz Marker 1 [T1]
*VBW 3 MHz -29.44 dBm
SWT 500 ms 185.000000 ms

Ref -20 dBm

Att 10 dB

1 PK *
VIEW

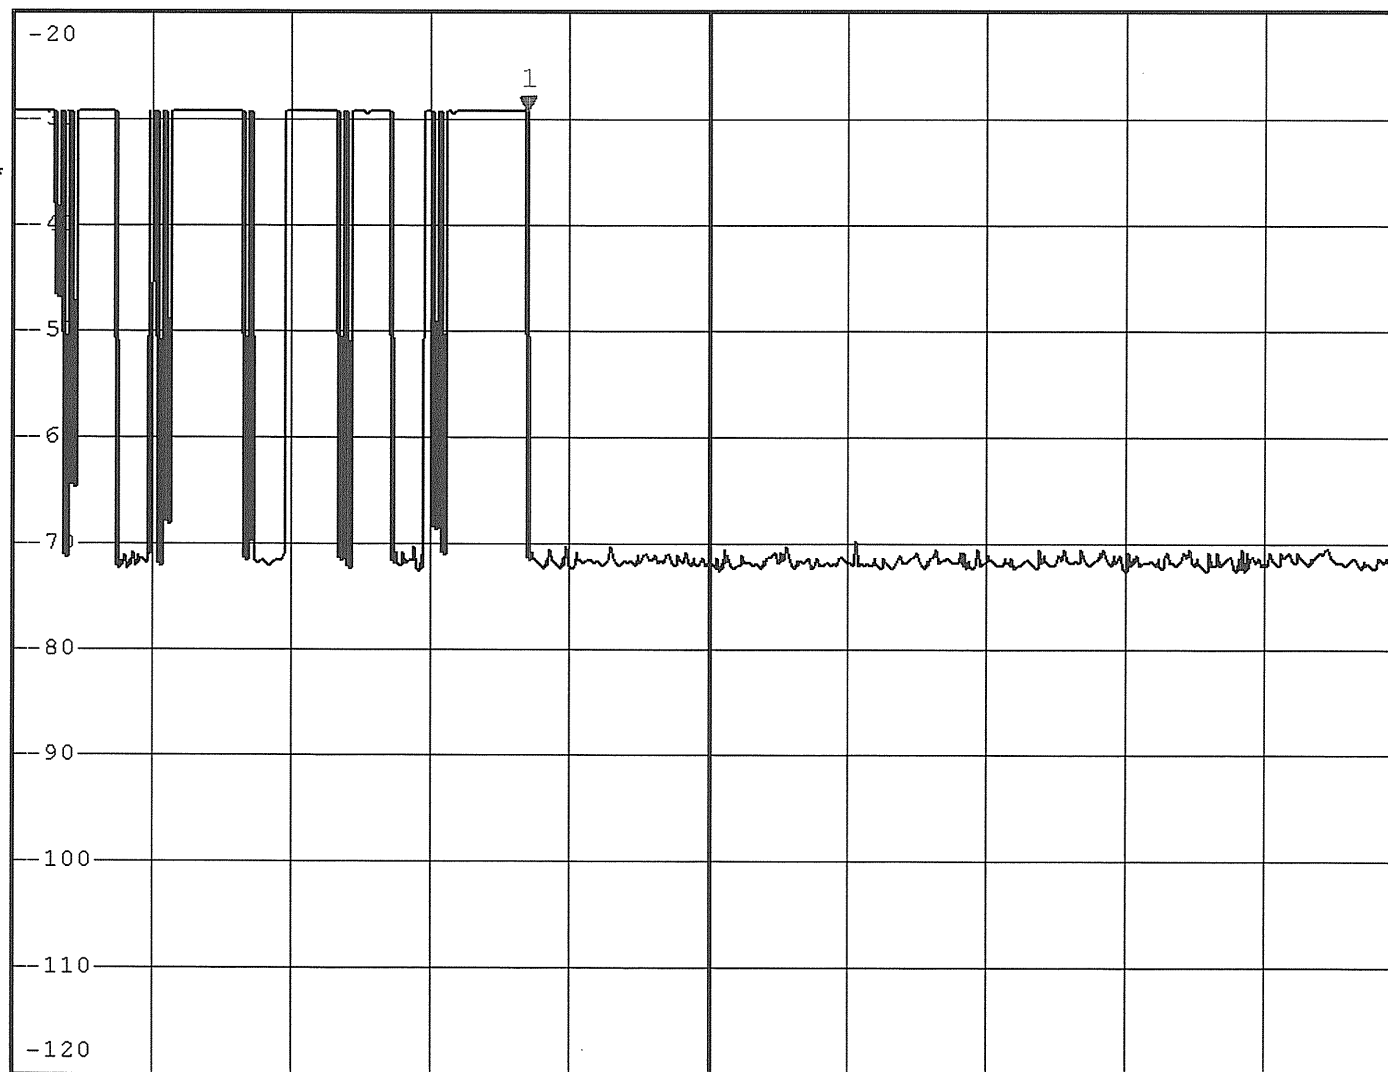

Center 433.986 MHz

50 ms/