


Photos of Test Setup

For GSM&WCDMA

1. Radiated Spurious Emissions

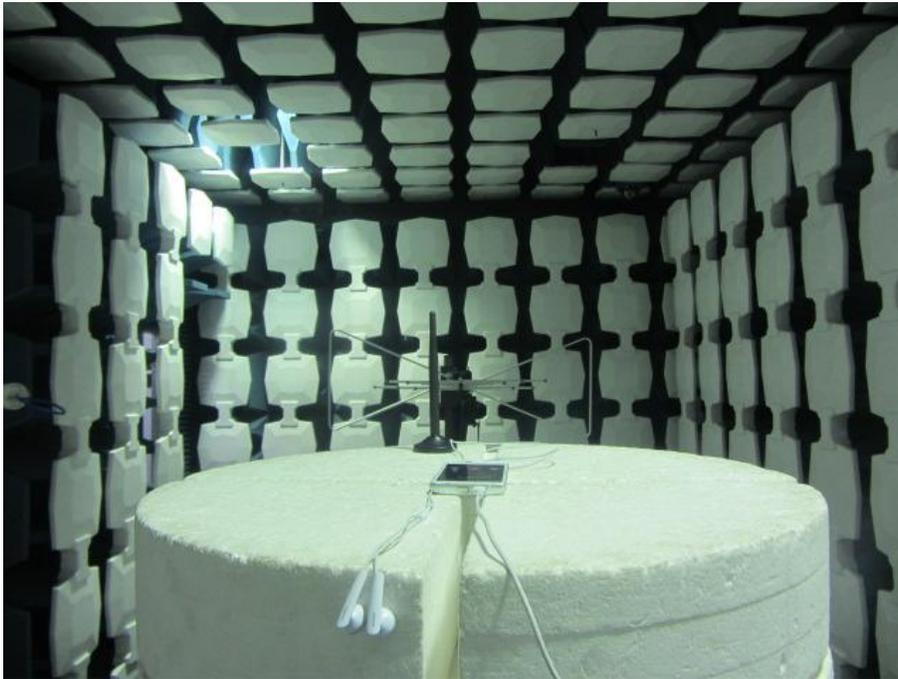

Radiated Spurious Emission (30MHz-1GHz)




Radiated Spurious Emission (3GHz to18GHz)




Radiated Spurious Emission (18GHz to26.5GHz)

For Bluetooth


1. Radiated Spurious Emissions

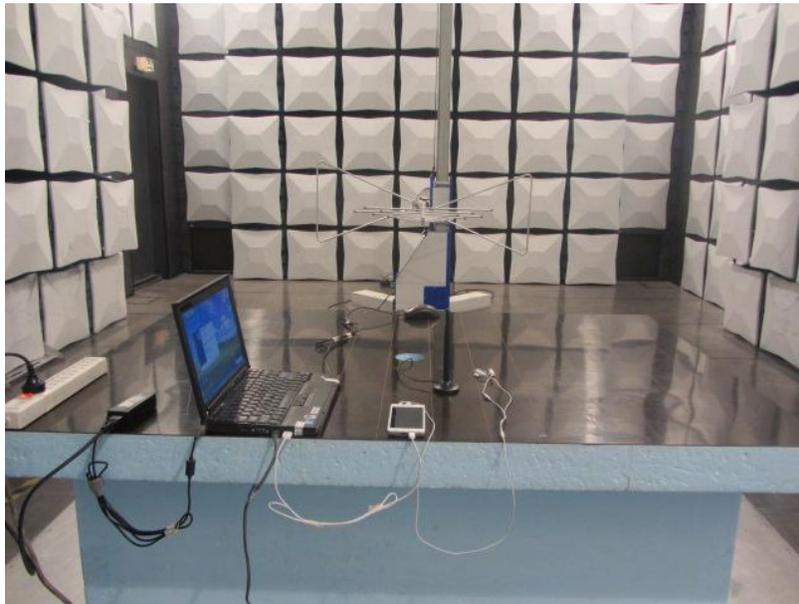

Radiated Spurious Emission (30MHz-1GHz)

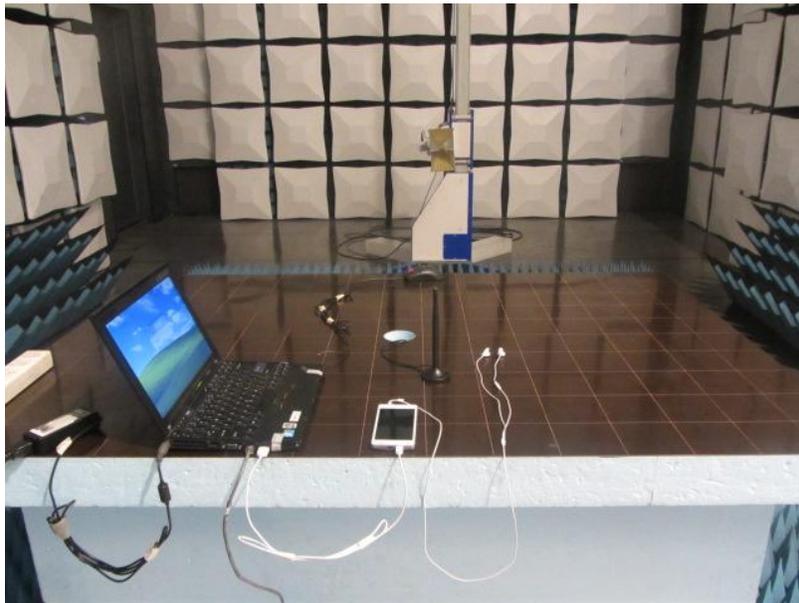


Radiated Spurious Emission (1GHz to18GHz)

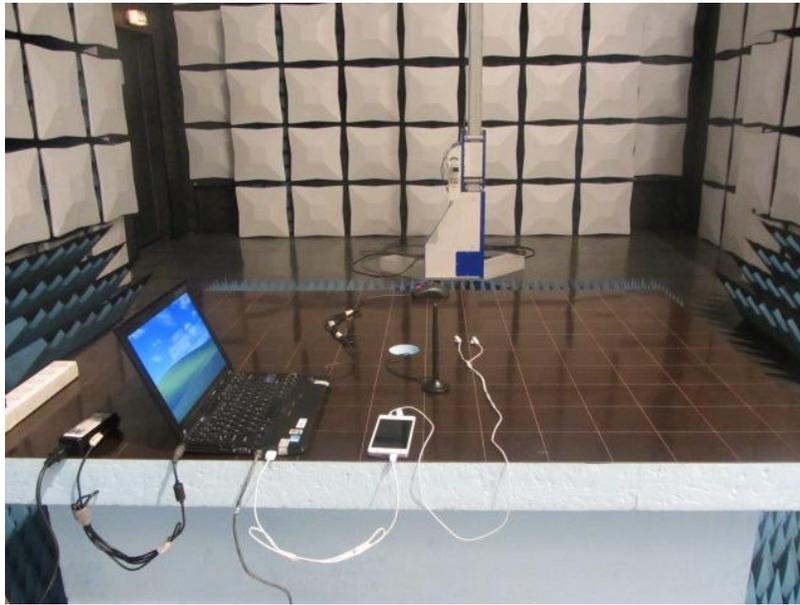


Radiated Spurious Emission (above 18GHz)

For Wlan

1. Radiated Spurious Emissions

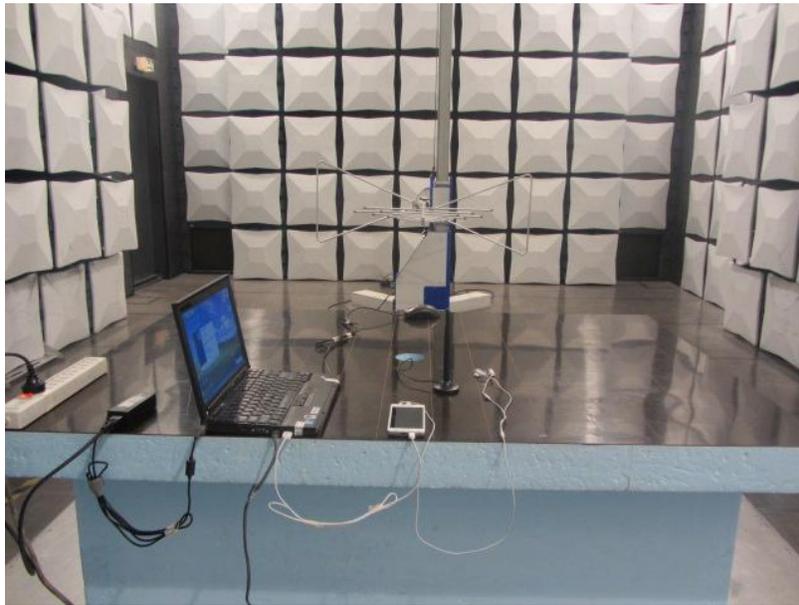

Radiated Spurious Emission (30MHz-1GHz)

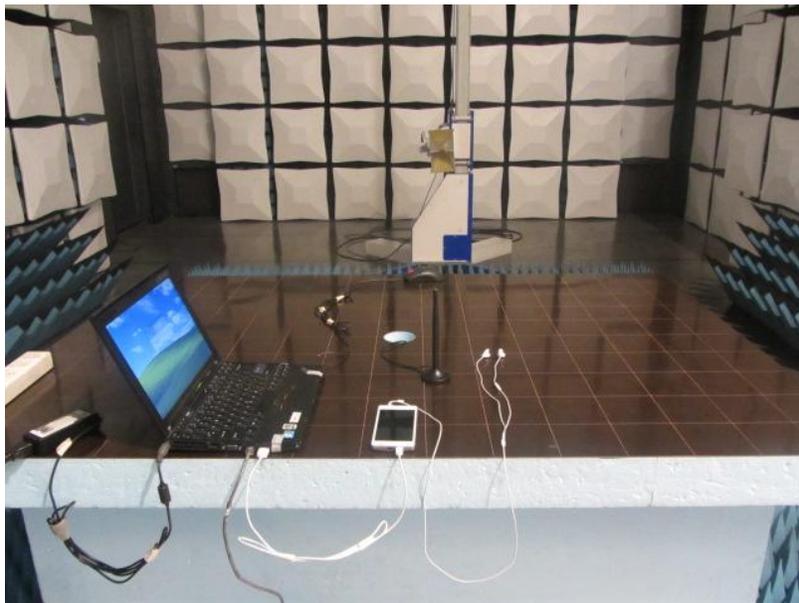

Radiated Spurious Emission (1GHz to18GHz)



Radiated Spurious Emission (above 18GHz)

2. Conducted Emissions



Conducted Emissions for AC Ports

For NFC

1. Radiated Spurious Emissions



Radiated Emissions (9kHz-30MHz)



Radiated Spurious Emissions (30M-1GHz)

END