Photos of Test Setup

For GSM&WCDMA&LTE

1. Radiated Spurious Emissions

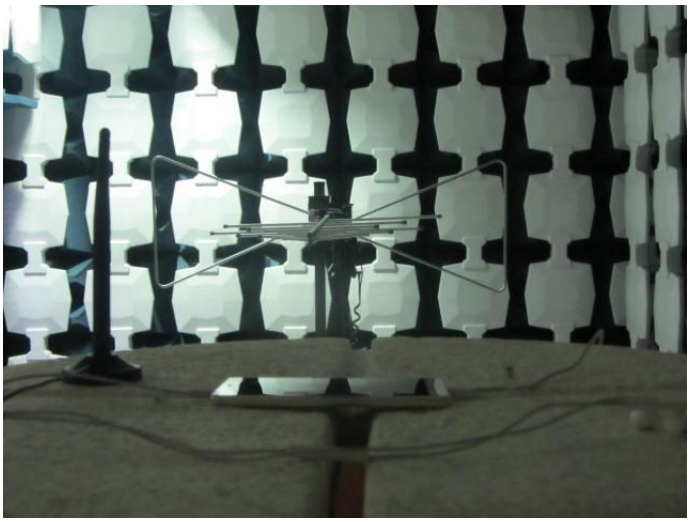

Radiated Spurious Emission (below 3GHz)

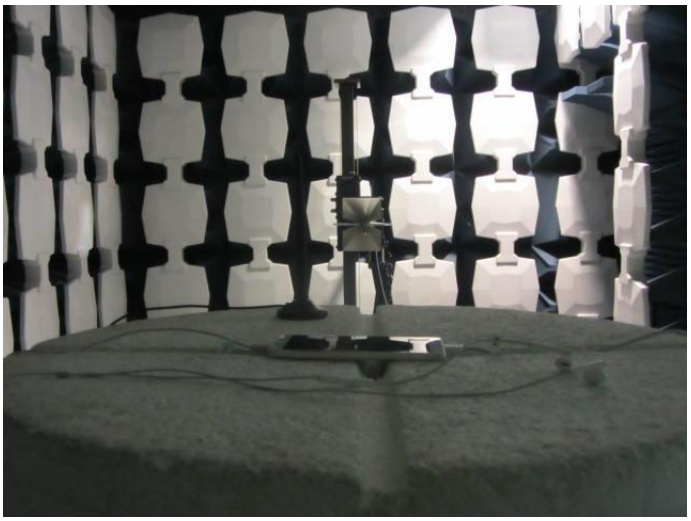

Radiated Spurious Emission (3GHz to18GHz)

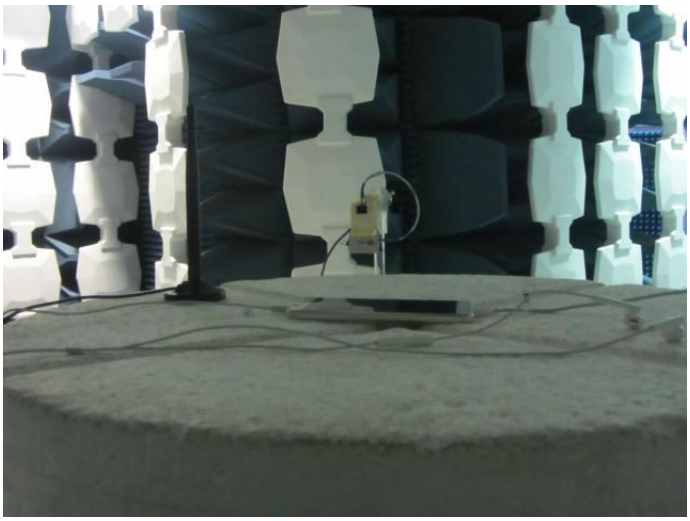

Radiated Spurious Emission (18GHz to26.5GHz)

For Wlan/BT

2. Radiated Spurious Emissions

Radiated Spurious Emission (below 1GHz)

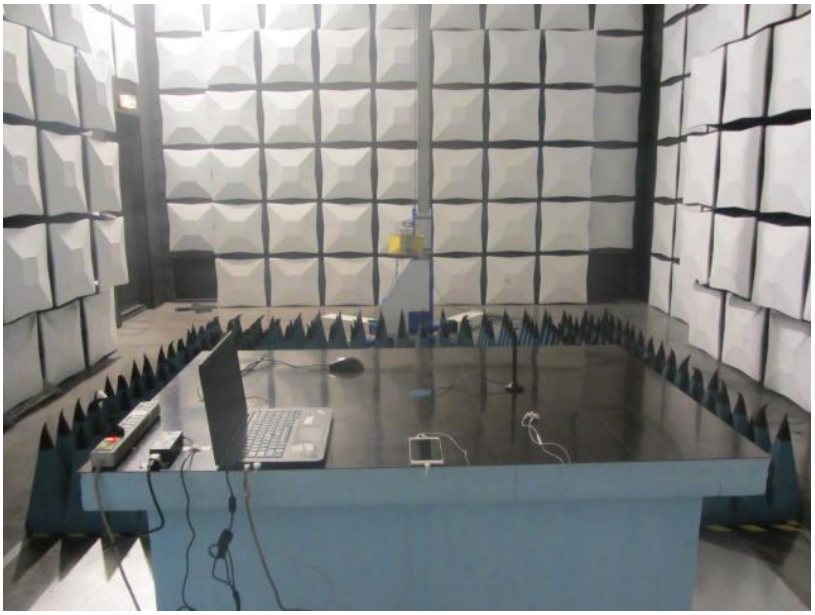

Radiated Spurious Emission (1GHz to18GHz)

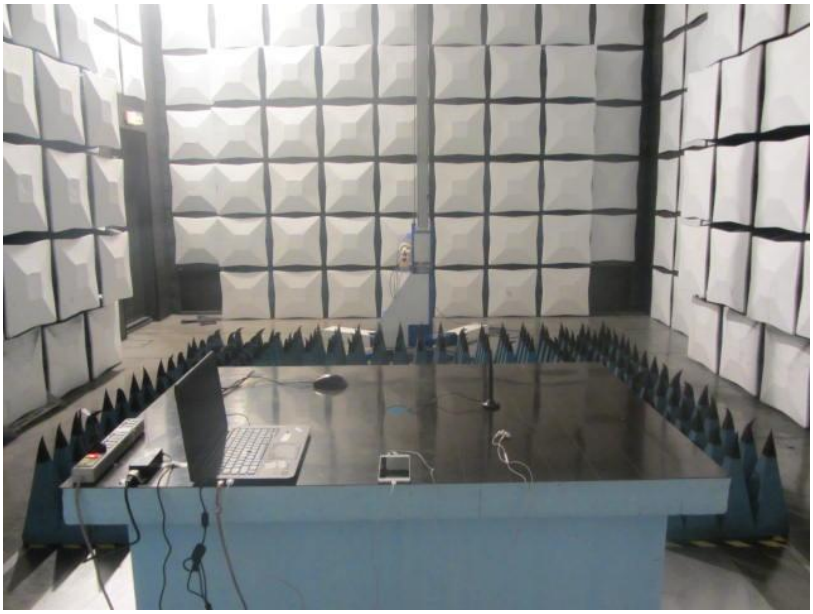

Radiated Spurious Emission (above 18GHz)

----------The END----------