



# Photos of Test Setup

## For GSM&WCDMA&LTE

### 1. Radiated Spurious Emissions




Radiated Spurious Emission (below 3GHz)




Radiated Spurious Emission (3GHz to18GHz)

## For Wlan/BT


### 2. Radiated Spurious Emissions

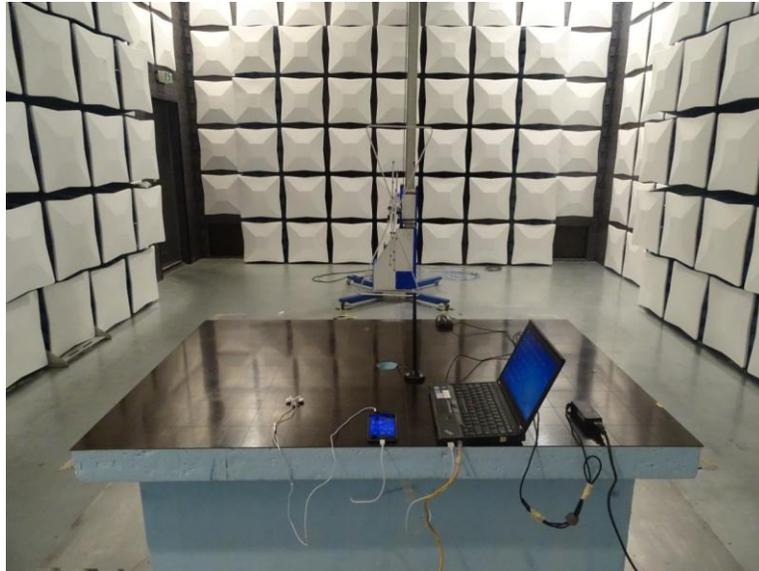

Radiated Spurious Emission (below 1GHz)

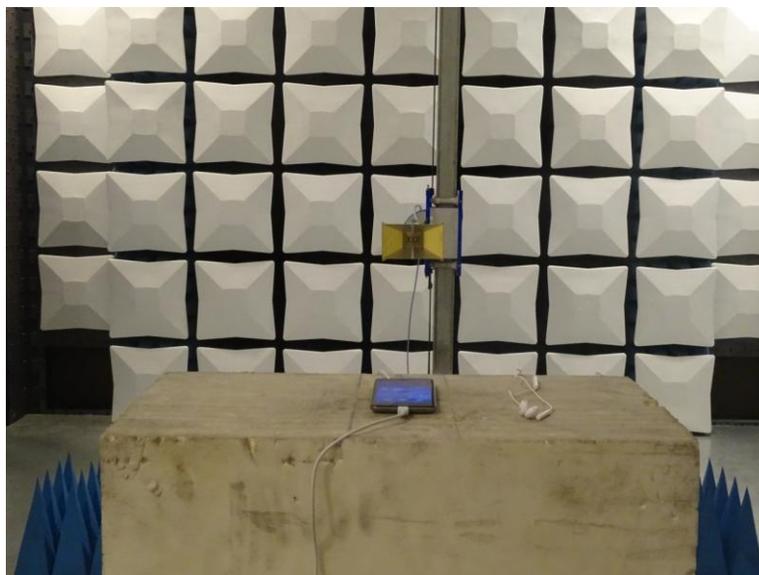

Radiated Spurious Emission (1GHz to18GHz)

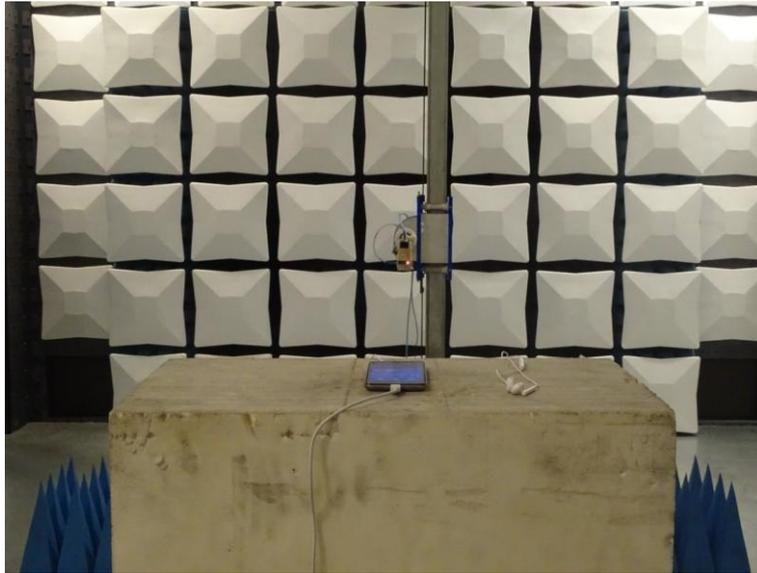

Radiated Spurious Emission (above 18GHz)

## Conducted Emissions



-----The END-----